



2.4GHz R/C

English

Age 8+

82531,82532,82533,82535

Maisto - Radio Control Vehicles

Please keep this owner's instruction manual for future reference.

It contains important information.

We reserve the right to improve/review the product specifications without notice.



Class 1 LED Product

Contents:

- RC Vehicle With Built-in Rechargeable Battery (non replaceable) x 1
- Controller x 1
- 1.5V "AAA" LR03/R03 non-rechargeable Battery (For Controller Use) x 2
- USB Cable x 1
- Owner's Instruction Manual x 1

Charging the built-in rechargeable battery for the RC vehicle: (Refer to Diagram 1)

1. Open the compartment cover on the bottom of the vehicle and take out the USB cable.
2. Make sure the switch is on the OFF/CHARGE position before charging.
3. Locate a USB certified port from any of the devices shown below.
4. Connect the USB charging plug with the USB certified port.
5. The LED indicator will start lighting in red to show it is charging.
6. Once the LED indicator turns off, the vehicle is fully charged.
7. Detach the USB plug from the USB certified port, then put back the USB cable to the compartment and install the cover on the vehicle.

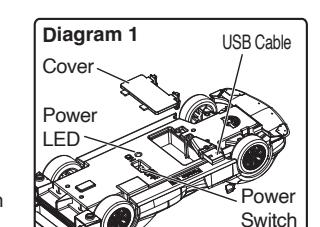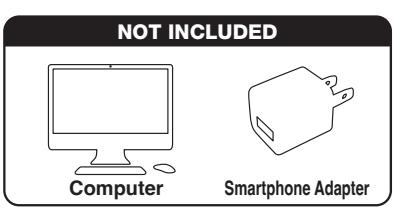

Battery installation for the controller: (Refer to Diagram 2)

1. Switch the power OFF.
2. Use screwdriver to loosen the screw on the battery cover and to open the battery cover. (Screwdriver is not included)
3. Install 2 new 1.5V "AAA" LR03/R03 batteries with correct polarity (+/-) as shown inside the battery compartment.
4. Install the battery cover and then tighten the screw on the battery cover.


How to play: (Refer to Diagram 3, 4 & 5)

1. Set the "Power Switch" on the controller and vehicle to ON position, the "Power LED" on both the controller and vehicle will flash less than 3 seconds then stay on, meaning the automatic frequency matching between the controller and the vehicle is completed.



English

2. If the "Power LED" of the controller or the "Power LED" of the vehicle flash more than 3 seconds, switch off both the vehicle and controller, then turn them on again.
3. Pull the trigger on the transmitter to drive the vehicle forward. Push the trigger on the transmitter to drive the vehicle backward.
4. Turn the transmitter steering wheel to move the vehicle left or right.
5. If the vehicle does not run in a straight line, adjust the wheel alignment under the chassis.
6. The "Power LED" on the vehicle will not flash nor stay on if the rechargeable battery has run out power.
7. Turn the switch of the controller and vehicle to OFF position when not in play.

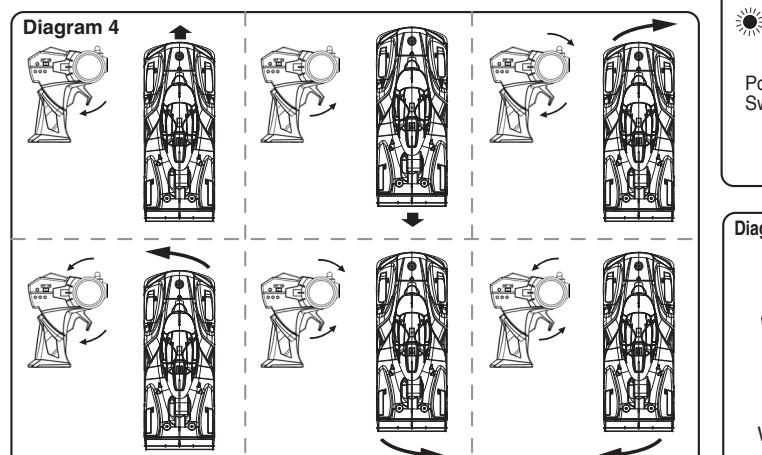

Performance Tips:

1. Do not drive the vehicle on grass, sand or go through water.
2. Do not drive the vehicle in windy or rainy weather.
3. Do not drive the vehicle into any hard object.
4. Keep fingers, hair and loose clothing away from the vehicle.
5. The operating range can be affected by a variety of factors:
a) Weak controller or vehicle batteries.
b) Interference from other items that emit radio frequency signals such as another R/C item on the same frequency, CB radios, cordless phones, high voltage transmitter, etc.
6. Outdoor usage is recommended in order to get optimal control range.
7. Remove the package, take out all accessories and assemble the product before giving it to children to play.

Cautions:

1. The Built-in rechargeable battery must be charged before use.
2. Do not overcharge the Battery.
3. Do not charge the Battery if it shows leakage, corrosion, or has loose or exposed wires or other damage.
4. Do not cover the vehicle with any sort of material while charging.

5. Do not touch the vehicle when it is hot. Wait until the vehicle cools before recharging.
6. Do not dispose of the Battery in fire.
7. Do not dismantle the Battery or USB, and do not cut the Battery or USB cables.
8. The USB Cable used with the toy shall be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
9. Rechargeable batteries are to be removed from the toy before being charged (for transmitter).
10. The Battery will be warm after charging, and hot after use in a Vehicle.
11. The supply terminals are not to be short-circuited.
12. Rechargeable batteries are only to be charged by adults or by children at least 8 years old.
13. Battery change must only be made by adults!
14. Note that the 1.5V "AAA" Battery is non-rechargeable and is not to be recharged. Only Batteries of the same or equivalent type as recommended are to be used. It will need replacement when transmission is poor. Alkaline AAA batteries are recommended to be used for the transmitter. Do not mix alkaline, standard or rechargeable batteries. Do not mix old and new batteries or different type of batteries. Be sure to insert batteries with correct polarities and always follow the battery manufacturer's instructions.
15. Exhausted batteries must be removed from the product.
16. Remove all batteries from the product when not in use for long periods of time.

FCC Label Compliance Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
 Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Warning : Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries.

You can hand in your old batteries at public collection points in your area or wherever batteries are sold.



You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:

Pb = Battery contains lead
 Cd = Battery contains cadmium
 Hg = Battery contains mercury



English

RSS-210 Compliance Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Maisto International, Inc.
 Fontana, CA 92336, U.S.A.

Maisto
www.maisto.com
 MADE IN CHINA



English

2.4GHz R/C

Français

8 ans et +

82531,82532,82533,82535

Maisto - Véhicules radio-commandés

Veuillez conserver ce mode d'emploi pour vous-y reporter dans le futur.

Il contient des informations importantes.

Nous nous réservons le droit de modifier/améliorer les caractéristiques du produit sans avis préalable.



Produit de classe 1 LED

Contenu :

- Véhicule Radiocommandé Avec Batterie Incorporée (non remplaçable) x 1
- Contrôleur x 1
- 2 Piles 1.5V "AAA" LR03/R03 non-rechargeables (Pour l'émetteur)
- Câble USB x 1
- Mode d'emploi x 1


Recharge du pack batterie du véhicule RC: (Voir Diagramme 1)

1. Ouvrez le couvercle du compartiment situé sous le véhicule et sortez le câble USB.
2. S'assurer que l'interrupteur est en position OFF/CHARGE (arrêt/charge) avant de charger la batterie.
3. Situez le port USB d'un appareil quelconque listé ci-dessous.
4. Branchez le câble de charge USB dans un port USB conforme.
5. Le voyant LED s'allumera en rouge pour indiquer le début de la charge.
6. Une fois le voyant LED éteint, le véhicule est complètement chargé.
7. Débranchez la fiche USB du port USB, puis remettez le câble USB dans son compartiment et remettez le couvercle en place.

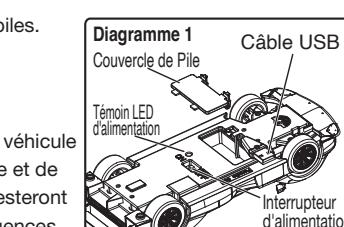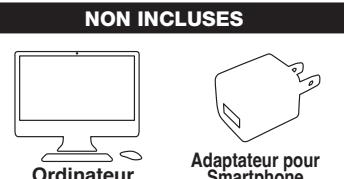


Mise en place de la pile de la télécommande: (Voir Diagramme 2)

1. Coupez l'alimentation (OFF).
2. Desserez la vis du couvercle des piles à l'aide d'un tournevis et ouvrez le couvercle.(Tournevis non fourni)
3. Mettez en place 2 piles alcalines 1.5V "AAA" LR03/R03 neuves en respectant les polarités (+/-) indiquées dans le compartiment des piles.
4. Refermez le couvercle en place et serrez la vis.

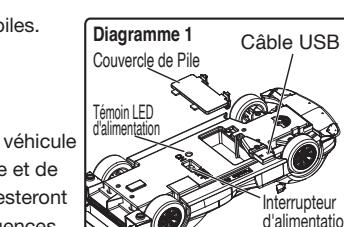

Comment jouer: (Voir Diagramme 3, 4 & 5)

1. Mettez les "Interrupteurs d'alimentation" de la radiocommande et du véhicule en position ON (marche), les LEDs témoins d'alimentation du véhicule et de la radiocommande clignotent pendant moins de 3 secondes puis resteront fixes, témoignant de la bonne synchronisation automatique des fréquences entre la radiocommande et le véhicule.

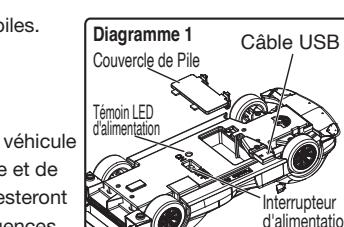

7. Ne démontez pas la Batterie ou le câble USB, et ne coupez ni la Batterie ni les câbles USB.

8. Le câble USB utilisé avec ce jouet doit être régulièrement vérifié pour s'assurer du bon état de son fil, de sa fiche, de son boîtier et de ses autres éléments, et au cas où de tels dommages seraient constatés, ne pas l'utiliser tant que les réparations n'auront pas été effectuées.
9. Ne retirez pas les piles rechargeables du jouet avant qu'elles ne soient rechargeées (pour l'émetteur).
10. Le Batterie est chaude après la charge, et très chaude après utilisation dans un Véhicule.
11. Les bornes d'une pile ou d'un accumulateur ne doivent pas être mises en court-circuit.
12. Les accumulateurs doivent être chargés uniquement par des adultes ou par des enfants âgés au moins de 8 ans.
13. Le remplacement de la Batterie ne doit être effectué que par un adulte !
14. Notez que les piles 1.5V "AAA" sont de type non-rechargeable et ne doivent donc pas être rechargeées. N'utilisez que des piles du type recommandé ou équivalent. Elles devront être remplacées lorsque l'émission devient défaillante. Il est recommandé d'utiliser des piles alcalines AAA dans l'émetteur. Ne mélangez pas piles alcalines, standard ou rechargeables. Ne mélangez pas piles neuves et piles usées, ni différents types de piles. Assurez-vous de respecter les polarités des piles lors de leur insertion et respectez toujours les instructions du fabricant des piles.
15. Retirez toutes les piles usées du produit.
16. Retirez toutes les piles du produit lorsque vous ne l'utilisez pas pendant une longue période de temps.

Déclaration de conformité FCC:

Cet appareil satisfait aux critères de la partie 15 des règles FCC. L'utilisation de l'appareil est assujettie aux conditions suivantes :

1. Cet appareil ne doit pas susciter d'interférence perturbatrice.
 2. Cet appareil doit tolérer toute interférence reçue, y compris les interférences qui provoquent un fonctionnement indésirable.
- Note : Les tests effectués sur cet équipement ont permis de vérifier qu'il satisfait les limites prescrites pour un appareil numérique classe B par la partie 15 des règles FCC. Ces limites établissent une protection raisonnable contre les interférences dangereuses dans une installation résidentielle. Cet équipement génère, utilise et peut rayonner de l'énergie sous forme d'ondes radio. S'il n'est pas installé et utilisé conformément aux instructions, il peut provoquer des interférences perturbant les radiocommunications. Cependant, rien ne garantit qu'aucune interférence ne peut se manifester dans une installation particulière devant que cet équipement suscite des interférences perturbant la réception des ondes radio ou télévision (ceci peut être déterminé par extinction/remise en marche de l'appareil), l'utilisateur devrait essayer d'éliminer l'interférence en appliquant une ou plusieurs des mesures suivantes :
- Réorienter ou changer le site d'installation de l'antenne réceptrice.
 - Augmenter la distance de séparation entre l'équipement et le récepteur.
 - Brancher l'appareil sur un circuit différent de celui où le récepteur est branché.
 - Demande d'aide au commerçant qui a vendu le produit, ou à un technicien radio/TV expérimenté.
- Attention : Les changements ou modifications subies par ce produit qui n'auraient pas été expressément approuvés par l'organisme responsable de sa conformité sont susceptibles d'annuler le droit de l'utilisateur à utiliser le produit.

Mise au rebut des piles

Les piles ne doivent pas être jetées avec les ordures ménagères. En tant qu'utilisateur, vous êtes légalement tenu de retourner les piles contenant des substances dangereuses ainsi que toutes les autres piles usagées. Vous pouvez rapporter vos piles usagées à un point de collecte public local ou à tout point de vente de piles.

Vous trouverez ces abréviations chimiques ainsi que le symbole d'une poubelle barrée sur les piles contenant des substances dangereuses:

Pb = Pile contenant du plomb
 Cd = Pile contenant du cadmium
 Hg = Pile contenant du mercure



French

Si la "LED d'alimentation" de la radiocommande ou du véhicule clignote pendant plus de 3 secondes, arrêtez le véhicule ainsi que la radiocommande, puis rallumez-les.

3. Tirez sur le manche de la télécommande pour faire reculer le véhicule. Poussez sur le manche de la télécommande pour faire aller le véhicule vers la gauche ou vers la droite.
4. Tournez le volant de la radiocommande pour faire aller le véhicule vers la gauche ou vers la droite.
5. Si le véhicule ne roule pas en ligne droite, réglez le levier d'alignement des roues situés sous le châssis.
6. La "LED d'alimentation" du véhicule ne sera ni allumée ni clignotante si la batterie est déchargée.
7. Mettez l'interrupteur d'alimentation du véhicule sur OFF lorsque vous ne l'utilisez pas.

