

Size- 240*80(mm)

1도인쇄

앞면



1 제품 사양

제품명: EXO OFFICIAL FANLIGHT

크기: 101x1 x 57.5 x 27.6 (mm)

무게: 180 (g)

재질: ABS, PC, 실리콘, 알루미늄

구성품: 충전함, 스트랩, 사용자 매뉴얼, 예코 스티커

전원지: 알칼리형 AAA 전지 3개

작동시간: 약 3시간 (조각 방법에 따라 상이할 수 있습니다)

인증: R-C-RD-SME-EXO1 Bluetooth

가장대형: 특정소음측량 유선기기(무선데이터통신시스템용 무선기기)

모델명: SME-EXO-ORL03

기획자: SM-ENTERTAINMENT

제조사: 드림스타 컴퍼니

2 주의사항

- 강한 충격이나 물이 닿으면 고장의 원인이 됩니다.

- 임의의 분해 및 조립하지 않습니다.

- 항상 알칼리형 AAA 전지들을 사용하십시오.

- 사용하지 않을 때에는 전지들을 제거해 주십시오.

- 전지는 열/유해한 손이 닿지 않는 곳에 보관하십시오.

- 수명이 다 한 전지는 지정된 폐기 장소에 폐기하십시오.

- 반드시 전지와의 +, - 극성을 잘 확인하여 올바른 극성 방향으로 장착하십시오.

- 잘못된 전지인 제품 고장의 원인이 되며 화재 및 폭발의 위험이 있습니다.

- 본 제품은 무선 통신 중 혼란의 가능성이 있습니다.

3 사용 모드 설명

본 제품은 LED를 가진 제어할 수 있는 Address LED가 적용되어 있어, Address LED를 활용하여 다양한 컬러 및 애니메이션 효과 구현이 가능합니다.

EXO 공식 응원봉은 일반 및 블루투스 모드가 있습니다.

일반 모드

일반 모드는 응원봉 버튼을 조작이 가능하며, 짧게 한번 누를 때마다 순서에 따라 라इट이 변경되는 모드입니다.

※이동 변경 순서

전원 On → EXO Lighting → EXO Quick blink → EXO Animation (EXO)

→ EXO gradation → 전원 Off

중앙 연출 제어 시에는 컬러와 패턴이 자동으로 제어됩니다.

EXO Lighting



EXO Quick blink



EXO Animation (EXO)



EXO gradation



접는선

블루투스 모드

- 전원이 켜진 상태에서 버튼을 5초간 길게 누르면 아래 그림과 같이 파란색 빛이 움직입니다.



- 파란색 빛이 움직이는 것은 블루투스 모드인 것을 나타냅니다.

- 블루투스 모드는 전용 어플리케이션을 이용하여 좌측 동적할 때 사용하는 모드입니다.


- 블루투스 모드 OFF 방법: 파란색이 깜빡일 때 버튼을 5초간 다시 길게 누르면 블루투스 모드를 종료할 수 있습니다.

- 공연장에서 블루투스 모드 일 때는 움직임이 되지 않습니다. 움직임에 대해서는 일일 모드로 전환해주시기 바랍니다.

- 블루투스 모드 사용 시에는 전용 어플리케이션의 안내를 따라주시기 바랍니다.

※ 어플리케이션은 추후 공개 예정

4 전지치 삽입 및 교체

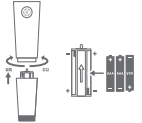

※ 전지치가 저전압일 경우 전원이 자동으로 꺼지오니 바로 새 전지들로 교체해주십시오.

주의사항

- 반드시 전지와의 +, - 극성을 잘 확인하여 올바른 극성 방향으로 삽입하여 주시기 바랍니다.

- 전지치 수명이 부족할 부분이 위로 기록창에 표시가 됩니다.

- 전지치 부품을 감지 못하였을 때에는 바로 전지치 부분을 분리해주시고 A/S센터로 문의 바랍니다. (A/S화상의 위험이 있으니 손으로 잡지 마세요.)

- 제품 공장 시 제로로 전지치를 사용해 주시기 바랍니다.

- 항상 알칼리형 AAA 전지들을 사용해 주시기 바랍니다.

(장용이 아닐 경우 제품에 손상이 있을 수 있습니다. 꼭 정품 전지들을 사용해주세요.)

- 배터리 단자를 응원봉과 제품 및 본리 시 힘을 줘서 90도 이상 무리하게 돌리면 제품 파손의 위험이 있습니다.

A/S 서비스 규정

- 제품 구매 후 확인하는 불량/교환/반품은 판매처에 문의 바랍니다.

- 무상 보증 기간은 구입한 날로부터 3개월이며, 보증 기간 이내에도 고장 발생 및 파손에 의한 유상 A/S 대상으로만 인정되는 경우 수리 비용을 받고 A/S를 제공합니다.

※ 제품 A/S 접수비(배송비)는 고객 부담입니다.

※ 해당로 신청수 및 상담내 내용에 한해서 A/S 서비스가 가능합니다.

※ 해당로 접수 시, 고객 응수접구제 채택 포함 필수로 자세한 불량 원인 내역을 포함하여 발송 바랍니다.

※ 상담 및 접수가 완료된 후에 액에 발송하여 주시기 바랍니다.

- 무상 보증 기간: 무상 보증 기간(3개월) 이내에 아래의 현상이 발생할 시 제품 교환 서비스를 받을 수 있습니다. 제품 A/S 접수비(배송비)는 고객 부담입니다.

※ 제품 교환 대상

- LED 동작 불량

- 전원 버튼 작동에 따른 동작 불량

- 동봉된 배터리 소켓 불량

- 유상 A/S: 제품 구매 후 1년 이내 무상 보증 내용에 해당하지 않는 제품 이상의 경우 유상으로 A/S를 받을 수 있습니다. 제품 A/S 접수비(배송비)는 고객 부담입니다.

※ 유상 A/S 대상

- 제품 구입 날로부터 3개월이 경과한 경우

- 사용 용 고객 과실에 의한 파손 및 파손된 부품

- 임의의 파손을 위한 제품 조립을 위해 파손되는 경우

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

- 파손된 부품의 사용으로 인한 파손된 부품의 파손

뒷면



1 Specification

Product: EXO OFFICIAL FANLIGHT

Size: 101x1 x 57.5 x 27.6 (mm)

Weight: 180 (g)

Material: ABS, PC, SILICON, ALUMINUM

Components: Light stick, Strap, User manual, Dust bag

Battery: AAA Battery 3EA

Operating: About 3-hours

Certification: R-C-RD-SME-EXO1 Bluetooth

Reputation of equipment: Specific low-power wireless devices (Radio devices for wireless data communication systems)

Model name: SME-EXO-ORL03

Planning: SM-ENTERTAINMENT

Manufacturer: Dreamus company

2 Caution

- If a strong or exposure to water will cause damage.

- Do not disassemble or assemble on your own.

- Please use a genuine alkaline AAA batteries.

- Please remove the batteries when not in use.

- Keep batteries in a safe place, out of children's reach.

- Do segregate your product and used batteries from household waste for recycling, where possible, according to local laws.

- Insert batteries correctly following the symbols for positioning the positive (+) and negative (-) ends of each battery. If not, it might cause product malfunction and overheating which may result fire or burns.

- There's a possibility of radio frequency interference during wireless operation.

3 How to use

This Fanlight has Address LED, able to control individual LED light, which can realize diverse animation effects with various color.

EXO Official Fanlight has Standard Mode and Bluetooth Mode

Standard mode

Standard Mode is the mode that the light changes by clicking the power button.

※ Order of changes of the light

Power On → EXO Lighting → EXO Quick blink → EXO Animation (EXO)

→ EXO gradation → Power Off

Light and pattern would be changed automatically when the Fanlight is controlled centrally.

EXO Lighting



EXO Quick blink



EXO Animation (EXO)



EXO gradation



Bluetooth mode

- Blue light will move as shown below by pressing the power button for 5 seconds when the power is on.



- If the blue light is moving, it means the Fanlight is on Bluetooth Mode.

- Bluetooth Mode is only used to register the seat through the exclusive application.

- To turn off the Bluetooth Mode press and hold the power button for 5 seconds again or reinsert the batteries.


- The Fanlight is not controlled centrally if the Bluetooth Mode is on.

- Please change to the Standard Mode for central control at a concert.

- Please follow the direction of the exclusive application, when the Fanlight is on Bluetooth Mode.

※ The application will be released later.

4 Replacing Batteries

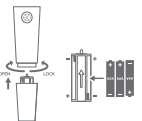

※ If the battery is low voltage, the power is automatically turned off. Please replace with new batteries.

CAUTION

- Be sure to insert the batteries after checking the polarities.

- Be sure to put the battery holder with the pointed side up.

- When the batteries are over heated suddenly, please remove the batteries immediately and contact to customer service center.

(Do not hold by hand due to risk of burn.)

- It is recommended to use new batteries for each concert or performance.

- If you force to turn the battery holder over 90 degrees to open or lock the battery holder, it may damage the Fanlight.

5 Warranty Period and Repair Service

- Any defect, replacement, or refund of the product, please contact your dealer.

- Free warranty period is three months from the date of purchase. Even within the free warranty period, if the defects of the product occurred by the customer's fault, repair cost will be charged.

- Shipping charge is the customer's responsibility.

- Repair service is only provided after requesting the service through an email.

- Please send the product after application and consultation is completed.

- Replacement Service: Product can be replaced within the free warranty period (3 months from the date of purchase) for the following factors:

(The shipping charge is on customer's responsibility.)

- Defects of operation of LED.

- Malfunction of the power button.

- Defects of the battery holder.

- Paid Repair Service: Within the one year after the date of purchase, the product can be repaired for the following factors, but the repair cost and shipping fee will be charged.

- After the free warranty (three months after the date of purchase)

- Damages on the product or the circuit caused by customer's fault.

- Disassemble the product for any modification.

- Damages on the circuit by using non-certified battery.

- Damage to circuits and internal flooding due to inundation or rain.

6 Customer Service Center

- Product inquiry and customer service

Dreamus company

Tel: 1577-5527

Web: www.hivex.co.kr / hivex@hivex.com

Warranty: 3 months from date of purchase

- How to get customer service

In case of proper use, we will inform how to repair or replace the product after customer consultation via phone call or email. In case of improper use due to customer's fault, we will inform repair cost including logistic cost for customer service.

SM ENTERTAINMENT

© SM ENTERTAINMENT CO., LTD. All Rights Reserved.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution

Multimedia does not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

RCS-GEN Section

This device complies with Industry Canada (IC) requirements (ICES model). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CSE (Industry Canada) applicables aux appareils radio exempts de licence. L'exploitation est soumise aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SM ENTERTAINMENT

© SM ENTERTAINMENT CO., LTD. All Rights Reserved.