

LeapFrog

LeapPad

ULTRA

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

Get Started and Download Your Included Learning Apps

Read all the Operating & Important Safety Instructions before using LEAPPAD™ ULTRA. **ELECTRICALLY OPERATED PRODUCT**
Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during the handling and use to prevent electrical shock. FOR INDOOR, DRY-LOCATION USE ONLY

Get started in 5 easy steps!


- POWER UP** and turn on your LeapPad Ultra with the included wall charger.*
- SET UP** your device by following the on-screen prompts to connect to Wi-Fi.**
- REGISTER** your device by creating a LeapFrog Parent Account.
- DOWNLOAD** your included learning games.
- PLAY & LEARN!** Your child is now ready to play your LeapPad Ultra.***

*Registration and device set-up can continue while charging—charging may take up to 7 hours.
**If Wi-Fi is not available at time of device set-up, you can complete set-up using the included USB cable and by installing the LeapFrog Connect Application on your computer. Go to leapfrog.com/connect to download.
***Full device set-up may take approximately 20 minutes or longer depending on your Wi-Fi connection speed.

Get your included learning apps when you complete device set-up!
Visit leapfrog.com/support for additional tips and FAQs.



FOLD

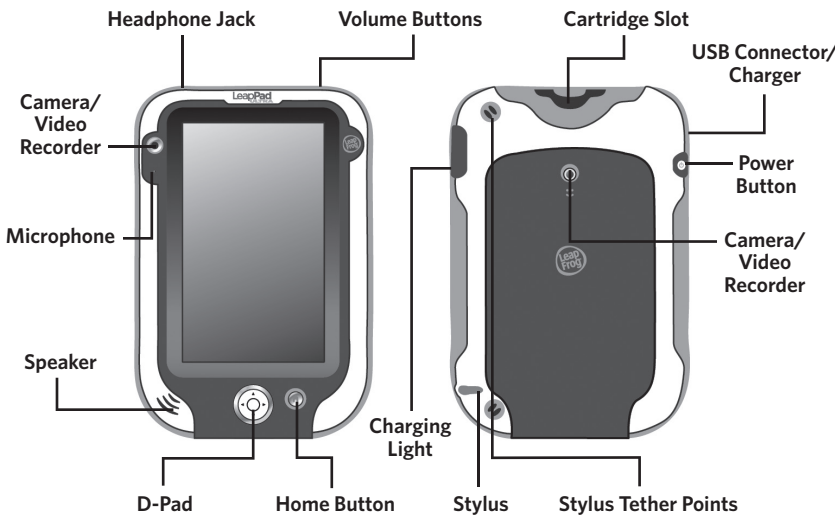

Parent Settings

Parent Settings allows you to control your child's play on these interactive LEAPPAD™ ULTRA features:

- Wireless settings — Control connection set-up and access to LeapFrog-defined online experiences.
- Child profile — Easily manage permissions and profile information or add a new profile.
- Peer-to-peer settings — Control how your child plays with other children through their pet avatars when two LeapPad Ultra devices are in close proximity to one another via local ad hoc Wi-Fi network.
- App Center /Centre — Parents can purchase digital content directly from the device with a Parent Account password. Control your child's access to the App Center/Centre, where they can watch trailers and create a wish list. Parents can choose whether children may view pricing and buy buttons.
- Manage Content — Choose what content you want to store on and off the device.
- Artwork Storage — Store child-created pictures, photos and video on and off the device.
- Device Settings — Manage settings like language, time, date and more.

Access to Parent Settings is protected by a 4-digit parent lock code that must be established during initial set-up. Parent Settings can be accessed from the Sign In screen by pressing the Parent Settings icon to login with your parent lock. Alternatively, you can log in via the Settings icon on the Home Bar of the child's Home Screen.

Forgetting or resetting your Parent Lock

If you have forgotten your 4-digit parent lock code you can look it up in the leapfrog.com Parent Account you created during device set-up and registration. If you need to reset your parent lock, you can do it from the device or reference the FAQ section for more information.

Repairing or Modifying LeapPad Ultra

Never attempt to repair or modify as LEAPPAD™ ULTRA does not contain any user-serviceable parts. Service should only be provided by LeapFrog Enterprises, Inc.

If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use and contact LeapFrog Consumer Services for replacement if under warranty.

For service information, go to: www.leapfrog.com/support

AC Adapter Safety

CAUTION: Use only the AC adapter provided with the product.

WARNING: Not suitable for children under 36 months. Misuse of transformer (AC Adapter) can cause electric shock.

(Note: The word “transformer” is sometimes substituted for the word “adapter”. Use only the included AC power adapter.

- Connection of the transformer to the wall outlet should be performed only by an adult or child 8+ years of age.
- The transformer is not intended to be used as a toy, and the use of the transformer shall be under the full supervision of parents.
- As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.
- The power adapter may become warm during normal use. Always allow adequate ventilation and use care when handling the power adapter.
- Do not connect or disconnect with wet hands.
- The transformer should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts, and in the event of such conditions, the transformer must not be used until the damage is repaired. The cord of this transformer cannot be replaced; if the cord is damaged, dispose of the transformer in accordance with your local electrical product recycling regulations.

Unplug the AC Adapter (transformer) if any of the following conditions exist:

- The power cord or plug, or the USB cord has become frayed or damaged.
- The power adapter is exposed to rain, liquid, or excessive moisture.
- The power adapter enclosure has become damaged.
- You suspect the power adapter needs service or repair.

To Clean AC Adapter, disconnect it from the wall and clean with a cloth dampened with water. Do not immerse in water or use soap or other chemicals. Allow to dry before reusing. Do not connect to the AC outlet if wet or damaged.

- This AC adapter can be used to recharge the single cell Li-Poly battery of the LeapFrog® LEAPPAD ULTRA device (3.7Vdc, 4000mAh).

WARNING: DO NOT recharge non-rechargeable batteries.

For Europe - The toy must be used with a transformer for toys.

AC Adapter Electrical Ratings: Input: ~ 120VAC, 60Hz (for US); ~ 230VAC, 50Hz (for UK or EU); ~ 240VAC, 50Hz (for AS/NZL) Output: — DC5V, 1.5A, 7.5VA

FOLD

Operating Instructions

Wi-Fi connection support. If you experience any difficulty with Wi-Fi connectivity, troubleshooting suggestions are available online at www.leapfrog.com/support

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it OFF. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source. Do not re-connect to the AC outlet if wet or damaged.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) and 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Handle with care. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals.

Cleaning. Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Do not connect to the AC wall outlet if wet or damaged.

Instructions Operationnelles

Connexion Wi-fi. Si vous avez des difficultés à vous connecter à votre connexion Wi-fi, des aides sont disponibles en ligne à www.LeapFrog.com/support

A utiliser uniquement en intérieur, dans un endroit sec. Ne pas utiliser le produit près d'un lavabo ou autres sources d'eau. Faites attention à ne pas renverser de nourriture ou tout autre sorte de liquide sur ce produit car cela pourrait le rendre in opérationnel et inutilisable. Si vous renversez du liquide sur le produit, débranchez tous les câbles et éteignez-le. Laissez le produit sécher complètement avant de le réutiliser. N'essayez pas de le sécher avec un sèche-cheveux ou tout autre source de chaleur. Ne pas rebrancher le produit à l'adaptateur si celui-ci est humide ou abîmé.

Évitez d'exposer le produit à des températures extrêmes ou aux rayons du soleil. Utilisez le produit quand la température se trouve entre 5°C (40°F) et 38°C (100°F). Ne pas laisser le produit dans votre voiture car les voitures garées peuvent excéder les températures pour assurer le bon fonctionnement de votre produit. Exposer ce produit à des températures extrêmes peut diminuer la durée de vie des piles ou peut entraîner l'arrêt de votre produit.

A utiliser soigneusement. Pour éviter toutes blessures, dommages ou autres, évitez de le faire tomber et ne jamais le démonter, casser, trouer, mettre aux micro-ondes, bruler, incérer un objet ou peindre le produit. Lavez vos mains avant de manipuler le produit si celles-ci ont été en contact avec de la crème solaire ou autres produits chimiques.

Pour nettoyer. Débranchez le produit de tous ces câbles. Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de lessive ou autres produits chimiques. Ne jamais immerger le produit dans l'eau.

Ne pas brancher à une prise si le produit est humide ou endommagé.

Informations Importantes de sécurité :

! Veuillez lire toutes les informations importantes de sécurité avant d'utiliser le LEAPPAD™ ULTRA. Ne pas appliquer ces consignes peut engendrer des risques d'incendie, d'électrocutions, autres blessures ou dommages au LEAPPAD ULTRA ou autres.

ACCESSOIRES : Lisez les instructions pour les accessoires ou tout autre produit avant de les utiliser avec le LEAPPAD ULTRA. LeapFrog n'est pas responsable pour les accessoires vendus par d'autres fabricants et leurs standards de sécurité.

! **ATTENTION :** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

! **ATTENTION :** L'adaptateur AC ou le câble USB peuvent provoquer un risque d'étranglement. Ne convient pas aux enfants de moins de 3 ans.

! **ATTENTION :** Si pour quelque raison que ce soit, l'écran (d'affichage) est brisé ou fendu, mettez immédiatement ce produit hors de portée des enfants.

! **PROTÉGEZ VOTRE OÛÏE :** Une exposition durable à des sonorités trop fortes peut entraîner une perte définitive de l'ouïe. Lorsque vous utilisez le casque ou les écouteurs bouton, il est conseillé de baisser le volume et réduire le temps d'écoute. Réglez le son lorsque vous êtes dans un endroit calme et baissez-le si vous n'entendez pas les personnes qui parlent autour de vous. Limitez le temps d'écoute à 90 minutes, puis accordez-vous un moment de tranquillité. Plus le volume est élevé, plus il y a de chances que votre ouïe soit rapidement touchée. En cas de bourdonnement dans les oreilles ou si vous entendez des voix sourdes, arrêtez immédiatement d'écouter ce produit et faites contrôler votre ouïe dans les plus brefs délais.

! **ATTENTION :** Il est rare mais possible que les lumières clignotantes ou les formes provoquent des crises d'épilepsies. Jouez/regardez dans une pièce bien éclairée et prenez des poses de 10 à 15 minutes toutes les heures.

Remplacement des piles

! **ATTENTION :** La pile rechargeable lithium ne peut être retirée de ce produit. Pour votre sécurité, n'essayez jamais de retirer la pile. Si vous avez des problèmes concernant la pile ou la batterie de votre produit, veuillez contacter le service client LeapFrog. Les coordonnées sont disponibles à www.leapfrog.com/support

Recharger les piles

Le LEAPPAD ULTRA est équipé d'une pile lithium-polymère. Branchez-le avec l'adaptateur AC pendant 4 heures avant de l'utiliser. Le recharger avec un ordinateur prendra plus de temps.

! **ATTENTION :** L'adaptateur et le cordon USB peuvent constituer un risque d'étranglement. Ils ne doivent pas être utilisés par les enfants de moins de 3 ans. **ATTENTION :** Ne convient pas aux enfants de moins de 36 mois. L'utilisation inadéquate de l'adaptateur peut causer une électrocution.

! **ATTENTION :** La pile ne doit être chargée que par un adulte ou enfants de plus de 8 ans sous la supervision d'un parent exclusivement. Vous pouvez recharger la pile en utilisant l'adaptateur AC ou en connectant le produit à votre ordinateur avec le câble USB fournis. Nous recommandons l'utilisation de ceux inclus.

FOLD

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The highest SAR value as reported to the authorities for this tablet PC model when tested for use against the body is 0.72 W/kg. The tablet PC has been tested when positioned of 0 mm from the body without any metal parts in the vicinity of the tablet PC or when properly used with an appropriate LeapFrog Accessory.