

A

Front



Magic Dance Pumpkin Operating instructions



CAUTION • To prevent entanglement, keep fur cuffs and hair away from wheels.

IMPORTANT INFORMATION: Adult supervision advised. Keep away from obstacles and electrical hazards. Please read User Instructions. Please remove all packaging materials before giving to children. Keep addresses and phone numbers for future reference.



Wand

Note: Wand is shipped in "Try Me" mode. Switch button to "Normal Play" mode for all features.

Try me mode (slide the switch to Try Me position)

- Press the Center button on the wand. It will play the "Gliss" sound and then Pumpkin will speak.

Normal Play Mode (slide the switch on the wand to the "ON" position).

- Wave the wand, it will play the "Gliss" sound, then Pumpkin will say one of 9 phrases
- Press the Tail Wag button #1) Pumpkin will speak and wag her tail!
- Press the Curtsy button #2) Pumpkin will curtsy and speak!
- Press the Dancing button #3) Pumpkin will speak and then dance to her favorite song!
Press the Dancing Button again and Pumpkin will dance to her other favorite tune.
- Press forward, backward, left or right and pumpkin will move forward, backward, left or right respectively.
- Press the Center button, Pumpkin will move forward and her tail will wag sweetly.


Item includes the following: 1pc Pumpkin, 1 pc Wand, 1 pc Tiara, 1 pc Bow, 1 pc Tutu, 2 pc Cuffs, 1 instruction sheet and 1 story book.



#1

#2

#3

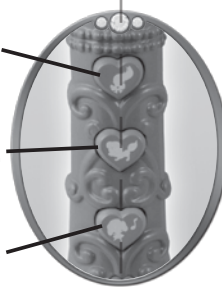

Forward • Backward
Right • Left • Center

"Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Consult the dealer or experienced radio/TV technician for help."

Pumpkin


- Turn switch located near battery box lid on Pumpkin's chest to ON position.
- Press the Jewel on Pumpkin, she will say 1 of 9 phrases every time you press the Jewel.



Battery Replacement: Use a screwdriver to open the battery compartment door and replace old batteries.

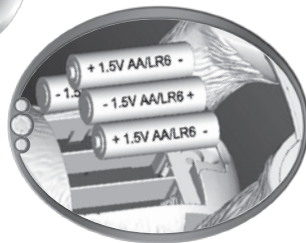

Pumpkin requires 4 AA batteries, not included.

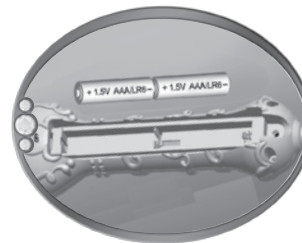

2 AAA batteries are included in the wand. The batteries included in this toy are intended for in-store demonstration purpose only.

"This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference"

- Do not mix new and used batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.

Blip Toys is a registered trademark of Blip LLC. All Rights Reserved. Colors of product may vary from shown. Please keep outer packaging and instructions (if included) for future reference as they contain important information. Other packaging materials such as tape, twist ties and blister packs should be discarded and are not a part of the toy.



©Disney
©2014 BLIP LLC
3955 ANNAPOLIS LANE
PLYMOUTH, MN 55447 USA
1-800-974-7856
WWW.BLIPTOYS.COM
MADE IN CHINA
STOCK NO: 23399, 23557

B

Back



Magic Dance Pumpkin Mode d'emploi



AVERTISSEMENT • Pour éviter l'enchevêtrement, garder manchette de fourrure et cheveux loin de roues.

INFORMATIONS IMPORTANTES: La surveillance d'un adulte est recommandée. Tenir éloigné des obstacles et des risques électriques. Prière de lire les instructions d'utilisation. Enlever l'emballage et tous matériaux de fixation avant de donner ce jouet aux enfants. Veuillez conserver les adresses et les numéros de téléphone pour consultation ultérieure. L'article à l'intérieur de ce paquet peuvent différer des photographies et / ou des illustrations.



Baguette Magique

Remarque: Baguette magique est livré en mode "Try Me" (Essayez-Moi). Mettez le bouton en mode «Normal Play» pour toutes les fonctions.

Mode Essayez-Moi (faites glisser l'interrupteur à la position "Try Me")

Appuyez sur le bouton central de la Baguette Magique. Il jouera le son "Gliss" puis Pumpkin parlera.

Mode Normal Play (Lecture Normale) (faites glisser l'interrupteur sur la baguette à la position "ON").

- Agitez la Baguette Magique, il jouera le son "Gliss", puis Pumpkin dira l'un des 9 phrases
- Appuyez sur le bouton "Tail Wag" (bouton # 1) Pumpkin parlera et remuera sa queue!
- Appuyez sur le bouton "Curtsy" (bouton # 2) Pumpkin fera une révérence et elle parlera!
- Appuyez sur le bouton "Dancing" (bouton # 3) Pumpkin parlera puis danser à sa chanson préférée! Appuyez sur le bouton "Dancing" encore et Pumpkin dansera à son autre musique préférée.
- Appuyez Allez à l'avant, en arrière, à gauche ou à droite et Pumpkin avancera à l'avant, vers l'arrière, la gauche ou la droite.
- Appuyez sur le bouton central, Pumpkin ira à l'avant et sa queue remuera doucement.


Inclut: 1 Pumpkin, 1 Baguette Magique, 1 Couronne, 1 Ruban, 1 Tutu, 2 poignets, 1 feuille d'instruction et 1 livre d'histoire.



#1

#2

#3

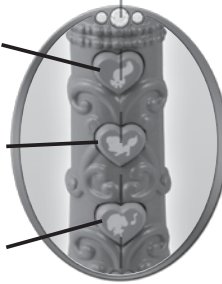


Avant • Arrière
Droit • Gauche • Centre

Pumpkin


- Mettez l'interrupteur situé près du couvercle de la boîte de piles sur la poitrine de Pumpkin à la position ON.
- Appuyez sur le bijou sur Pumpkin, elle dira 1 de 9 phrases chaque fois que vous appuyez sur le bijou.



Remplacement de la batterie Utilisez un tournevis pour ouvrir la porte du compartiment des piles et remplacer les vieilles batteries.

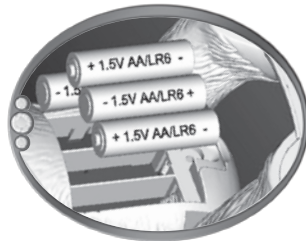

Pumpkin nécessite 4 piles AA, non incluses.

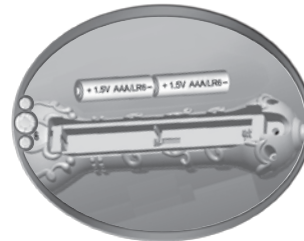

2 piles AAA sont incluses dans la Baguette Magique. Les piles incluses dans ce jouet sont destinés à des fins de démonstration en magasin seulement.

Ce dispositif de radiocommunication rencontre toutes les exigences de la norme CNR-310 d'Industrie Canada. Son fonctionnement est sujet aux deux conditions suivantes: (1) ce dispositif ne doit pas causer d'interférences nocives et. (2) ce dispositif doit accepter toutes les interférences reçues, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

Puissance du champ et distance: 27.145 MHz = 37.6dBuV/M at 3m

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type de d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

"CAN ICES-3 (B) / NMB-3 (B)"

- Ne combinez pas des piles neuves et usagées
- Ne combinez pas des piles alcalines (standard) (Leclanché) ou rechargeables (nickel-cadmium)

Blip Toys sont des marques déposées de LLC de Blip. Tous droits réservés. Les couleurs des produits peuvent être différentes de celles illustrées. Prière de conserver cet emballage et ces instructions (si incluses) pour référence ultérieure car ils contiennent des informations importantes. Débarrassez-vous de tous les produits d'emballage comme rubans adhésifs, attaches, et feuilles de plastique car ils ne font pas partie du jouet.



©Disney
©2014 BLIP LLC
3955 ANNAPOLIS LANE
PLYMOUTH, MN 55447 USA
1-800-974-7856
WWW.BLIPTOYS.COM
FABRIQUÉ EN CHINE
STOCK NO: 23399, 23557

Folding insturctions

