


**USER'S
INSTRUCTIONS**

WIRELESS CAMERA

**PORTABLE WIRELESS
COLOR CAMERA & RECEIVER
WITH BUILT-IN USB DVR**

MODEL CW5700

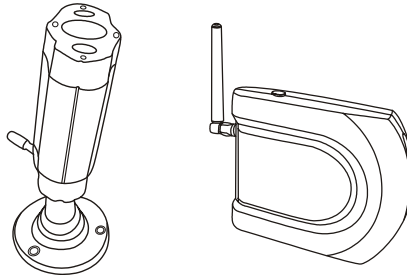

W Wisecomm
www.wisecomm.com

Turn your PC to Digital Video Recorder.

KEY FEATURES

Plug & play Easy Installation

Fast USB2.0 Data Transfer

30F/Sec Recorking Speed

Uses Advanced Mpeg 4 Compression

Remote Monitoring via Internet

Built-in Motion Detection

Scheduled and Timed Recording Remotely record and store images on

Your computer hard drive

FEATURES:

Transmits video and audio signals from the camera to your TV or Monitor

Built-in-rechargeable Lithium battery 4channel frequency available to avoid interference

Built-in microphone W/IR LEDs for night vision (SEE in total darkness)

RANGE UP TO 400ft

SPECIFICATIONS

Receiver

Receiving Frequency ①2414MHZ ②2432MHZ
 ③2450MHZ ④2468MHZ

Demodulation FM

Antenna 50ohm SMA

Video Output Level 1vpp@75Ω,S/N>38db

Audio Output Level 1vpp@600Ω

Power Supply +8V DC

Current consumption 250mA

Operating Temperature -10°C~-50°C/14° F~122° F

Storage Temperature -40°C~85°C/-40F° F~185° F O

Operating Humidity	85%RH
Dimensions (W*L*H)	5" * 4.4" * 1"
Weight	178g

Camera

Imaging Sensor	1/3-inch
Horizontal Resolution	380TV Line
View Angle	62°
Minimum Illumination	1.5Lux/F1.5
Gain control	Automatic
Frequency	①2414MHZ ②2432MHZ ③2450MHZ ④2468MHZ

Modulation	FM
Bandwidth	18MHZ
Power Supply	+12V DC
Current consumption	250mA
Operating Temperature	-10℃ 50℃/14° f-122° f
Storage temperature	-40℃ -85℃/-40° f-185° f
Operating humidity	85%RH
Dimensions(W*L*H)	6.4" * 3.2" * 1.5"
Weight	595g
Range	400ftin line of sight
Night Vision Range	40ft (Min)

Peace of Mind

This easy-to-use Wireless Camera System Allows you to check on entry ways, Playrooms, etc from the comfort of another room.

Safety

With the added benefit of the infrared LEDs on the camera, you can watch the entry ways day or night from the safety and comfort of your home.

Convenience

This Wireless Video Camera system is easy to use and portable. You can take the system with you throughout your home without worrying about tangled-up wires.

Outdoor/Indoor color camera

Small enough to be placed anywhere

Infrared Lights enable camera to see in total darkness



IMPORTANT SAFETY PRECAUTIONS

- To prevent fire or shock hazard, do not expose this product to rain or moisture.
- To avoid electrical shock, do not open the case of this product.
- Operate this product using only the power supply included.
- Do not overload electrical outlets or extension cords, this can result in fire or electric shock.
- Keep this product away from the microwave oven, near high voltage and high temperature area, otherwise the battery inside the camera may cause explosion or fire.
- Do not expose this product in direct sunlight or strong reflected rays.
- Refer servicing to qualified personnel only.
- Do not change or modify this product, the warranty terms will be voided.

HOW TO USE CW5700 FOR OPTIMAL PERFORMANCE

- 1.CW5700 should be placed on a flat, stable surface to prevent damage to it from falling.
- 2.For maximum operation range, try to minimize the number of obstacles(TV, Other electronics, large steel structures) between the transmitter and the receiver units.
- 3.Avoid pointing the camera directly into light or extreme sunlight, This will interfere with your ability to obtain a proper image
- 4.To receive optimum image performance, always make sure lenses are kept clean.
- 5.This camera is not waterproof. Do not use in wet or high humidity environments, as this can cause damage or electrical shock.

WIRELESS CAMERA-CW5700TX

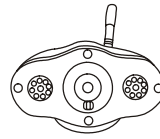

1. POWER JACK

Plug the supplied DC 15V 250mA adapter

2. ANTENNA

Sends audio and video signals.

3.CHANNEL SELECTION KNOB

Must select the same channel on both transmitter and receiver.


4. IR LED

Automatically turns on at night to view objects in darkness.

5. Mounting bracket

Install the mounting bracket where you want to.

WIRELESS RECEIVER-CW5700RX

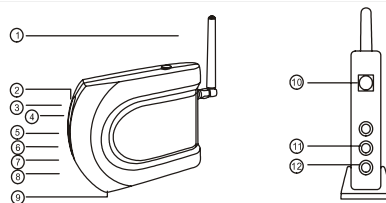

1. ANTENNA

Receives the audio and video signals.

2. USB indicator

The red LED is lit when the receiver is connected to computer with USB cable.

3. POWER INDICATOR

The red LED is lit when the power is on.

4. AUTO SWITCHING INDICATOR

The yellow LED is lit when in the sequencing mode.

5. CH 1

The light is lit when CH1 has been selected.

6. CH 2

This light is lit when CH2 has been selected

7. CH3

This light is lit when CH3 has been selected.

8. CH4

This light is lit when CH4 has been selected.

9. MOUNTING BRACKET

For the receiver to stand.

10. POWER ON/OFF SWITCH

Switch for the power On/Off.

11. DC IN

Plug the 8V adapter (Supplied)

12. AV (AUDIO/VIDEO)

OUTPUTJACK

Connect the supplied A/V cable to the jack. Plug the yellow colored RCA to the VIDEO IN on the monitor / TV and the white colored RCA to the AUDIO IN respectively.

13. CHANNEL SELECTION BUTTON


Use to find optimal reception. Must select the same channel on both transmitter and receiver.

14. Connector to USB

Transfer signal to USB connector.

INSTALLATION


WIRELESS CAMERA-CW5700TX

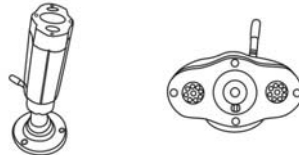

1.Connect the supplied adaptor(DC 15V 250mA)to the DC IN jack of the power cable on the rear of the camera and plug it into AC power outlet. The red LED (power indicator light)on the back of the camera will be lit.

2.Select the channel you wish to view.

WIRELESS RECEIVER-CW5700RX

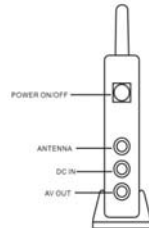

1. Connect the supplied AC adaptor (DC 8V 250mA) to the DC IN jack of the receiver and plug it into AC outlet.
2. Connect the supplied A/V cable to the jack. Plug the yellow colored RCA to the VIDEO IN on the monitor/TV and the white colored RCA to the AUDIO IN respectively.
3. Turn on the power switch.
4. Press the channel selection button to select the same channel as the camera.
5. Refer to the software in the disc included for USB function.

OPERATION

• MANUAL MODE


Select the same channel with the channel selection button on receiver as the channel of camera. A green LED's light indicates the channel you selected.

• AUTOMATIC SEQUENCING MODE

Press channel selection button on the receiver after CH 4 indicator is lit. it will be in the sequencing mode.

• OPERATION WITH TV/MONITOR

1. If your color TV/MONITOR has A/V jacks, connect the supplied A/V cable to TV's A/V jacks and to the A/V jack on the receiver. Be sure to connect the white connector of the A/V cable to the AUDIO IN jack and the yellow connector of the A/V cable to the VIDEO IN jack on the TV or MONITOR.
2. Plug the provided AC adapter (DC 8V 250mA) into the DC jack on the receiver and the other end into AC outlet. Make sure the POWER switch is in the OFF position beforehand.
3. Locate and orient the receiver to get optimal performance.
4. Be sure the TV/monitor and the receiver are turned on.



OPERATION WITH TV/MONITOR AND VCR

1. Connect the provided A/V (audio/video) cable to the A/V jack on the receiver and to the jacks on your VCR's A/V jacks.

2. Be sure to connect the white connector of the A/V cable to the AUDIO IN jack on the VCR, if the VCR has only a single jack for video input, connect the yellow plug to it.

3. AUDIO IN jack and the yellow connector of the A/V cable to the VIDEO IN jack on the VCR, if the VCR has only a single jack for video input, connect the yellow plug to it.

4. Connect the other A/V cable (not supplied) to the VIDEO OUT and AUDIO OUT jacks on your VCR. Connect the other ends to VIDEO IN and AUDIO IN jacks on your TV/monitor.


Plug the provide AC adapter (DC 8V 250mA) into the DC jack on the receiver and the other end into AC outlet.

Make sure the POWER switch is in the OFF position beforehand. Locate and orient the receiver to get optimal performance.

5. Be sure the TV/monitor and the receiver are turned on.

6. Refer to the software in the disc included for USB function.

• Each VCR manufacturer uses different recording method. Refer to VCR's instructions if it is impossible to setup the menu.



TROUBLE SHOOTING

If the system does not function properly, check the following points before contacting the service center.

Problems	Cause and remedies	
	Receiver	Camera
No power (no picture/sound)	AC adaptor was not plugged into the outlet properly.	AC adaptor was not plugged into the outlet properly.
Poor reception	Improper antenna direction. Improper channel setting	Check the distance and blocks.
Picture flicking	---	Strong spotlight in the field of view
Dim picture, Picture too bright, too dark	Improper brightness control setting on your TV/Monitor	Lighting source in The field of view
Picture rolls and Jumps, scrambled picture	Improper V-hold control setting on your TV/Monitor	---
Picture smaller than screen or volume weak	House current may be too low	House current may be too low

SPECIFICATIONS

WIRELESS RECEIVER

Receiving frequency	①2414MHZ②2432MHZ ③2450MHZ④2468MHZ
Demodulation	FM
Antenna	50 ohm SMA
Receiving sensitivity	-85dbm
Video output	IVP-P@75ohm
Audio output	1VP-P@600ohm
Power supply	DC 8V
Current consumption	250mAH
Dimensions	5"X4.4"X1"
Weight	178g

WIRELESS CMAERA

Output level	90db microvolts/meter@3 meter
Operating frequency band	①2414MHZ②2432MHZ ③2450MHZ④2468MHZ
Modulation	FM
Video input level	1.0VP-P@75 ohm
Audio input leverl	1.0VP-p@600 ohm
Image sensor	1/3" C-MOS sensor
Number of pixels	NTSC,510X492
Resolution	380 TV lines
Scanning system	525 lines,60 fields/sec
Sync system	Internal sync
Minimum illumination	1.5 Lux/F1.5&IR LED on:0 Lux
S/N ratio	More than 45db
Gamma characteristics	0.45
Electronic shutter speed	1/60 to 1,500 sec
Lens	78° wide angle lens
Microphone	Condenser
Operating temperature	14 °F to 122oF
Dimensions	6.4"X3.2"X1.5"
Weight	595g

Specifications are subject to change without notice.

Basic system includes

1-2.4 GHz wireless receiver
1-2.4 GHz wireless camera
2-UL approved AC adapter
1-A/V (audio/video) cable
1-User's instruction
1-Warranty registration card
1-Camera bracket
1-Receiver bracket

LIMITED 1YEAR WARRANTY

This warranty gives the original purchaser specific legal rights and may also have other rights, which vary from state to state. If our products do not function because of any defect in material or workmanship, we will repair free of charges for 1 year on parts and labor from the date of original purchase. This warranty does not cover modification, abuse, incident or consequential damages unless the state of owner's residence specially prohibits limitations on incidental or consequential damages.

HOW TO OBTAIN FACTORY SERVICE

1. Original purchaser must fill out a warranty card and mail it to the factory with model number, serial number and the date of purchase.
2. We will repair or replace, and return to the owner the system under this limited warranty.
3. Please pack the system carefully and securely using the original packing materials, and send it prepaid and insured to: 13073 E.166th St. Cerritos, CA 90703
4. Please include a check for \$20.00 to cover the cost of return postage and handling. If the system is returned within the warranty period, please include a proof of purchase. If the system is out of warranty, you will receive an estimate of the repair cost for your approval before repair work will be started.

WARNING STATEMENT:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not authorized by the manufacturer may void users authority to operate this device.

IMPORTANTES PRECAUCIONES DE SEGURIDAD

- Para prevenir incendio o peligro de descarga eléctrica, no exponga este aparato a lluvia ni humedad.
- Para evitar descarga eléctrica, no abra la cubierta de este producto.
- Use este producto haciendo uso únicamente del suministro eléctrico incluido.
- No sobrecargue los tomacorrientes ni los cordones de extensión, ya que esto puede resultar en incendio o descarga eléctrica.
- Mantenga este producto retirado de hornos microondas, zonas de alto voltaje y altas temperaturas, de lo contrario las pilas adentro de la cámara podrían ocasionar explosión o incendio.
- No exponga este producto a la luz directa del sol o a un fuerte resplandor de los rayos del sol.
- El servicio lo ha de prestar únicamente un personal calificado.
- No cambie ni modifique este producto ya que esto anula los términos de la garantía.

NOTA

Este equipo se ha puesto a prueba y se encuentra cumplir con los límites de un aparato digital Clase B, según la parte 15 de las reglas de la FCC. Estos límites están diseñados con fines de proporcionar una protección razonable contra interferencias perjudiciales en instalaciones residenciales. Este equipo produce, usa y puede irradiar energía de radiofrecuencia y, si no se instalara y usara según las instrucciones, podría ocasionar interferencia

perjudicial a radiocomunicaciones; no obstante, no se garantiza que no ocurriera interferencia en una instalación en particular. Si el equipo ocasionara interferencia perjudicial a la recepción de radio o televisión, lo cual se podría determinar encendiendo y apagando el equipo, al usuario se le recomienda tratar de corregir la Interferencia mediante una o más de las siguientes medidas:

- Cambie la orientación o el sitio de la antena de recepción.
- Aumente la distancia entre el equipo y receptor.
- Conecte el equipo al tomacorriente de un circuito distinto al que está conectado el receptor.
- Consulte con el agente de ventas o un especialista de radio o televisión.



CÓMO USAR EL SISTEMA CW5700 PARA UN RENDIMIENTO ÓPTIMO

1. El CW5700 ha de colocarse sobre una superficie estable y plana con fines de prevenir daños ocasionados por caídas.
2. Para un alcance máximo de operación, trate de disminuir el número de

obstáculos (TV, otros aparatos electrónicos, estructuras grandes de acero) entre el transmisor y las unidades receptoras.

3. Evite apuntar la cámara directamente hacia la luz o un sitio extremadamente soleado. Esto interferirá con que pueda obtener la imagen debida.
4. Para recibir un rendimiento óptimo de imagen, asegúrese que los lentes siempre estén limpios.
5. La cámara no es impermeable. No la use en sitios mojados o de mucha humedad ya que esto puede ocasionar dano o descarga eléctrica.

CÁMARA INALÁMBRICA----CW5700TX

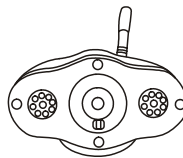

1. INDICADOR DE CARGA DIOLO LED (ROJO)

Indica que la pila (batería) empotrada se está cargando.

2. TOMA DE ENTRADA DE CORRIENTE (DC 5V)

Enchute el adaptador DC 5V 700mA incluido.

3. INDICADOR DE CORRIENTE DE DIOLO LED (VERDE)

Indica que la corriente está prendida (ON) o apagada (OFF).

4. ANTENA

Emite señales de audio y video.

5. CORRIENTE APAGADA (POWER OFF)

Cuando el interruptor se encuentra en esta posición, la corriente está apagada.

6-9. BOTÓN DE SELECCIÓN DE CANALES

Será necesario seleccionar el mismo canal para ambos, el transmisor y el receptor.

10. INDICADOR INFRARROJO (IR) DE DIOLO LED

Se prende automáticamente de noche para observar los objetos en la oscuridad.


11. SOPORTE DE MONTAJE

Instale el soporte de montaje donde desee.

12. ANTENA

Emite señales de audio y video.

RECEPTOR INALÁMBRICO---CW5700RX

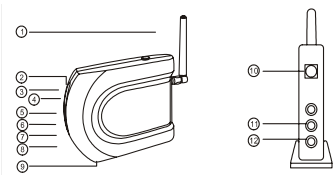

- 1. ANTENA**
Recibe las senales de audio y video

2. INDICADOR DE CORRIENTE
El diodo LED se prende cuando está prendida la corriente

3. BOTÓN DE SELECCIÓN DE CANALES
Use para encontrar la rcepción Óprima.Será necesario seleccionar el mismo canal para ambos, el transmisor y el receptor.

4. INDICADOR DE SECUENCIA AUTOMÁTICA
El diodo LED amarillo se prende cuando se encuenfra en modo de secuencia

5. CH 1
Esta luz se prende cuando se selecciona el canal 1

6. CH 2
Esta luz se prende cuando se selecciona el canal 2
- 7. CH3**
Esta luz se prende cuando se selecciona el canal 3

8. CH4
Esta luz se prende cuando se selecciona el canal 4

9. BASE
Para colocar al receptor.


10. INTERRUPIOR DE CORRIENTE (ON/OFF)
Interruptor para encender y apagar la corriente

11. TOMA DE ENTRADA DC
Enchufe el adaptador 8V (Incluido)

12. AV TOMA DE SALIDA (AUDIO/VIDEO)
Conecte el cable A/V incluido a la roma de salida Enchufe el RCA de color amarillo al VIDEO IN en el monitor/TV y el RCA de color blanco al AUDIO IN respectivamente


INSTALACIÓN

CÁMARA INALÁMBRICA--CW5700TX

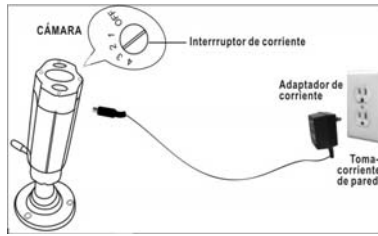

- 1 .Conecte el adaptador incluido (DC 5V 700mA) a la toma de entrada DC IN en la parte posterior de la cámara enchufándolo al tomacorriente AC. El diodo LED rojo (luz indicadora de corriente) en la parte posterior de la cámara estará, prendido y la pila (adentro de la cámara) se estará cargando (diodo LED verde).
- 2.Cargue la pila por 2 horas antes de usar.
- 3.Seleccione el canal que desee vet.

RECEPTOR INALÁBRICO---CW5700RX

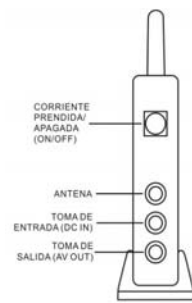

1. Conecte el adaptador AC incluido (DC 8V 200mA) a la toma de entrada DC IN del receptor y enchúfelo al tomacorriente AC.
2. Conecte el cable A/V incluido a la toma de salida. Enchufe el RCA de color amarillo al VIDEO IN del monitor/TV y el RCA de color blanco al AUDIO IN respectivamente.
3. Prenda el interruptor de corriente.
4. Oprima el botón de selección de canales para seleccionar el mismo canal que la cámara.

OPERACIÓN

• MODO MANUAL


Usando el botón de selección de canales en el receptor Seleccione el mismo canal de la cámara. La luz diodo LED verde indicará el canal que haya seleccionado.

• MODO DE SECUENCIA AUTOMÁTICA

Oprima el botón de selección de canales en el receptor después de prenderse el indicador CH 4. Éste se encontrará en modo de secuencia automática en conjunto con la luz diodo LED amarilla; el intervalo de tiempo será. 3 segundos. Oprima El botón de selección de canales de nuevo para regresar a MODO MANUAL y seleccione el canal que desee ver.

• OPERACIÓN CON TV/MONITOR

1. Si su TV/MONITOR de color tiene tomas de entrada A/V, conecte el cable A/V incluido a las tomas A/V del TV y a la toma A/V del receptor. Asegúrese conectar el conector blanco del cable A/V a la toma AUDIO IN y el conector amarillo del cable A/V a la toma VIDEO IN del TV o MONITOR.
2. Enchufe el adaptador AC (DC 8V 200mA) incluido a la toma DC del receptor y el otro extremo al tomacorriente AC. Asegurese que el interruptor de CORRIENTE se encuentre en posición OFF (apagado) de antemano.
3. Localice y oriente el receptor para obtener el rendimiento óptimo.
4. Asegúrese que el TV/monitor y el receptor estén prendidos.

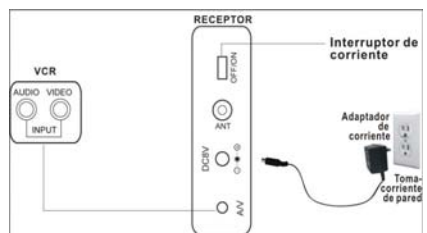


OPERACIÓN CON TV/MONITOR Y VCR

1. Conecte el cable A/V (audio/video) incluido a la toma A/V en el receptor y a las tomas A/V del VCR. Asegúrese conectar el conector blanco del cable A/V a la toma AUDIO IN y el conector amarillo del cable A/V a la toma VIDEO IN en el VCR; si el VCR tiene únicamente una toma sencilla para entrada de video, conecte el enchufe amarillo.
2. Conecte el otro cable A/V (no incluido) a las tomas VIDEO OUT y AUDIO OUT del VCR. Conecte los otros extremos a las tomas VIDEO IN y AUDIO IN de su TV/monitor.
3. Enchufe el adaptador AC incluido (DC 8V 200mA) a la toma DC del receptor y el otro extremo al tomacorriente AC. Asegúrese que el INTERRUPTOR DE CORRIENTE esté en la posición apagada (OFF) de antemano.

4. Localice y oriente el receptor para obtener el rendimiento óptimo.
5. Asegúrese que el TV/monitor y el receptor estén prendidos.

Cada fabricante de VCRs usa un método distinto de grabación. Consulte las instrucciones del VCR si le es imposible programar el menú.

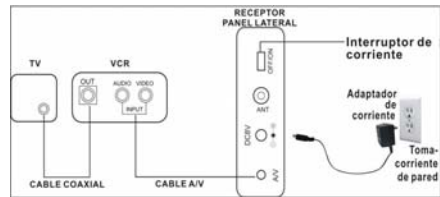

SI SURGEN PROBLEMAS

Si el sistema no funciona debidamente, examine los siguientes puntos antes de comunicarse con el centro de servicio.

Problemas	Causa y remedios	
	Receptor	C/mara
No hay corriente (no hay imagen/sonido)	El adaptador AC no se enchufó debidamente al tomacorriente.	El adaptador AC no se enchufó debidamente al tomacorriente.
Recepción inadecuada	Dirección indebida de la antena. Se fijó el canal indebidamente.	Observe la distancia y obstrucciones.
Parpadeo de imagen	-----	campo de visión
Imagen deslucida, Imagen demasiado brillante, demasiado osc	El control de brillo se fijó indebidamente en el TV/Monitor	Fuente de luz en el campo de visión
Imagen ondulante que salta, imagen embrollada	Ajuste indebido del control V-hold en el TV/Monitor	-----
La imagen es más pequeña que la pantalla o el volumen no es fuerte	La corriente en la casa podría no ser muy fuerte	La corriente en la casa podría no ser muy fuerte

ESPECIFICACIONES

RECEPTOR INALÁMBRICO

Frecuencia de recepción	①2414MHZ②2432MHZ ③2450MHZ④2468MHZ
Demodulación	FM
Antena	50 ohmios SMA
Sensibilidad de recepción	-85dbm
Salida de video	1VP-P ~75 ohmios
Salida de audio	1VP-P ~600 ohmios
Tiempo de intervalo	3 sec
Suministro eléctrico	DC 8V
Consumo de corriente	180mA
Dimensiones	115 x20.5 x99mm

CÁMARAINALÁMBRICA

Nivel de salida	90db microvoltios/metro@3 metros
Banda de frecuencia utilizada	①2414MHZ②2432MHZ ③2450MHZ④2468MHZ
Modulación	FM
Nivel de entrada de video	1.0VP-P 675 ohmios
Nivel de entrada de audio	1.0VP-P 6600 ohmios
Sensor de imagen	Sensor de 1/3" C-MOS

Número de píxeles	NTSC, 510x492
Resolución	380 líneas TV
Sistema de exploración	525 líneas, 60 campos / segundo
Sistema de sincronismo	Sincronización interna
Iluminación mínima	1.5 Lux/F1.5 y con IR LED prendido: 0 Lux
Relación Señal/Ruido (S/N)	Más de 45db
Características de Gamma	0.45
Velocidad de obturación electrónica	1/60 a 1,500 seg
Lente	Objetivo gran angular de 78
Microfono	Condensador
Pila de litio	500mAH
Tiempo de carga	2 horas
Duración del funcionamiento	Aprox. 3 horas
Temperatura de operación	14°F a 122°F
Dimensiones	87x43 x90mm
Peso	235g

Las especificaciones pueden cambiar sin previo aviso.

El sistema básico incluye

1-receptor inalámbrico de 2.4 GHz

1- cámara inalámbrica de 2.4 Ghz

2- adaptadores AC aprobados por UL

1- cable A/V (audio/video)

1-Instrucciones para el usuario

1-Tarjeta de registro de garantía

1-Soporte de montaje para la cámara

1-Base para el receptor

Accesorios Opcionales

CW5700TX Cámara inalámbrica adicional con accesorios

CW5700RX Receptor inalámbrico adicional con accesorios

GARANTÍA LIMITADA DE 1 AÑO

Esta garantía le proporciona al comprador original derechos legales específicos quien también podría tener otros derechos los cuales varían de un estado a otro. Si nuestros productos no funcionan a razón de un defecto en el material o mano de obra, lo repararemos gratis por un año en cuanto a piezas (partes) y mano de obra a partir de la fecha de la compra original. Esta garantía no cubre modificaciones, maltrato, danos incidentales o indirectos, a menos que el estado de residencia del dueño específicamente prohíba limitaciones referentes a danos incidentales o indirectos.

CÓMO OBTENER SERVICIO DE FÁBRICA

1. El comprador original ha de llenar la tarjeta de garantía y enviarla a la fábrica con el número de modelo, número de serie y la fecha de compra.
2. Repararemos o reemplazaremos y le devolveremos al dueño el sistema bajo esta garantía limitada.
3. Favor de empacar el sistema cuidadosa y debidamente usando los materiales de empaque originales y enviarlo prepago y asegurado a:

13073 E. 166th St. Cerritos, CA 90703
4. Favor de incluir un cheque de \$20.00 para cubrir el costo de franqueo de devolución y manejo. Si el sistema se devuelve dentro del periodo de garantía, favor de incluir el comprobante de compra. Si el sistema ya no lo cubre la garantía, recibirá un presupuesto de los costos de reparación para su autorización antes de iniciar obras de reparación.