USER MANUAL

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

--Please don't be in high temperature, moisture or very dust place

--Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.

--Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.

--Please choose the appropriate volume, Use headphones shoulds not be too big volume, If feel tinnitus, Lower the volume or stop using it

--please charge In the following condition,

A.The battery power ICONS shows have no power

B.The system automatically shut off, startup after power off soon

C.Operation buttons no response

D.The machine that the top right corner show red icons

--When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.

--For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.

--Don't disassemble the product, don't use alcohol,Thinner or benzene to scrubbing products

--Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)

--Please don't using the Tablet PC when you in driving or walking down the street,

--USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

(Remark)All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

1. appearance and button:

1.1 Touch panel
    10" Capacitive touch panel: In The Operation, to click,dragging on the touch panel
1.2 POWER

  startup: Power on the player by connecting the power supply.

  shutdown: In the main menu interface, Press the power button about 5 second to
shutdown, The system can hint "power off" option, Clike"ok". you can safely shut down; or
simply disconnect the power supply.

Lock screen: Short press Power button to lock screen or unlock screen.
Remark 1.When power is empty,system will shut down automatically.
            2.Illegal turn off the device,restart will scan and restore the disk,it may take
            longer time to enter into system

the main interface
1.1 SD card
  SD-CARD solt: external SD-FLASH card
1.2 USB:
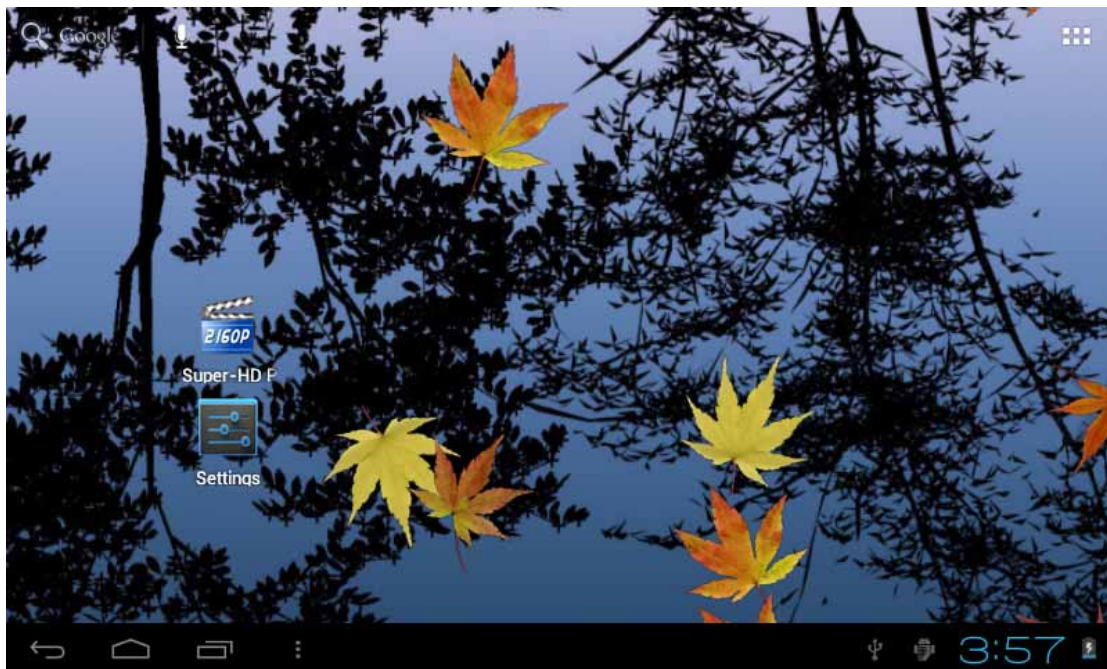 USB 2.0 OTG
1.3 LAN
  RJ45 internet interface
1.4 DC-in hole
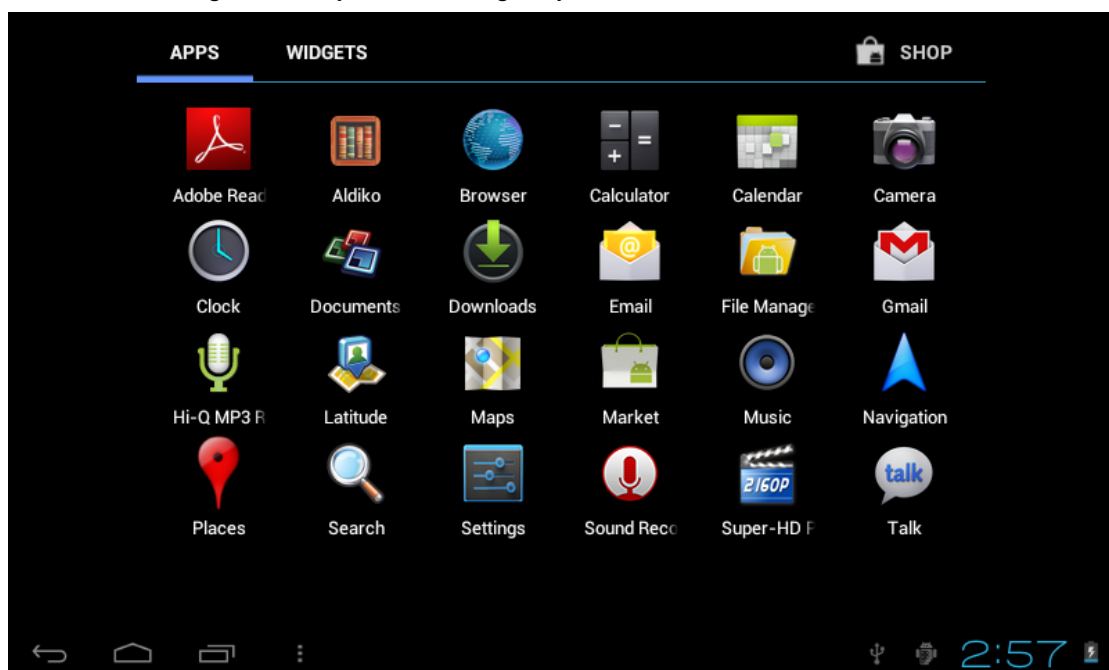
2. Equipment operation interface
  2.1 Main interface describe
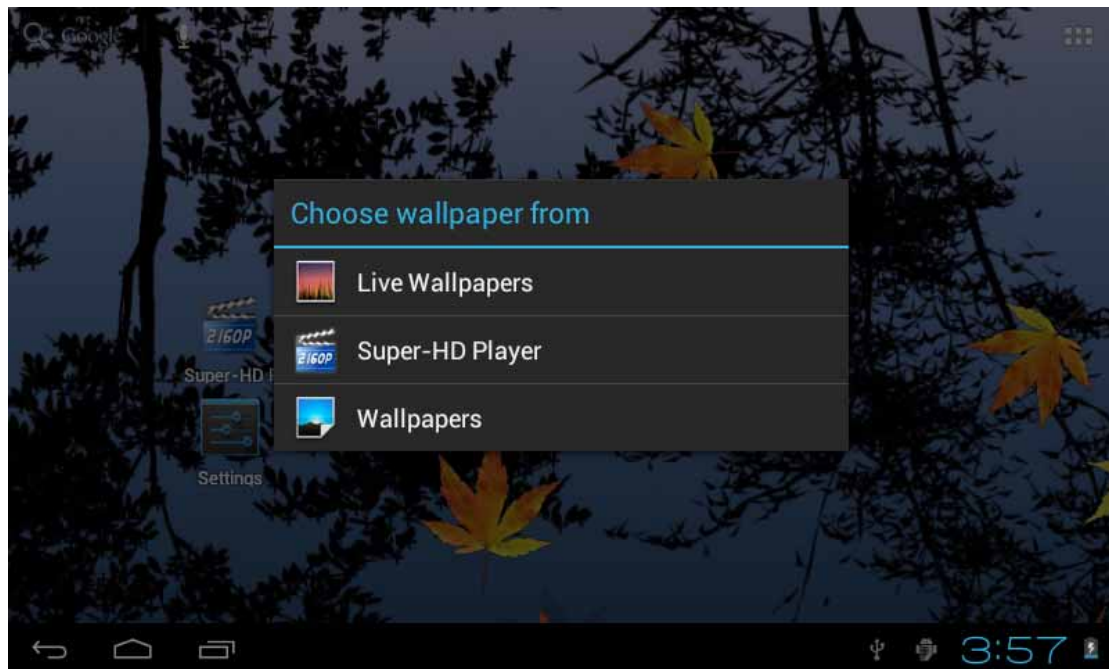   After startup will enter the main interface

In the main interface, you can :

Management main interface software ICONS: long press the icons 3 second, after t he icons will biger, then you can drag anywhere in the interface.

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin ico n, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box"Add yo Home screen" as shown below:

2.2 status bar describe

--The status bar above of the screen

Top left display main interface software, T-Flash card, USB connection status and so on

Top right display the battery, battery charge icons, current time, set time, S ettings Menu, ESC button.

2.3 Use touch panel

Device equipped with a 7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.
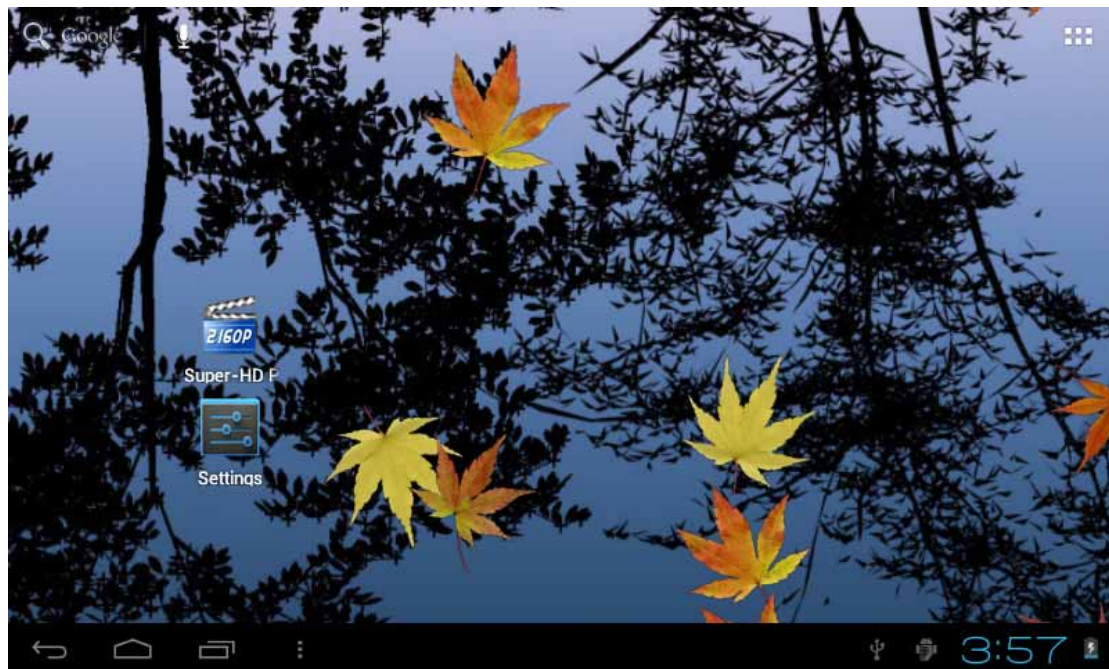
No matter which interface you are on the screen, can go back to main screen through pressing the soft key ⬜ on the bottom right corner of the main screen.

(Attention)The main screen soft key ⬜functions as the machine back key🏠

In different applications, by tapping the back soft key ⬅on the bottom right corner on the touch screen, you can return to its interface on the upfloor.

In different applications, by tapping the menu key ⋮on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

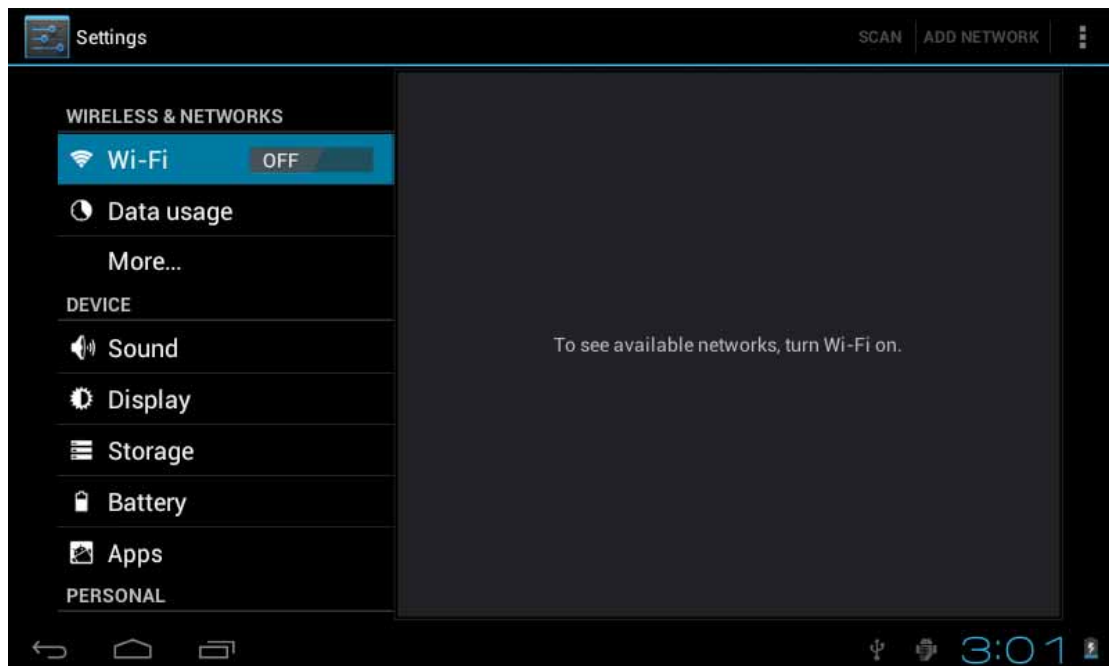(Remark): The main screen soft key ⋮functions as the machine manu☰

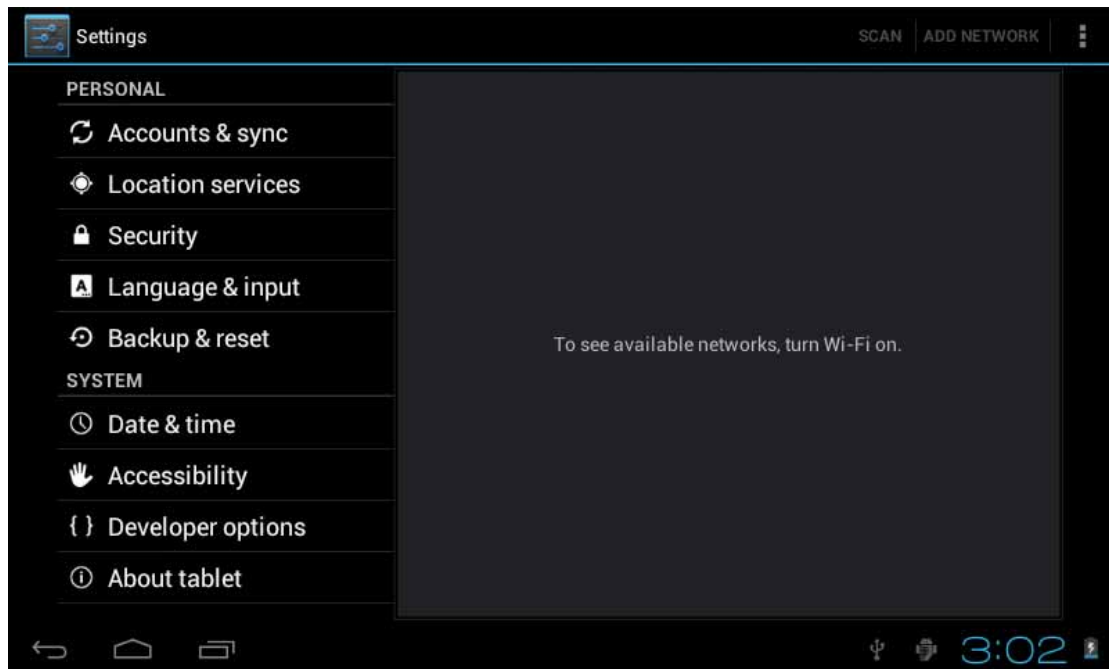In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.
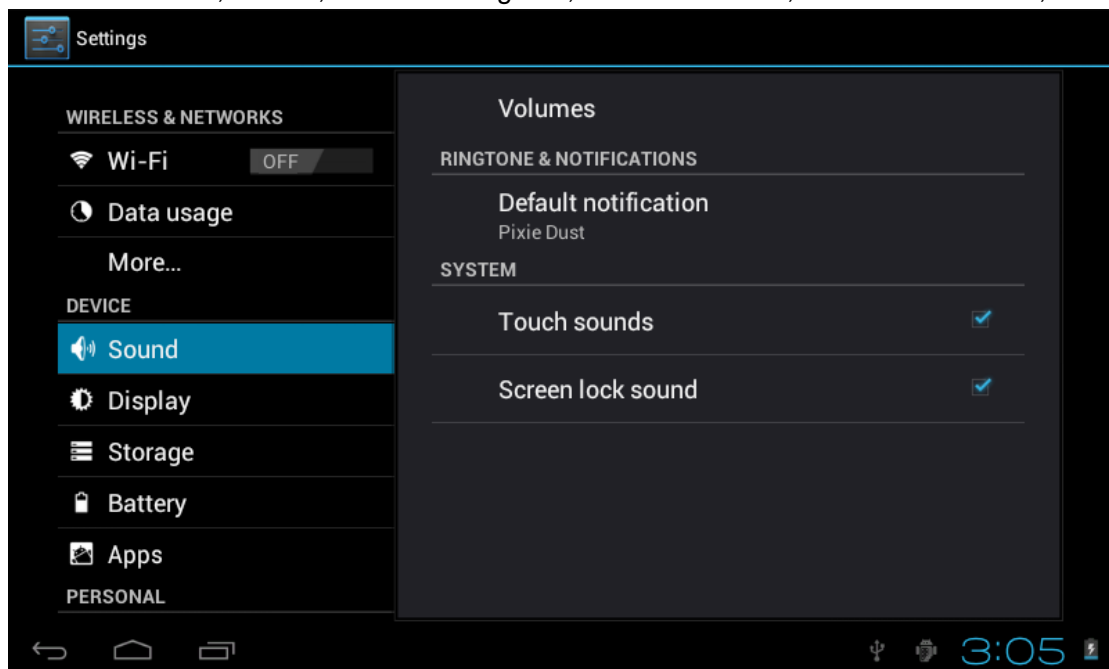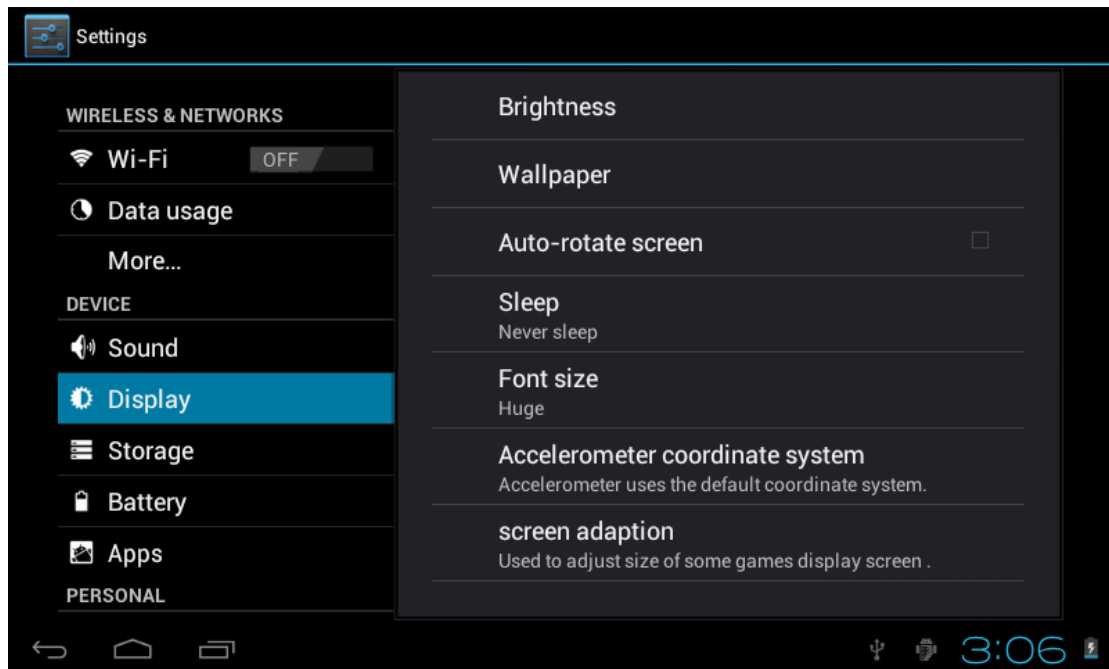
3. Equipment basic set

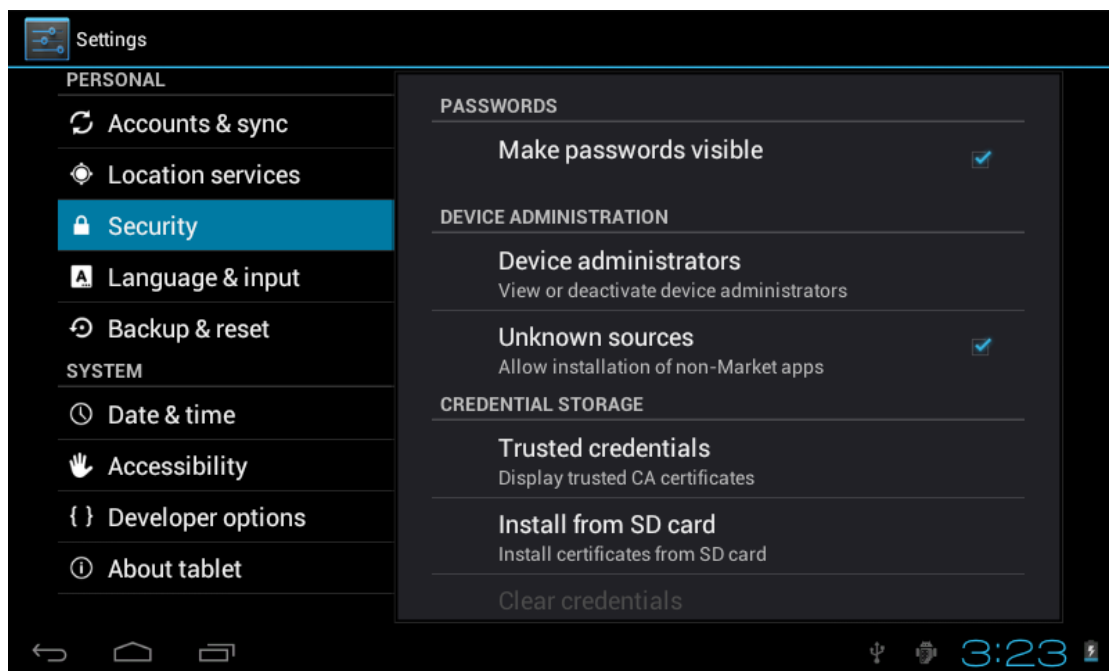Setting: Click setting icons , enter setting interface

3.1 Silent mode,Volume,Notifcation ringtone,Audible selection,Screen lock sounds,

3.2 Application

Manage applications

Unknown sources: Click "Unknown Sources", then click "OK"

Manage application: manager and uninstall Application

(Remark): when you Firmware Upgrade, pls close the USB connect
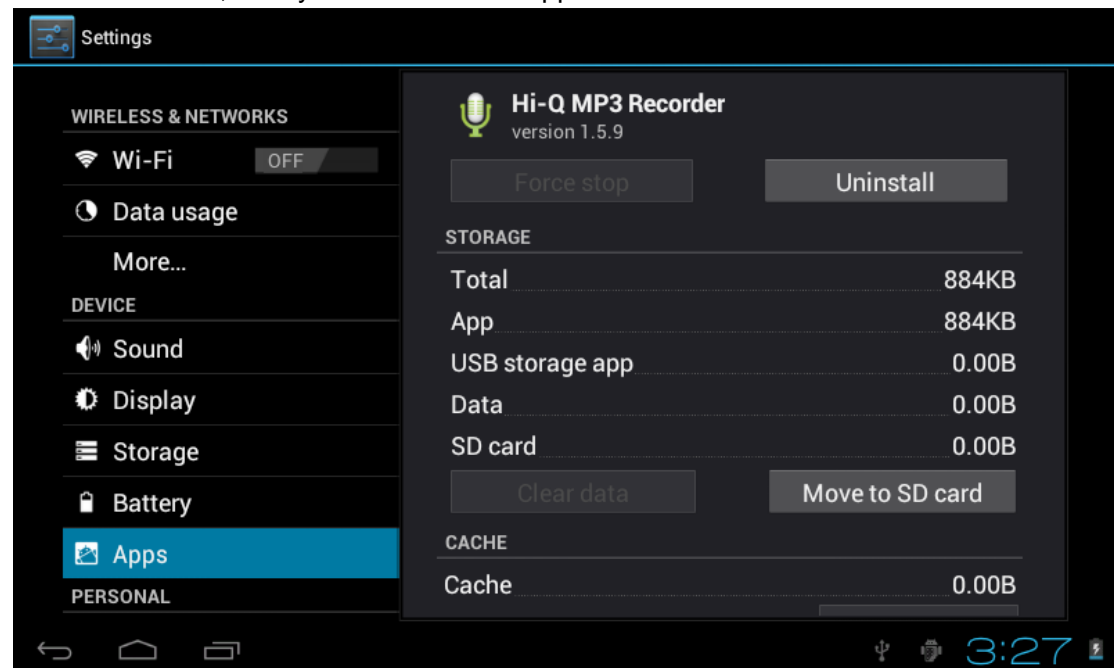
How to uninstall?

1. enter "setting">"Application">"Manage application" And then there will be
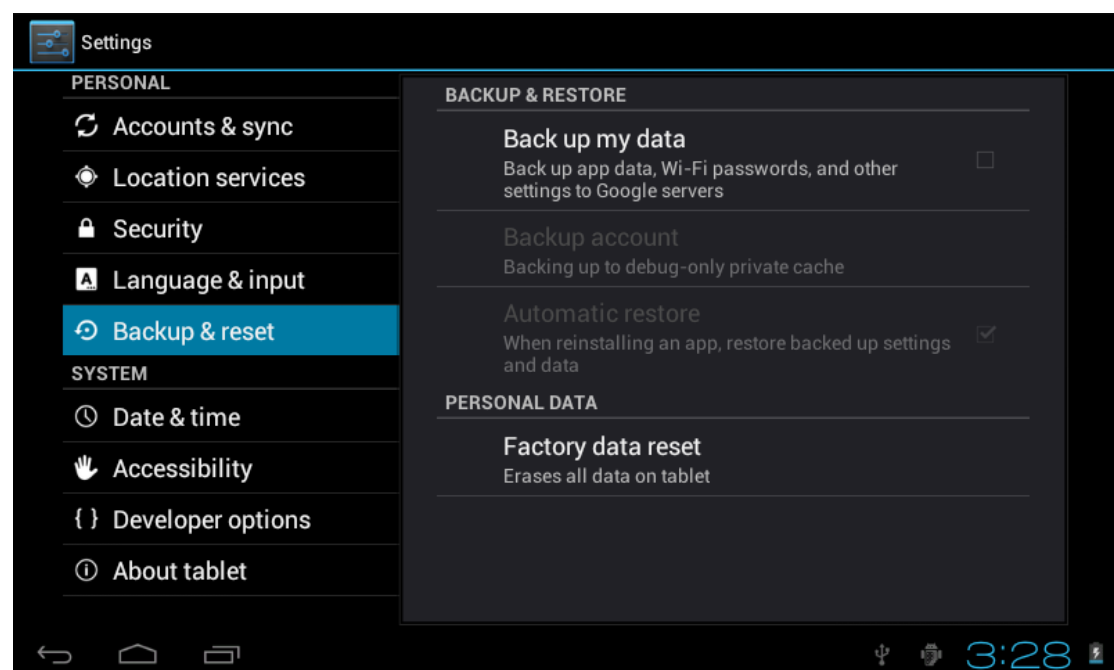
installed the program list

2. Click you want to uninstall icons, will enter the following interface

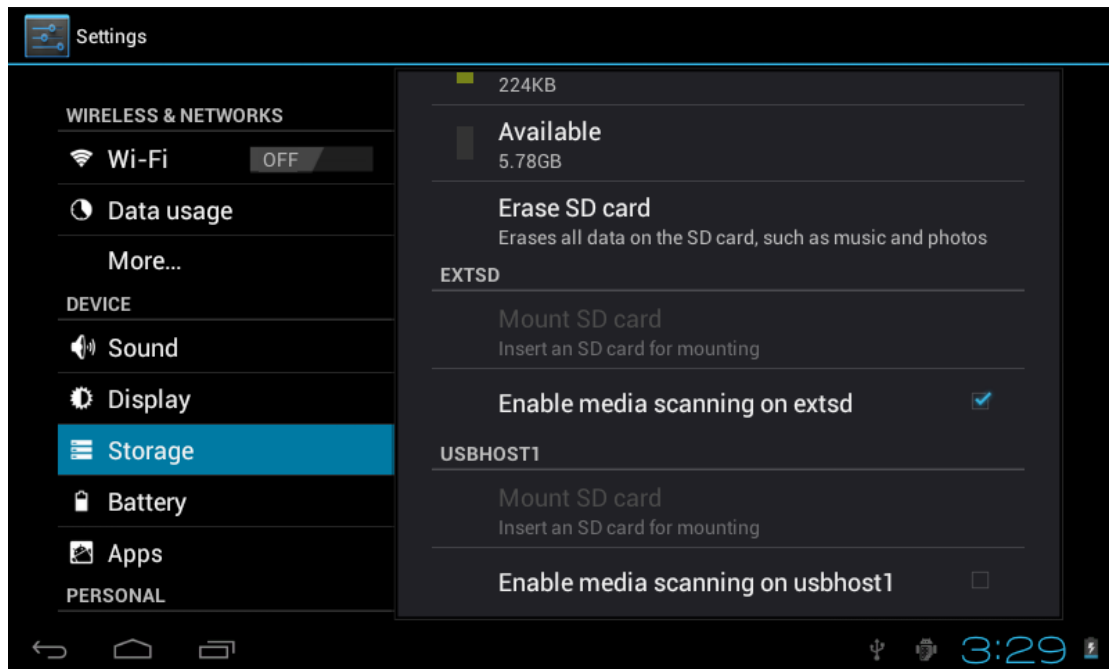3. Click Uninstall, then you can felete the application
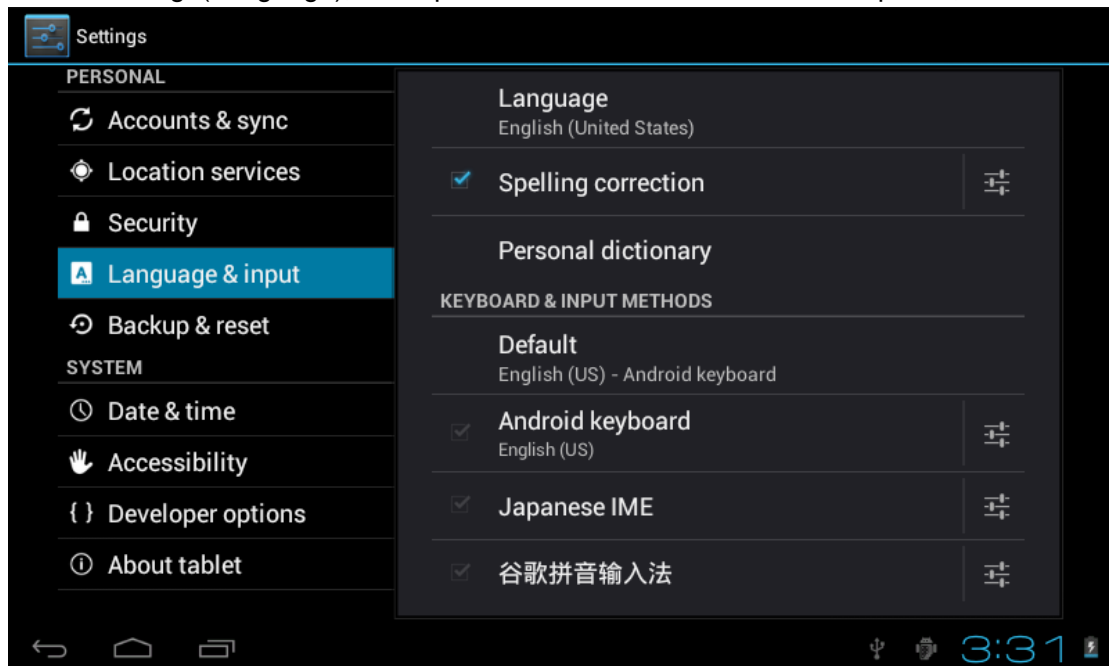

3.3 Privacy

Factory data reset

3.4 Storage

Remove SD card, view of the available storage space

(Remark): pls touch option"delete SD card", so that can safety to romeve SD card

3.5. Language & keyboard
   Setting: (Language), text input and automatic error correction options;

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now manu interface just suport 14 language,

Android keyboard: Android keyboard setting
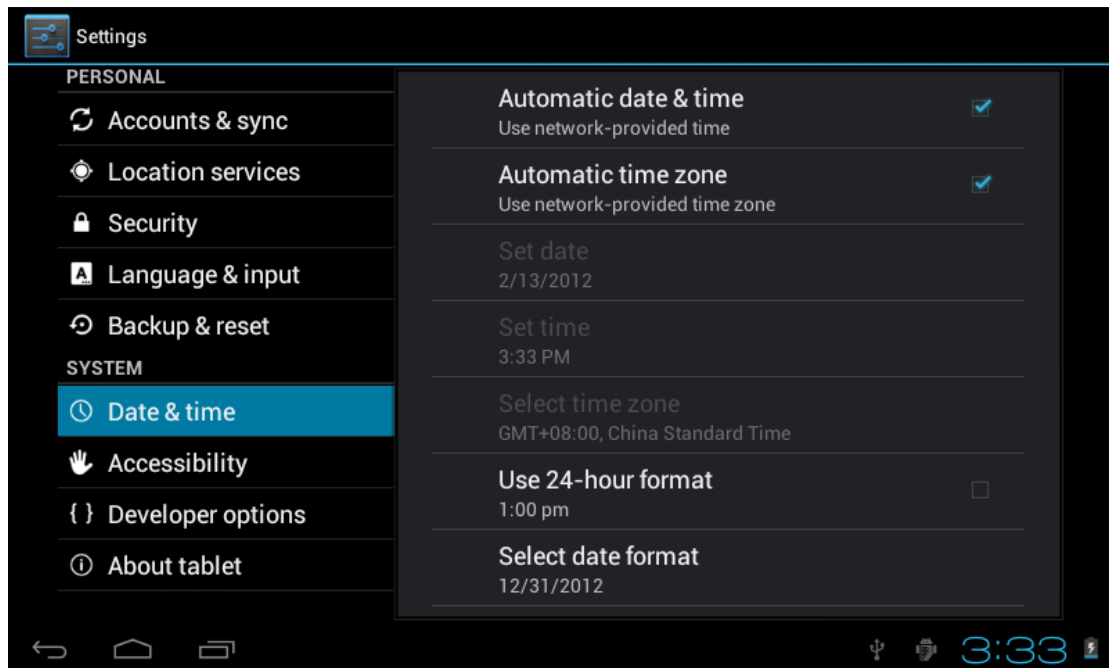
Sound on Key-press

Auto-capitalisation

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word
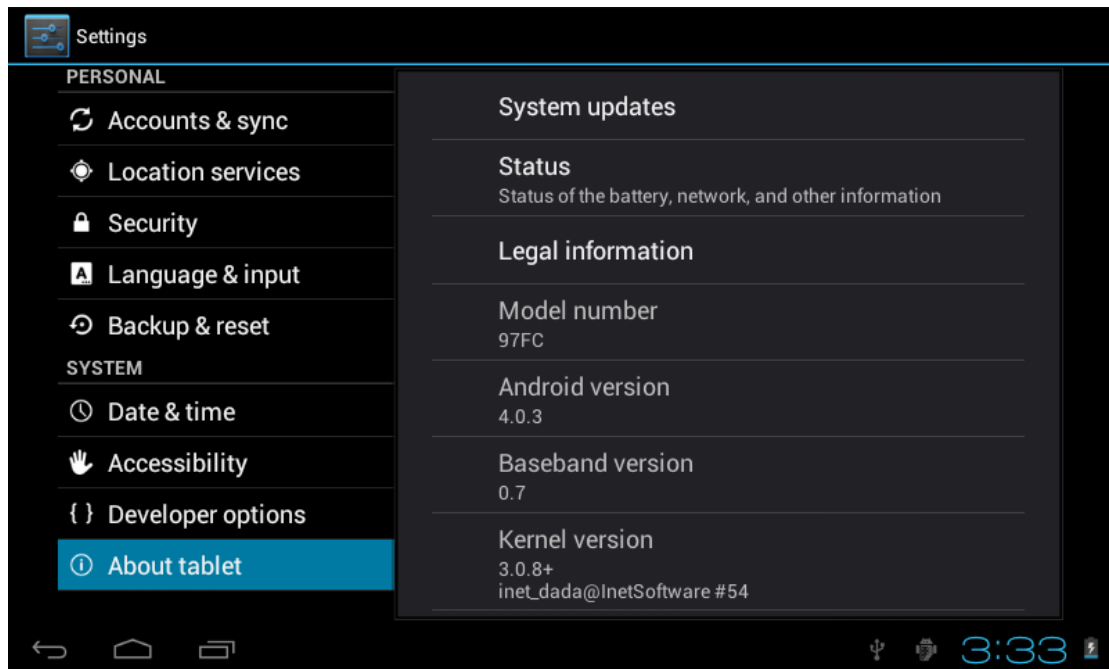
3.6. Date & time setting

Set date, set time, Select time zone and select date format

3.7 USB Mode Select

 Choose USB work pattern: OTG/HOST/SLAVE……..

3.8 About device

4 Apps Install and manage

4.1 Appinstaller

This Tablet can support Android APP in market by third party, most Apps can install in the netwaork, can copy to NAND FLASH or SD card.

Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Selec the APK you would like to install,click it to install,go back to main menu,will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card,downloaded 3rd paty app may not install properly on device.

4.2 Manage: click manage, enter third party interface

Click install icon, will enter Action interface

5 Basic function

Hardware configuration

CPU processor speed: 1.5GH

Memory: 2GB

Display screen: 10" TFT Capacitive multi-touch

Resolution: 1024*600px

USB: USB 2.0 OTG

Operation System: Android 4.0 (ICS)

Video: MKV(H.264HP).AVI.RM/BMVB.FLV.MPEG-1/2

Music: MP3.WMA.APE.FLAC.AAC.AC3.WAV

Pictures: JPEG.BMP.GIF.PNG.TIF

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

-- This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

RF WARNING STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without RF striction.