Elements description

Left speaker   Touch screen   Right speaker

Retractable Foot —
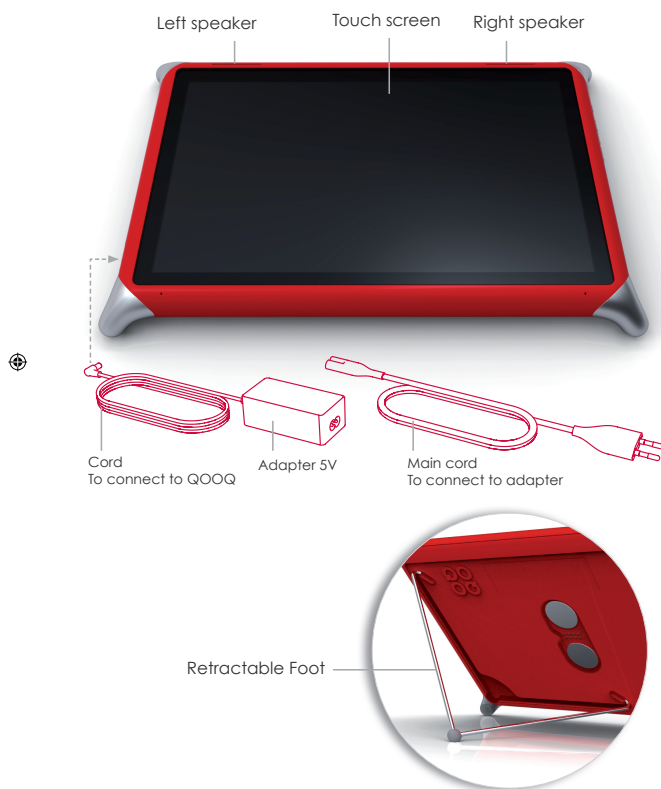
Caring for your QOOQ

1 Recharge
your QOOQ

- Use only the power cable supplied with your QOOQ. The adapter can be heated slightly in the normal conditions of use.
- Connect the cable to the grid.
  If you must use an extension cord, make sure not to overload it by having too many devices connected simultaneously
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

2 Clean
your QOOQ

- Before cleaning your QOOQ, turn it off and make sure it is not plugged into the adapter.
- Use a slightly damp sponge or soft cloth.
- Do not spray liquid directly on your QOOQ. Do not use solvents or abrasives that might damage the finish of your QOOQ.

3 Protect
your QOOQ

- Your QOOQ is a sophisticated electronic device. Handle it carefully, it could not withstand an impact from a fall.
- Do not expose your QOOQ to fire. Do not immerse it in liquid. Do not submit it to high or low temperatures.
- Do not open or disassemble your QOOQ. None of the internal components can be repaired or changed.

For questions, please visit **www.myQOOQ.com**

UNOWHY – Non contractual visual – 04/10

Starting your QOOQ

1 Before switching your QOOQ on

If you want to use your QOOQ in a wireless mode, **it may be necessary to adjust the Box of your Internet operator** in order for your QOOQ to be recognized on the wireless network.

- **You have a Livebox ®**
  Put it in "Association Mode" by pressing the button "REG" or "(1)" which is under your Livebox (near the power cord or on the back of the box).

- **You have a DartyBox ®**
  Put it in "Association Mode" by pressing the button "REG" or "WiFi," which is on the side of your DartyBox.

- **You have another box**
  You normally do not have to change the configuration of your Wi-Fi for QOOQ to work properly.

If you encounter difficulties, please refer directly to the documentation provided by your Internet operator.

Power Button
Press to turn on / off the device, restart or refresh a page

Volume control

To access the connectors, remove the flexible cover that protects them
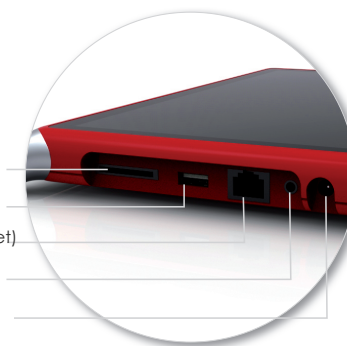
SD Card Reader

USB 2.0 port

Ethernet port (Internet)

Audio out port (jack 3.5)*

5V⎓ Power jack
(Connect the adapter to charge your QOOQ)

*Excessive sound pressure from earphones and headphones can cause hearing loss