

1963 CORVETTE STINGRAY

Article No. : KL-7015F-12V



SPECIFICATIONS DU VEHICULE ET DE LA BATTERIE:

- Age : 3 ans et plus
- Poids Maximum : 30 Kg / 66 Lb
- Vitesse Maximale : 4.5-5.5 km/h / 2.81-3.44 mph
- Batterie étanche acide-plomb rechargeable, 12 Volt 7Ah
- Alimentation du chargeur : A/C 100-240 Volts 60 Hz
- Rechargeur : Puissance de sortie DC 14 Volts, 1000mA

⚠ Précautions lors du rechargement de la batterie :

-Le chargement de la batterie ne peut être effectué que par un adulte
-Le chargeur n'est pas un jouet. Ne pas autoriser l'enfant à jouer avec le chargeur ou à recharger la batterie
-Tourner le bouton sur Off pendant le chargement
-Charger la batterie pendant 8-10h avant le premier usage. Ne pas charger la batterie pendant plus de 16h pour éviter la surchauffe du chargeur
-Il est normal que le chargeur soit modérément chaud durant le chargement de la batterie. Si le chargeur est très chaud, débrancher le chargeur et vérifier l'état de la batterie et du chargeur
-Utiliser le chargeur uniquement dans un endroit sec
-lors de chaque rechargement de la batterie, vérifier que le chargeur, la batterie et les connecteurs ne sont pas endommagés ou usés. Si des traces d'usure ou des dommages sont détectés, ne pas utiliser le chargeur ou la batterie jusqu'au remplacement de la partie usée ou endommagée.
-Utiliser UNIQUEMENT le chargeur fourni par le fabricant de ce véhicule

⚠ ATTENTION - dans les fusibles. Utiliser uniquement l'ampérage spécifique

⚠ ATTENTION:

Incluant de petites pièces.

⚠ WARNING:

Un équipement de protection doit être porté. Usage interdit sur la voie publique.

⚠ ATTENTION:

Montage par un adulte.

Pour minimiser le risque de blessure, la supervision d'un adulte est nécessaire.
Ne jamais utiliser sur des routes, près de véhicules motorisés, sur ou près de pentes abruptes, piscines ou autres pièces d'eau. Toujours porter des chaussures et ne jamais dépasser un utilisateur à la fois par véhicule.

PROBLEMES EVENTUELS:

- 1-Si la voiture n'avance pas :
- a) S'assurer que la batterie n'est pas déconnectée
- b) Recharger la batterie si nécessaire
- c) Vérifier le fusible, le remplacer si nécessaire
- 2-Si la voiture est en vitesse réduite :
- Recharger la batterie
- 3- Si la batterie ne peut être rechargée :

La batterie ou le chargeur doit être endommagé. Le remplacer si nécessaire.

CONSUMER ASSISTANCE

Support Internet: service@kidswheels.com
Support Téléphonique: 800 396 9680



Si vous avez des pièces manquantes ou endommagées ou besoin d'une assistance pour l'assemblage, Veuillez contacter notre service central directement. Ne ramenez pas ce produit au détaillant, ils ne stockent pas de pièces de rechange.

Fabriqu é par :

Kalee Children's Products Co., Ltd. Quanzhou
Add.: Wuli Industrial Zone, Jinjiang, Fujian, China

www.kalee.com

Aidez à protéger l'environnement!

Veuillez-vous rappeler de rapporter les
Eléments électriques défilant dans un
centre de tri approprié.

Fabriqu é en Chine



Télécommande: Instructions jumelées



- (1). Éteignez l'interrupteur d'alimentation sur la voiture "⏻".
- (2). Maintenez la touche de contrôle de fréquence avec votre main gauche, et la LED de la télécommande reste scintillant. sous W / O.
- (3). Cliquez sur l'interrupteur d'alimentation de la voiture avec votre main droite (le feu LED s'allumera), puis cliquez sur le R / C / PEDAL "🏎️ R/C" (la LED s'allume en mode R / C).
- (4). Si tous les trois feux LED allumés, cela signifie que le signal a été jumelé. Vous pouvez libérer votre main gauche et commencer à utiliser la fonction de télécommande.
- (5). Si le feu LED de la télécommande clignote toujours avec la marqueise, cela signifie que la connexion jumelée échoue. Recommencez à nouveau à partir de l'étape (1).



PRECAUTIONS CONCERNANT LA BATTERIE:

- Utiliser uniquement la batterie et le chargeur fourni par le fabricant.
- Ne pas connecter les connecteurs de la batterie directement ensemble. Ceci provoquerait court-circuit.
- Ne jamais modifier les connecteurs ou le système électrique. Certains changements pourraient causer de graves blessures.
- Ne mélanger pas de piles usagées avec de nouvelles piles ou des batteries de types différents.
- Enlever les piles pendant les longues périodes de non utilisation du produit.
- Expliquer à l'enfant de ne pas essayer de recharger des batteries non rechargeables à cause des risques d'explosion.




AVERTISSEMENT

Risque d'incendie. Ne pas contourner le fusible.
- Remplacer seulement avec un fusible de même ampérage.



PRUDENCE:

La voiture en marche est équipée d'un fusible. Ce fusible est un système de contrôle qui déclenche ou arrête le fonctionnement de la voiture si celle-ci est en surchauffe ou si les conditions de conduite deviennent dangereuses. Une fois que le fusible est arrêté, il se réinitialise automatiquement après environ 25 secondes. Le véhicule peut alors fonctionner de nouveau normalement.

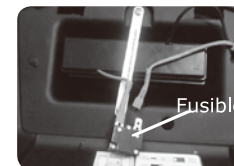

Précautions de Sécurité:


1. Lors de l'utilisation du véhicule, la présence d'un adulte est obligatoire.
2. Toujours mettre un casque lors de l'utilisation du véhicule.
3. Ne pas utiliser proche des routes ou des sentiers.
4. Il n'est pas recommandé de conduire le véhicule sur des surfaces mouillées ou sur des pentes inclinées de plus de 15 degrés.
5. Il est recommandé d'utiliser le véhicule sur des surfaces planes seulement.
6. Ne pas utiliser le véhicule à l'extérieur lorsqu'il pleut.
7. S'assurer que le véhicule est complètement arrêté avant d'effectuer un changement de direction Avant/Arrière.
8. Ne pas autoriser les enfants à utiliser le chargeur ou jouer avec la batterie.
9. Nettoyer le véhicule avec un chiffon sec seulement.
10. Veuillez respecter les poids et âges limites autorisés pour la conduite de ce véhicule.
11. Il est interdit de changer le circuit ou d'y ajouter des composants électroniques.

12. L'adulte doit enseigner les règles de sécurités routières aux enfants.
13. Veuillez éteindre le véhicule lors de son utilisation.
14. Vérifier le siège pour s'assurer qu'il est correctement attaché et sécurisé avec les vis et écrous avant de commencer la conduite.
15. Inspecter les câbles et connexions du véhicules régulièrement.
16. Le chargement de la batterie doit seulement être fait par un adulte.
17. La prise du chargement est située sous le véhicule.
18. Dans le but d'éviter des accidents, veuillez s'assurer que le véhicule répond aux conditions de sécurité avant la conduite.
19. Ne laisser aucun enfant toucher les roues ou s'approcher d'elles lorsque le véhicule fonctionne.
20. L'appareil ne doit pas être exposé à l'eau ou toutes sortes d'objets tels que des vases qui ne doivent pas être placés sur l'appareil.


Maintenance de votre véhicule:

- Il est de la responsabilité des parents de surveiller les pièces principales du véhicule avant utilisation. Examiner régulièrement le véhicule des dangers potentiels, comme la batterie, le chargeur, les câbles, les cordes et les prises. Assurez-vous que les vis sont bien serrées. S'il y a des dommages, le véhicule ne doit pas être utilisé jusqu'à ce que ces dommages soient proprement réparés ou remplacés.
- Occasionnellement, utiliser une huile de graissage légère pour lubrifier les parties en mouvement tels que les roues et le système directionnel.
- Laisser le véhicule dans une position droite, ne le retourner pas et ne l'incliner pas. Il est recommandé de stocker le véhicule à l'intérieur lorsque celui-ci n'est pas en utilisation. S'il est stocké dehors, le véhicule a besoin d'être couvert par une bâche pour le protéger des intempéries.
- Ce jouet doit rester à l'écart du feu. Garder le véhicule loin des sources de chaleur, tels que les fours et les chauffages. Les parties plastiques pourraient fondre. Durant la charge, s'assurer que les produits inflammables sont tenus à l'écart du véhicule.
- SEUL UN ADULTE peut recharger la batterie après utilisation. Recharger la batterie au moins une fois par mois quand le véhicule n'est pas utiliser.
- Utiliser un chiffon doux et sec pour nettoyer le véhicule.
- NE PAS utiliser de liquides chimiques pour nettoyer la surface plastique du véhicule.
- NE PAS laver le véhicule avec du savon et de l'eau.
- NE PAS conduire le véhicule sous la pluie ou sous la neige. L'eau pourrait endommager le moteur, le système électrique et la batterie.
- Quand le véhicule n'est pas utiliser, toutes les sources électriques doivent être éteintes. Mettre le commutateur sur la position "OFF" pour éteindre le véhicule. Veuillez à déconnecter la batterie sous le siège.
- Veuillez ne pas changer la structure de ce produit et du circuit.
- NE PAS utiliser le véhicule pour d'autres utilisations que celle de conduire.
- Ce dispositif se conforme à la norme RSS exempte de licence. L'opération est soumise aux deux conditions suivantes: (1) ce dispositif ne peut pas causer des interférences, et (2) ce dispositif doit accepter toute interférence, y compris les interférences pouvant provoquer une opération indésirable

1. Description d'utilisation:

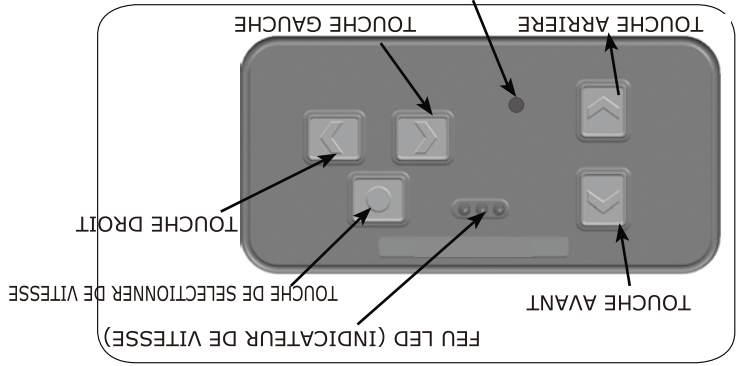





- (1). Description du panneau de la télécommande.
 - (2). La télécommande sera éteinte si elle n'est pas utilisée pendant 15 secondes (Appuyez sur toutes les touches de la télécommande, puis elle sera en état).
 - (3). La touche Vitesse-Sélection et l'indicateur Vitesse-Sélection sont utilisés pour sélectionner la vitesse de la voiture. La note changera dans la fourchette de 3 niveaux: la basse vitesse (un indicateur de vitesse brille), la moyenne vitesse (deux indicateurs de vitesse brillent) et la haute vitesse (trois indicateurs de vitesse brillent). Le changement d'ordre est BASSE-MOYENNE-HAUTE-MOYENNE lorsque le bouton est pressé.
- Remarque: Seul le déplacement vers l'avant peut posséder cette fonction, le déplacement vers l'arrière ne l'a pas.

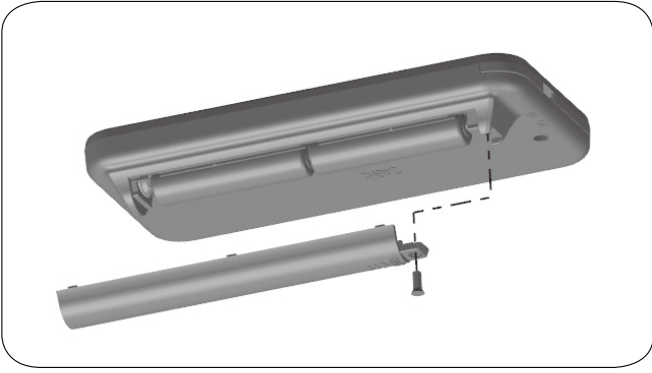

Installation de la Batterie

Retirez la vis de retenue et le couvercle de la batterie, insérez 2 piles AAA 1.5V dans le compartiment des piles en veillant à ce que la polarité soit correcte. Remplacez le couvercle du compartiment des piles et fixez la vis de retenue.

MISE EN ROUTE DU VEHICULE:

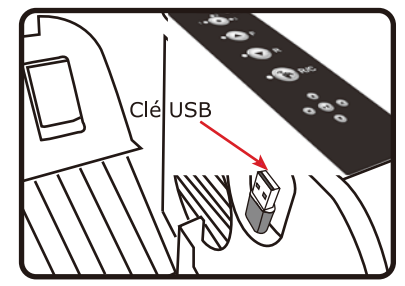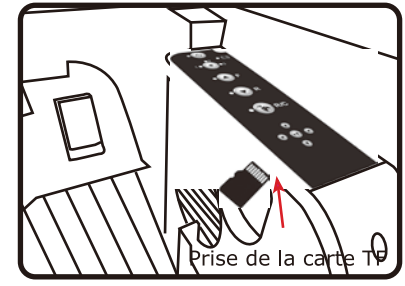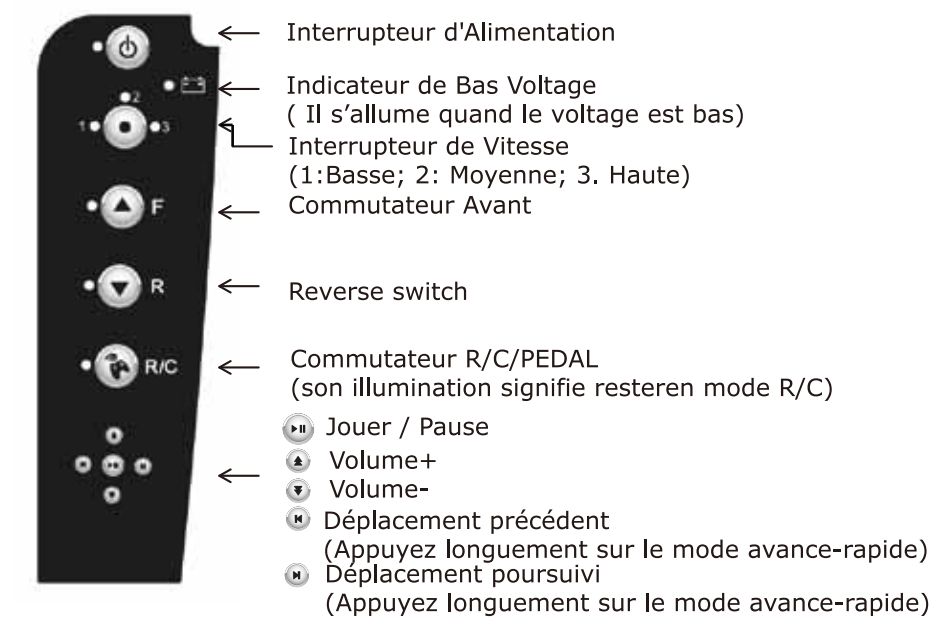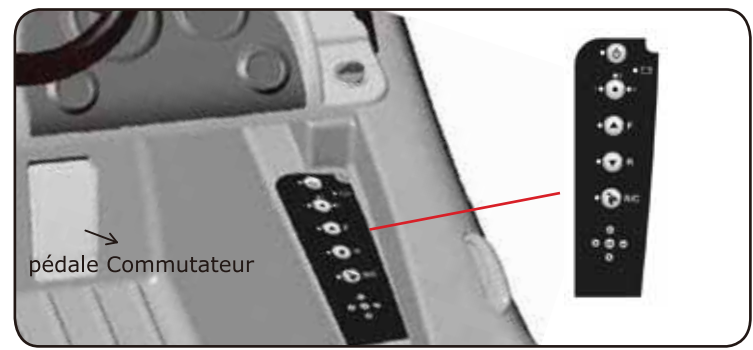

PIECES FOURNIES:

Partie N°	Description	Quantité
1	 Carrosserie/Roue	1 Set
2	 Volant	1 Pc
3	 Vis M5	1 Pc
4	 Ecrou M5	1 Pc
6	 Chargeur	1 Pc
7	 Télécommande	1 Pc

Remarque: Toutes les vis et les écrous sont prémontés sur la voiture.

INSTRUCTIONS D'ASSEMBLAGE:

Étape 1 :
Le compartiment de la batterie est situé sur le volant.

- Retirez la vis de retenue avec le tournevis philip (non inclus) et ouvrez le couvercle du compartiment des piles.
- Insérez 2 piles "AA" (non fournies) dans le support de la batterie, ce qui garantit que la polarité est correcte.
- Remplacez le couvercle du compartiment des piles et fixez la vis de fixation avec le tournevis philip.
- La batterie 2x "AA" alimente seulement le son de la corne et la fonction de sonorisation

AVERTISSEMENT:

- N'utilisez pas de piles rechargeables
- Ne mélangez pas les piles anciennes et neuves.
- Seules les piles identiques ou équivalentes ne doivent pas être en court-circuit.
- Ensure batteries are inserted according to the correct polarity. The supple terminals are not to be short-circuited.
- Lorsque la batterie est consommée ou n'est pas utilisée pendant de longues périodes, n'oubliez pas de retirer les piles.

Étape 2 :


- Défaire la vis M5 (#3) et l'écrou M5 (#4). Insérer le volant (#2) sur la colonne de direction.
- S'assurer que le trou de la colonne de direction est bien aligné sur celui de la base du Volant.
- Si nécessaire, relever légèrement le volant afin d'aligner les deux, puis fixer le volant en utilisant une vis M5 et l'écrou M5 en serrant avec un tournevis (non fourni).



- Le véhicule est livré avec la batterie débranchée. Il doit être connecté avant la première utilisation.
- La batterie est située dans le compartiment de siège de ce véhicule.
- Tournez le commutateur rotatif montré comme l'image pour enlever le siège.
- Connectez le câble rouge au dispositif de Disjoncteur Thermique.
- Replacez le siège et retournez.

6

CHARGER LA BATTERIE:

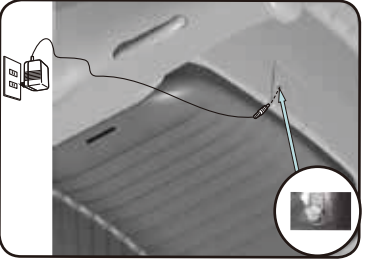

- La prise pour charger la batterie est située près du siège.
- Connecter la prise du chargeur puis brancher le chargeur sur une prise domestique.
- Charger la batterie pendant 8 à 10 heures.
- Ne jamais charger plus de 20 heures.
- Lorsque la batterie est entièrement chargée, débrancher le chargeur et le stocker dans un endroit sec et à l'abri de la chaleur.
- La prise principale de l'adaptateur doit être seulement utilisée pour cet appareil.

REMARQUE : le véhicule ne peut pas fonctionner tant que le chargeur est connecté au véhicule.

PRUDENCE:

Pour les changements ou modifications non expressément approuvés par la partie responsable de la conformité, il pourrait annuler l'autorisation de l'utilisateur d'utiliser l'équipement.

Après avoir été testé, cet équipement est conforme aux limites d'un appareil numérique de classe B, selon l'article 15 des règlements de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière.

Si l'équipement cause des interférences nuisibles au récepteur radio ou à la télévision (Vous pouvez le déterminer en éteignant et en rallumant l'appareil), alors il encourage les utilisateurs à corriger l'interférence par une ou plusieurs des mesures comme suit:

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre l'équipement et le récepteur.
- Connectez l'équipement dans une prise sur un circuit différent de celui auquel le récepteur est connecté.
- Consultez le revendeur ou un technicien expérimenté de radio / TV pour obtenir de l'aide.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

7



Battery Operated Ride-On Vehicle

Assembly Manual & User's Guide

1963 CORVETTE STING RAY



Item No.: KL-7015F-12V



⚠ WARNING: Adult Assembly Required.

Please read this manual carefully before assembly and use. This manual contains safety instructions and important information which will help you assemble the unit. Please keep this manual for future purposes.

General Motors Trademarks used under license to Kalee Children's Products Co., Ltd.

Vehicle / Battery Specifications:

Age: 3 and up
Maximum Capacity: 30 kg / 66 lbs
Maximum Speed: 4.5-5.5 km/h / 2.81-3.44 mph
Battery Type: Sealed lead-acid rechargeable, 12 Volt 7Ah
Power input for Charger: A/C 100-240 Volts 60 Hz
Power output to Battery: DC 14 Volts, 1000mA

CHARGING CAUTIONS:

- Charging the battery should only be done by adults.
- The charger is not a toy. Do not allow children to play with the charger or to recharge the battery.
- Turn the power switch to "OFF" when charging.
- Before the first use, you should charge the battery for 8-10 hours.
- Do not charge the battery for more than 16 hours to avoid overheating the charger.
- It is normal for the charger to feel warm during charging. If the charger feels very hot, stop charging, unplugging the charger and check the battery and charger.
- Use the charger in dry locations only.
- Regularly check the charger, battery and their connectors for excessive wear or damage each time you charge the battery. If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.
- Only use the charger specified by the manufacturer.



WARNING - Risk of fire. Do not by-pass fuse. Replace only with the correct amperage fuse.



WARNING:

To reduce the risk of injury, adult supervision is required.
Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water. Always wear shoes and never allow more than 1 rider.



WARNING:

Choking Hazard! Contains small parts. Not for children under 3 years old!

WARNING:

This toy is unsuitable for children under 3 years due to its maximum speed.



WARNING:

Not to be used in traffic.



WARNING:

Contains small parts, sharp points and sharp edges. Adult assembly required.

Vehicle / Battery Specifications:

Age: 3 and up
Maximum Capacity: 30 kg / 66 lbs
Maximum Speed: 4.5-5.5 km/h / 2.81-3.44 mph
Battery Type: Sealed lead-acid rechargeable, 12 Volt 7Ah
Power input for Charger: A/C 100-240 Volts 60 Hz
Power output to Battery: DC 14 Volts, 1000mA

CHARGING CAUTIONS:

- Charging the battery should only be done by adults.
- The charger is not a toy. Do not allow children to play with the charger or to recharge the battery.
- Turn the power switch to "OFF" when charging.
- Before the first use, you should charge the battery for 8-10 hours.
- Do not charge the battery for more than 16 hours to avoid overheating the charger.
- It is normal for the charger to feel warm during charging. If the charger feels very hot, stop charging, unplugging the charger and check the battery and charger.
- Use the charger in dry locations only.
- Regularly check the charger, battery and their connectors for excessive wear or damage each time you charge the battery. If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.
- Only use the charger specified by the manufacturer.

Trouble Shooting Tips:

Problem: The vehicle does not turn on
If the car is not functioning at all please follow these troubleshooting steps listed below. After each step, please put the car in forward gear and step on the pedal to see if the car will move.

1. Charger: Unplug the charger completely from the car. The car will not work if the charger is plugged in to the car.

2. Battery Connection: There is a battery cover that goes over the battery to hide the positive and negative wires. Undo the bar that holds the battery down to release the cover. Once the cover is loose, check the positive and negative wire to see if they are properly connected. You may also pull lightly on each wire to see if they are connected.

3. Foot Pedal Switch: Turn the car on its side, and you will see a foot pedal cover where the foot pedal switch is. There should be screws holding down that cover. Once the cover is off you will see wires leading into the F/R switch. Use your hands to push each individual wires into the switch and see if it runs.

4. Motor Connection: Remove the seat and you will see a main wire going to the back motor. You will see a white plastic connector, please disengage that white connector and you will see 2 metal prongs and 2 metal holes. Check if the 2 metal prongs are aligned properly and reconnect the connector.

Problem: The vehicle runs slowly
If the car is not functioning at its normal speed, please recharge the battery for another 8 to 10 hours.

CONSUMER ASSISTANCE

Support email: service@kidswhheels.com
Support Phone: 800 396 9680



If you have any missing or damaged parts or need assembly assistance, please contact our service center directly. Do not return this product to the retailer, they do not stock replacement parts.



Manufactured by:
Kalee Children's Products Co., Ltd. Quanzhou
Wuli Industrial Zone, Jinjiang, Fujian, China
www.kalee.com
You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Remote Control: 2.4G Paired Instructions



- (1). Turn off the power switch on car "⏻".
- (2). Hold down the frequency check-key with your left hand, the LED light on the remote control stays on W/O twinkling.
- (3). Click on the power switch on the car with your right hand (the LED light of power will light up), then click on the R/C / PEDAL "🌐 R/C" (the LED light up when on R/C mode).
- (4). If all of three LED light on, it means the signal have been paired successful. You can release your left hand, and start to use the remote control function.
- (5). If the LED light of remote controller still is twinkling with marquee, that means the paired connection is fail, please start from step (1) again.

⚠ BATTERY SAFETY WARNING:

- Only use the battery and charger supplied by the manufacturer.
- Do not connect the battery terminals directly together. This will cause the battery to short-circuit.
- Never short-circuit the battery terminals or modify the electrical system. Alterations may cause a fire resulting in serious injuries.
- Do not mix old and new batteries or batteries of different types.
- Remove batteries during long periods of non-use. Always remove batteries from the product. Dispose of batteries safely. Do not dispose of batteries in fires. The batteries may explode or leak.
- If removable, rechargeable batteries are used, they are only to be charged by adults or by children at least 8 years old.
- Recharge the battery fully before storage, then charge it every 3 months to extend the life of the battery.
- Only use the battery specified by the manufacturer.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.

⚠ Caution:

The ride on vehicle is equipped with a built-in thermal circuit breaker. The thermal circuit breaker is a self-resetting safety device which automatically "trips" and shuts down the operation of the vehicle if it is overloaded or the driving conditions are too severe. Once the circuit breaker has tripped it will automatically reset itself after approximately 25 seconds and allow the rider to resume normal operation.

Safety Precautions:

- While riding, adult supervision is required at all times.
- Adults must teach their children about safe driving procedures.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Check the seat to ensure it has been fitted and secured with a bolt before driving.
- Inspect all wires and connections of the vehicle periodically.
- Use the toy only on flat surfaces, such as sidewalks, driveways or playgrounds. Do not ride the vehicle in dangerous places such as busy streets, roads, highways, swimming pools and other bodies of water, in a dark area, hilly muddy or sandy areas.
- To avoid suffocation of children please destroy all plastic bags after assembly of the vehicle.
- Do not use this vehicle outdoors when it is raining.
- Don't allow children to operate the charger or play with the battery.
- Do not exceed the recommended weight limit of 30kg / 66lbs. Please follow the correct weight and age limits allowed to drive this vehicle.
- It is prohibited to change the circuit or add other electric parts.
- Always wear a helmet when riding.


- It is not recommended to drive the vehicle on wet surfaces or on slopes greater than 15 degrees.
- Make sure you come to a complete stop before changing directions from forward to reverse.
- Please turn the power off when not in use.
- In order to avoid accidents, please ensure the vehicle is safe before driving.
- Do not let any child touch the wheels or be near them when the vehicle is moving.
- The charger used for the vehicle is to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, must not be used until that damage had been repaired.
- Clean the vehicle only with a damp cloth and never submerge vehicle in water or spray with water directly from a hose.

Maintaining your vehicle:


- It is a parents responsibility to check main parts of the vehicle before use.
- Regularly examine the vehicle for potential hazards, such as the battery, charge cable, cord and plug. Ensure screws are tightened. If there are any damages, the vehicle must not be used until these damages have been properly repaired or replaced.
- Occasionally use a lightweight oil to lubricate moving parts such as the wheels and steering linkages.
- Keep the vehicle in an upright position, do not overturn or incline it. It is recommended to store the vehicle indoors when not in use. If stored outdoors, the vehicle needs to be covered by a tarp for protection against weather elements.
- This toy should be kept away from fire. Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt. While charging ensure all flammable liquids are well away from the vehicle.
- ADULTS ONLY to recharge the battery after each use. Recharge the battery at least once a month when the vehicle is not being used.
- Use a soft, dry cloth to clean vehicle.
- DO NOT use any chemical liquids to clean the plastic surface of the vehicle.
- DO NOT wash the vehicle with soap and water.
- DO NOT drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- When not in use all electrical sources should be turned off. Press the power switch to the Neutral position to turn the power off. Also disconnect the battery connection under the seat.
- Please do not change the structure of this product and circuit system.
- DO NOT use the vehicle for other purposes except riding.
- This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

4

1. Use description:

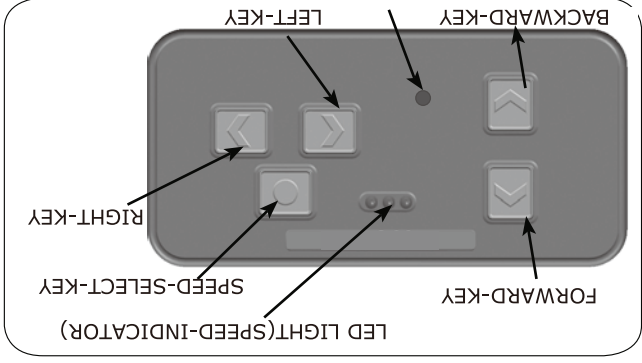

- (1). Panel description of remote control.
 - (2). The remote will be at off status when not used for 15 seconds. (Push any keys on the remote, then it will be at on status).
 - (3). The Speed-Select key & Speed-Select indicator is used to select the speed grade of the car. The grade will change in the range of 3-levels: low (one Speed-Indicator flush), medium (two Speed-Indicator flush) and high (three Speed-Indicator flush) speed. The change of the order is LOW-MEDIUM-HIGH-MEDIUM-LOW as the button pressed.
- Note: Only the forward direction moving can own this function, the backward not.




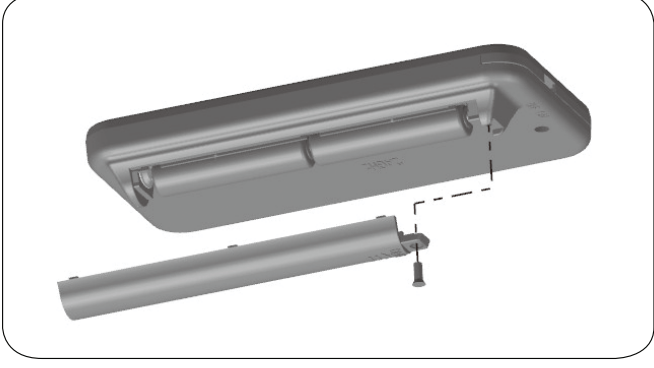


Battery installation

Remove the retaining screw and the battery cover, insert 2 x AAA 1.5V batteries into the battery compartment ensuring the polarity is correct. Replace the battery compartment cover and resecure the retaining screw.

9

Operation of the Vehicle:

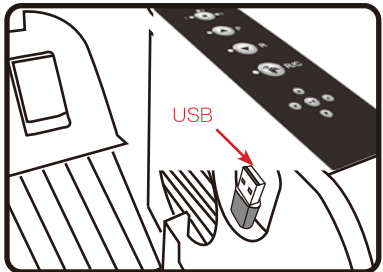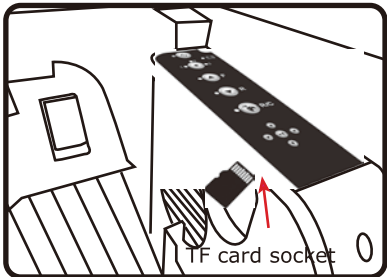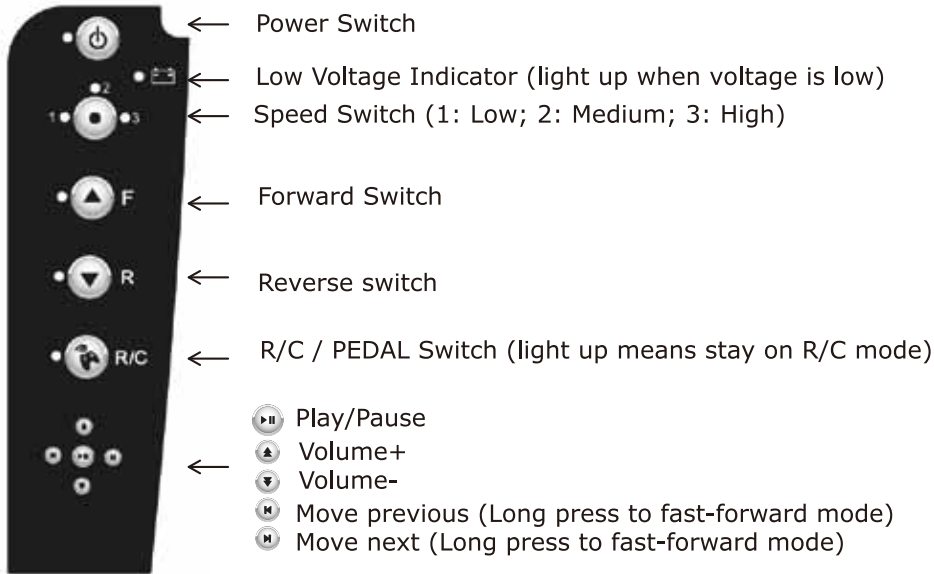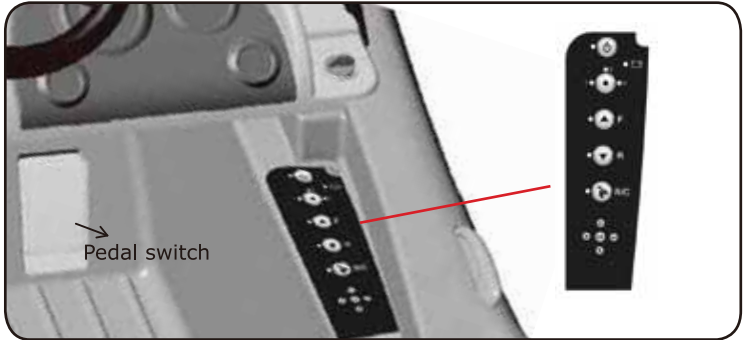

Part List:

Part No.	Description	Qty
1.	 Body with Wheels	1set
2.	 Steering Wheel	1pc
3.	 TM5x25x8 Screw (Prefixed on steering column)	1pc
4.	 M5 Nut (Prefixed on steering column)	1pc
5.	 Charger	1pc
6.	 Remote Control	1pc

How to Assemble the Vehicle:

Step 1:

- The battery compartment is located on the steering wheel.
- Remove the retaining screw with philip screwdriver (not included) and open the battery compartment cover.
- Insert 2x"AA" batteries (not included) into the battery cradle ensuring the polarity is correct.
- Replace the battery compartment cover and resecure the retaining screw with philip screwdriver.
- The 2x"AA" battery powers the horn sound and driving sounds function only.

WARNING:


- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type should be used.
- Ensure batteries are inserted according to the correct polarity. The supple terminals are not to be short-circuited.
- When the battery is consumed or not used for long periods of times, please remember to take out the batteries.

Step 2:

- Undo the prefixed TM5x25x8 Screw (#3) and M5 Nut (#4) from the steering wheel column.
- Push the Steering Wheel (#2) to the steering wheel column.
- Line up the hole on the steering column and the hole on the base of the steering wheel.
- Re-insert the TM5x25x8 Screw and M5 Nut, then tighten with screwdriver.

Step 3:


- The vehicle is shipped with the battery unplugged. It must be connected before the first use.
- The battery is located in the seat compartment of the body.
- Twist the rotary switch shown as the picture to remove the seat.
- Connect the red cable to the Thermal Circuit Breaker device.
- Replace the seat and twist back.

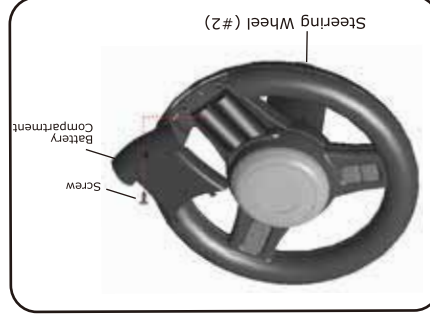

Charging the Battery:

- The socket for charging the battery is located near the seat.
- Plug the charger into a household outlet then connect the charger plug into the DC jack.
- Charge the battery for 8-10 hours. Never charge for more than 16 hours.
- When the battery is fully charged, unplug the charger and store it in a cool and dry place.

Note: The car can not be operated when the charger is connected to the car.

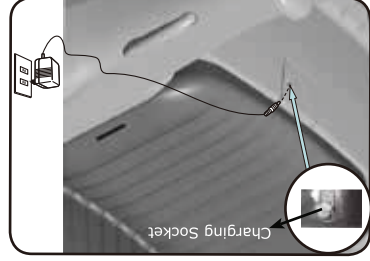

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.