



## Quick Start



*Camangi*<sup>®</sup>

Camangi Corporation


For more information please visit <http://www.camangi-webstation.com>

Contact us: [sales@camangi.com](mailto:sales@camangi.com)

Power by Camangi ©2009 Reserved by Camangi Corporation.

This document contained herein is the exclusive property of Camangi Corporation, and shall not be distributed, reproduced, or disclosed in whole or in part without prior written permission of Camangi Corporation.

## Included Parts

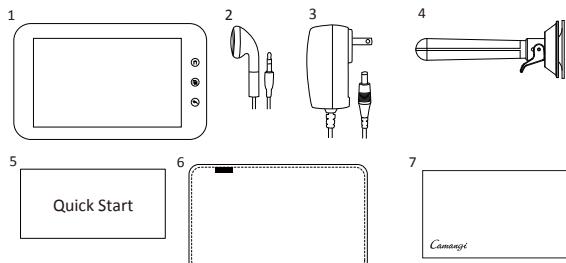

### Includes

- 1. WebStation(WS)
- 2. Headset with mic
- 3. AC Adapter
- 4. Stand
- 5. Quick Start Guide
- 6. Pouch
- 7. Wipes

### More Information

- WebStation Manual, FAQ
- <http://www.camangi-webstation.com/download>


## デジタルフォトフレーム



デジタルフォトフレームをアイコンから起動すると、フォトのスライドショーを開始します。スライドショーの再生中は、メニューキー を短押ししてスライドショー設定機能を立ち上げ、スライドの表示間隔を設定することができます。また、設定メニュー表示設定のなかから、無使用の時に再生を選択することもできます。設定が完了したら、WSはすぐに、無使用の時スライドショーを表示します。

(注意:この設定を行う前に、あなたのWSの表示設定>スクリーンセーバーの設定がなしなっていることを確認して下さい。)

## Rear and Side Panel

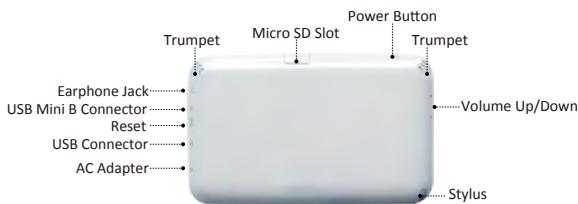

**AC Adapter:** Plug in the AC adapter to recharge the battery.


(Notice: Please fully charge the battery before using the WS for the first time.)



**Reset:** Press the Reset Button with the stylus to reset your WS.

**Power Button:** Press and hold the Power Button to turn your WS on / off.

## スタンド

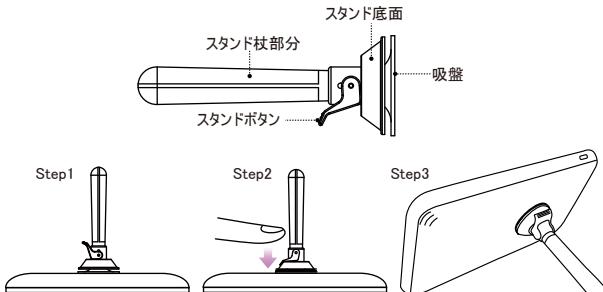

パッケージ内に含まれているスタンドで、WSを縦または横にすることができます。

Step 1 スタンド底面をWebStationの背面に置き、スタンド底部の吸盤を押さえて、WS背面に吸い付けます。

Step 2 スタンドボタンを押し、スタンドが固定されたか、確認します。

Step 3 スタンドにより、WSを平面に立ておくことができます。

# 電子書籍



日機能で閲覧



夜機能で閲覧

電子書籍アプリをアイコンから起動すると、前回読んだページが表示されます。上下左右にスライドして、より多くの内容を閲覧することができます。メニューキー を短押して、書庫 と目次 機能から閲覧する電子書籍及び章節を選択したり、日/夜機能で閲覧 モードを変えることができます。


注意事項：本電子書籍アプリケーションは、epub及びtxt形式のみ、閲覧が可能です。

# ミュージック



ミュージックをアイコンから起動し、アーティスト/アルバム/楽曲/プレイリスト/アルバム閲覧から、再生する音楽を選択できます。音楽を選択し再生したあと、トップページ から、同時に別のアプリを使用することも可能です。

## Basic Functions

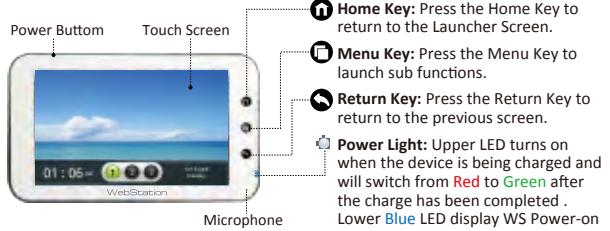

**Home Key:** Press the Home Key to return to the Launcher Screen.

**Menu Key:** Press the Menu Key to launch sub functions.

**Return Key:** Press the Return Key to return to the previous screen.

**Power Light:** Upper LED turns on when the device is being charged and will switch from **Red** to **Green** after the charge has been completed . Lower **Blue** LED display WS Power-on status.

### Unlock your WebStation

Single Touch<sup>1</sup> the unlock icons 1, 2, and 3 to complete the unlock action.

### Sleep/ Awake your WebStation

Press the Power Button to turn WS into sleep mode. Then, press and hold Menu key to awaken WS from sleep mode.

#### Finger Tips

1. Single Touch: Simply touch an icon with your finger or stylus when you want to select an item or enter an applications or soft keyboard.

## Launcher

WebStation-Launcher has provide a convenient shortcut for all your applications using a single touch to start an application, optionally you can touch and scroll<sup>3</sup> right or left for additional applications.



**Status Bar** is located to the top of the Launcher screen. Toward the right of the bar you'll find the current status of WebStation; to the left you'll find important notifications and please touch and scroll<sup>3</sup> down for any additional information.

**Quick Dock** contains the most useful applications- Digital Frame, Music, Email, eBook, Market, and Setting.

#### Finger Tips

2. Touch and hold an icon for additional options, for example , to call out the soft keyboard or the link to a webpage.

3. Touch and scroll up/down/right/left to shift the screen to read more items.

## Charge the Battery



### Battery Icon on Launcher screen

If the battery is being charged while the WS is on, the charging battery icon will be displayed on the status bar of Launcher screen. If the battery has been fully charged, the full battery icon will be displayed on the status bar of Launcher screen. (Power light will show a solid green light.)


### Power Light on WebStation

The upper LED turns on with the device is being charged and will turn from red to green when the battery is full.

#### Notice

If the battery icon is almost empty followed by a battery low warning message, please recharge the device immediately to prevent loosing your data.

## Installing Storage Card

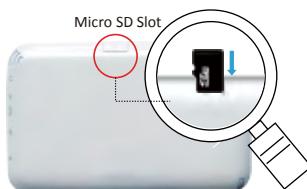

### Installing storage card

Open the Micro SD Slot cover located to the rear of the device by opening the cover to the left , and insert the micro SD card into the slot with gold pins facing down.

### Removing storage card

Single touch to open the Setting application. Then, scroll down the screen and touch to enter the SD card and device storage. Touch to enter unmount SD card to remove the storage card. After the OK confirmation, please open the cover of Micro SD Slot and press the storage card to eject it from the slot.

Notice: Please install a microSD card before using Gallery, Music, and eBook applications or before installing applications from the Web.

## ネットワーク設定



### ネットワーク設定の起動

設定>無線ネットワーク設定を選択し、Wi-Fiを起動するを選択すると、WSは周辺の使用可能な無線ネットワークを検索します。

(注意:もし、選択された無線ネットワークがWEPで暗号化されている場合、WEPキーをまず入力し、それから接続を行う必要があります。)

### ネットワーク接続状況の確認

トップページの右上方のステータス欄にWi-Fiアイコン が表示されている場合、ランプの数はWi-Fiignalの強度を示します。Wi-Fiアイコンが のように表示されている場合、周辺に使用可能な無線ネットワークがないことを示します。

## インターネットブラウザ



ブラウザアイコンから起動し、メニューキー を短押しし、前へ を押すと、キーボードからアドレスを入力することができ、もう一度前へ を押して、入力したウェブサイトへ接続することができます。

## 電源表示



### 充電量表示

充電時WSが起動している場合、トップページのステータスに ような電量アイコンが表示されます。WSの充電が完了している場合、トップページのステータス欄には ようなアイコンが表示されます。

### 電源ランプ

充電時、WS上の電源ランプは赤く点灯します。充電が完了したら、緑色に点灯します。

#### 注意事項

トップページの充電量表示アイコンが電量わずか を表わし、電力不足の警告アイコンが表示された場合は、あなたのデータを守るため、すぐに充電を開始して下さい。

## Micro SDカードの取り付け



### Micro SDカードの取り付け

WSを裏返し、Micro SD挿入口のカバーを右から左へ開きます。Micro SDカードの金属チップを下へ向け、挿入口から挿し込みます。

### Micro SDカードの取り出し

画面より、設定>SDカード>保存に入り、SDカードの取り出しを選択し、取り外し完了メッセージが表示されたら、WSの背面からMicro SDカードの挿し込み口のカバーを開き、軽くMicro SDカードを押すとカードが飛び出、取り外すことができます。

#### 注意事項

メディアや電子書籍関連のアプリケーションの使用、またはネットからカードパーティのソフトをダウンロードする場合、必ずあなたのMicro SDカードをインストールする必要があります。

## Connecting to Internet



### Turn on Wireless Network

Touch to enter Setting > Wireless controls. Then, touch on Wi-Fi to start scanning for available wireless networks.  
(Notice: If you have selected a network that is secured with WEP, enter the WEP(security) key and then touch Connect.)

### Checking Wireless Status

The Wi-Fi icon displays the approximate signal strength on the Status Bar located on the Launcher Screen; Wi-Fi icon also displays the available wireless networks within range .

## Browser



Touch to enter the Browser application. Then, press the Menu Key and touch Go block. In addition, you can use soft keyboard to enter the URL.

## eBook



Day Mode



Night Mode

Touch to enter the eBook application and you will be taken to the same location you stopped last time. In addition, you can also touch and scroll up/down to shift the screen for additional content. You can also press the Menu Key to enter the Library , TOC , and Bookmarks sub-functions for paragraph searching. Finally, you can press the Menu Key to switch between Day/Night mode .

Note: eBook application only supports .epub and .txt format.

## Music



WebStation



WebStation

Touch to enter the Music application. You can search for music using Artists, Albums, Playlists, or you can browse through all your songs or by using Cover Flow to play the song you want to hear. You can also press the Home Key to go to the Launcher screen and use other applications while the music is playing.

## 基本操作



- ❶ トップページキー: このボタンを押すと、いつでもデスクトップに戻ることができます。
- ❷ メニューキー: アプリケーション上でメニューキーを短押しすると、アプリケーションのオプションメニューを選択し、使用することができます。
- ❸ パックキー: このボタンを押すと、いつでも一つ前のページに戻り、一つ前の動作を行うことができます。
- ❹ 充電量ランプ: 上方のランプはWSの充電状況を示します。赤は充電中、緑は充電完了です。ランプが点灯していない場合は電源が繋がっていないことを示します。下方のランプが青く光っている場合はWSが起動中であることを示します。

### ロック解除

スクリーンに表示されるステップに従ってキー1、2及び3を押すとロックが解除されます。

### スリープ/ウェイクアップ

WSをスリープモードにする場合、電源スイッチを一度短押しして下さい。ウェイクアップを行う場合はメニューキー を長押しして下さい。同時にロックが解除されます。

### 操作のポイント

アプリケーションを選択する場合またはアプリケーション上でキーボードにより文字入力を行う場合、手またはペンで、アイコンを軽くタッチすると実行することができます。

## デスクトップ

WebStationのトップページには多くのアプリケーションが提供されています。軽くアイコンにタップするだけで、アプリを立ち上げることができます。左右に新規追加されたアプリを左右方向に画面を移動して選択することができます。



ステータス

クリック起動ボタン


- ❶ トップページ上方のステータスはWSの状態を表示します。右側にはWSの充電状態、時刻表示、ネットワーク状況が表示され、左側にはSD cardなど外部のデバイスの取り付け状況が表示されます。タッチし下您スライドすると、設定などを行なうことができます。

- ❷ トップページ下方のクリック起動ボタンには、もっとよく使用する機能—デジタルカメラ、音楽、映画、電子書籍、マーケットなどを設定することができます。

### 操作のポイント

- 手またはペンでアイコンまたは欄を長押しすると、別の機能が起動されます。例えば、ブラウザ上でアドレス欄を長押しすると、キーボードが呼び出され、アドレスを入力することができます。
- 手またはペンで画面にタッチし、上下左右に動かすことで、より多くの情報を閲覧することができます。

## パッケージ内の内容

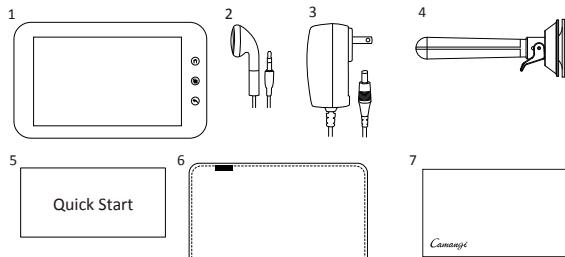

### 内容

1. WebStation  
(以下WSと略)
2. イヤホン
3. ACアダプター
4. スタンド
5. クイックスタートガイド
6. カバーケース
7. 布

## 背面及び右側面



■ AC アダプター差込口: ACアダAPTERをコンセントに挿し込み、もう一方の端をWSに挿し込んで充電して下さい。

(注意:パッケージ内のWSは充電が完了していませんので、最初に使用する際、最後まで充電を行って下さい。)




- リセットボタン: ペンでリセットボタンを押すと、正常にリセットを行うことができます。
- 電源ボタン: WSの電源の開閉には、このボタンを長押ししてから、指示に従って操作して下さい。

## Digital Frame



Touch to enter the **Digital Frame** application to see a slideshow for all your albums immediately. You can also press the **Menu Key** to set the slideshow interval. In addition, you can also go to **Setting>Sound & display** and choose **Display setting>Slideshow when idle** to play your slideshow when the device is idle. (Notice: Please make sure the setting on **Display setting>Screen timeout** is set on Never Timeout before the slideshow idle setting.)


## Stand your WebStation

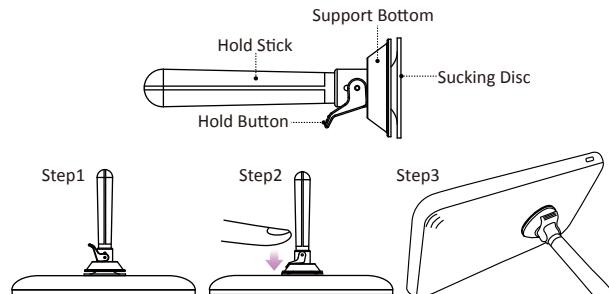

Angle your WebStation using the stand by following the steps below.

- Step 1 Put the Support Bottom to the back of your WebStation. Push the Sucking Disc to squeeze out the air.
- Step 2 Press the Hold Button down and make sure the Stand is firmly attached to the WebStation.
- Step 3 Put the WebStation on the table using the Hold Stick.

## 包裝盒內容物

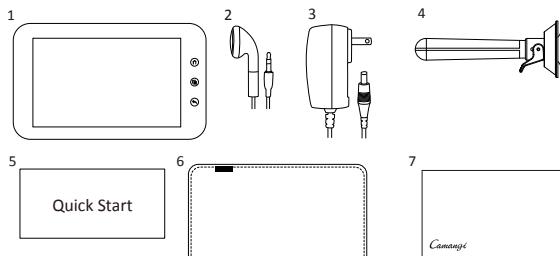

### 包裝應含下列物品

- 1. WebStation(以下簡稱WS)
- 2. 耳機
- 3. AC 變壓器
- 4. 支撐架
- 5. 快速入門手冊
- 6. 保護套
- 7. 擦拭布

### 更多詳細資訊請參閱下列網址

- WebStation操作說明書, FAQ  
<http://www.camangi-webstation.com/support.html>

## 數位相框



輕觸開啟數位相框應用程式，進入數位相框應用程式即開始撥放圖片幻燈秀。於幻燈透播放中，您可短按功能選單按鍵 ，再輕觸照片撥放設定功能，進入設定照片顯示間隔。

您可於設定 > 音樂與顯示 > 顯示設定中輕觸設定閒置狀態播放，設定完畢後您的WS將會於閒置狀態撥放幻燈秀。(注意：在您設定閒置狀態播放前，請先確定您的WS的顯示設定 > 雖然設定值為從不逾時。)

## 背面與右面



◎ **AC 變壓器插孔:** 將AC變壓器插入插座，並將另一端接頭插入WS進行充電。


(注意：包裝盒內WS並未完全充飽電力，請您務必於第一次使用前為您的WS進行充電至完全充飽狀態。)



◎ **重設鍵:** 用觸控筆按重設鍵可正常重設WS。

◎ **電源按鈕:** 若要開/關WS，請長按電源按鈕，並按照指示完成動作。

## 支撐架

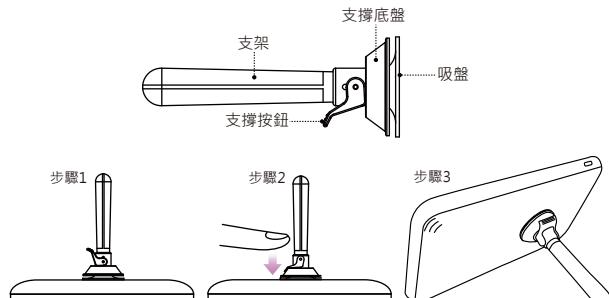

您可透過包裝盒中所提供的支撐架直/橫立您的WS。

步驟1 將支撐底盤置於WS背面，並推壓支撐架底部吸盤，使其完整吸附於WS背面。

步驟2 按下支撐按鈕，並確定將支撐架固定於WS上。

步驟3 並以支架將WS置於平面/桌面上。

# 電子書



日間閱讀模式



夜間閱讀模式

輕觸啟動電子書應用程式，您將會看到您上次停止閱讀的電子書位置，您可輕觸並向上/下/左/右拉動以閱讀更多內容。當您短按功能選單按鍵 可透過圖書庫與目錄功能 選擇閱讀的電子書與章節，還可使用日/夜功能 轉換日/夜間閱讀模式。

注意事項: 電子書應用程式僅支援epub與txt格式。

# 音樂播放



輕觸開啟音樂應用程式，您可透過演出者/專輯/樂曲/播放清單/專輯瀏覽來選擇撥放的音樂，還可以在選擇音樂播放後，透過主畫面按鍵 回到主畫面同步操作其它的應用程式。

# 使用基本入門



- ① **主畫面按鍵:**於任何時候短按主畫面按鍵即可回到主畫面。
- ② **功能選單按鍵:**於應用程式中短按功能選單按鍵可選用應用程式次功能選單。
- ③ **回上一層按鍵:**於任何時候短按回上一層按鍵可回到上一個動作。
- ④ **電源指示燈:**上方指示燈顯示WS充電狀態，**紅燈**代表充電中；**綠燈**代表充電完成，未亮燈代表未插電；下方指示燈以**藍色**燈光指示WS為開機狀態。

## 為您的WebStation解除鎖定

根據觸控螢幕的步驟點選1, 2, 與 3按鈕完成解除鎖定動作。

## 休眠/喚醒您的WebStation

若要讓WS進入休眠模式，請短按一次電源按鍵；若要喚醒WS請長按功能選單按鍵 ，並為WS解除鎖定。

## 操作訣竅

當您要選擇某項程式或於程式中透過鍵盤文字輸入時，可以用手指或觸控筆輕觸圖示或按鈕執行與輸入。

# 主畫面

WS主畫面提供多種應用程式，只要輕觸應用程式圖示即可啟用應用程式，還可由右往左選擇更多的新增應用程式。



- ⑤ **主畫面上方狀態列**提供WS狀態顯示。右邊顯示WS的電量、時間與網路狀態；左邊顯示SD card等外部裝置安裝通知，您可透過輕觸並下拉進行設定。

- ⑥ **主畫面下方快速啟動工具列**提供您最常用的應用程式-數位相框、音樂、電子書、Market與設定。

## 操作訣竅

- 您可以用手指或觸控筆長按圖示或欄位以啟用其它功能，例如在瀏覽器上長按網址列呼叫鍵盤輸入網址。
- 您可以用手指或觸控筆輕觸並向右/上/左/右拉動以移動或閱讀更多資訊。

## 電源顯示



### 電量圖示

充電時如果WS為開啟狀態，主畫面的狀態列會顯示電量圖示 ；當WS電池充飽後主畫面狀態列上電量圖示會顯示 .

### 電源指示燈

充電時WS上的電源指示燈會亮起 **紅色** 燈光；電池電量充飽後電源指示燈會亮起 **綠色** 燈光。

注意事項：主畫面電量圖示顯示電量低 ，並且跳出警告視窗告知電量不足請立即充電以防您的資料遺失時，請儘速為您的WS進行充電。

## 網路連線設定



### 啟動網路連線


輕觸進入設定>無線網路設定，再輕觸啟動Wi-Fi，此時WS會開啟並搜尋附近可使用的無線網路。

(注意：如果您選擇的無線網路具有WEP加密，則您必需先輸入WEP金鑰密碼後再進行連線。)

### 檢查網路連線狀態

主畫面右上方狀態列Wi-Fi圖示 ，以狀態燈數量顯示Wi-Fi訊號的強度；以Wi-Fi 圖示 顯示目前範圍內無無線網路可供連線。

## 安裝Micro SD卡

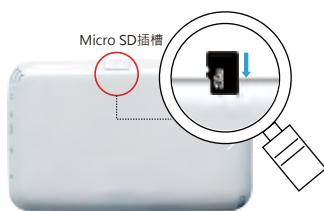

### 安裝Micro SD卡

翻至WS背面，由右往左打開Micro SD插槽上的蓋子，並將Micro SD卡的金屬晶片朝下，插入於插槽當中。

### 卸除Micro SD卡

輕觸螢幕進入設定>SD卡與儲存，並輕觸卸載SD卡，在WS出現完成訊息後，翻轉WS至背面開啟Micro SD卡插槽的蓋子，並輕按Micro SD卡使Micro SD卡跳出插槽即可。

注意事項：在您使用影音與電子書相關應用程式或自網路下載第三方軟體前，請務必安裝您的Micro SD卡才能正常運作。

## 網際網路瀏覽器



輕觸開啟瀏覽器應用程式，再短按功能選單按鍵 ，於輕觸選擇前往 功能後，透過鍵盤輸入網址與前往 按鈕連結該網址。

## Regulatory Approvals

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device has been tested and meets the FCC RF exposure guidelines.  
The maximum SAR value reported is 0.115w/kg

### Channel

The Wireless Channel sets the radio frequency used for communication.

- Access Points use a fixed Channel. You can select the Channel used. This allows you to choose a Channel which provides the least interference and best performance. In the USA and Canada, 11 channel are available. If using multiple Access Points, it is better if adjacent Access Points use different Channels to reduce interference.
- In "Infrastructure" mode, Wireless Stations normally scan all Channels, looking for an Access Point. If more than one Access Point can be used, the one with the strongest signal is used. (This can only happen within an ESS.)
- If using "Ad-hoc" mode (no Access Point), all Wireless stations should be set to use the same Channel. However, most Wireless stations will still scan all Channels to see if there is an existing "Ad-hoc" group they can join.