



FUSION™

BY

PowerA™

FUSION PRO WIRELESS CONTROLLER

FUSION MANETTE
SANS FIL PRO



USER MANUAL

MANUEL DE L'UTILISATEUR

MANUAL DE USUARIO

BEDIENUNGSANLEITUNG

MANUALE PER L'USO

MANUAL DO USUÁRIO



ENGLISH



• Controller Button Map.....	3
• Connecting	4
• Charging	6
• Advanced Gaming Buttons	7
• Profiles	9
• Lumetra Lighting	10
• Troubleshooting	14



FRANÇAIS

• Carte des boutons de la manette	19
• Connexion	20
• Chargement	22
• Boutons de jeu programmables	23
• Profils	25
• Éclairage Lumetra	27
• Dépannage	33



ESPAÑOL

• Controller Button Map.....	3
• Connecting	4
• Charging	6
• Advanced Gaming Buttons	7
• Profiles	9
• Lumetra Lighting	10
• Troubleshooting	14



DEUTSCH

• Controller Button Map.....	3
• Connecting	4
• Charging	6
• Advanced Gaming Buttons	7
• Profiles	9
• Lumetra Lighting	10
• Troubleshooting	14



ITALIANO


• Controller Button Map.....	3
• Connecting	4
• Charging	6
• Advanced Gaming Buttons	7
• Profiles	9
• Lumetra Lighting	10
• Troubleshooting	14



PORTUGUÊS


• Controller Button Map.....	3
• Connecting	4
• Charging	6
• Advanced Gaming Buttons	7
• Profiles	9
• Lumetra Lighting	10
• Troubleshooting	14

CONTROLLER BUTTON MAP

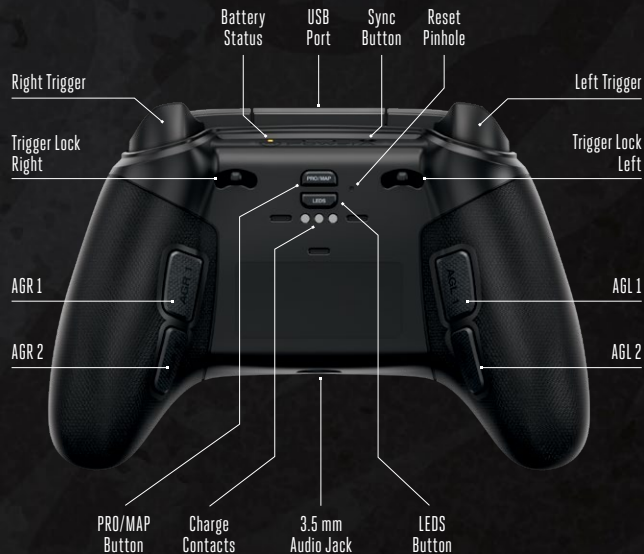

CONNECTING VIA WIRED USB MODE


1. Connect the included USB-C® Cable to the USB-C port at the top of the controller and connect the other end to an available USB port on the Xbox Series X|S console or Windows 10/11 PC.
2. If controller is off, press the Xbox button to turn on (LED will illuminate WHITE).
3. For player and controller assignment, refer to the Xbox user manual.

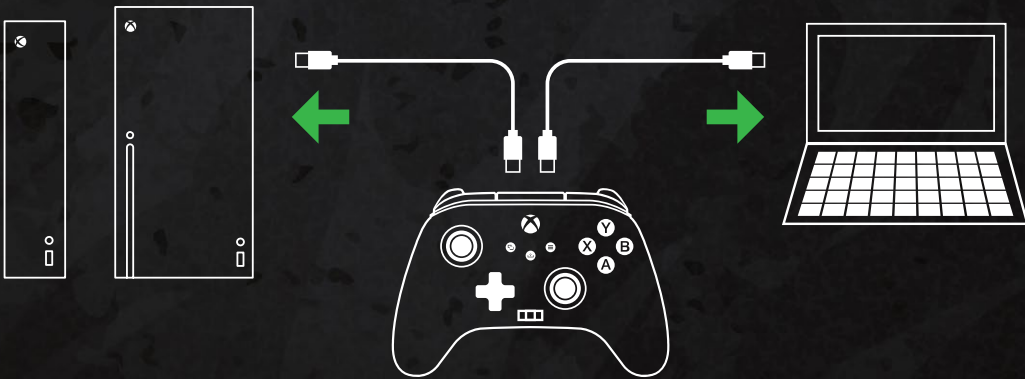

CONNECTING VIA WIRELESS MODE: 2.4 GHZ

1. Insert the wireless USB adapter into an available USB port on the Xbox Series X|S console or Windows 10/11 PC.
2. If controller is off, press the Xbox button (icon) to turn on (LED will flash WHITE).
3. 2.4 GHz should be paired to the Xbox FUSION Pro Wireless Controller by default. If it is not paired, please follow the instructions below to sync the controller to the adapter:
 - a. Press and hold the SYNC button on top of the controller for 3 seconds to enter pairing mode (LED will flash WHITE rapidly).
 - b. Repeat this step using the SYNC button on the top of the 2.4GHz adapter.
 - c. Both controller and adapter will flash several times and then pair. Once successfully paired both LEDs on controller and adapter will be solid WHITE.

NOTE: When not playing in Wireless mode, the 2.4 GHz wireless USB adapter can be stored in the back of the controller display stand. The wireless adapter does not connect or pass through the stand to the Console or PC when stored in the controller stand. The wireless adapter must be plugged directly into the Console or PC for wireless connection.

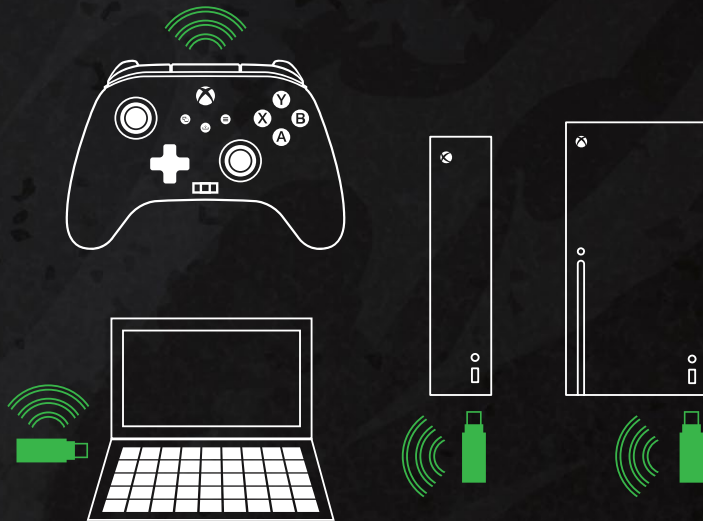


CHARGING CONTROLLER VIA USB

For best results, fully charge controller prior to first use.

1. Connect the included USB-C cable to the USB-C port at the top of the controller and connect the other end to an available USB port on the Xbox Series X|S console or Windows 10/11 PC.
2. When charging, the Battery Status LED on the top housing will flash AMBER.
3. When fully charged the LED will be solid WHITE.
4. LED will flash RED when battery is low.

CHARGING CONTROLLER VIA MAGNETIC CHARGER


1. Connect the included USB-C cable to the USB-C port at the top of the charging puck and connect the other end to any powered USB source.
2. Place the Xbox FUSION Pro Wireless Controller on the charging puck. The magnets will help align the charge contact points.
3. The LED ring on the Xbox button of the Xbox FUSION Pro Wireless Controller will flash AMBER three times to indicate charging has started. Lumetra lighting will return to the current LED mode and color setting.
4. The Battery Status LED on the top housing will also flash AMBER while charging.
5. The Battery Status LED and the Xbox button LED ring will turn solid WHITE when fully charged.
6. The controller will be held magnetically to the puck and charge whether the puck is used alone or with the Display Stand.

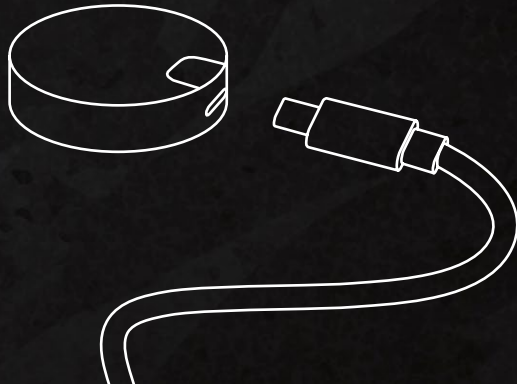

PROGRAMMING THE ADVANCED GAMING BUTTONS

- A. Press the PRO/MAP Button on the back of the controller for 3 seconds.
- B. The Xbox Button LED ring will flash WHITE, signaling the controller is in assign mode.
- C. Press the button (A/B/X/Y/LT/RT/LB/RB/Left Stick Press/Right Stick Press/D-pad) you wish to assign to an Advanced Gaming Button.
- D. Then press the Advanced Gaming Button (AGR1/AGR2 or AGL1/AGL2) that you wish to perform that function. The Xbox Button LED ring will turn solid WHITE, signaling the Advanced Gaming Button has been set. Repeat for the remaining Advanced Gaming Buttons.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

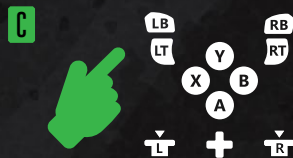


RESETTING THE ADVANCED GAMING BUTTONS

1. Hold the PRO/MAP Button down for 2-3 seconds. The Xbox Button LED will slowly flash, signaling the controller is in assign mode.
2. Press the previously assigned Advanced Gaming Button for 5 seconds, and the function will be cleared.

QUICK-TWIST ADJUSTABLE ANALOG STICK

Each thumbstick can be adjusted to one of three heights:

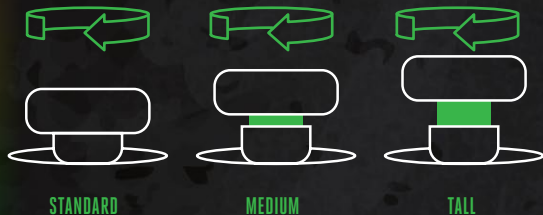

1. To change height, twist the analog cap clockwise until you feel it catch the next height notch. If you want to go to the tallest height turn it a second time.
2. To return to the standard height, turn the analog cap a third time and the analog stick will drop back down to the standard height.

TRIGGER LOCK ADJUSTMENT



PROFILE SETTINGS

- A. Quick-tap the PRO/MAP button to cycle through profile settings for T1/T2/T3 trigger locks. The Xbox FUSION Pro Wireless controller can store up to 3 profiles at a time locally. The first 3 profiles set by default adjust the deadzone settings for the triggers.

Profile 1 is 99% deadzone and is the maximum value setting (use for T1 trigger lock).

Profile 2 is 50% deadzone (use for T2 trigger lock).

Profile 3 is no deadzone/full-throw trigger pull (use for T3 trigger lock).

Each press of the PRO/MAP button will change to the next profile and then repeat the cycle: **3 → 2 → 1 → 3**

- B. The top housing LED faceplate will quickly flash 3 times in the corresponding profile color to signal a profile has been changed and then return to the current LED mode and color settings.

- C. To clear the profiles or change the settings, please use the PowerA Gamer HQ app. The above 3 default settings will be saved as legacy settings (Profile 1 / Profile 2 / Profile 3 in the PowerA Gamer HQ app). The app can store hundreds of custom profile settings that can be pushed to the controller, but the controller can only store 3 at any given time chosen from the app.


A



B



C

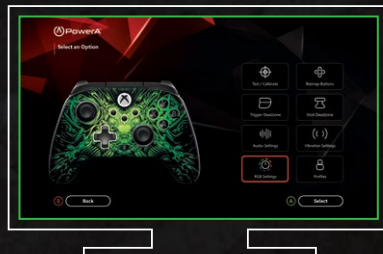

GamerHQ

The GamerHQ app can be used to test, calibrate, and customize settings on your controller. With your controller connected to Xbox or Windows 10/11 PC via USB-C cable you can:

- Update firmware to the to the latest version
- Test your controller's buttons and analog controls, vibration functionality, and audio
- Recalibrate analog inputs for proper control response
- Set trigger and thumbstick deadzone/active area
- Set game-chat volume balance and vibration intensity
- Control all RGB LED settings
- Remap buttons (including Advanced Gaming Buttons)



You can also create custom profiles to use for different games or players, and push up to three profiles to your controller for convenient access via the PROFILES button while you are gaming. You can download the GamerHQ app from the Windows Store using Xbox or a Windows 10/11 PC.

GHOST LUMECTRA LED CONTROL

A



B



- Quick-tap the LEDS button to cycle through LED modes. Each press of the LEDS button will change to a new mode. To customize each mode press and hold the LEDS button for 2 seconds. The entire top housing will quick flash 3 times GREEN to note program mode is active. The controller will not function with the Console or PC when in LED program mode.
- Adjustments for each mode and zone will be noted below. To exit LED programming press and hold the LEDS button again for 2 seconds and the top housing will flash GREEN 3 times. After this has been done the controller will function with the Console or PC again.
- The following modes will cycle with each tap of the LEDS button:
 - WAVE
 - ZONE (includes SOLID, BREATHING, and CYCLE modes)
 - PULSE REACTIVE
 - RIPPLE REACTIVE
- TURN ON/OFF LEDS – The LEDS can be turned on or off at any time by quick-pressing the MENU + OPTIONS button at the same time.

LED MODE ADJUSTMENT



NOTE: You can also control all Lumetra settings using the **GamerHQ app** while controller is connected via USB-C cable to an Xbox console or Windows 10/11 PC. Lumetra settings can be saved to a profile in GamerHQ, and up to 3 profiles can be pushed to your controller while connected to GamerHQ. Profiles pushed to your controller can be accessed via the **PROFILES** button. (See **PROFILE SETTINGS** section above for details.)

Once you have selected one of the LED modes by quick-tapping the LEDS button you are able to customize the mode:

WAVE MODE: LEDs wash across the controller in various directions in either a rainbow effect or a single color.

1. Press Left on the D-Pad to change from rainbow cycle or single-color wave mode.
2. Press Right to cycle through directions for the wave. Each press of the D-Pad Right will change the direction.
 - a. **Center Fusion** (wave starts in the center of controller and moves outward)
 - e. **Right Wave** (wave starts from right and goes to left)
 - b. **Outer Fusion** (wave starts at edge of controller and moves inward towards center)
 - f. **Downwards Wave** (wave moves from bottom to top)
 - c. **Vertical Bounce** (wave moves up and down repeatedly)
 - g. **Upwards Wave** (wave moves from top to bottom)
 - d. **Left Wave** (wave starts from left and goes to right)
 - h. **Horizontal Bounce** (wave moves left to right repeatedly)
3. Press right on the D-Pad to change colors when in single-color wave.
 - a. Each button A/B/X/Y will cycle through 6 different colors on each press.

LED MODE ADJUSTMENT (CONT.)

ZONE MODE: The Xbox FUSION Pro Wireless controller features 4 customizable zones on the top housing. Each zone can be set independently for color, mode, speed, and brightness or can be turned off.

1. To enter LED Program Mode on the controller, hold the LEDS button on the back of the controller for 2 seconds when you have the ZONES MODE selected.
 2. Once in ZONE MODE you can choose one of the 4 available zones to customize. The zones are separated as shown in the image to the right.
 3. The current programmable Zone will flash 3 times once in LED programming mode. To toggle through the 4 Zones, press RIGHT on the D-PAD. (Zone One is the default starting zone.)
 4. Select one of the A/B/X/Y buttons to choose your color: green, red, blue, or yellow.
 5. Next, continue pressing the selected A/B/X/Y button to toggle through 6 shades of that color.
 6. Press LEFT on the D-Pad to program the zone's light effect: "Solid", "Breathing", or "Cycle".
 7. Press UP or DOWN on the D-Pad to adjust that zone's brightness level.
 8. In program mode, press LEDs once to turn off the current zone independently of the other zones. If the current zone is set to "off", press LEDS once to turn the zone back on.
 9. Press the VIEW button to toggle through multiple speed settings for the current zone. Press the MENU button to toggle through multiple speed settings for all 4 zones simultaneously.
- NOTE: This feature is only available in "Breathing" and "Cycle" modes.



10. While in program mode, press LB to sync all zones to the same lighting mode and toggle all zones through the 3 lighting modes simultaneously; press RB to sync all zones to the same color and toggle all zones through the 24 colors and shades simultaneously.
11. While in program mode, press LT to decrease the brightness of all zones simultaneously; press RT to increase the brightness of all zones simultaneously.

ZONE LIGHTING CONTROL



ZONE LIGHTING CONTROL (CONT.)

PULSE REACTIVE MODE: LEDs move across the controller starting at the button/input pressed and then fade away rapidly.

1. To enter LED Program Mode on the controller, hold the LEDS button on the back of the controller for 2 seconds when you have the PULSE REACTIVE MODE selected.
2. The top housing will flash 3 times GREEN when in programming mode.
3. Press left on the D-Pad to choose either Rainbow cycle mode, or single-color mode.
4. Rainbow cycle mode allows you to set your brightness by pressing up or down on the D-Pad. No further changes are available in Rainbow cycle mode.
5. Single-color mode allows you to adjust brightness and select one of the A/B/X/Y buttons to choose your color: green, red, blue, or yellow.
6. Next, continue pressing the selected A/B/X/Y button to toggle through 6 shades of that color.
7. Once done choosing your mode and color settings, long press the LEDS button to exit program mode.

RIPPLE REACTIVE MODE: LEDs surround the button/input pressed with a bright LED color that then fades away gradually. Multiple presses on different buttons will cause the LEDs to light up in several areas at once and then fade away. LEDs move across the controller starting at the button/input pressed and then fade away rapidly.

1. To enter LED Program Mode on the controller, hold the LEDS button on the back of the controller for 2 seconds when you have the RIPPLE REACTIVE MODE selected.
2. The top housing will flash 3 times GREEN when in programming mode.
3. Press left on the D-Pad to choose either Rainbow cycle mode, or single-color mode.
4. The A/B/X/Y buttons will show four different colors to denote you are in Rainbow cycle mode and will be a solid color when in single-color mode.
5. Rainbow cycle mode allows you to set your brightness by pressing up or down on the D-Pad. No further changes are available in Rainbow cycle mode.
6. Single-color mode allows you to adjust brightness and also select one of the A/B/X/Y buttons to choose your color: green, red, blue, or yellow.
7. Next, continue pressing the selected A/B/X/Y button to toggle through 6 shades of that color.
8. Once done choosing your mode and color settings, long press the LEDS button to exit program mode.

TROUBLESHOOTING

PROBLEM: My controller will not power on.

SOLUTION: Confirm the controller is fully charged. Plug in to recharge as needed.

PROBLEM: My controller is not connecting to my 2.4 GHz wireless adapter.

SOLUTION: Press and hold the SYNC button on top of controller for 3 seconds to enter pairing mode (LED ring will flash rapidly). Ensure the 2.4GHz wireless adapter is plugged into your console or PC USB port. Press and hold the SYNC button on the top of the wireless adapter. The LEDs on controller and adapter should each flash several times and then when successfully paired stay solid WHITE.

PROBLEM: My wireless controller is not pairing.

SOLUTION 1: Confirm the battery is charged by following the charging instructions listed above.

SOLUTION 2: Confirm you are following the Wireless pairing process.

SOLUTION 3: Insert paper clip into the Reset Hole as marked above to reset controller to factory settings. After resetting, follow the pairing to wireless adapter instructions listed above.

For latest FAQs, visit www.powera.com/support

MOTION WARNING

Playing video games may cause muscle, joint, skin, or eye discomfort. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

WARRANTY AGAINST DEFECTS, AUSTRALIA & NEW ZEALAND CUSTOMERS

This product is provided with a 2-year warranty against defects in manufacturing or materials from the date of purchase. ACCO Brands will either repair or replace a faulty or defective product subject to the conditions of this warranty. Claims under this warranty must be made to the place of purchase within the warranty period with proof of purchase by the original purchaser only. Expenses associated with a warranty claim are the responsibility of the consumer. Conditions of this warranty are on our website: PowerA.com/warranty-ANZ

This warranty is provided in addition to other rights or remedies available to you under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DISTRIBUTOR CONTACT DETAILS

AUSTRALIAN CUSTOMERS:

ACCO Brands Australia Pty Ltd
 Locked Bag 50, Blacktown BC, NSW 2148
 Phone: 1300 278 546
 Email: consumer.support@powera.com

NEW ZEALAND CUSTOMERS:

ACCO Brands New Zealand Limited
 PO Box 11-677, Ellerslie, Auckland 1542
 Phone: 0800 800 526
 Email: consumer.support@powera.com

CONTACT/SUPPORT

For support with your authentic PowerA accessories, please visit PowerA.com/Support.
 ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047
accobrand.com | powera.com | Made In China

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit
www.powera.com/support

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

RF EXPOSURE STATEMENT

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



Waste Electrical and Electronic Equipment (WEEE): Electrical and electronic devices and batteries contain materials and substances that can have damaging effects on human health and the environment. This symbol indicates that this device and the battery must not be treated as household waste and must be collected separately. Dispose of the device via a collection point for the recycling of waste electrical and electronic equipment within the EU, UK and in other European countries that operate separate collection systems for waste electrical and electronic equipment and batteries. By disposing of the device and the battery in the proper manner, you help to avoid possible hazards for the environment and public health that could otherwise be caused by improper treatment of waste equipment. The recycling of materials contributes to the conservation of natural resources.



Conformit Europene aka European Conformity (CE): A declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.



UK Conformity Assessment (UKCA): A declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.



The **RCM** (Regulatory Compliance Mark) indicates that the product complies with the relevant Australian and New Zealand electrical safety, electromagnetic compatibility (EMC) and related requirements.

EU/UK DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC declares the wireless controller is in compliance with Directive 2014/53/EU and UK Radio Equipment Regulation 2017, as well as other essential requirements and relevant provisions of EU directives and UK legislation. The full text of the declaration of conformity is available at the following internet address: **PowerA.com/compliance**

WARNING: READ BEFORE PLAYING

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain patterns or while playing video games, may induce an epileptic seizure in these individuals. Certain conditions may induce previously undetected epileptic symptoms even in persons who have no history for prior seizures of epilepsy. If you, or anyone in your family, have an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video game – dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions – **IMMEDIATELY** discontinue use and consult with your physician before resuming play.

BATTERY WARNING

- Do not attempt to repair the Li-ion battery yourself—you may damage the battery, which could cause overheating, fire, and injury.
- The Li-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.
- Dispose of batteries according to your local environmental laws and guidelines.
- Do not use or leave the product containing rechargeable batteries exposed to very high or very low temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot or extremely cold weather), or in an environment with extremely low air pressure can result in an explosion, fire, or the leakage of flammable liquid or gas.
- Do not use a device containing rechargeable batteries in an environment with high levels of static electricity. Excessive static electricity can impair the batteries' internal safety measures, increasing the risk of overheating or fire.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush eyes thoroughly with clean running water and seek medical attention to prevent injury to eyes.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from any charging device and place it in a sealed fire-proof container such as a metal box, or in a safe location away from people and flammable items.
- Discarded batteries may cause fire. Do not heat the controller or battery, or place either in or near fire.

MANUFACTURED FOR

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.COM | POWERA.COM | MADE IN CHINA

ADDITIONAL LEGAL

© 2024 ACCO Brands. All Rights Reserved.

PowerA and PowerA Logo are trademarks of ACCO Brands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ACCO Brands is under license. Other trademarks and trade names are those of their respective owners.

USB-C® is a registered trademark of USB Implementers Forum.

PATENTS

<https://www.accobrand.com/PATENTS/>

WIRELESS SPECIFICATIONS FOR EU & UK COMPLIANCE

Frequency Range: 2.4 – 2.4835 GHz

Max E.I.R.P.: <10 dBm



Complies with
IMDA Standards
DB105685

CARTE DES BOUTONS DE LA MANETTE



CONNEXION VIA MODE USB FILAIRE


1. Connectez le câble USB-C® inclus au port USB-C situé sur le haut de la manette et reliez l'autre connecteur à un port USB disponible sur la console Xbox Series X|S ou le PC Windows 10/11.
2. Si la manette est éteinte, appuyez sur la touche Xbox pour l'allumer (la LED s'allumera en BLANC).
3. Pour affecter une manette à un joueur, reportez-vous au manuel d'utilisation de Xbox.



CONNEXION VIA MODE SANS FIL : 2,4GHZ

1. Insérez l'adaptateur USB sans fil dans un port USB disponible sur la console Xbox Series X|S ou le PC Windows 10/11.
2. Si la manette est éteinte, appuyez sur la touche Xbox (icône) pour l'allumer (la LED clignotera en BLANC).
3. 2,4GHz doivent être synchronisés à la manette sans fil FUSION Pro de Xbox par défaut. En l'absence de synchronisation, veuillez suivre les instructions ci-dessous afin de synchroniser la manette et l'adaptateur :
 - a. Appuyez sur le bouton SYNC sur le haut de la manette durant 3 secondes pour activer le mode synchronisation (la LED clignotera en BLANC rapidement).
 - b. Répétez cette étape en utilisant le bouton SYNC en haut de l'adaptateur 2,4GHz.
 - c. La manette et l'adaptateur clignoteront plusieurs fois avant de se synchroniser. Une fois la synchronisation réussie, les LED de la manette et de l'adaptateur sont en BLANC.

REMARQUE : lorsque vous ne jouez pas en mode sans fil, l'adaptateur USB sans fil 2,4GHz peut être rangé à l'arrière du support de la manette. L'adaptateur sans fil ne se connecte pas à la console ou au PC ou ne passe pas à travers le support lorsqu'il est rangé dans le support de la manette. L'adaptateur sans fil doit être branché directement à la console ou au PC pour la connexion sans fil.

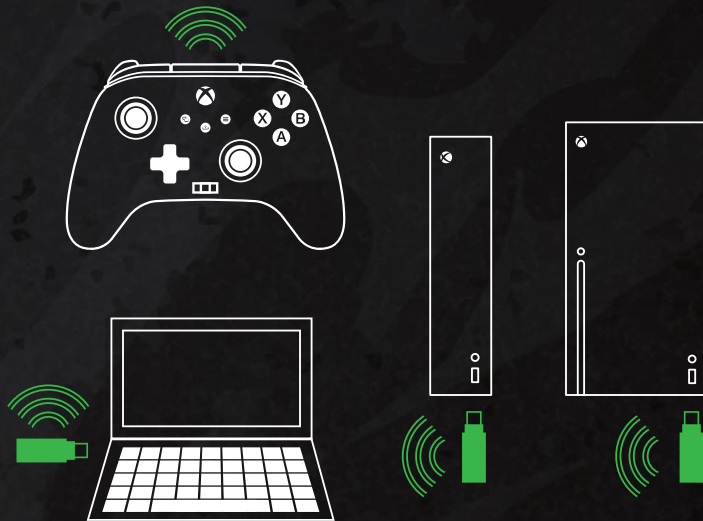


CHARGE DE LA MANETTE VIA USB

Pour obtenir de meilleurs résultats, chargez entièrement la manette avant la première utilisation.

1. Connectez le câble USB-C inclus au port USB-C situé sur le haut de la manette et reliez l'autre connecteur à un port USB disponible sur la console Xbox Series X/S ou le PC Windows 10/11.
2. Lors de la charge, la LED d'état de la batterie située sur le logement supérieur clignote en ORANGE.
3. Lorsque la charge est complète, la LED est en BLANC.
4. La LED clignote en ROUGE lorsque le niveau de batterie est faible.

CHARGE DE LA MANETTE AVEC LE CHARGEUR MAGNÉTIQUE


1. Connectez le câble USB-C inclus au port USB-C situé au haut de la base de charge et reliez l'autre connecteur à n'importe quelle source d'alimentation USB.
2. Placez la manette sans fil Xbox FUSION Pro sur la base de charge. Les aimants permettent d'aligner les points de contact de la charge.
3. L'anneau LED de la touche Xbox de la manette sans fil Xbox FUSION Pro clignote en ORANGE trois fois afin d'indiquer le début de la charge. L'éclairage Lumetra revient aux paramètres de mode et couleur LED actuels.
4. La LED d'état de la batterie située sur le logement supérieur clignote également en ORANGE lors de la charge.
5. La LED d'état de la batterie et l'anneau LED de la touche Xbox seront en BLANC une fois la charge terminée.
6. La manette sera maintenue magnétiquement sur la base et se chargera que la base soit utilisée seule ou avec le support.

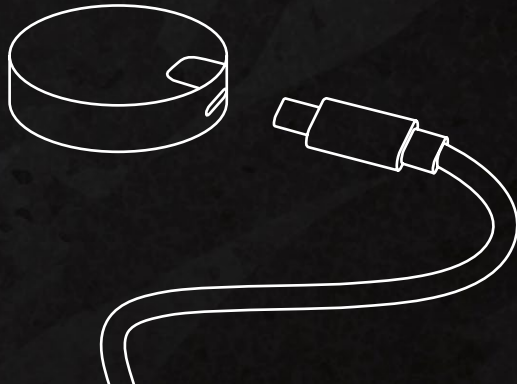

PROGRAMMATION DES BOUTONS DE JEU PROGRAMMABLES

- Appuyez sur le bouton PRO/MAP situé à l'arrière de la manette pendant 3 secondes.
- L'anneau LED de la touche Xbox clignote en BLANC, indiquant que la manette est en mode d'affectation.
- Appuyez sur le bouton (A/B/X/Y/LT/RT/LB/RB/pression sur le bouton gauche/pression sur le bouton droit/croix directionnelle) pour le paramétrer comme bouton de jeu programmable.
- Appuyez ensuite sur le bouton de jeu programmable (AGR1/AGR2 ou AGL1/AGL2) auquel vous voulez affecter la fonction. L'anneau LED de la touche Xbox sera en BLANC, indiquant que le bouton de jeu programmable a été configuré. Recommencez pour les boutons de jeu programmables restants.

REMARQUE : les attributions des boutons de jeu programmables restent en mémoire après utilisation.

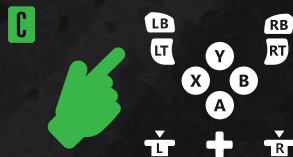


RÉINITIALISATION DES BOUTONS DE JEU PROGRAMMABLES

- Maintenez le bouton PRO/MAP enfoncé pendant 2 à 3 secondes. La LED de la touche Xbox clignote lentement, indiquant que la manette est en mode d'affectation.
- Maintenez appuyé le bouton de jeu programmable préalablement affecté pendant 5 secondes et la fonction est supprimée.

JOYSTICK ANALOGIQUE AJUSTABLE QUICK-TWIST

Chaque joystick peut être ajusté sur l'une des trois hauteurs différentes :

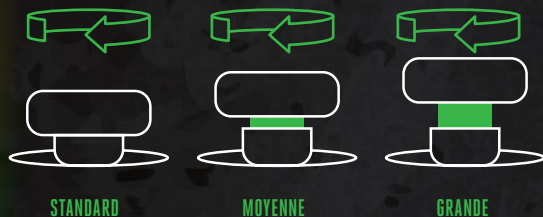

1. Pour changer la hauteur, faites tourner le stick analogique dans le sens des aiguilles d'une montre jusqu'à ce que vous sentiez qu'il s'enclenche dans l'encoche de la hauteur suivante. Si vous souhaitez accéder à la hauteur la plus grande, tournez-le une deuxième fois.
2. Pour retourner à la hauteur standard, faites tourner le stick analogique une troisième fois. Il reviendra à la hauteur standard.

RÉGLAGE DU VERROUILLAGE DE LA GÂCHETTE



PARAMÈTRES DU PROFIL

- A. Appuyez rapidement sur le bouton PRO/MAP pour faire défiler les paramètres du profil pour les verrouillages de gâchette T1/T2/T3. La manette sans fil FUSION Pro de Xbox peut localement stocker jusqu'à 3 profils à la fois. Les 3 premiers profils définis par défaut ajustent les paramètres de la zone inerte des gâchettes.


Le Profil1 correspond à une zone inerte à 99 % et à la valeur maximale (à utiliser pour le verrouillage de la gâchette T1).

Le Profil2 correspond à une zone inerte à 50 % (à utiliser pour le verrouillage de la gâchette T2).

Le Profil3 correspond à une absence de zone inerte / distance d'activation complète de la gâchette (à utiliser pour le verrouillage de la gâchette T3).

Chaque appui sur le bouton PRO/MAP permettra d'accéder au profil suivant, puis de revenir au début: **3 → 2 → 1 → 3**

- B. La plaque de protection LED du logement supérieur clignotera rapidement 3 fois dans la couleur correspondant au profil afin de signaler qu'un profil a été modifié, avant de revenir aux paramètres de mode et couleur LED actuels.
- C. Pour effacer les profils ou modifier les paramètres, veuillez utiliser l'application Gamer HQ de PowerA. Les 3 paramètres par défaut ci-dessus seront sauvegardés en tant que paramètres hérités (Profil1 / Profil2 / Profil3 dans l'application Gamer HQ de PowerA). L'application peut stocker des centaines de paramètres de profils personnalisés qui peuvent être transmis à la manette, mais cette dernière ne peut en stocker que 3 à la fois, choisis dans l'application.

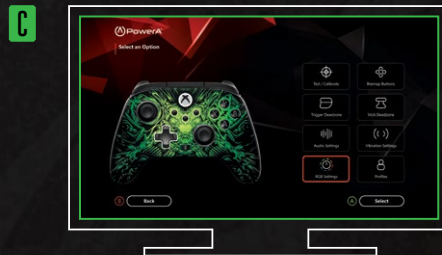

GamerHQ

The GamerHQ app can be used to test, calibrate, and customize settings on your controller. With your controller connected to Xbox or Windows 10/11 PC via USB-C cable you can:

- Update firmware to the the latest version
- Test your controller's buttons and analog controls, vibration functionality, and audio
- Recalibrate analog inputs for proper control response
- Set trigger and thumbstick deadzone/active area
- Set game-chat volume balance and vibration intensity
- Control all RGB LED settings
- Remap buttons (including Advanced Gaming Buttons)

You can also create custom profiles to use for different games or players, and push up to three profiles to your controller for convenient access via the PROFILES button while you are gaming. You can download the GamerHQ app from the Windows Store using Xbox or a Windows 10/11 PC.



CONTRÔLES LED GHOST LUMECTRA

- A. Appuyez rapidement sur le bouton LEDS pour passer d'un mode LED à l'autre. Chaque pression sur le bouton LEDS permet de passer à un nouveau mode. Pour personnaliser chaque mode, maintenez le bouton LEDS enfoncé pendant 2 secondes. L'ensemble du logement supérieur clignote rapidement 3 fois en VERT pour indiquer que le mode de programmation est actif. La manette ne fonctionne pas avec la console ou le PC lorsqu'elle est en mode de programmation LED.
- B. Les réglages pour chaque mode et chaque zone sont indiqués ci-dessous. Pour quitter la programmation des LED, appuyez à nouveau sur le bouton LEDS pendant 2 secondes et le logement supérieur clignotera 3 fois en VERT. Une fois cette opération effectuée, la manette fonctionnera à nouveau avec la console ou le PC.
- C. Les modes suivants défilent à chaque pression sur le bouton LEDS :
 - a. VAGUE b. ZONE (comprend les modes FIXE, RESPIRATION et CYCLE)
 - c. RÉACTIF AU POULS d. RÉACTIF À L'ONDULATION
- D. d. ALLUMER/ÉTEINDRE LES LED - Les LED peuvent être allumées ou éteintes à tout moment en appuyant rapidement et simultanément sur les touches MENU + OPTIONS.

A



B



RÉGLAGE DU MODE LED



NOTE: You can also control all Lumetra settings using the **GamerHQ app** while controller is connected via USB-C cable to an Xbox console or Windows 10/11 PC. Lumetra settings can be saved to a profile in GamerHQ, and up to 3 profiles can be pushed to your controller while connected to GamerHQ. Profiles pushed to your controller can be accessed via the **PROFILES** button. (See **PROFILE SETTINGS** section above for details.)

Une fois que vous avez sélectionné l'un des modes LED en appuyant rapidement sur le bouton LEDS, vous pouvez personnaliser le mode :

MODE VAGUE : les LED se déplacent sur la manette dans différentes directions, soit dans un effet arc-en-ciel, soit dans une seule couleur.

- Appuyez sur la touche gauche de la croix directionnelle pour passer du mode Vague arc-en-ciel à unicolore.
- Appuyez à droite pour faire défiler les directions de la vague. Chaque pression de la touche droite de la croix directionnelle change la direction.
 - Fusion centrale** (la vague commence au centre de la manette et se déplace vers l'extérieur)
 - Fusion extérieure** (la vague commence au bord de la manette et se déplace vers l'intérieur)
 - Rebond vertical** (la vague monte et descend de manière répétée)
 - Vague gauche** (la vague part de la gauche et va vers la droite)
 - Vague droite** (la vague part de la droite et va vers la gauche)
 - Vague basse** (la vague se déplace du bas vers le haut)
 - Vague haute** (la vague se déplace du haut vers le bas)
 - Rebond horizontal** (la vague se déplace de gauche à droite de manière répétée)
- Appuyez sur la touche droite de la croix directionnelle pour changer de couleur en mode Vague unicolore.
 - Chaque touche A/B/X/Y fait défiler 6 couleurs différentes à chaque pression.

RÉGLAGE DU MODE LED (SUITE)

MODE ZONE : la manette sans fil FUSION Pro de Xbox comporte 4 zones personnalisables sur le logement supérieur. Chaque zone peut être réglée indépendamment pour la couleur, le mode, la vitesse et la luminosité ou peut être désactivée.

1. Pour accéder au mode de programmation LED sur la manette, maintenez enfoncé le bouton LEDS à l'arrière de la manette pendant 2 secondes lorsque le MODE ZONE est sélectionné.
2. Une fois dans le MODE ZONE, vous pouvez choisir l'une des 4 zones disponibles à personnaliser. Les zones sont séparées comme le montre l'image de droite.
3. La zone programmable actuelle clignotera 3 fois une fois en mode de programmation LED. Pour basculer entre les 4 zones, appuyez sur la touche DROITE de la croix directionnelle. (La Zone Un est la zone de début par défaut.)
4. Sélectionnez l'un des boutons A/B/X/Y pour choisir la couleur souhaitée : vert, rouge, bleu ou jaune.
5. Ensuite, continuez à appuyer sur le bouton A/B/X/Y sélectionné pour basculer entre les 6 nuances de cette couleur.
6. Appuyez sur GAUCHE sur la croix directionnelle pour programmer l'effet d'éclairage de la zone : « Fixe », « Pulsation » ou « Cycle ».
7. Appuyez sur HAUT ou BAS sur la croix directionnelle pour régler le niveau de luminosité de cette zone.



8. En mode de programmation, appuyez une fois sur le bouton LEDS pour désactiver la zone actuelle, indépendamment des autres zones. Si la zone actuelle est définie sur « Désactivé », appuyez une fois sur le bouton LEDS pour réactiver la zone.
9. Appuyez sur la touche AFFICHAGE pour basculer entre les différents réglages de vitesse pour la zone actuelle. Appuyez sur la touche MENU pour basculer entre les différents réglages de vitesse pour les 4 zones simultanément. REMARQUE : Cette fonction n'est disponible que dans les modes « Pulsation » et « Cycle ».
10. En mode de programmation, appuyez sur LB pour synchroniser toutes les zones sur le même mode d'éclairage et basculer entre les trois modes d'éclairage pour toutes les zones simultanément. Appuyez sur RB pour synchroniser toutes les zones sur la même couleur et basculer toutes les zones sur les 24 couleurs et teintes simultanément.
11. En mode de programmation, appuyez sur LT pour diminuer la luminosité de toutes les zones simultanément; appuyez sur RT pour augmenter la luminosité de toutes les zones simultanément.

CONTRÔLES D'ÉCLAIRAGE DE ZONE



Croix directionnelle

Gauche: sélectionner un mode
Droite: sélectionner une zone

Haut: augmenter la luminosité des LED RGB
Bas: diminuer la luminosité des LED RGB

Boutons A/B/X/Y

Y : jaunes X : bleus
B : rouges A : verts



CONTRÔLES D'ÉCLAIRAGE DE ZONE (SUITE)

MODE RÉACTIF AU POULS : les LED se déplacent sur la manette à partir de la touche pressée, puis s'estompent rapidement.

1. Pour accéder au mode de programmation LED sur la manette, maintenez enfoncé le bouton LEDS à l'arrière de la manette pendant 2 secondes lorsque le MODE RÉACTIF AU POULS est sélectionné.
2. Le logement supérieur clignote 3 fois en VERT une fois en mode programmation.
3. Appuyez sur la touche gauche de la croix directionnelle pour choisir entre les modes Vague cycle arc-en-ciel et unicolore.
4. Le mode cycle arc-en-ciel vous permet de régler la luminosité en appuyant sur le haut ou le bas de la croix directionnelle. Aucune autre modification n'est possible en mode cycle arc-en-ciel.
5. Le mode unicolore vous permet de régler la luminosité et de sélectionner l'un des boutons A/B/X/Y pour choisir la couleur souhaitée : vert, rouge, bleu ou jaune.
6. Ensuite, continuez à appuyer sur le bouton A/B/X/Y sélectionné pour basculer entre les 6 nuances de cette couleur.
7. Une fois que vous avez choisi vos paramètres de mode et de couleur, appuyez longuement sur le bouton LEDS pour quitter le mode programmation.

MODE RÉACTIF À L'ONDULATION : les LED entourent la touche pressée d'une couleur lumineuse qui s'estompe progressivement. Si vous appuyez plusieurs fois sur différents boutons, les LED s'allumeront à plusieurs endroits à la fois, puis s'estomperont. Les LED se déplacent sur la manette à partir de la touche pressée, puis s'estompent rapidement.

1. Pour accéder au mode de programmation LED sur la manette, maintenez enfoncé le bouton LEDS à l'arrière de la manette pendant 2 secondes lorsque le MODE RÉACTIF À L'ONDULATION est sélectionné.
2. Le logement supérieur clignote 3 fois en VERT une fois en mode programmation.
3. Appuyez sur la touche gauche de la croix directionnelle pour choisir entre les modes Vague cycle arc-en-ciel et unicolore.
4. Les boutons A/B/X/Y affichent quatre couleurs différentes pour indiquer que vous êtes en mode cycle arc-en-ciel et sont d'une couleur unie lorsque vous êtes en mode unicolore.
5. Le mode cycle arc-en-ciel vous permet de régler la luminosité en appuyant sur le haut ou le bas de la croix directionnelle. Aucune autre modification n'est possible en mode cycle arc-en-ciel.
6. Le mode unicolore vous permet de régler la luminosité et également de sélectionner l'un des boutons A/B/X/Y pour choisir la couleur souhaitée : vert, rouge, bleu ou jaune.
7. Ensuite, continuez à appuyer sur le bouton A/B/X/Y sélectionné pour basculer entre les 6 nuances de cette couleur.
8. Une fois que vous avez choisi vos paramètres de mode et de couleur, appuyez longuement sur le bouton LEDS pour quitter le mode programmation.

DÉPANNAGE

PROBLÈME : Ma manette ne s'allume pas.

SOLUTION : Vérifiez que la manette est entièrement chargée. Si besoin, branchez-la pour la recharger.

PROBLÈME : Ma manette ne se connecte pas à mon adaptateur sans fil 2,4 GHz.

SOLUTION : Appuyez sur le bouton SYNC en haut de la manette durant 3 secondes pour activer le mode synchronisation (l'anneau LED clignotera rapidement). Assurez-vous que l'adaptateur sans fil 2,4 GHz est branché sur le port USB de votre console ou de votre PC. Maintenez appuyé le bouton SYNC situé en haut de l'adaptateur sans fil. Les LED de la manette et de l'adaptateur doivent chacune clignoter plusieurs fois puis, une fois la synchronisation réussie, rester en BLANC.

PROBLÈME : Ma manette sans fil ne parvient pas à effectuer la synchronisation..

SOLUTION 1 : Vérifiez que la batterie est chargée en suivant les instructions de charge listées ci-dessus.

SOLUTION 2 : Vérifiez que vous suivez bien le processus de synchronisation sans fil..

SOLUTION 3 : Insérez un trombone dans le trou de réinitialisation comme indiqué ci-dessus pour réinitialiser la manette aux paramètres d'usine. Après la réinitialisation, suivez les instructions de synchronisation avec l'adaptateur sans fil indiquées ci-dessus.

For latest FAQs, visit www.powera.com/support

MISE EN GARDE AU SUJET DES MOUVEMENTS

Les jeux vidéo peuvent provoquer des douleurs des muscles, des articulations, de la peau ou des yeux. Respectez les consignes suivantes pour éviter les problèmes tels que tendinite, syndrome du canal carpien, irritation cutanée ou fatigue oculaire:

- Évitez de jouer trop longtemps. Faites une pause de 10 à 15 minutes après chaque heure de jeu, même si vous n'en ressentez pas la nécessité. Les parents doivent s'assurer que leurs enfants jouent de manière appropriée.
- Si vous ressentez de la fatigue ou une douleur dans vos mains, poignets, bras ou yeux pendant le jeu, ou des symptômes tels que picotements, engourdissement, brûlure ou raideur, arrêtez de jouer et reposez-vous pendant plusieurs heures avant de reprendre le jeu.
- Si l'un des symptômes cités persiste ou si vous ressentez une gêne prolongée pendant ou après le jeu, arrêtez de jouer et consultez un médecin.

SERVICE CLIENTÈLE

Pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter la rubrique PowerA.com/Support.

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.COM | POWERA.COM | MADE IN CHINA

GARANTIE

Garantie limitée de deux ans. Consultez le site PowerA.com pour plus de détails.

CAN ICES-003(B)/NMB-003(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SYMBOLES DE CONFORMITÉ RÉGIONALE

De plus amples informations sont disponibles en recherchant chaque nom de symbole.



Déchets d'équipements électriques et électroniques (DEEE) Les appareils électriques et électroniques contiennent des matériaux et des substances qui peuvent avoir des effets néfastes sur la santé humaine et l'environnement. Ce symbole indique que cet appareil ne doit pas être traité comme un déchet municipal non trié, mais doit être collecté séparément. Éliminez l'appareil via un point de collecte pour le recyclage des déchets d'équipements électriques et électroniques dans l'UE, au Royaume-Uni et dans d'autres pays européens qui exploitent des systèmes de collecte séparés pour les déchets d'équipements électriques et électroniques. En éliminant l'appareil de manière appropriée, vous contribuez à éviter les risques potentiels pour l'environnement et la santé publique qui pourraient autrement être causés par un traitement inapproprié des déchets d'équipement. Le recyclage des matériaux contribue à la conservation des ressources naturelles.



FR

Cet appareil, ses piles et cordons se recyclent

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



OU

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



Conformité Européenne aka European Conformity (CE): A declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.

UE/UK DÉCLARATION DE CONFORMITÉ

Par la présente, ACCO Brands USA LLC déclare que la manette sans fil est conforme à la Directive 2014/53/UE et au Règlement sur les équipements radio de 2017 au Royaume-Uni, ainsi qu'à d'autres exigences essentielles et dispositions pertinentes des directives de l'UE et de la législation du Royaume-Uni. Le texte complet de la déclaration de conformité est disponible à l'adresse Internet suivante : PowerA.com/compliance

AVERTISSEMENT : À LIRE AVANT DE JOUER

Une très faible proportion d'individus est susceptible d'être victime de crises d'épilepsie si elle se trouve exposée à certains types de stimuli lumineux ou de lumières clignotantes. L'exposition à ces stimuli au cours d'un jeu vidéo peut provoquer des crises d'épilepsie chez ces individus. Sous certaines conditions, même des personnes ne présentent aucun antécédent d'épilepsie peuvent être sujettes à des crises ou à des symptômes épileptiques. Si vous-même ou une personne de votre famille possédez des antécédents d'épilepsie, veuillez consulter un médecin avant de jouer. Si, au cours de votre session de jeu, vous ressentez des vertiges, des troubles de la vision, des spasmes musculaires ou oculaires, une perte de conscience, de la confusion ou des mouvements involontaires, arrêtez IMMÉDIATEMENT de jouer et consultez un médecin avant toute utilisation ultérieure.

AVERTISSEMENT À PROPOS DE LA BATTERIE

- N'essayez pas de réparer vous-même la batterie Li-ion ; vous pourriez l'endommager et provoquer une surchauffe, entraînant ainsi un risque d'incendie et de blessures.
- La batterie Li-ion de votre appareil doit être entretenue ou recyclée par PowerA ou un fournisseur agréé, et doit être recyclée ou éliminée séparément des ordures ménagères. Jetez les piles conformément aux lois et directives environnementales locales.
- N'utilisez pas ou ne laissez pas un appareil contenant des batteries Li-ion dans un environnement où la température est élevée (par exemple, en plein soleil ou dans un véhicule par temps chaud). Des températures élevées peuvent provoquer une surchauffe ou un incendie des batteries, affectant ainsi négativement leurs performances et leur longévité.
- N'utilisez pas un appareil contenant des batteries Li-ion dans un environnement à haut niveau d'électricité statique. Un excès d'électricité statique peut altérer les dispositifs internes de sécurité des batteries, augmentant ainsi les risques de surchauffe ou d'incendie.
- Si la batterie dégage une odeur, génère de la chaleur ou semble anormale de quelque manière que ce soit pendant l'utilisation, la recharge ou le stockage, retirez-la immédiatement de tout dispositif de charge et placez-la dans un récipient hermétique ignifuge tel qu'une boîte en métal ou dans un endroit sûr, loin des personnes et des objets inflammables.
- Les piles jetées peuvent provoquer un incendie. Ne chauffez pas la manette ou la batterie, et ne les placez pas dans ou à proximité d'un feu.

FABRIQUÉ POUR

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.com | POWERA.com | FABRIQUÉ EN CHINE

MENTION JURIDIQUE SUPPLÉMENTAIRE

© ACCO Brands, 2024. Tous droits réservés. PowerA ainsi que le logo de PowerA sont des marques de commerce de ACCO Brands.

La marque verbale et les logos Bluetooth® sont des marques déposées appartenant à Bluetooth SIG, Inc. et toute utilisation de ces marques par ACCO Brands est effectuée sous licence. Les autres marques de commerce sont la propriété de leurs propriétaires respectifs.

USB-C® est une marque déposée d'USB Implementers Forum.

PATENTS

<https://www.accobrand.com/PATENTS/>

CARACTÉRISTIQUES SANS FIL FOR EU & UK COMPLIANCE

Gamme de fréquences : 2,4 – 2,4835 GHz

PIRE maximum : < 10 dBm





ACCO Brands, 4 Corporate Drive, Lake Zurich, IL 60047
ACCOBRANDS.com | POWERA.com | MADE IN CHINA

MODEL: XBGPFPWL