



# G33



## Quick Guide | Guía Rápida



- 0 For instructions or any questions pertaining to phone usage, please click on the BLU page by visiting the following address: **<http://www.bluproducts.com>**
  
- 0 Para obtener instrucciones o preguntas relacionadas con el uso del teléfono, por favor haga clic en la página de BLU visitando la siguiente dirección: **<http://www.bluproducts.com>**

# ABOUT YOUR PHONE

## Transportation Safety

Observe all transportation laws and regulations.

**PLEASE DRIVE RESPONSIBLY - DO NOT TEXT & DRIVE**

## Hospital Safety

Follow hospital rules and limitations and turn off your mobile phone when near medical instruments.

## Airport Safety

Remember to follow all airport and flight safety regulations.

## Water Hazard

Your phone is not waterproof. Keep your phone away from water or liquid to avoid damage.

## Emergency Calls

Make sure your mobile phone is switched on and in a service area. On home screen, tap the phone key and dial the emergency number.

## Battery Usage

For better performance and longer battery life, it is recommended that you charge the battery fully before using the mobile phone for the first time and that you initially complete two to three charge cycles.

## IMEI Information

To check your IMEI, press \*#06#

# KEY FUNCTIONS



**Rear Camera**

**Flash**

**Fingerprint Sensor**



|                         |                                                                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Power On / Off</b>   | Used to power on/off the device and to lock the screen.<br>» Long press the power button to power on<br>» While powered on, long press the power off and the volume up key to power off |
| <b>Volume</b>           | Adjusts the ringer volume, call volume, and multimedia volume.                                                                                                                          |
| <b>Home</b>             | The home button pauses any current action and returns to the home screen.                                                                                                               |
| <b>Recent Apps</b>      | Opens a list of recently opened applications that allows you to switch conveniently between them. This option can also close any open applications by swiping to the side.              |
| <b>Back</b>             | Returns to the previous screen; Closes the keyboard, any open program, or any menu option.                                                                                              |
| <b>USB Port</b>         | Charges the device and transfers data such as documents, music, and video between your device and a PC.                                                                                 |
| <b>Headset Port</b>     | Connect earphones to this port for hands-free capabilities. You may also to listen to music or FM radio.                                                                                |
| <b>Front Camera</b>     | A high-resolution front camera to take pictures and video. This option is ideal for self-portraits.                                                                                     |
| <b>Rear Camera</b>      | A high-resolution rear camera to take pictures and video.                                                                                                                               |
| <b>Flash</b>            | Provides light for pictures in low-light conditions. It also may be used as a flashlight.                                                                                               |
| <b>Assistant Button</b> | Launches the phones Assistant.                                                                                                                                                          |


# INTRODUCTION

## Installation of the SIM Card


**Warning:** Please keep the SIM card out of the reach of children. The SIM card and its contact are easily damaged due to scratching or bending. Please use caution when carrying, installing, or taking out the SIM card. **Note:** Please contact your cellular phone service provider directly to obtain your SIM card.

### To insert SIM card:

- ★ Remove the rear cover. Insert the SIM card.
- ★ Insert the SD card (For additional storage capacity)

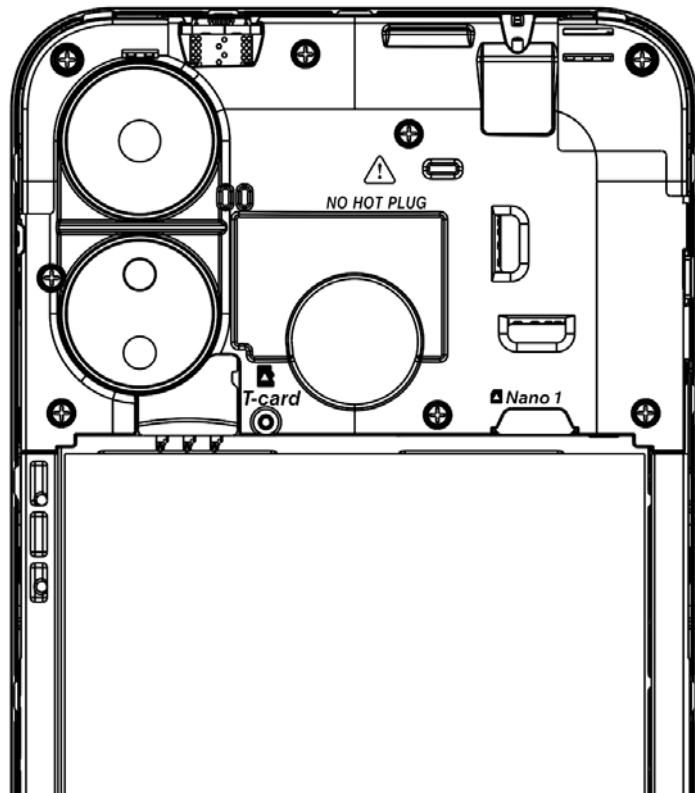

SIM Card Slot

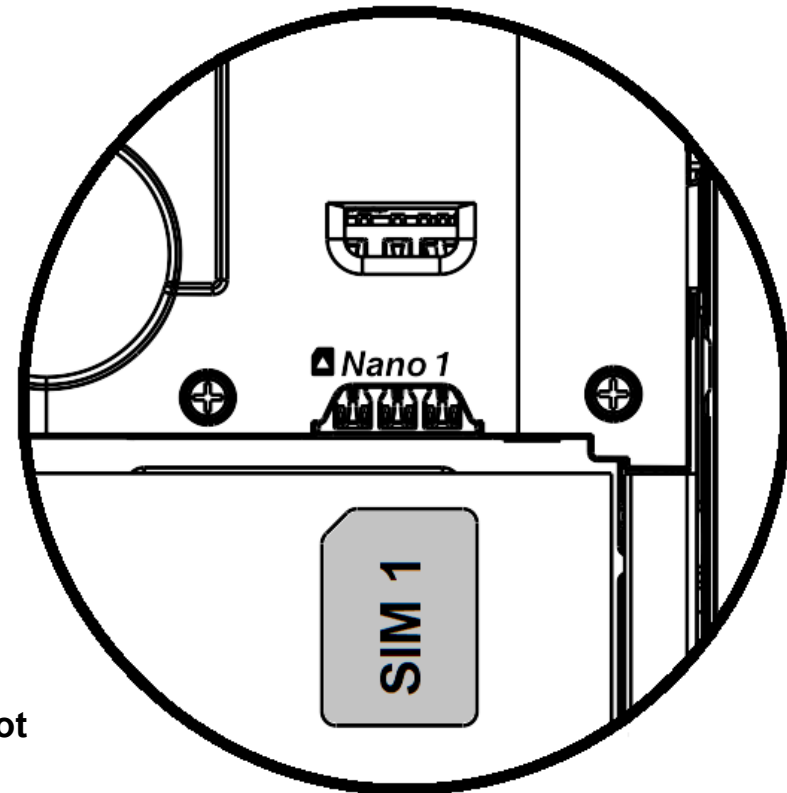

- ★ Insert the battery, replace the rear cover and power on the phone.

# DEVICE CONFIGURATION

When you initially power on your phone, there will be a series of steps to set up basic features.

## **INSERT SIM**

Insert your SIM card so the phone can register to the network.

## **SELECT LANGUAGE**

While on the Welcome screen, please scroll to select your language. In this step, you also have the option to adjust Vision Settings such as magnification, font, and display size. You have the ability to place an Emergency Call.

## **CONNECT TO WI-FI**

This step allows the device to connect to the internet. Click on the desired Wi-Fi network that the device that will be connected. Please note that any unsecured Wi-Fi networks can be connected to without credentials and any secured Wi-Fi networks require a password for credentials prior to connection. It is recommended that you connect to a Wi-Fi network to check for software updates prior to startup to avoid any data overages.

## **COPY APPS & DATA**

This step allows you to select transfer options such as applications, pictures, music and more from a previous device. You may also setup as new if you choose not to from a previous device.

## **ADD YOUR ACCOUNT**

Sign in to your Google™ Account in order to keep accounts streamlined with Google services. Your account will be used for Google programs such as Google Play™, Google Drive, and Google Pay. If you do not have a Google account, click to create a new account. If the device is not recognized by your Google account, you will have to complete a security verification.



## **GOOGLE SERVICES**

Click to add Google services that include Backup and Restore, Location Services, Install Updates and Apps.

## **SET SECURITY**

Setup your face recognition and fingerprint to unlock your phone and for authorization on certain applications.

There will be different options to setup security: with PIN, Password or Pattern. In this step, you will have the ability to setup a PIN at startup as an extra layer of security. You also have the option of skipping the.

## **FINALIZE SETUP**

The last step allows you to setup Google Assistant. You may also add another email address, control what information is visible through the phones lock screen, and lets you also review any additional apps. You may skip this step and setup later.

Google, Google Play, Google Maps, YouTube, Gmail, and other marks are trademarks of Google LLC.

# **SOBRE SU TELÉFONO**

## **Seguridad de Transporte**

Siga todas las leyes y regulaciones de transporte.

**MANEJE RESPONSABLEMENTE - NO USE MENSAJERIA DE TEXTO CUANDO CONDUCIENDO**

## **Seguridad de Hospitales**

Siga todas las leyes y regulaciones de hospital y apague su teléfono móvil cuando cerca de instrumentos médicos.

## **Seguridad de Aeropuertos**

Por favor, siga todas las normas de seguridad de vuelo y de aeropuerto.

## **Prueba de Agua**

El teléfono móvil no es impermeable. Manténgalo alejado de agua o líquidos para evitar daño.

## **Llamadas de Emergencia SOS**

Asegúrese de que su teléfono móvil está encendido y en un área de servicio. En la pantalla de inicio, pulse la tecla del teléfono y marque el número de emergencia.

## **Uso de batería**

Para mejorar el rendimiento y la vida útil de la batería, se recomienda que cargue la batería completamente antes de utilizar el teléfono móvil por primera vez y que inicialmente se complete dos o tres ciclos de carga completos.

## **Información de IMEI**

Para conocer su IMEI, marque \*#06#.

# FUNCIONES

**Cámara Frontal**

**Asistente**

**Retroceder**

**Volumen**

**Encendido / Apagado**

**Inicio**

**Apps Recientes**



**Cámara Trasera**

**Flash**

**Sensor de Huella Digital**



|                               |                                                                                                                                                                                                                                                                |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Encendido / Apagado</b>    | <p>Se utiliza para encender/apagar el dispositivo y bloquear la pantalla.</p> <p>» Mantenga pulsado el botón de encendido para encender</p> <p>» Mientras está encendido, mantenga presionada la tecla de apagado y la tecla de subir volumen para apagar.</p> |
| <b>Volumen</b>                | Ajusta el volumen del timbre, el volumen durante una llamada, y el volumen de multimedia.                                                                                                                                                                      |
| <b>Inicio</b>                 | El botón de inicio se detiene cualquier acción actual y vuelve a la pantalla de inicio.                                                                                                                                                                        |
| <b>Aplicaciones Recientes</b> | Abre una lista de aplicaciones recientemente abiertas y le permite cambiar cómodamente entre ellas. Esta opción también puede cerrar todas las aplicaciones abiertas deslizando hacia el lado.                                                                 |
| <b>Retroceder</b>             | Regresa a la pantalla anterior; Se cierra el teclado, cualquier programa abierto, opción de menú, o el panel de notificaciones.                                                                                                                                |
| <b>Puerto de USB</b>          | Carga el dispositivo y también transfiere documentos, música y vídeo entre el teléfono y un PC.                                                                                                                                                                |
| <b>Puerto de Auricular</b>    | Conecte los auriculares a este puerto para capacidades de manos libres. También se puede escuchar música o radio FM.                                                                                                                                           |
| <b>Cámara Frontal</b>         | Una cámara frontal de alta resolución para tomar fotos y video. Esta opción es ideal para autorretratos.                                                                                                                                                       |
| <b>Cámara Trasera</b>         | Una cámara trasera de alta resolución para tomar fotos y video.                                                                                                                                                                                                |
| <b>Flash</b>                  | Proporciona luz para fotos en condiciones de poca luz. También se puede utilizar como una linterna.                                                                                                                                                            |
| <b>Botón de Asistente</b>     | Inicia el Asistente del teléfono.                                                                                                                                                                                                                              |

# INTRODUCCIÓN


## Instalación de la Tarjeta SIM

**Advertencia:** Mantenga la tarjeta SIM fuera del alcance de los niños. El contacto de la tarjeta SIM se daña fácilmente debido al roce o flexión. Por favor tenga cuidado al transportar o instalar la tarjeta SIM.


**Nota:** Por favor comuníquense con el proveedor de servicio directamente para obtener su tarjeta SIM.

### Para insertar la tarjeta SIM:

- ★ Retire la cubierta posterior. Inserte la tarjeta SIM.
- ★ Inserte la tarjeta de memoria (para capacidad adicional).

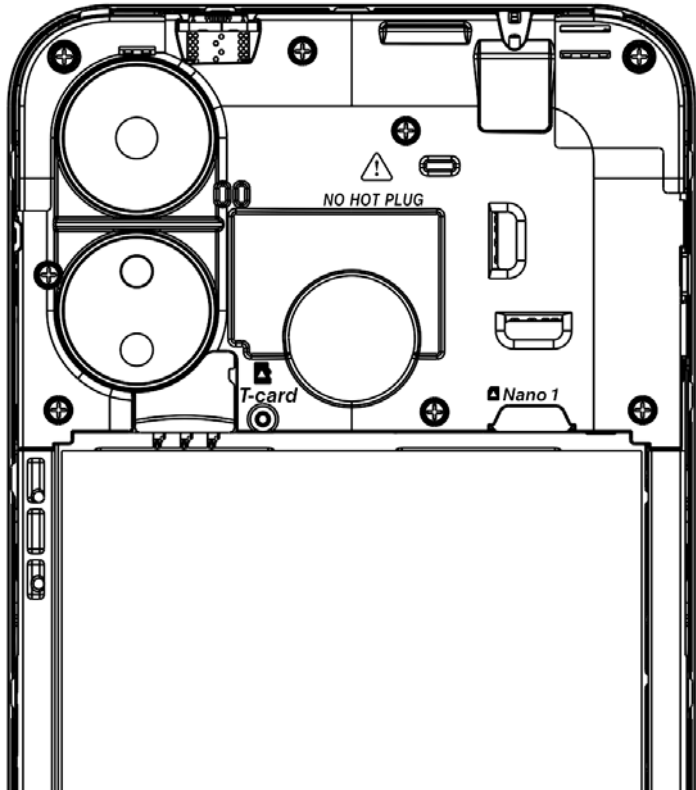

Ranura Tarjeta SIM

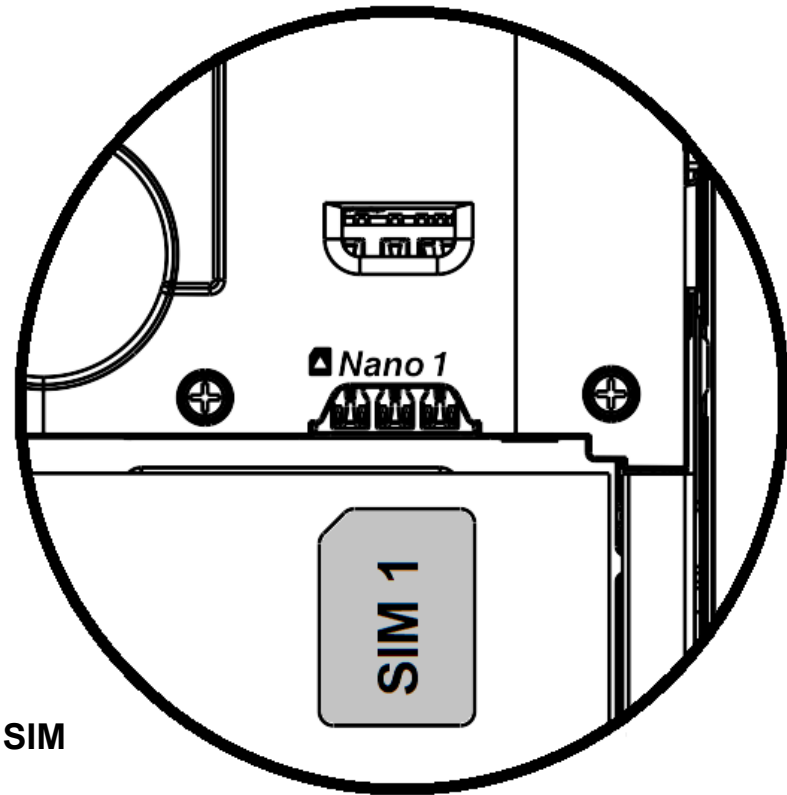

- ★ Inserte la batería, recolóque la cubierta posterior y encienda el teléfono.

# CONFIGURACIÓN DEL DISPOSITIVO

Cuando inicialmente se enciende el teléfono, habrá una serie de configuraciones básicas.

## **INSERTAR SIM**

Inserte su tarjeta SIM para que el teléfono pueda registrarse a la red.

## **SELECCIONAR IDIOMA**

En la pantalla de bienvenida, por favor, haga clic y desplace para elegir su selección de idioma. En este paso, también tiene la opción de ajustar la configuración de visión, como la ampliación, la fuente y el tamaño de visualización. Usted tiene la capacidad de realizar una llamada de emergencia.

## **CONECTATE A WI-FI**

Este paso permite que el dispositivo se conecte a la red de Wi-Fi. Haga clic en la red Wi-Fi que desee que el dispositivo se conecte. Por favor, tenga en cuenta que todas las redes sin seguridad pueden conectarse directamente y cualquiera de las redes protegidas requieren una contraseña antes de conexión. Se recomienda que se conecte a una red Wi-Fi para verificar las actualizaciones de software antes del inicio para evitar cualquier exceso de datos.

## **COPIAR APLICACIONES Y DATOS**

Este paso le permite seleccionar opciones de transferencia tales como aplicaciones, imágenes, música y más desde un dispositivo anterior. También tiene la opción de configurar como nuevo.

## **AGREGAR LA CUENTA**

Ingresa a su Cuenta de Google™ para llevar una contabilidad simplificada con los servicios de Google. Tu cuenta se utilizará para algunos programas de Google que incluyen: Google Play, Google Drive, y Google Pay. Si no tiene una cuenta de Google, haga clic para crear una nueva cuenta. Si su cuenta de Google no reconoce el dispositivo, tendrías que completar una verificación de seguridad.

## **SERVICIOS DE GOOGLE**

Haga clic para agregar servicios de Google que incluyen Asistente de Google, Copia de seguridad y restauración, Servicio de ubicación, Instalar actualizaciones y aplicaciones.

## **CONFIGURACIÓN DE SEGURIDAD**

Configura el teléfono con reconocimiento facial y huella digital para desbloquear y obtener autorización para ciertas aplicaciones.

Habrán diferentes opciones para configurar la seguridad: con PIN, contraseña o patrón. En este paso, tendrá la capacidad de configurar un PIN al inicio como una capa adicional de seguridad. También tiene la opción de omitir la configuración de la huella digital y completarla en otro momento.

## **FINALIZAR LA CONFIGURACIÓN**

El último paso le permite configurar el Google Asistente. También puede agregar otra dirección de correo electrónico, controlar qué información es visible en la pantalla de bloqueo de su teléfono y también le permite revisar aplicaciones adicionales. Se puede omitir este paso y configurarlo más tarde.

Google, Google Play, Google Maps, YouTube, Gmail y otras marcas son marcas comerciales de Google LLC.



# PROPOSITION 65 – STATE OF CALIFORNIA



**WARNING: Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

## Federal Communication Commission Interference

**FCC ID:YHLBLUG33TT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate this equipment.

**Radiation Exposure Statement:**

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (10mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.