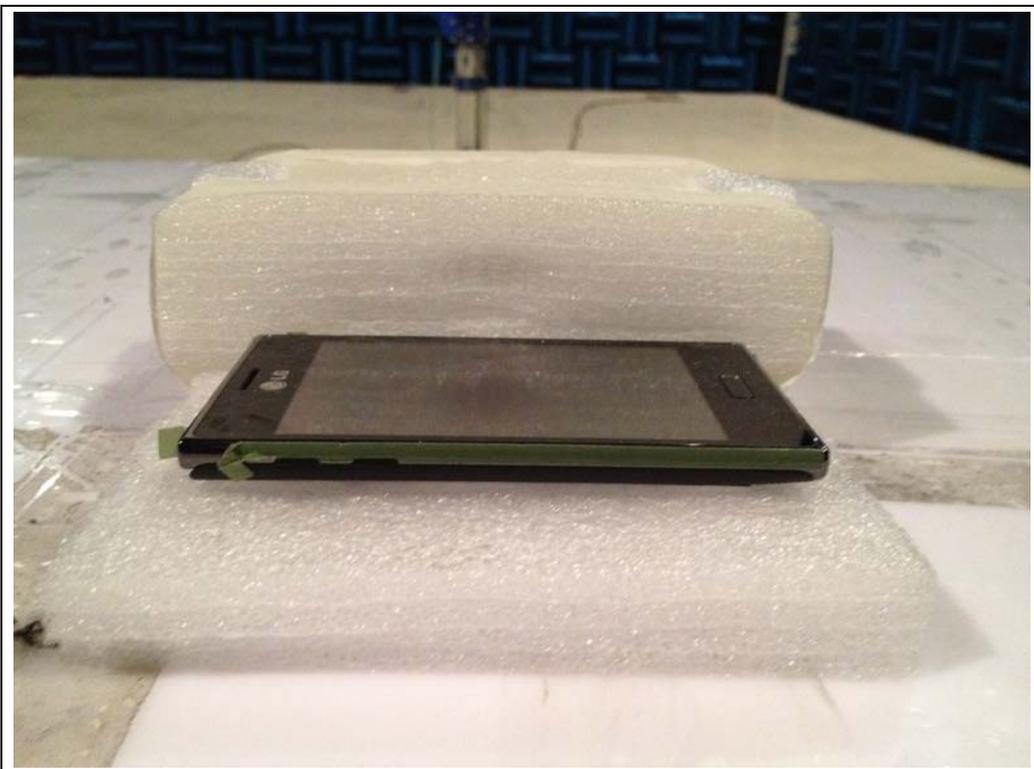# Test Setup photographs (DTS)
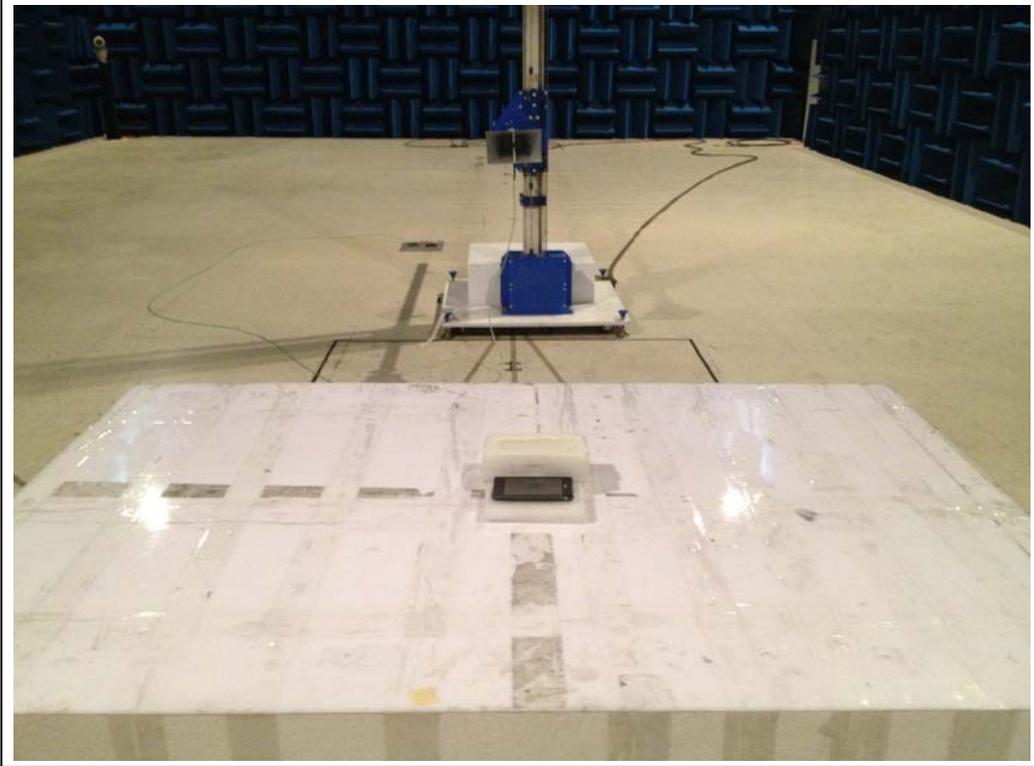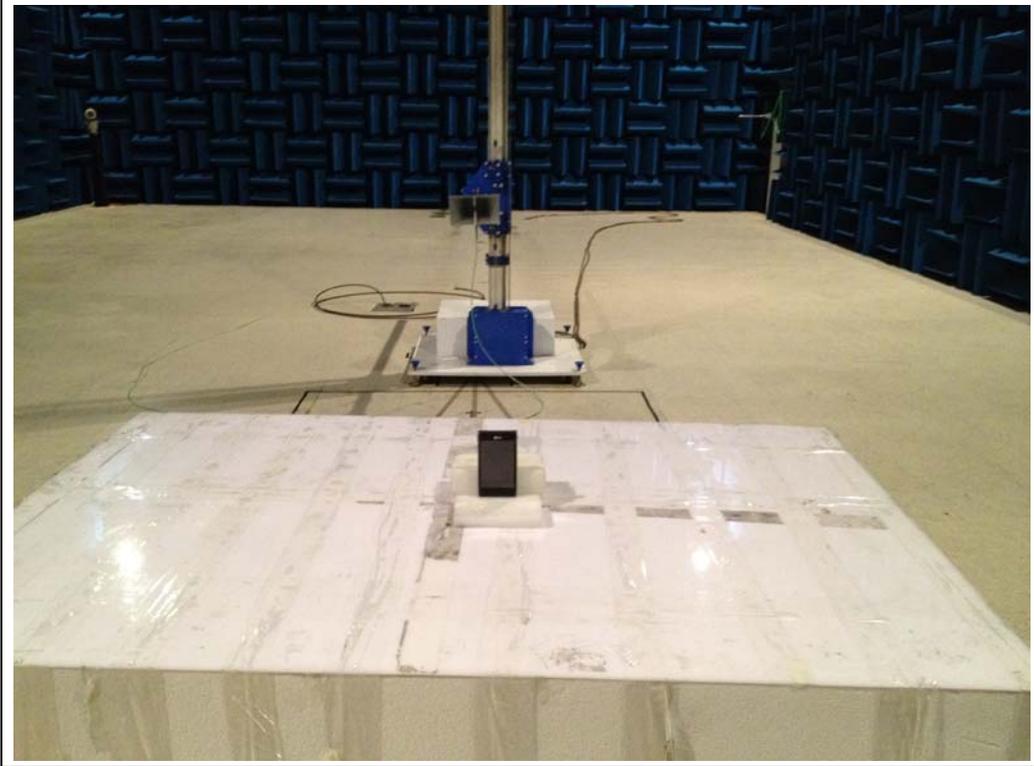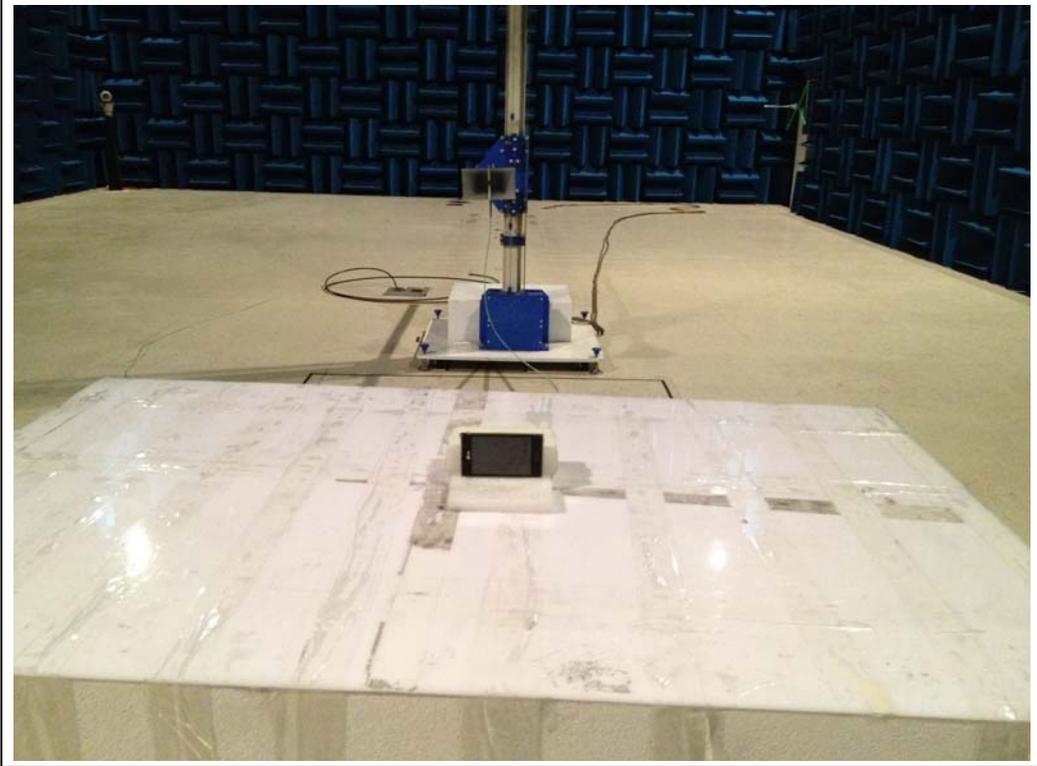
EUT Position: X-axis

Test Setup photographs (DTS)

EUT Position: Y-axis

Test Setup photographs (DTS)

EUT Position: Z-axis

Test Setup photographs (DTS)