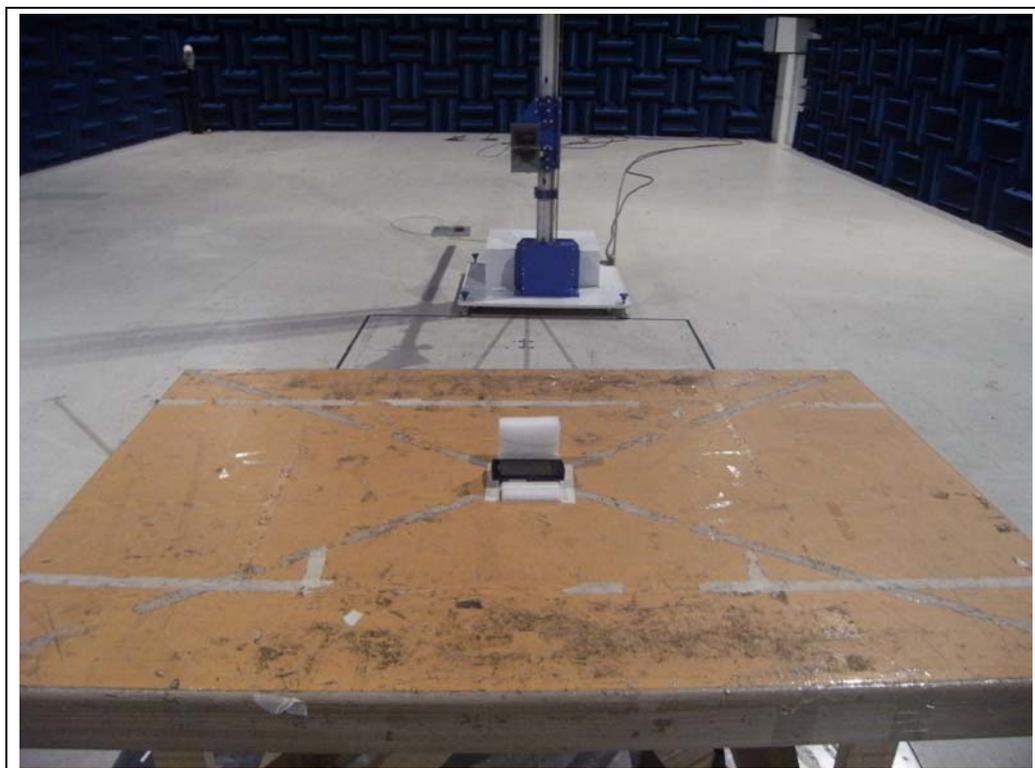# Test Setup photographs(DSS)

EUT Position: X-axis

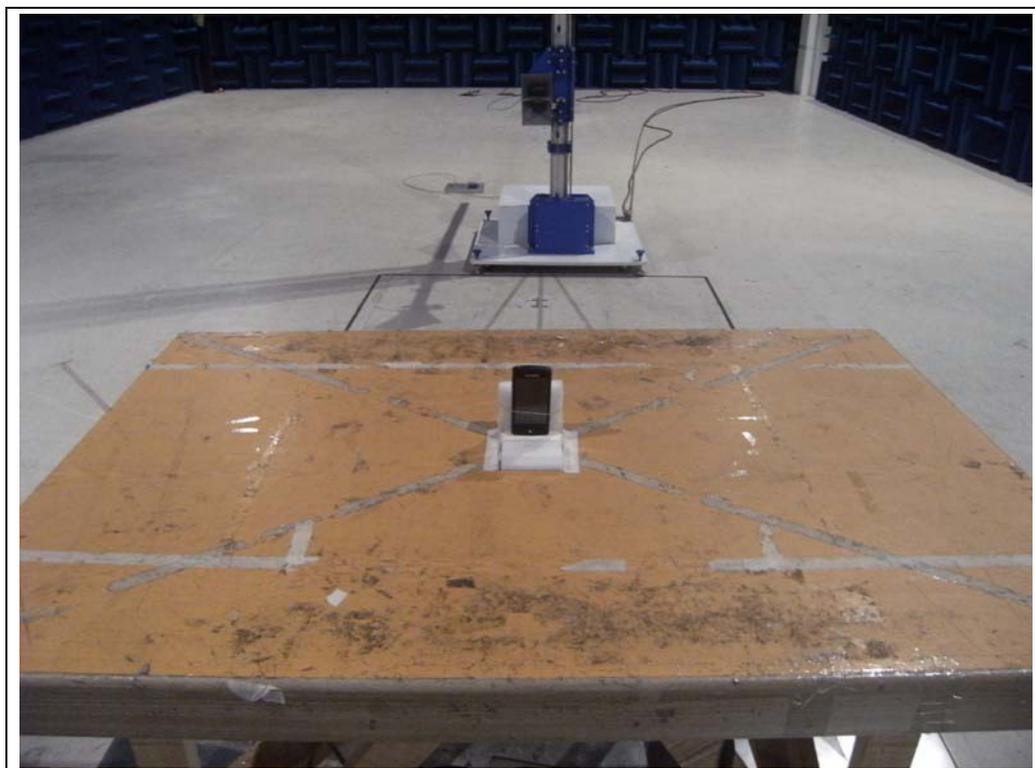# Test Setup photographs(DSS)

EUT Position: Y-axis

Test Setup photographs(DSS)
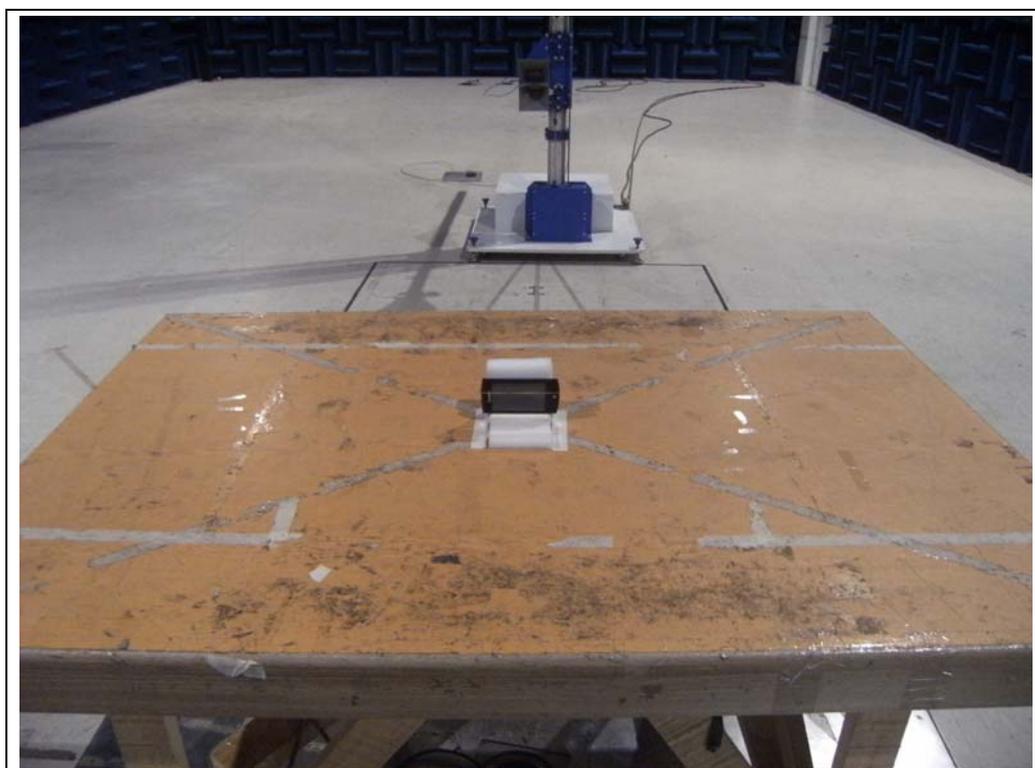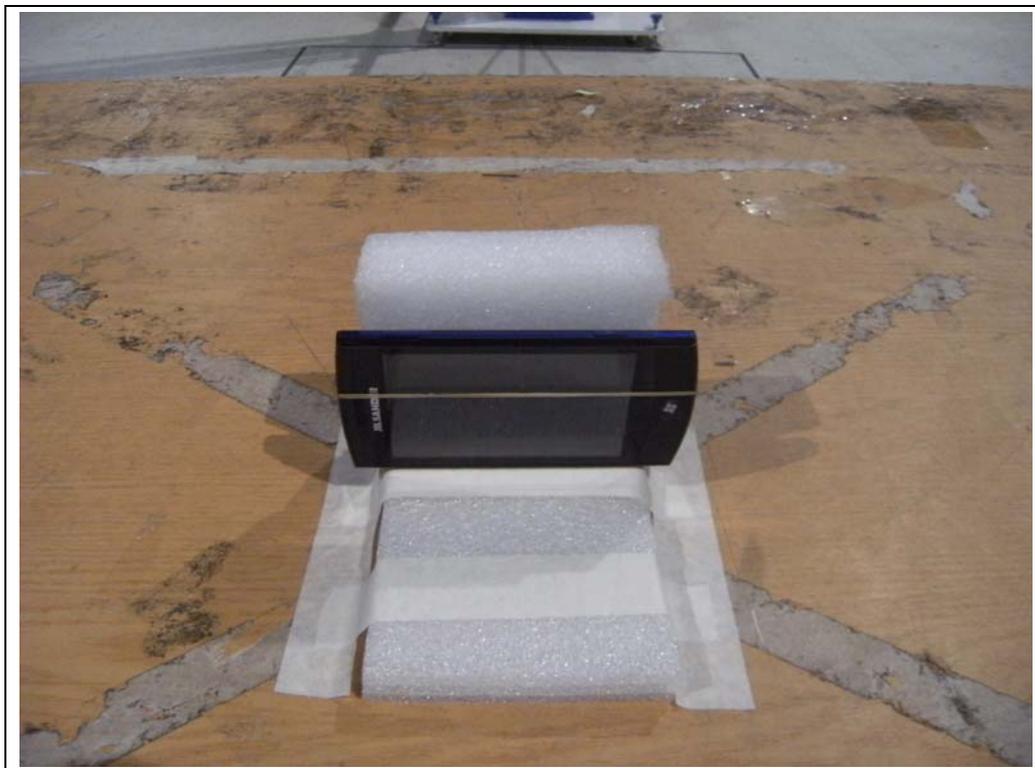
EUT Position: Z-axis

Test Setup photographs (DSS)