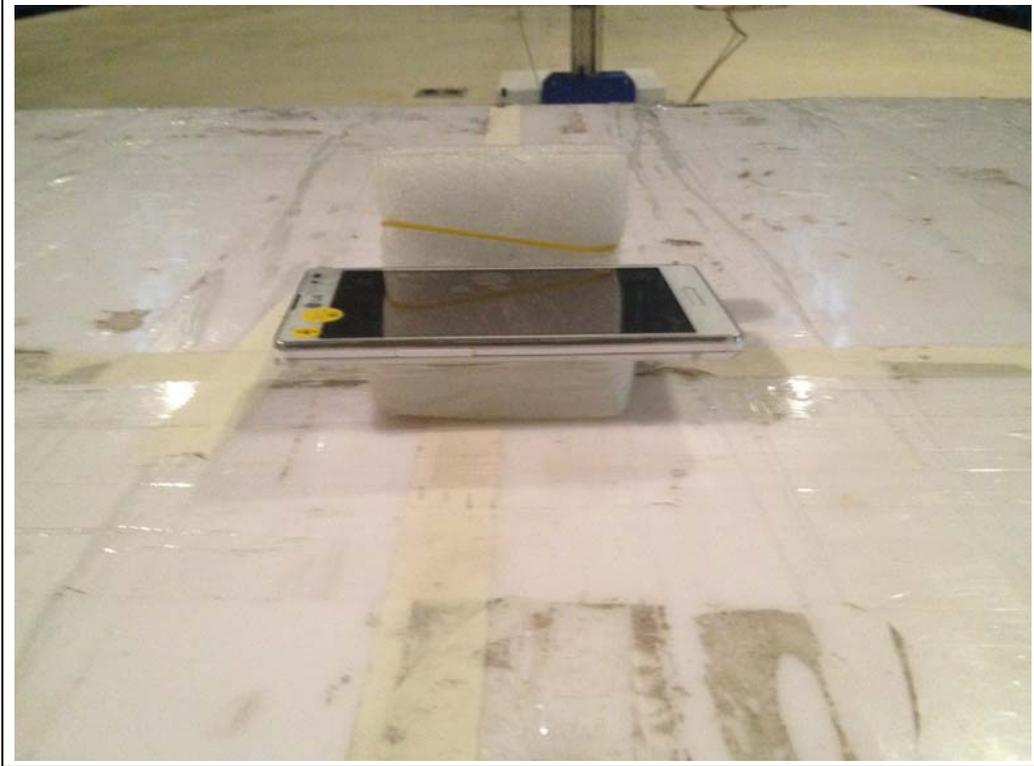# Test Setup photographs (PCE)

<u>EUT Position: X-axis</u>

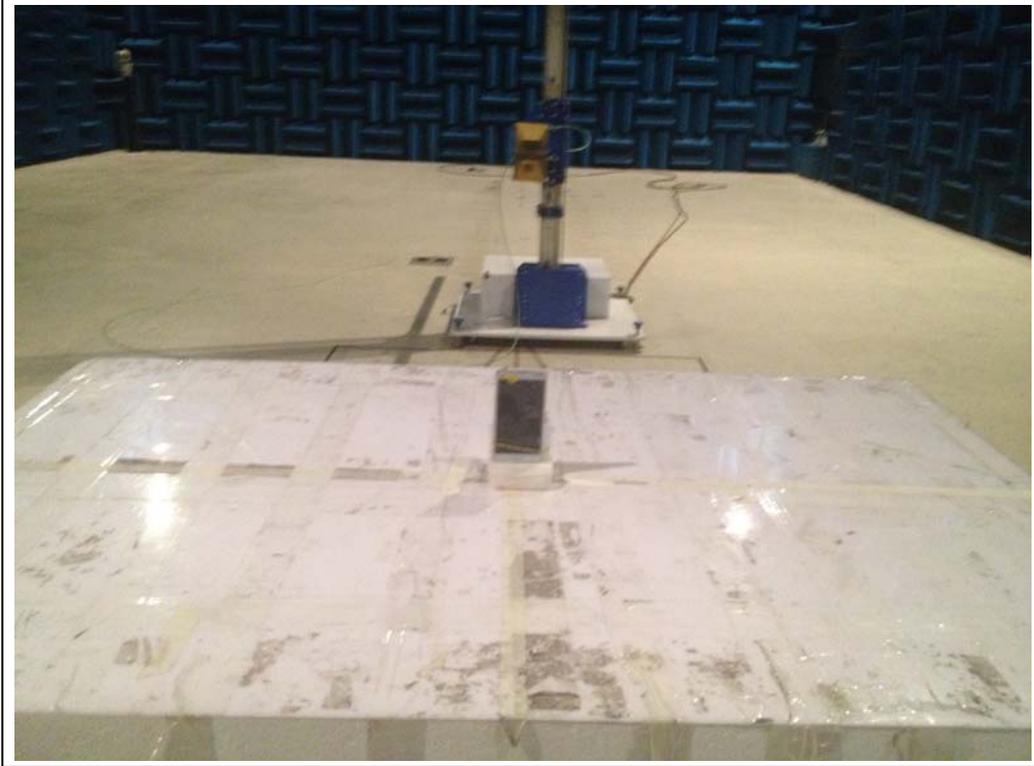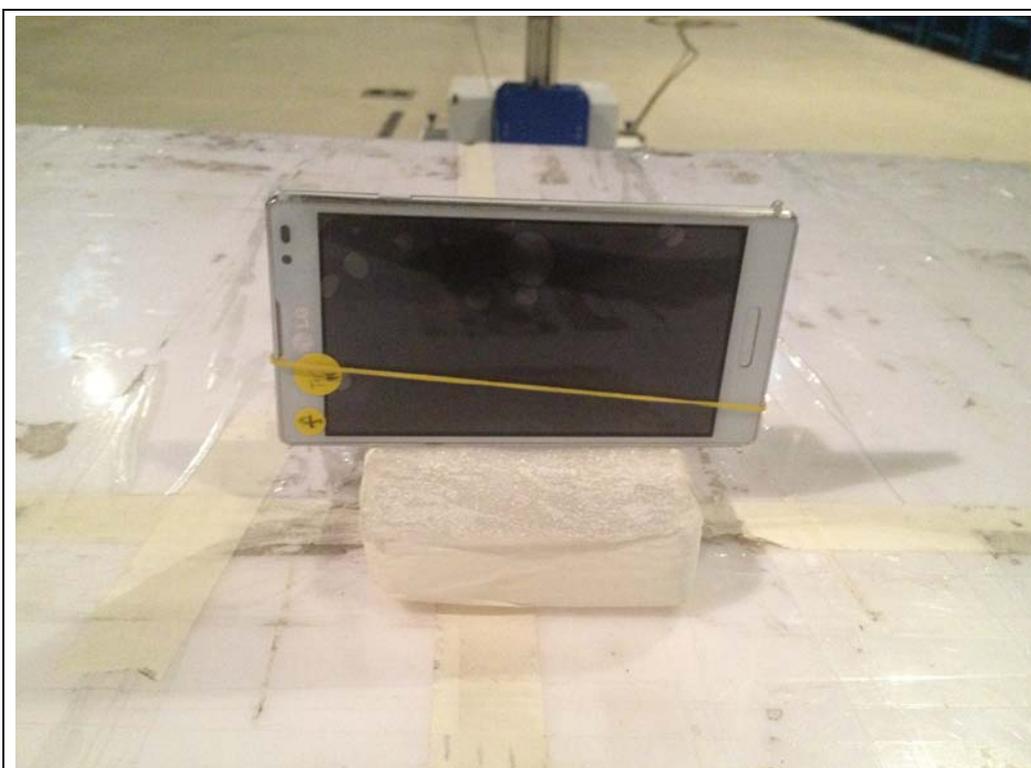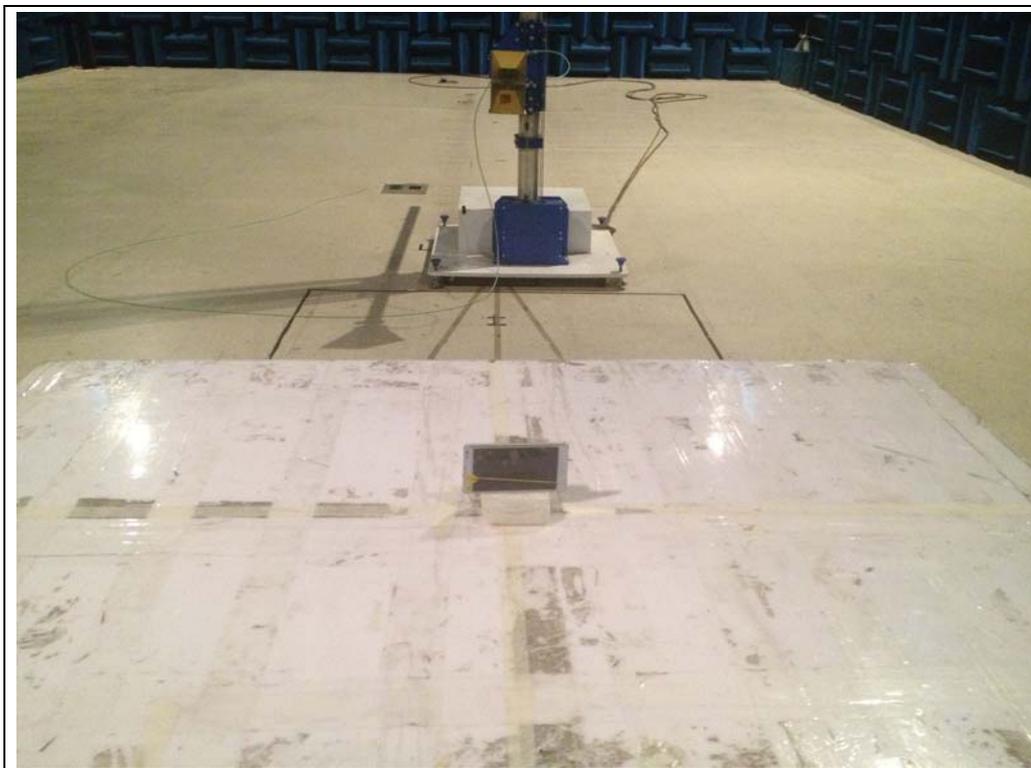# Test Setup photographs (PCE)

EUT Position: Y-axis

Test Setup photographs (PCE)

<u>EUT Position: Z-axis</u>

Test Setup photographs (PCE)