



ViVOpay VP3350 Integration Manual



80178501-001 Rev. B

17 March 2021

Copyright © 2021 ID TECH. All rights reserved.

ID TECH
10721 Walker Street

ID TECH
10721 Walker Street, Cypress, CA 90630-4720
Tel: (714) 761-6368 Fax (714) 761-8880
www.idtechproducts.com

Cypress, CA 90630 USA

This document, as well as the software and hardware described in it, is furnished under license and may be used or copied online in accordance with the terms of such license. The content of this document is furnished for information use only, is subject to change without notice, and should not be construed as a commitment by ID TECH. While every effort has been made to ensure the accuracy of the information provided, ID TECH assumes no responsibility or liability for any unintentional errors or inaccuracies that may appear in this document. Except as permitted by such license, no part of this publication may be reproduced or transmitted by electronic, mechanical, recording, or otherwise, or translated into any language form without the express written consent of ID TECH.

ID TECH and VIVOpay are trademarks or registered trademarks of ID TECH.

Warranty Disclaimer

The services and hardware are provided "as is" and "as-available" and the use of the services and hardware are at its own risk. ID TECH does not make, and hereby disclaims, any and all other express or implied warranties, including, but not limited to, warranties of merchantability, fitness for a particular purpose, title, and any warranties arising from a course of dealing, usage, or trade practice. ID TECH does not warrant that the services or hardware will be uninterrupted, error-free, or completely secure.

FCC warning statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The user manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter and must be installed to provide a separation distance of at least 20cm from all persons.

Innovation, Science and Economic Development Canada (ISED) statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:



1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique

Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cautions and Warnings

	Caution: Danger of Explosion if battery is incorrectly charged. Use only standard USB 5V power source. Device contains a lithium battery. Approved temperature range for storage: -20°C to +60°C. Disposal: Contact your local recycling center.
	Warning: Avoid close proximity to radio transmitters, which may reduce the capabilities of the reader.

Caution: Exposure to Radio Frequency Radiation

To comply with the Canadian RF exposure compliance requirements, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Attention: exposition au rayonnement radiofréquence

Pour se conformer aux exigences de conformité RF canadienne l'exposition, cet appareil et son antenne ne doivent pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur.

Internal Rechargeable Battery Warning

Danger: Do not attempt to replace the internal rechargeable lithium ion battery. Replacing the original battery with an incompatible type may result in an increased risk of personal injury or property damage due to explosion, excessive heat, or other risks. Do not attempt to disassemble or modify the battery pack. Attempting to do so can cause a harmful explosion or battery fluid leakage.

When disposing of the battery, comply with all relevant local ordinances or regulations. Do not dispose of the battery pack in municipal waste. Dispose used batteries according to the instructions.

The battery pack contains a small amount of harmful substances.

To avoid injury:

- Keep the battery pack away from open flames or other heat sources.
- Do not expose the batter pack to water, rain, or other corrosive liquids.
- Do not leave the battery in an environment with extremely low air pressure. It may result in an explosion or the leakage of flammable liquid or gas from the battery.

To extend battery life, we recommend charging the battery to at least 30% to 50% capacity each time and recharging it every three months to prevent over discharge.

Table of Contents

1. INTRODUCTION.....	5
2. MAJOR VP3350 FEATURES.....	5
2.1. Contactless NFC Features and Brand Certifications	5
2.2. Other Agency Approvals and Compliances.....	6
2.3. Operation and Storage: Environmental Limits	6
2.4. Power Consumption	6
2.5. 24-Hour Device Reboot	6
3. VP3350 CONNECTORS AND INTERFACES.....	7
4. BLUETOOTH PAIRING INSTRUCTIONS.....	8
4.1. Battery Charging Instructions	9
4.2. VP3350 LED and Sound State Indicators	9
4.3. Tamper and Failed Self-Check Indicators	10
4.4. iOS Connectivity: BLE and VP3350.....	10
5. ID TECH UNIVERSAL SDK.....	10
5.1. Updating VP3350 Firmware.....	11
6. UNIVERSAL SDK DEMO APP	12
6.1. Using the Demo Application	12
7. VP3350 LOW-LEVEL COMMANDS.....	13
7.1. Activate Transaction Command (02-40).....	13
7.2. Set CA Public Key (D0-03)	14
7.3. Get Processor Type (09-02)	15
7.4. Get Main Firmware Version (09-03).....	16
7.5. Get Hardware Information (09-14).....	16
7.6. Get Module Version Information (09-20).....	18
7.7. Get Serial Number (12-01).....	19
7.8. Contact Set ICS Identification (60-16).....	20
7.9. Contact Set Terminal Data (60-06)	21
7.10. Contact Set Application Data (60-03)	26
8. BASIC CARD READING DATA FLOW.....	29
8.1. Example: Reading a Card via Firmware Commands	29
8.2. Example: Reading a Card via Universal SDK Methods	29
8.3. Example: Reading a Card via the USDK Demo App.....	29
9. PERIODIC INSPECTION INSTRUCTIONS	29
10. DECOMMISSIONING PCI-CERTIFIED DEVICES	30
11. TROUBLESHOOTING	31
11.1. Tamper Detection Codes	32
12. FOR MORE INFORMATION.....	33

1. Introduction

The ViVOPay VP3350 is ID TECH's latest PCI 6.X SRED certified mobile reader. The VP3350 supports Magstripe, EMV contact and contactless using either USB-C, Lightning, and/or Bluetooth connections.

The VP3350's compact form factor and Bluetooth interface make it ideal for mobile applications where smart card reading is required as well as incorporated into a case or stand associated with a countertop POS terminal. As a mobile reader, VP3350 works in conjunction with Android as well as iOS phones and tablets via BLE. The VP3350 is designed to be compatible with a wide range of third-party payment applications, and the ID TECH Universal SDK (described [further below](#)) is available for developing applications that communicate with VP3350.

Contact your acquirer, gateway, or POS partner for instructions on setting up and pairing the VP3350 to a compatible payment application and associated host device.

2. Major VP3350 Features

- Communicates via Bluetooth BLE (Bluetooth Low Energy)
- Bluetooth communication supports iOS and Android platforms
- Communicates to iOS host devices via Lightning connector
- USB-C connector supports battery charging or communication with Android or Windows host systems
- Rechargeable battery, no external power necessary
- Supports pass-through charging
- ICC: EMV Level 1 Contact certified and integrated ID TECH's EMV L2 Gen 2 Common Contact kernel
- Front-facing contactless transaction support via Near Field Communication (NFC)
- Magstripe reading
- LED status indicator
- Audio feedback
- Field-upgradable firmware
- Low power consumption when reader is in standby mode
- Compact and ergonomic design to integrate with a variety of mobile devices
- Supports Triple DES, AES, and TransArmor TDES encryption with DUKPT key management
- Supports TransArmor RSA
- Supports 16 contact and 16 contactless AIDs, for a total of 32 AIDs

2.1. Contactless NFC Features and Brand Certifications

- ISO 14443 Type A&B
- ISO 18092 (P2P)
- MasterCard® MChip (Formerly PayPass)
- Visa payWave/VCPS
- Visa IRWIN
- Discover® DPAS
- American Express® ExpressPay
- Interac Flash
- MIFARE – native support
- Apple Pay, Apple VAS, Apple ECP2
- Samsung Pay NFC
- Android Pay
- Google Pay / Softcard Smart Tap 2.1

- JCB Contactless
- UnionPay International

2.2. Other Agency Approvals and Compliances

- CE (EN55022/EN55024, Class- B)
- FCC (Part 15, Class-B)
- RoHS (DIRECTIVE 2011/65/EU)
- UL
- REACH
- EMV Contact L1&L2
- EMV Contactless L1
- TQM
- PCI PTS 6.X SRED

2.3. Operation and Storage: Environmental Limits

Item	Specification	Note
Operating Temperature	0 °C to 55 °C or 32°F to 131°F	Non-condensing. Product operation temperature is limited to this range due to constraints of the Li-Battery specification.
Storage Temperature	-20 °C to 60 °C or -4°F to 140°F	Non-condensing. Product storage temperature is limited to this range due to constraints of the Li-Battery specification.
Operating Humidity	Up to 95%	Non-condensing.
Storage Humidity	Up to 95%	Non-condensing.

2.4. Power Consumption

- Minimum 800 MSR transaction per charge (with 30 second interval)
- Minimum 400 contactless transactions per charge (with 30 second interval)
- Minimum 500 contact transactions per charge (with 30 second interval)

2.5. 24-Hour Device Reboot

Per PCI Requirements, this device reboots every 24 hours. Please contact your device integrator if you need to check the reboot time for your unit.

3. VP3350 Connectors and Interfaces

The VP3350 is designed to work Windows, Android, and iOS via a physical USB C, Lightning, USB-A to micro-USB connectors, and Bluetooth communication.

- USB C communicates with popular Android mobile phones and tablets.
- Lightning connectors communicate with popular mobile iOS devices.
- Bluetooth connection supports both Android and iOS.
- USB-A to micro-USB allows communication to an Android or Windows host or allows for pass-through charging to the host device.

When communicating over USB, the VP3350's default emulation mode is USB HID; the unit can also emulate a USB HID-KB interface. Additionally, Bluetooth technology allows the VP3350 to communicate over BT-KB emulation.

4. Bluetooth Pairing Instructions

In addition to the following instructions, see the section on [iOS Connectivity](#) for more information on using an iPad or iPhone in conjunction with the VP3350.

1. Enable the Bluetooth device search function on the host device (smart phone or tablet).
2. Make sure the VP3350 is charged or connected to a power source via USB.
 - When connected to a power source, the VP3350 automatically activates Bluetooth.
3. When not connected to a power source, press the VP3350's power button to automatically activate Bluetooth.
4. Find a Bluetooth device named **IDTECH-VP3350-XXXXXX** on the host smart phone or tablet and select **Pair**.
5. Enter the password for pairing. The default password is **123456**.
6. Follow the payment transaction instructions provided by a compatible payment application maker to complete a transaction.

The VP3350 will remain connected via Bluetooth to the host device indefinitely when powered via the USB cable. If the unit is operating on battery power, it will go to sleep after 30 seconds of idling to extend battery life. To perform a transaction again, press the power button to re-establish the Bluetooth connection.

When connecting to an iOS device, please install a compatible payment application and follow the instructions provided by that application's maker. See [iOS Connectivity: BLE and VP3350](#) below for more information.

4.1. Battery Charging Instructions









































The VP3350 is powered by a lithium-ion polymer battery and is delivered in a partially charged state. Be sure to fully charge the VP3350 before using it for the first time. Allow four to six hours for the initial charge.

Use a standard USB to USB-C cable to charge the unit. An LED battery indicator displays the current battery charging status.

Warning: Do not use “fast chargers” with VP3350 readers. Only use a standard USB to USB-C cable.

4.2. VP3350 LED and Sound State Indicators

The VP3350 uses the following LEDs and sounds to indicate various statuses, including power management, Bluetooth, transactions, and security.

Device State	LED1	LED2	LED3	LED4	Sound
Battery charging full	 on	 on	 on	 on	None
Battery power 20%	 on	 off	 off	 off	None
Bluetooth searching/Pairing	 blink	 blink	 blink	 blink	None
Bluetooth connected	 on	 on	 on	 on	Unit beeps once
Unit Ready	 blink	 off	 off	 off	None
Transaction successful	 blink	 blink	 blink	 blink	Unit beeps once
Transaction failed	 off	 off	 off	 off	Unit beeps twice
Unit has been tampered	 blink	 blink	 blink	 blink	Unit beeps
Device deactivated	  blink	  blink	  blink	  blink	Unit beeps

4.3. Tamper and Failed Self-Check Indicators

The VP3350 displays the following indicators when it has been tampered or has any of the other following internal issues, such as an expired certificate, missing key, or similar fault discovered during a self-check.



Indicator	Tampered Status	Other Issue Status
Front Four LEDs	All LEDs blink red	All LEDs blink red
Buzzer	Alarm tone	Alarm tone

4.4. iOS Connectivity: BLE and VP3350

The VP3350 uses Bluetooth 5.0, also known as Bluetooth BLE (Bluetooth Low Energy). Unlike previous versions of Bluetooth, BLE **does not require** users to first pair their devices through the Bluetooth Settings in Apple iOS. If a payment application provider has enabled BLE scanning in their application, Apple iOS scans and locates all BLE devices in range to automatically connect with the VP3350.

It is critical to note that if the VP3350 is paired via the iOS Settings page, it will display as a connected device but not function with a payment app.

Unlike other operating systems that can detect or specify a BLE device by its MAC address, Apple does NOT allow users to specify a BLE device by MAC address for security reasons. Instead, after a device is selected by its "friendly" name (see the next paragraph), the Apple iOS calculates a unique identifier to allow any that device to make further connections directly.

The VP3350 has a default friendly name of **IDTECH-VP3350-XXXXX**. This is the default name the ID TECH Universal SDK uses to connect to the first VP3350 it encounters if no other friendly name is set in the SDK, or when the iOS-generated device identifier is not provided. See links given near the end of this document for information about the Universal SDK.

Note: The Universal SDK is primarily of interest to developers. If an application provider or POS software partner has already provided software to use with the VP3350, you do not need to obtain the SDK.

5. ID TECH Universal SDK

By virtue of its EMV L2 kernel, VP3350 is designed to be compatible with a wide range of third-party payment applications. ID TECH offers a Universal SDK (available for iOS, Android, or Windows) to

enable rapid application development using VP3350 as the target device. The languages supported include Objective C (on iOS), Java (on Android), and C# (on Windows). The Universal SDK includes rich, powerful libraries that make sending commands to the VP3350 comparatively easy while greatly facilitating debugging and event handling.

To obtain the Universal SDK free of charge, visit ID TECH's VP3350 product page and select the version of the SDK that applies to your desired host platform (Android, iOS, Linux, MacOS, or Windows).

Normally, development of applications that take advantage of VP3350's capabilities can be done in a high-level language like C# or Java (using convenience objects and data structures defined in the Universal SDK), obviating the need to send byte commands directly. Nevertheless, it is possible to communicate with the device at a low level if necessary. For a command reference for VP3350, request the *NEO Interface Developers Guide* (IDG), P/N 80139403-001. This document includes not only low level (firmware) commands but error codes, response codes, and information on various default settings.

5.1. Updating VP3350 Firmware

ID TECH strongly recommends updating firmware via the Universal SDK. Consult the Universal SDK Guide for your desired platform (included in the ZIP file downloaded from the VP3350 product page) for integration details.

Note: Firmware downloads must be done via a USB-C to USB-A cable or a USB OTG cable for mobile Android devices; VP3350 readers do not support firmware over Bluetooth.


6. Universal SDK Demo App

The Universal SDK comes with a rich, fully featured demo app that allows users to run the VP3350 in USB mode. Visit the [VP3350 product page](#) to download the Universal SDK Demo app as a standalone executable, separate from the SDK; the full SDK is not required to use the demo. Be sure to check out the [Universal Demo QuickStart Guide](#) for more detailed instructions about using the Universal SDK Demo app.

6.1. Using the Demo Application

Follow the steps below to run the Universal SDK Demo app on Windows:

1. Plug the VP3350 into the host device with a USB-to-micro-USB cable (not included).
2. Double-click the **UniversalSDKDemo.exe** file and allow a few seconds for the main window to appear (see illustration below).

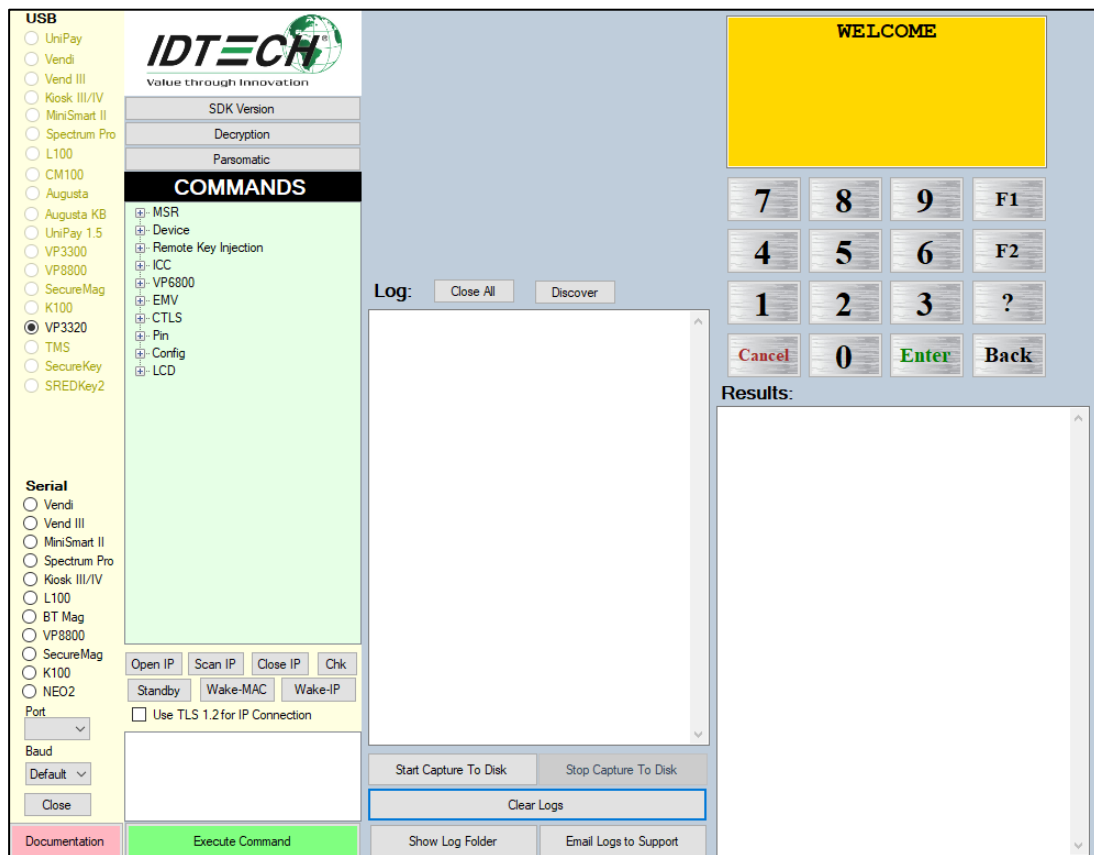

The Universal SDK Demo app displays VP3350's available commands in a command tree, as shown above. Single-click on a command to populate the center panel of the window with optional settings relevant to the command (for example, "Amount" and "Start EMV Additional Tags" above). In some cases, text fields appear, allowing users to enter custom values.

To execute a command, double-click it in the command tree (or use the **Execute Command** button at the bottom of the window). The command executes in real time and a data trace appears automatically in the center and/or right-hand panels. Use the Clear Logs button to clear both panels.

7. VP3350 Low-Level Commands

The following are commonly-used commands for the VP3350. For a full list of available commands, contact your ID TECH representative for the NEO 2 Interface Developer's Guide.

7.1. Activate Transaction Command (02-40)

The **Activate Transaction** command begins a contactless EMV or contactless MagStripe Card transaction.

Note: While an **Activate** command is in progress, readers only accepts a **Cancel** or **Stop** command. Do not send other commands until **Activate Transaction** has completed, because the reader will interpret these as a **Cancel Transaction** command.

To control the behavior, use the DFEF37 and DFEF3C tags:

Tag	Length	Description	Example
DF EF 37	01	Define the type of interface to be activated with 02-40. Interface selection: <ul style="list-style-type: none"> • Bit 0: MSR • Bit 1: Contactless • Bit 2: Contact 	DF EF 37 01 07 07 = 0000 0111 This activates transaction for all 3 interfaces.
DF EF 3C	03	Fallback support and Timeout value for waiting for the next command (mainly to support EMV workflow). Byte 1: Fallback support <ul style="list-style-type: none"> • 0x00: not support fallback • 0x01: support fallback Byte 2~3: Timeout for next command (Unit: Sec) (Hex format) <ul style="list-style-type: none"> • 00 0A = 10s • 01 00 = 256s 	DF EF 3C 03 01 00 60 Fallback is supported, and the timeout is set to 96 seconds before the transaction times out.

Example:

5669564f746563683200024000221e9c01009f02060000000001009f0306000000000000dfeff370107dfeff3c0301006018d1

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	02h	40h			See Data Format below		

Activate Transaction Command Frame Data Format

Data Item	Length (bytes)	Description
Timeout	1	Time in seconds that the reader waits for a card to be presented before timing out and returning an Error response. The reader will continue to poll for this amount of time if no card is found. Note that if a card is found, the transaction may not complete within the timeout period. This field must be present in the Activate command. Format: Binary
TLV Data	varies	See Activate Command TLVs in the <i>NEO 2 IDG</i> .

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOTech2\0	02h	See Status Code Table			See Response Frame Data Format		

Note: The information above omits many command details, particularly TLV information. See the *NEO 2 Interface Developer's Guide* (available from your ID TECH representative) for the full **Activate Transaction (02-40)** description.

7.2. Set CA Public Key (D0-03)

The **Set CA Public Key** command adds a new key to the reader.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 – 18	Byte 19	Bytes 19-n	Byte n+1	Byte n+2
Header Tag & Protocol Version	Cmd	Sub Cmd	Length (MSB)	Length (LSB)	RID (5 bytes)	Key Index (1 byte)	Key Data	CRC (LSB)	CRC (MSB)
ViVOTech2\0	D0h	03h	varies	varies	varies	varies	See below	Varies	Varies

Key Data is as follows: (all binary)

Byte	Name	Length (bytes)	Description
0	Hash Algorithm	1	The only algorithm supported is SHA-1. The value is set to 01h
1	Public Key Algorithm	1	The encryption algorithm in which this key is used. Currently support only one type: RSA. The value is set to 01h
3-22	Checksum/Hash	20	Checksum which is calculated using SHA-1 over the following fields: RID & KeyIndex & Modulus & Exponent where the exponent is either one byte or 3 bytes (although we store it in a 4-byte field)
23-26	Public Key Exponent	4	Actually, the real length of the exponent is either one byte or 3 bytes. It can have two values: 3, or 65537.
27-28	Modulus Length	2	Indicates the length of the next field, MSB followed by LSB.
29-n	Modulus	Variable	This is the modulus field of the public key. Its length is specified in the field above.

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol Version	Cmd	status	Length (MSB)	Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	D0h	See Key Manager status codes	00h	00h	Calculated	Calculated

7.3. Get Processor Type (09-02)

The **Get Processor Type** command returns a processor type TLV.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol	Command	Sub-Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	09h	02	00h	00h		

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 ... Byte 13+n	Byte 14+n	Byte 15+n
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	09h	See Status Code Table			See below		

The **Get Processor Type** sub-command returns a TLV string as follows:

- **Tag:** 0xDF61
- **Length:** 0x02
- **Value:** a field representing the processor type.

The following types of processors may be identified in the **Value** field:

Processor Type (hex values)	Description
45 00	ARM7/ LPC21xx
4D 00	ARM Cortex-M4/ K21 Family
4E 00	ARM Cortex-M4/ K81 Family

The following example shows the command and response.

Command: Get Processor Type: 56 69 56 4F 74 65 63 68 32 00 09 02 00 00 F0 F9

Response: 56 69 56 4F 74 65 63 68 32 00 09 00 00 05 DF 61 02 4D 00 AC 4D

7.4. Get Main Firmware Version (09-03)

The **Get Main Firmware Version** command returns main firmware version TLV.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol	Command	Sub-Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVotech2\0	09h	03	00h	00h		

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 0-9
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVotech2\0	09h	See Status Code Table			See below		

The Get Main Firmware Version sub-command returns a TLV string as follows:

- **Tag:** 0xDF62
- **Length:** Varies
- **Value:** Varies field representing the main firmware version.

The following example shows the command and response.

Command: Get Main Firmware Version: 56 69 56 4F 74 65 63 68 32 00 09 03 00 00 C0 CE

Response: 56 69 56 4F 74 65 63 68 32 00 09 00 00 14 DF 62 11 43 72 61 6E 65 56 65 6E 64 69 5F 31 2E 30 2E 30 00 E1 5D

7.5. Get Hardware Information (09-14)

The **Get Hardware Information** command retrieves information about the reader's hardware.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol	Command	Sub-Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVotech2\0	09h	14h	00h	00h		

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 ... Byte 13+n	Byte 14+n	Byte 15+n
Header Tag &	Command	Status Code	Data	Data	Data	CRC	CRC

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 ... Byte 13+n	Byte 14+n	Byte 15+n
Protocol			Length (MSB)	Length (LSB)		(MSB)	(LSB)
ViVOtech2\0	09h	See Status Code Table			See below		

The format for hardware module version information returned is “human readable,” consisting of fields that are separated by commas, and lines separated by carriage return and line feed characters:

```
<module type>,<module name><CRLF>
<chip version>
```

The following example shows the hardware version information subcommand and the information being returned (in ASCII format).

Command: Get Hardware Version Information: 56 69 56 4F 74 65 63 68 32 00 09 14 00 00 33 08

Response: For example, a VP5300 returns

5669564f7465636832000900001548572c205650353330300d0a4b383146205265763477d5

In ASCII: HW, VP5300 <CR><LF>K81F.Rev4

7.6. Get Module Version Information (09-20)

The **Get Module Version Information** command retrieves the reader's module information.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol	Command	Sub-Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOTech2\0	09h	20h	00h	00h		

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte12	Byte 13	Byte 14 ... Byte 13+n	Byte 14+n	Byte 15+n
Header Tag & Protocol	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOTech2\0	09h	See Status Code Table			See below		

If there is an error, the reader returns the appropriate status code with an empty data field (Data Length = 0000h).

The format for module version information returned is "human readable," consisting of fields separated by commas and lines separated by carriage return and line feed characters:

```
<module type>,<module name and spec. version>,[<implementation version>],<CRLF>
```

The following example shows the module version information subcommand and the information being returned (in ASCII format).

Command: Get Module Version Information: 56 69 56 4F 74 65 63 68 32 00 09 20 00 00 56 11

Response:

```
56 69 56 4F 74 65 63 68 32 00 09 00 01 2A 46 57 2C 56 65 6E 64 69 20
56 31 2E 30 30 2C 2C 0D 0A 20 46 53 26 44 42 20 56 31 2E 30 30 2C 2C
0D 0A 20 43 4C 20 41 70 70 53 65 6C 2C 50 50 53 45 20 4D 6F 64 75 6C
65 2C 20 76 31 2E 30 30 2C 2C 0D 0A 20 43 4C 20 41 49 44 2C 4D 61 73
74 65 72 43 61 72 64 20 50 61 79 50 61 73 73 20 4D 2F 43 68 69 70 20
76 33 2E 30 2E 32 2C 20 56 65 6E 64 69 20 76 31 2E 30 2E 30 2C 2C 0D
0A 20 43 4C 20 41 49 44 2C 56 69 73 61 20 56 43 50 53 20 32 2E 31 2E
33 2C 20 76 30 2E 39 39 2C 2C 0D 0A 20 43 4C 20 41 49 44 2C 41 6D 65
78 20 45 78 70 72 65 73 73 50 61 79 20 33 2E 30 2C 20 76 31 2E 30 30
2C 2C 0D 0A 20 43 4C 20 41 49 44 2C 44 69 73 63 6F 76 65 72 20 44 50
41 53 20 31 2E 30 20 5A 69 70 20 33 2E 31 2E 32 2C 20 76 31 2E 30 30
2C 2C 0D 0A 20 43 4C 20 41 49 44 2C 49 6E 74 65 72 61 63 20 31 2E 35
2C 20 76 31 2E 30 30 2C 2C 0D 0A 20 43 4C 20 4C 31 2C 45 4D 56 20 34
2E 33 20 4C 31 2C 20 76 31 2E 30 30 00 8C 33
```

ASCII translation of the data field:

FW,Vendi V1.00,,<CR><LF>

FS&DB V1.00,,<CR><LF>

CL AppSel,PPSE Module, v1.00,,<CR><LF>

CL AID,MasterCard PayPass M/Chip v3.0.2, Vendi v1.0.0,,<CR><LF>

CL AID,Visa VCPS 2.1.3, v0.99,,<CR><LF>

CL AID,Amex ExpressPay 3.0, v1.00,,<CR><LF>

CL AID,Discover DPAS 1.0 Zip 3.1.2, v1.00,,<CR><LF>

CL AID,Interac 1.5, v1.00,,<CR><LF>

CL L1,EMV 4.3 L1, v1.00<NUL>

7.7. Get Serial Number (12-01)

The **Get Serial Number** command instructs the VIVOpay reader to return the 15-digit serial number stored in its non-volatile memory. If a serial number has not been previously set in the reader, this command fails with a **Command Not Allowed** error status. If the command frame is not valid, the reader returns an error response frame.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15
Header Tag & Protocol Version	Command	Sub-Command	Data Length (MSB)	Data Length (LSB)	CRC (LSB)	CRC (MSB)
ViVOtech2\0	12h	01h	00h	0Fh		

The serial number will be returned tail-padded with **0x00** to a length of 15.

Example:

TX: 56 69 56 4F 74 65 63 68 32 00 12 01 00 00 18 A5

RX: 56 69 56 4F 74 65 63 68 32 00 12 00 00 0F 36 33 30 5A 30 30 30 30 30 31 00 00 00 00 94 BC

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	12h	See Status Code Table	00h	0Fh	15-digit Serial Number		

7.8. Contact Set ICS Identification (60-16)

The **Contact Set ICS Identification** command sets the reader's ICS terminal configuration number (Contact Command EMV L2 includes 4 approved configurations of certification: 1C, 2C, 3C, or 4C).

This command affects the **Contact Set Terminal Data (60-06)** command. Generally, readers call 60-16 first, then 60-06.

Examples:

Set 3C configuration: 5669564f746563683200601600010392ed

Reader responds with: 5669564f746563683200600000003d35 (Success)

Now set terminal data (TLVs) with config values appropriate to 3C:

5669564f746563683200600600c818005f3601029f1a0208409f3501259f330360d8
c89f40056000f050019f1e085465726d696e616c9f150212349f160f303030303030
3030303030303030309f1c0838373635343332319f4e2231303732312057616c6b65
722053742e20437970726573732c204341202c5553412edf260101df1008656e6672
65737a68df110101df270100dfee150101dfee160100dfee170107dfee180180dfee
1e08f0dc24f0c20e1400dfee1f0180dfee1b083030303135313030dfee20013cdfee
21010adfee2203323c3caa88

Reader responds with: 5669564f746563683200600000003d35 (Success)

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVotech2\0	60h	16h	00h	01h	ICS Identification		

ICS Identification:

0x01 → Identification 1C

0x02 → Identification 2C (Default)

0x03 → Identification 3C

0x04 → Identification 4C

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVotech2\0	60h	See Status Code Table	00	00			

7.9. Contact Set Terminal Data (60-06)

The **Contact Set Terminal Data** command creates new terminal data according to the TLVs passed in. Terminal data is mandatory and seldom changes. It represents configuration data that usually gets set one time in pre-production and never changes after.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	60h	06h			Data Objects		

Data Objects: <TagCounterL><TagCounterH><TLV1><TLV2>...<TLVn>.

Where: <TagCounterL><TagCounterH>: the Number of <TLV> tags.

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVOtech2\0	60h	See Status Code Table			See Response Frame Data Format		

Note:

If a <TLV> format was bad, the response status code is **0x05**. If flash error, the response status code is **0x62**.

Terminal Data List Example

Data ID	Tag	Value name	Length (Byte)	Data
1	5F36	Transaction currency exponent	1	02
2	9F1A	Terminal county code	2	08 40
3	9F35	Terminal type	1	21
4	9F33	Terminal capability	3	60 28 C8
5	9F40	Additional terminal capability	5	F0 00 F0 A0 01
6	9F1E	IFD serial number	8	54 65 72 6D 69 6E 61 6C
7	9F15	Merchant category code	2	12 34
8	9F16	Merchant identifier	15	30 30 30 30 30 30 30 30 30 30 30 30 30 30 30
9	9F1C	Terminal identification	8	38 37 36 35 34 33 32 31
10	9F4E	Merchant name and location	<=64	31 30 37 32 31 20 57 61 6C 6B 65 72 20 53 74 2E 20 43 79 70 72 65 73 73 2C 20 43 41 20 2C 55 53 41 2E
11	DF26	Terminal supports CRL	1	01
12	DF10	Language	Var. up to 128	65 6E 66 72 65 73 7A 68
13	DF11	Support transaction log	1	00
14	DF27	support exception file	1	00
15	DFEE15	Terminal support ASI	1	01
16	DFEE16	Terminal encrypt mode	1	00
17	DFEE17	Terminal entry mode for ICC	1	07
18	DFEE18	Terminal encrypt mode for MSR	1	80
19	DFEE1E	Contact terminal configuration	8	D0 DC 20 D0 C4 1E 16 00
20	DFEE1F	Issuer script limit	1	80
21	DFEE1B	ARC define	8	30 30 30 31 35 31 30 30
22	DFEE20	ICC power on detect waiting time	1	3C
23	DFEE21	ICC L1 waiting time	1	0A
24	DFEE22	Driver waiting time. byte 1 -> Menu. byte 2 -> Get PIn. byte 3 -> MSR	3	32 3C 3C

The Contact Common EMV L2 comes with four approved configurations as shown below (1C, 2C, 3C, 4C); these correspond to the scenarios defined by EMVCo in tag 9F35. Parameters marked as Major Parameters usually cannot be changed without causing a checksum error, although certain flag bits (see tables below) can be changed. The Major Parameters are considered read-only because these are the settings the device was certified with for EMV L2 certification.

Terminal configuration					
Identification	Tag	1C	2C	3C	4C
Major parameters	9F33	60 F8 C8	60 28 C8	60 D8 C8	60 08 C8
	9F35	22	21	25	25
	9F40	F0 00 F0 A0 01	F0 00 F0 A0 01	60 00 F0 50 01	60 00 F0 50 01
	DF11	01	00	01	01
	DF26	01	01	01	01
	DF27	00	00	00	00
	DFEE1E	F0 DC 3C F0 C2 9E 96 00	D0 DC 20 D0 C4 1E 16 00	F0 DC 24 F0 C2 0E 16 00	D0 9C 20 F0 C2 0E 16 00

Tag	Description	Length																																																																																										
9F33	Terminal Capabilities	3																																																																																										
	Byte 1																																																																																											
	<table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Manual key entry</td><td></td></tr><tr><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Magnetic stripe</td><td></td></tr><tr><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>IC with contacts</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>RFU</td><td></td></tr></table>		b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	Manual key entry		x	1	x	x	x	x	x	x	Magnetic stripe		x	x	1	x	x	x	x	x	IC with contacts	Major	x	x	x	0	x	x	x	x	RFU		x	x	x	x	0	x	x	x	RFU		x	x	x	x	x	0	x	x	RFU		x	x	x	x	x	x	0	x	RFU		x	x	x	x	x	x	x	0	RFU	
	b8		b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																	
	1		x	x	x	x	x	x	x	Manual key entry																																																																																		
	x		1	x	x	x	x	x	x	Magnetic stripe																																																																																		
	x		x	1	x	x	x	x	x	IC with contacts	Major																																																																																	
	x		x	x	0	x	x	x	x	RFU																																																																																		
	x		x	x	x	0	x	x	x	RFU																																																																																		
	x		x	x	x	x	0	x	x	RFU																																																																																		
	x		x	x	x	x	x	0	x	RFU																																																																																		
	x		x	x	x	x	x	x	0	RFU																																																																																		
	Byte 2																																																																																											
	<table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Plaintext PIN for IC verification</td><td>Major</td></tr><tr><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>X</td><td>x</td><td>Enciphered PIN for online verification</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>X</td><td>x</td><td>Signature(paper)</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>X</td><td>x</td><td>Enciphered PIN for offline verification</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>X</td><td>x</td><td>No CVM Required</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>X</td><td>0</td><td>RFU</td><td></td></tr></table>		b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	Plaintext PIN for IC verification	Major	x	1	x	x	x	x	X	x	Enciphered PIN for online verification	Major	x	x	1	x	x	x	X	x	Signature(paper)	Major	x	x	x	1	x	x	X	x	Enciphered PIN for offline verification	Major	x	x	x	x	1	x	X	x	No CVM Required	Major	x	x	x	x	x	0	x	x	RFU		x	x	x	x	x	x	0	x	RFU		x	x	x	x	x	x	X	0	RFU	
	b8		b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																	
	1		x	x	x	x	x	x	x	Plaintext PIN for IC verification	Major																																																																																	
	x		1	x	x	x	x	X	x	Enciphered PIN for online verification	Major																																																																																	
	x		x	1	x	x	x	X	x	Signature(paper)	Major																																																																																	
	x		x	x	1	x	x	X	x	Enciphered PIN for offline verification	Major																																																																																	
	x		x	x	x	1	x	X	x	No CVM Required	Major																																																																																	
	x		x	x	x	x	0	x	x	RFU																																																																																		
	x		x	x	x	x	x	0	x	RFU																																																																																		
	x		x	x	x	x	x	X	0	RFU																																																																																		
	Byte 3																																																																																											
	<table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>SDA</td><td>Major</td></tr><tr><td>X</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>DDA</td><td>Major</td></tr><tr><td>X</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Card capture</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>X</td><td>CDA</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>X</td><td>X</td><td>x</td><td>0</td><td>RFU</td><td></td></tr></table>		b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	SDA	Major	X	1	x	x	x	x	x	x	DDA	Major	X	x	1	x	x	x	x	x	Card capture		x	x	x	0	x	x	x	x	RFU		x	x	x	x	1	x	x	X	CDA	Major	x	x	x	x	x	0	x	x	RFU		x	x	x	x	x	x	0	x	RFU		x	x	x	x	X	X	x	0	RFU	
	b8		b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																	
	1		x	x	x	x	x	x	x	SDA	Major																																																																																	
	X		1	x	x	x	x	x	x	DDA	Major																																																																																	
	X		x	1	x	x	x	x	x	Card capture																																																																																		
	x		x	x	0	x	x	x	x	RFU																																																																																		
	x		x	x	x	1	x	x	X	CDA	Major																																																																																	
	x		x	x	x	x	0	x	x	RFU																																																																																		
	x		x	x	x	x	x	0	x	RFU																																																																																		
	x		x	x	x	X	X	x	0	RFU																																																																																		
	9F35		Terminal Type	1																																																																																								
			<table><tr><th>Environment</th><th>Financial Institution</th><th>Merchant</th><th>Cardholder</th><th>Change</th></tr><tr><td rowspan="3">Attended Online only Offline with online capability Offline only</td><td>11 12 13</td><td>21 22 23</td><td>-- -- --</td><td rowspan="3">Major</td></tr><tr><td rowspan="3">Unattended Online only Offline with online capability Offline only</td><td>14 15 16</td><td>24 25 26</td><td>34 35 36</td><td rowspan="3">Major</td></tr></table>		Environment	Financial Institution	Merchant	Cardholder	Change	Attended Online only Offline with online capability Offline only	11 12 13	21 22 23	-- -- --	Major	Unattended Online only Offline with online capability Offline only	14 15 16	24 25 26	34 35 36	Major																																																																									
			Environment		Financial Institution	Merchant	Cardholder	Change																																																																																				
			Attended Online only Offline with online capability Offline only		11 12 13	21 22 23	-- -- --	Major																																																																																				
					Unattended Online only Offline with online capability Offline only	14 15 16	24 25 26		34 35 36	Major																																																																																		
9F40	Additional Terminal Capabilities	5																																																																																										
	Byte 1																																																																																											
	<table><tr><th>b1</th><th>b2</th><th>b3</th><th>b4</th><th>b5</th><th>b6</th><th>b7</th><th>b8</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Cash</td><td>Major</td></tr><tr><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Goods</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Services</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Cashback</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>Inquiry</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>Transfer</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>Payment</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>Administrative</td><td></td></tr></table>		b1	b2	b3	b4	b5	b6	b7	b8	Meaning	Change	1	x	x	x	x	x	x	x	Cash	Major	x	1	x	x	x	x	x	x	Goods	Major	x	x	1	x	x	x	x	x	Services	Major	x	x	x	1	x	x	x	x	Cashback	Major	x	x	x	x	1	x	x	x	Inquiry		x	x	x	x	x	1	x	x	Transfer		x	x	x	x	x	x	1	x	Payment		x	x	x	x	x	x	x	1	Administrative	
	b1		b2	b3	b4	b5	b6	b7	b8	Meaning	Change																																																																																	
	1		x	x	x	x	x	x	x	Cash	Major																																																																																	
	x		1	x	x	x	x	x	x	Goods	Major																																																																																	
	x		x	1	x	x	x	x	x	Services	Major																																																																																	
	x		x	x	1	x	x	x	x	Cashback	Major																																																																																	
	x		x	x	x	1	x	x	x	Inquiry																																																																																		
	x		x	x	x	x	1	x	x	Transfer																																																																																		
	x		x	x	x	x	x	1	x	Payment																																																																																		
	x		x	x	x	x	x	x	1	Administrative																																																																																		

	<div>Byte 2</div> <table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Cash Deposit</td><td></td></tr><tr><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>RFU</td><td></td></tr></table> <div>Byte 3</div> <table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Numeric keys</td><td></td></tr><tr><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Alphabetic and special characters keys</td><td></td></tr><tr><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Command keys</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Function Keys</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>RFU</td><td></td></tr></table> <div>Byte 4</div> <table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Print, attendant</td><td></td></tr><tr><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Print, cardholder</td><td></td></tr><tr><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Display, attendant</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Display, cardholder</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>0</td><td>x</td><td>x</td><td>RFU</td><td></td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>Code table 10</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>Code table 9</td><td>Major</td></tr></table> <div>Byte 5</div> <table><tr><th>b8</th><th>b7</th><th>b6</th><th>b5</th><th>b4</th><th>b3</th><th>b2</th><th>b1</th><th>Meaning</th><th>Change</th></tr><tr><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Code table 8</td><td>Major</td></tr><tr><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Code table 7</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Code table 6</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>x</td><td>Code table 5</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>x</td><td>Code table 4</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>x</td><td>Code table 3</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>x</td><td>Code table 2</td><td>Major</td></tr><tr><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>x</td><td>1</td><td>Code table 1</td><td>Major</td></tr></table>	b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	Cash Deposit		x	0	x	x	x	x	x	x	RFU		x	x	0	x	x	x	x	x	RFU		x	x	x	0	x	x	x	x	RFU		x	x	x	x	0	x	x	x	RFU		x	x	x	x	x	0	x	x	RFU		x	x	x	x	x	x	0	x	RFU		x	x	x	x	x	x	x	0	RFU		b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	Numeric keys		x	1	x	x	x	x	x	x	Alphabetic and special characters keys		x	x	1	x	x	x	x	x	Command keys		x	x	x	1	x	x	x	x	Function Keys		x	x	x	x	0	x	x	x	RFU		x	x	x	x	x	0	x	x	RFU		x	x	x	x	x	x	0	x	RFU		x	x	x	x	x	x	x	0	RFU		b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	Print, attendant		x	1	x	x	x	x	x	x	Print, cardholder		x	x	1	x	x	x	x	x	Display, attendant		x	x	x	1	x	x	x	x	Display, cardholder		x	x	x	x	0	x	x	x	RFU		x	x	x	x	x	0	x	x	RFU		x	x	x	x	x	x	1	x	Code table 10	Major	x	x	x	x	x	x	x	1	Code table 9	Major	b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change	1	x	x	x	x	x	x	x	Code table 8	Major	x	1	x	x	x	x	x	x	Code table 7	Major	x	x	1	x	x	x	x	x	Code table 6	Major	x	x	x	1	x	x	x	x	Code table 5	Major	x	x	x	x	1	x	x	x	Code table 4	Major	x	x	x	x	x	1	x	x	Code table 3	Major	x	x	x	x	x	x	1	x	Code table 2	Major	x	x	x	x	x	x	x	1	Code table 1	Major	
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																																																																																																																																																																																																																																																																																																	
1	x	x	x	x	x	x	x	Cash Deposit																																																																																																																																																																																																																																																																																																																																																																		
x	0	x	x	x	x	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	0	x	x	x	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	0	x	x	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	0	x	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	0	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	x	0	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	x	x	0	RFU																																																																																																																																																																																																																																																																																																																																																																		
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																																																																																																																																																																																																																																																																																																	
1	x	x	x	x	x	x	x	Numeric keys																																																																																																																																																																																																																																																																																																																																																																		
x	1	x	x	x	x	x	x	Alphabetic and special characters keys																																																																																																																																																																																																																																																																																																																																																																		
x	x	1	x	x	x	x	x	Command keys																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	1	x	x	x	x	Function Keys																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	0	x	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	0	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	x	0	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	x	x	0	RFU																																																																																																																																																																																																																																																																																																																																																																		
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																																																																																																																																																																																																																																																																																																	
1	x	x	x	x	x	x	x	Print, attendant																																																																																																																																																																																																																																																																																																																																																																		
x	1	x	x	x	x	x	x	Print, cardholder																																																																																																																																																																																																																																																																																																																																																																		
x	x	1	x	x	x	x	x	Display, attendant																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	1	x	x	x	x	Display, cardholder																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	0	x	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	0	x	x	RFU																																																																																																																																																																																																																																																																																																																																																																		
x	x	x	x	x	x	1	x	Code table 10	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	x	x	x	x	x	1	Code table 9	Major																																																																																																																																																																																																																																																																																																																																																																	
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change																																																																																																																																																																																																																																																																																																																																																																	
1	x	x	x	x	x	x	x	Code table 8	Major																																																																																																																																																																																																																																																																																																																																																																	
x	1	x	x	x	x	x	x	Code table 7	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	1	x	x	x	x	x	Code table 6	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	x	1	x	x	x	x	Code table 5	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	x	x	1	x	x	x	Code table 4	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	x	x	x	1	x	x	Code table 3	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	x	x	x	x	1	x	Code table 2	Major																																																																																																																																																																																																																																																																																																																																																																	
x	x	x	x	x	x	x	1	Code table 1	Major																																																																																																																																																																																																																																																																																																																																																																	
DF11	Transaction Log Support (Default: Enable) (Major) 0 → Disable 1 → Enable	1																																																																																																																																																																																																																																																																																																																																																																								
DF26	Revocation List Support (Default: Enable) (Major) 0 → Disable 1 → Enable	1																																																																																																																																																																																																																																																																																																																																																																								
DF27	Exception File Support (Default: Disable) (Major) 0 → Disable 1 → Enable	1																																																																																																																																																																																																																																																																																																																																																																								
DFEE1E	Contact Terminal Configuration (Default: F0 DC 3C F0 C2 9E 94 00)																																																																																																																																																																																																																																																																																																																																																																									

Byte 1

b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	x	x	x	x	x	x	x	Key Pad support	
x	1	x	x	x	x	x	x	LCD support	
x	x	1	x	x	x	x	x	PIN Pad support	
x	x	x	1	x	x	x	x	Print Support	
x	x	x	x	0	x	x	x	RFU	
x	x	x	x	x	0	x	x	RFU	
x	x	x	x	x	x	0	x	RFU	
x	x	x	x	x	x	X	0	RFU	

Byte 2

b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	x	x	x	x	x	x	x	PSE support	Major
x	1	x	x	x	x	x	x	Cardholder confirmation	Major
x	x	1	x	x	x	x	x	Preferred display order	
x	x	x	1	x	x	x	x	Multi language	
x	x	x	x	1	x	x	x	EMV language selection method	
x	x	x	x	x	1	x	x	Default DDOL	Major
x	x	x	x	x	x	0	x	RFU	
x	x	x	x	x	x	x	0	RFU	

Byte 3

b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
0	x	x	x	x	x	x	x	RFU (Revocation of Issuer Public Key Certificate (DF26))	Major
x	1	x	x	x	x	x	x	Manual action when CA PK loading fails	Major
x	x	1	x	x	x	x	x	CA PK verified with check sum	Major
x	x	x	1	x	x	x	x	Bypass PIN Entry	Major
x	x	x	x	1	x	x	x	Subsequent bypass PIN Entry	Major
x	x	x	x	x	1	x	x	Get data for pin try counter	Major
x	x	x	x	x	x	0	x	RFU	
x	x	x	x	x	x	x	0	RFU	

Byte 4

b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	x	x	x	x	x	x	x	Amount before CVM processing	Major
x	1	x	x	x	x	x	x	Floor limit checking	Major
x	x	1	x	x	x	x	x	Random transaction selection	Major
x	x	x	1	x	x	x	x	Velocity checking	Major
x	x	x	x	0	x	x	x	RFU (Transaction Log (DF11))	Major
x	x	x	x	x	0	x	x	RFU (Exception File (DF27))	Major
x	x	x	x	x	x	0	x	RFU	
x	x	x	x	x	x	x	0	RFU	

Byte 5

b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	x	x	x	x	x	x	X	Terminal action code support	Major
x	1	x	x	x	x	x	x	Terminal action code can be change	Major
x	x	1	x	x	x	x	x	Terminal action code can be deleted or disable	Major
x	x	x	1	x	x	x	x	Default Action code processing before 1st GAC	Major
x	x	x	x	1	x	x	x	Default Action code processing after 1st GAC	Major

x	x	x	x	x	1	x	x	TAC/IAC default process when unable to go online (Skipped)	Major
x	x	x	x	x	x	1	x	TAC/IAC default process when unable to go online (Normal)	Major
x	x	x	x	x	x	x	0	RFU	
Byte 6									
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	x	x	x	x	x	x	x	Forced Online support	Major
x	1	x	x	x	x	x	x	Forced acceptance support	Major
x	x	1	x	x	x	x	x	Advices support	Major
x	x	x	1	x	x	x	x	Issuer referrals support	Major
X	x	x	x	1	x	x	x	Batch data capture	Major
x	x	x	x	x	1	x	x	Online data capture	Major
X	x	x	x	x	x	1	x	Default TDOL	Major
X	x	x	x	x	x	x	0	RFU	
Byte 7									
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
1	x	x	x	x	x	x	x	amount and pin entered on the same keypad	
x	1	x	x	x	x	x	x	ICC/Magstripe reader combined	
x	x	1	x	x	x	x	x	Magstripe read first	
x	x	x	1	x	x	x	x	Support account type selection	
x	x	x	x	1	x	x	x	On fly script processing	
x	x	x	x	x	1	x	x	Internal date management	
x	x	x	x	x	x	1	x	Reversal Mode (1)Unable go online (2) ARC Error 0: (3) Online Approved but reader not approved. 1: (3) Online Approved but card response AAC.	
x	x	x	x	x	x	x	0	RFU	
Byte 8									
b8	b7	b6	b5	b4	b3	b2	b1	Meaning	Change
x	x	x	x	x	x	x	x	RFU	

7.10. Contact Set Application Data (60-03)

The **Contact Set Application Data** command creates a new AID configuration, up to a maximum of 16 sets.

Command Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Sub- Command	Data Length (MSB)	Data Length (LSB)	Data	CRC (LSB)	CRC (MSB)
ViVOtech2\0	60h	03h			Data Objects		

Data Objects: <AID_LenL><AID_LenH><5~16 bytes

AID><TagCounterL><TagCounterH><TLV1><TLV2>...<TLVn>.

Where: <TagCounterL><TagCounterH>is the Number of <TLV>.

Response Frame

Byte 0-9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14 ... Byte 14+n-1	Byte 14+n	Byte 15+n
Header Tag & Protocol Version	Command	Status Code	Data Length (MSB)	Data Length (LSB)	Data	CRC (MSB)	CRC (LSB)
ViVotech2\0	60h	See Status Code Table			See Response Frame Data Format		

Note:

- If there was a <TLV> format error, the response status code is 0x05.
- If AID List is full (MAX is 16), the response status code is 0x61.

Application Data List Example

Data ID	Tag	Value name	Length (Byte)	Data
1	9F01	Acquirer identifier	6	56 49 53 41 30 30
2	5F57	Account type	1	00
3	5F2A	Transaction Currency	2	08 40
4	9F09	Terminal application version number	2	00 96
5	5F36	Transaction currency exponent	1	02
6	9F1B	Terminal floor limit	4	00 00 3A 98
7	DF25	Default DDOL	Var	9F 37 04
8	DF28	Default TDOL	Var	9F 08 02
9	DFEE15	ASI	1	01
10	DF13	TAC-Default	5	00 00 00 00 00
11	DF14	TAC-Denial	5	00 00 00 00 00
12	DF15	TAC-Online	5	00 00 00 00 00
13	DF18	Target percentage for random transaction selection	1	00
14	DF17	Threshold value for biased random selection	4	00 00 27 10
15	DF19	Maximum target percentage for random transaction selection	1	00

8. Basic Card Reading Data Flow

The following examples describe the basic steps for setting a reader's terminal settings and activating a transaction.

8.1. Example: Reading a Card via Firmware Commands

Perform the following steps and commands to read a card with the VP3350 via NEO 2 protocol firmware commands.

1. Set the device's terminal settings:
 - a. Run **Set Kernel Configuration (60-16)** to set the kernel configuration number, which acts as a filter to validate that the tags in the next step have the correct major parameters.
 - b. Run **Set Terminal Configuration (60-06)** to set the TLV tags, which must have the correct major parameters set in step 1a.
2. Run **Contact Set Application Data (60-03)** to set the device's AID file. Note that, prior to device certification, devices require dummy AIDs to function.
3. Run **Activate Transaction (02-40)** and read the card.

8.2. Example: Reading a Card via Universal SDK Methods

Perform the following steps and commands to read a card with the VP3350 via USDK methods.

1. Set the device's terminal settings:

- a. Run **Set Kernel Configuration:**

```
public RETURN_CODE
emv_setTerminalMajorConfiguration(int configuration)
```

- b. Run **Set Terminal Configuration:**

```
public RETURN_CODE emv_setTerminalData(byte[]
tlv, string ident = "")
```

2. Run **Set Application Data:**

```
public RETURN_CODE emv_setApplicationData(byte[] name, byte[]
tlv, string ident = "")
```

3. Run **Activate Transaction:**

```
public RETURN_CODE device_startTransaction(double amount,
double amtOther, int exponent, int type, int timeout, byte[]
tags, bool isFastEMV = false, string ident = "")
```

4. Read the card.

8.3. Example: Reading a Card via the USDK Demo App

1. Download and install the latest [USDK Demo app](#) from the ID TECH Knowledge Base (if you cannot access the link, please [contact support](#)).
2. Connect the VP3350 to your PC via USB or serial port.
3. Open the USDK Demo app from the Windows Start menu.
4. Select **EMV > Terminal Config > Set Kernel Config**, then input the Config Number (example 2).
5. Select **EMV > Terminal Config > Save Terminal Data > Pick Tag List (example 2C) > Execute**.
6. Select **EMV > AID > Load Default AID**.
7. Select **EMV > Activate Transaction**.

9. Periodic Inspection Instructions

The VP3350 is an attended device; contact an ID TECH representative with any questions for the device's daily use.

Users are also required to complete the following checks daily:

- Check the device overlay to make sure it is intact.
- Power on the device to check the beeper and the display message:
 - Make sure there is no beeping that indicates the tamper was triggered.
 - Read the firmware version to make sure the version number is correct.
- Check the device appearance to make sure there are no holes on the
- device or any suspicious objects around the ICC card slot.

10. Decommissioning PCI-Certified Devices

All PCI-certified devices require proper decommissioning prior to device disposal in order to ensure the protection of all sensitive financial card data. For instructions on decommissioning your device, see [Decommissioning of PCI-Certified Devices](#) on the ID TECH Knowledge Base.

11. Troubleshooting

The VP3350 is designed to be reliable and easy to troubleshoot. The components that may require troubleshooting include the power module (if applicable), the reader, and the serial cable.

Symptom	Probable Cause	Remedy
General Issues		
4 RED LEDs blink and the device beeps	Unit has been tampered	Contact IDTECH Support
4 Yellow and RED LEDs blink and the device beeps	Unit was not activated	Contact IDTECH Support
4 Yellow LEDs are on	LCL-KEK is not loaded or was erased	Contact IDTECH Support
4 Green LEDs are on	DEK is not loaded or was erased	Contact IDTECH Support
No communication and all LEDs off	<ul style="list-style-type: none"> Power off Battery out of charge Host device not connected 	<ul style="list-style-type: none"> Charge the battery Press the device Reset button Make sure to enter the correct pairing password
Bluetooth pairing failed	<ul style="list-style-type: none"> Host device running Android 6.x or earlier Mobile does not work in BLE security mode 	<ul style="list-style-type: none"> Make sure the host device is running Android 6.x or later Make sure the host device connects to the VP3350 in BLE Mode 1 and Level 4
Reader does not appear to be powered on after pressing the power button (no LEDs are lit)	<ul style="list-style-type: none"> Reader not powered on Battery out of charge 	<ul style="list-style-type: none"> Connect the device to PC via a USB cable The device could be set to automatically power on and enter charging mode Replace the device with another unit known to work to verify that the installed USB cable wiring works correctly
Some cards or fobs read, but not all	<ul style="list-style-type: none"> Possible bad card or fob. Unsupported card used. Wrong firmware 	<ul style="list-style-type: none"> Check to see if the card or fob is damaged Verify that the correct firmware is loaded on reader; contact your ID TECH representative
LEDs do not light and the beeper is not audible when presenting a card or fob	<ul style="list-style-type: none"> Card, fob, or phone not properly presented RF interference Unsupported card used Wrong firmware 	<ul style="list-style-type: none"> Present card, fob, or phone closer to the antenna and ensure it is parallel to the face of the reader Verify that the card, fob, or phone is valid and current Verify that metal is not interfering with the antenna Test with <i>Vivocard Contactless Test Card</i> part number 241-0015-03, Rev A Try a different card, fob, or phone Check to see if the card, fob, or phone is damaged Verify that correct firmware is loaded on reader; contact your ID TECH representative Power cable plug is fully inserted Make sure device is not set to Passthrough mode Replace the unit
Communication Issues		
No data received or data is garbled	Faulty or incorrect cable connections.	Check that the cable connection is secure and in the correct port on the device
Fail to start transaction, 0x0B returned	Device in Passthrough mode or transaction mode	<ul style="list-style-type: none"> Need to exit Passthrough mode Need to cancel transaction
Fail to start transaction, 0x60 returned	No terminal data or application data	Need to load terminal data or application data for Contact EMV transactions

Symptom	Probable Cause	Remedy
Fail to start transaction, 0x04 returned	Missing Key	Please re-start VP3350 and monitor the LEDs to confirm whether to Load LCL key or Data Key
Firmware loading software indicates "Open device failed"	Device is not fully connected to PC	<ul style="list-style-type: none"> • Check the cable connection • Check the device
Firmware loading software indicates "Load firmware failed"	Device is not fully connected to PC	Check the cable connections
Firmware loading software indicates "Send Command failed"	Bootloader firmware in device was destroyed	Contact your ID TECH representative to reload manufacture's firmware

If you are unable to resolve the problem, please contact support@idtechproducts.com (sending an e-mail to this address will automatically open a support ticket).

11.1. Tamper Detection Codes

If a tamper event occurs, the VP3350 stores a tamper code in its security log. Check the security log with the **Get DRS Info (C7-3A)** command; see the *NEO 2 Interface Developer's Guide* for details.

Tamper Event Type	Code
EVENT_TYPE_TAMPER_ACTIVE	0
EVENT_TYPE_TAMPER_DEACTIVE	1
EVENT_TYPE_TAMPER_GENERIC	2
EVENT_TYPE_TAMPER_ACK	3
EVENT_TYPE_TAMPER_TIMEOVRF	4
EVENT_TYPE_TAMPER_MONOTONICOVRF	5
EVENT_TYPE_TAMPER_VOLT	6
EVENT_TYPE_TAMPER_CLK	7
EVENT_TYPE_TAMPER_TEMP	8
EVENT_TYPE_TAMPER_FLASH	9
EVENT_TYPE_TAMPER_TST	10
EVENT_TYPE_TAMPER_PIN	11
EVENT_TYPE_TAMPER_BAT	12
EVENT_TYPE_TAMPER_ALL	255

12. For More Information

- To learn more about VP3350 and other ID TECH products, visit the [ID TECH Knowledge Base](#).
- To learn more about EMV app development with the Universal SDK, see [EMV Transactions with Universal SDK](#).
- Visit us online at <http://idtechproducts.com>.
- Find more Tech Support resources at the [ID TECH Tech Support home page](#).