Electronic Alarm Clock

USER MANUAL
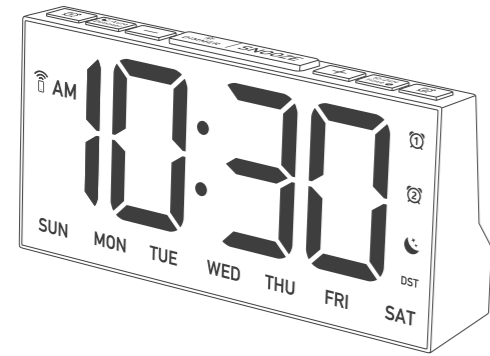
PRODUCT OVERVIEW
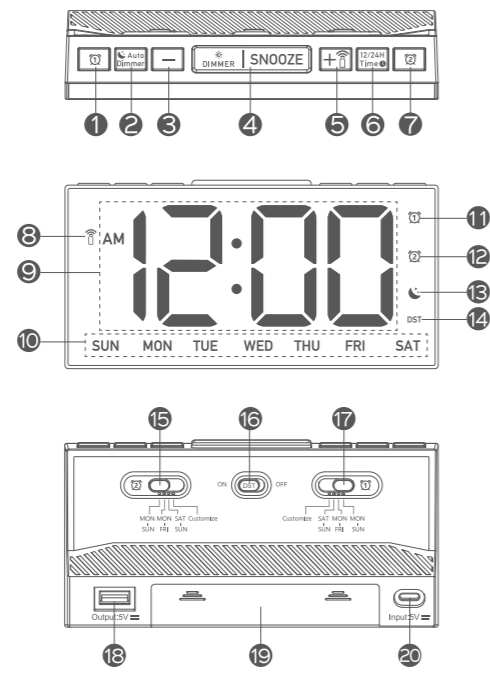
1. Alarm1 Button
2. Auto Dimmer Button
3. Setting -
4. Snooze / Dimmer Button
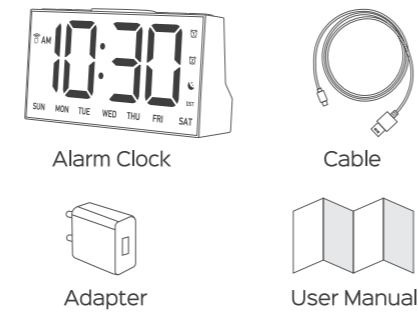5. Setting + / Time Syncing
6. 12/24H, Time Set Button
7. Alarm2 Button
8. Time Syncing Indicator
9. Time Display
10. Week Display
11. Alarm1 Indicator
12. Alarm2 Indicator
13. Auto Dimmer Indicator
14. DST Indicator
15. Alarm2 Mode Slider
16. DST Switch
17. Alarm1 Mode Slider
18. USB Charging Port
19. Battery Compartment
20. Type-C Power Port
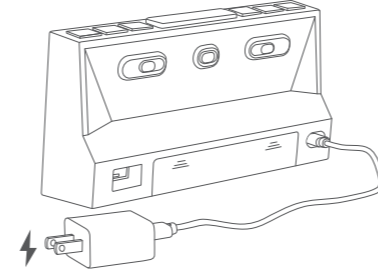
- 1 -

PACKAGING LIST

Alarm Clock

Cable

Adapter

User Manual

- 2 -

FIRST USE

- **First Power On**

  Connect the Type-c end to the back of the alarm clock, connect the USB end to the adapter, and insert it into a 100V-240V household outlet. As shown below:

- **Product Cleaning**

  Wipe away dust with a soft, damp cloth; Do not use liquid or abrasive cleaners.

- 3 -

TIME SYNCING

When the clock is powered on, or long press the button to enter time syncing.

- The time syncing indicator begins to flash. It will stop flashing and disappear without connection after 3 mins.


- Turn on the Bluetooth on the phone, search for the device 'Clock 903', and connect to it.
- If your phone displays any notifications, please accept them.
- (Note: The device only retrieves the time from your phone and does not have internet access. This will not compromise your privacy.)
- After successful time synchronization, the indicator will become steady. The clock will automatically sync the time every 24 hours. If there is no connection for more than a day, the time syncing indicator will disappear, and the clock will attempt to reconnect to the phone once an hour. Once the connection is re-established, the indicator will reappear.
- The clock keeps a connection only with the last phone it was paired with.

- 4 -

TIME SETTING

In the time mode, Long press the to enter the time setting, then set the time in the following order:

- **Hour, Min, and Weekday**

1. Hour and AMPM begin to flash, press the or to adjust, and press the again to confirm;
2. Then Minute begins to flash, press the or to adjust , and press the again to confirm;
3. Then Weekday begins to flash, press the or to set the weekday, and press the again to complete.


Note:
Long press or for a quick adjustment.
Automatically save and exit after 10 seconds of inactivity.
The same as the alarm setting below.

- **12/24-Hour Time Format Conversion**

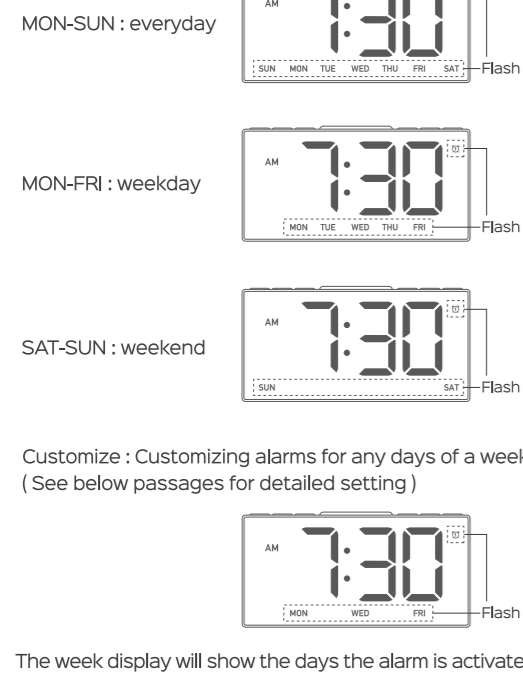 In the time display mode, short press to switch 12/24-hour time display format.

- 5 -

DST Setting

Toggle the DST switch on the back of the clock, to quickly turn DST format on/off; The DST indicator will display or disappear accordingly.
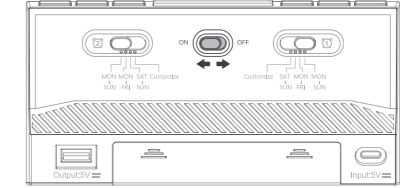
ALARMS SETTING

- **Alarm Switch**

  In the time display mode, press the to turn on /off the alarm, the alarm indicator display or disappear accordingly.

- **Alarm time setting**

  Long press the to enter the alarm setting. Hour and min will flash in turn, press the or to adjust, press the again to confirm.

- **Alarm days setting**

  Move the alarm mode slider on the back of the clock to set the alarm days in the following order:

- 6 -

MON-SUN : everyday

MON-FRI : weekday

SAT-SUN : weekend

Customize : Customizing alarms for any days of a week (See below passages for detailed setting)

The week display will show the days the alarm is activated.

- 7 -

• Customize alarm for any days

1. Move the alarm mode slider to Customize

2. Long press the , after setting the time, the first day begins to flash, press the to enable or disable the alarm for the day, press the or to switch between days.
3. Long press the to complete the customize;
4. The week display will show the days enabled for the alarm.

- **Snooze Function**

  When the alarm goes off , press the to temporarily turn off the alarm, and the begin to flash. the alarm will go off again after 9 minutes.

- **Stop the Alarm**

  In the alarm/snooze state, click any button except on the top of the clock to stop the current alarm without affecting the next alarm.
  When the alarm rings for 30 minutes without any operation, the alarm will automatically stop ringing and will not affect the next alarm.

- 8 -

DISPLAY BRIGHTNESS ADJUSTMENT

In the time display mode, press the to adjust the display brightness.

AUTO DIMMER SETTING

The auto dimmer mode automatically adjusts the display brightness every day, eliminating the need for manual adjustment. (Default period: 7:00pm-7:00am, Default brightness: L01)

- **Auto Dimmer Switch**

  Press to turn on/off the Auto Dimmer, the indicator will display or disappear accordingly.

- **Auto Dimmer Setting**

  Long press to enter the Auto Dimmer setting.

  – Auto Dimmer starting time:
    Hour and min will flash in turn, press or to adjust, and press the to confirm.

  – Auto Dimmer ending time:
    Set the end time in the same way as setting the start time.

  – Auto Dimmer Brightness:
    Press the or to set the Auto Dimmer brightness from L01 to L04, press the to confirm.

- 9 -

MEMORY FUNCTION

2 x AAA batteries (not included) ONLY work for memorizing the settings in the case of the main power outage. Batteries can't support display or other functions.

Battery Anti-bounce structure

Insert the battery from here.
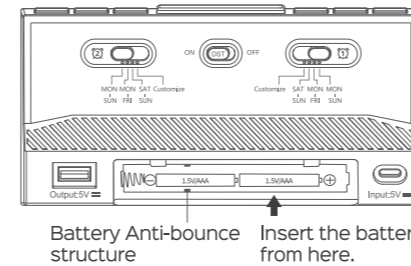
GENTLE REMINDER

If you feel confused about any part of setting the clock, please go to our product page and there are step-by-step videos for your reference which are clearer and easier to understand. Or do not hesitate to contact our customer support for a quick solution if you have any questions.

- 10 -

FCC STATEMENT

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

- 11 -

WARNING

Do not ingest the battery, Chemical Burm Hazard (the remote control upplied with). This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment isn't closed securely, stop using the product and keep it away from children. I you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This appliance can be used by childrenover 8 years old, and children shall not play with the appliance.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

- 12 -

CORRECT DISPOSAL OF THIS PRODUCT

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recydling.

EU&UK Declaration of Conformity:
https://drive.google.com/drive/folders/1ZXvGz35q9z8ERY7zBUmdKMG3AvPJPcPz?usp=sharing

- 13 -