SOUNDLOGIC XT

Bluetooth Karaoke Speaker

TS-1/1865, 706793

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND

RETAIN FOR FUTURE USE

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the speaker.
- Please retain all packaging until you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Bluetooth Karaoke Speaker
- USB charging cable
- Remote controller
- 3.5mm Aux cable
- Wired micro phone
- Instruction Manual

Product Features

- Kickstand Karaoke Speaker
- Built-in Bluetooth – connect & stream wireless music anytime, anywhere
- Multi-function speaker –supports USB flash drive, Micro SD (TF) card, Bluetooth, FM radio, Aux jack & Microphone input
- LED display
- Built-in rechargeable battery
- USB recharge cable included

SAFETYINSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in anyway.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.

Description of Parts

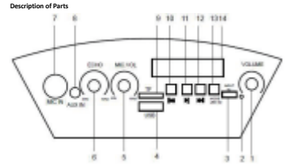

Number	Item	Function
1	POWER SWITCH /VOLUME KNOB	Turn the speaker On or Off, increases/decreases the speaker volume
2	CHARGING INDICATOR	Turns RED while charging. Turns off when fully charged
3	DC 5V IN	Charging port
4	USB SLOT	USB in put (Flash Drive)
5	MIC VOLUME KNOB	Adjust the microphone volume
6	ECHO KNOB	Adjust the echo volume
7	MICIN PUT	Micro phone input
8	AUX IN	External audio input
9	Micro SD (TF) SLOT	Micro SD(TF)card input
10	PREVIOUS TRACK/STATION	BT/USB/TF card mode: Skip to previous track FM radio mode: Skip to the previous radio station
11	PLAY/PAUSE/SCAN/ TWS	PLAY/PAUSE / scan FM radio stations (only in FM radio mode) / TWS pairing and unpairing
12	NEXT TRACK/STATION	Skip to the next track in BT/USB/TF card mode/Skip to the next radio station in FM radio mode
13	MODE /LIGHT BUTTON	Short press to changes the mode between Bluetooth /FM radio / AUX /USB / TF, long press to turn on/off the color changing LED light
14	LED DISPLAY	Display the operation

Remote Controller

Number	Function	Operation
1	On/Off	Short press to turn on/off the speaker
2	Pause/Scan	To play/pause the music from Bluetooth/USB/TF card mode playing, short press to search and record all radio stations (only in FM radio mode)
3	EQ	Short press to choose your favorite EQ: Normal, Pop, Rock, Jazz, Classic or Country from Bluetooth/USB/TF function
4	Mode/Light	Short press to switch different functions of the speaker, long press to turn on/off the color changing LED lights
5	Mute	Turn output sound on/off
6	Previous track/station	Bluetooth/USB/TF card mode: press the button to the previous track, FM radio mode: skip to previous saved radio station
7	Next track/station	Bluetooth/USB/TF card mode: press the button to the next track, FM radio mode: skip to next radio station
8	Volume decrease-	Press and hold the button will decrease the volume
9	Volume increase +	Press and hold the button will increase the volume
10	Repeat	Repeat one/all songs from USB/Micro SD(TF)mode playing
11	USB/Micro SD (TF)	Switching between USB and Micro SD(TF)mode playing
12	Numeric buttons	Press numbers and it will move to track/station number from USB/Micro SD(TF)/FM radio function

Battery Installation

While using for the first time, remove the insulation tab from the battery compartment of the Remote Control.

Remote Control includes the battery (1 CR2025/32 Lithium battery); when battery is drained, replace battery as below:

1. Pull the battery tray out of the battery compartment of Remote Control.
2. Place new CR2025/32 button cell battery in the tray slot, as per the indicated polarity.
3. Close the battery tray.

INSTRUCTIONSFORUSE

Charging the Kickstand Karaoke Speaker

For best results, fully charge the unit before use.

1. Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Charging Indicator turns RED while charging, and turns off when fully charged.

Note: Before using the unit for the first time, please charge it for around 4-6 hours or until the Charging Indicator turns off.

Turn On/Off the Speaker

Turn the POWER SWITCH in clockwise direction to turn on the unit with color changing LED lights, or counterclockwise direction to turn off the unit.

Pairing your device with the Speaker –

Your **Kickstand Karaoke Speaker** can stream wireless audio from any Bluetooth enabled device within the range of up to 33 Feet. Simply follow the below steps.

1. Turn ON the speaker to your favorite sound level.
2. LED display will show "HiFi" first and then "BLUE" with an indication tone will be heard. The speaker is now entering "pairing" mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for available Bluetooth devices.
5. Powerhouse Bluetooth Wireless Speaker will appear as "**SL-KICKSTAND**", in the list of searched devices. Select it from the available list of devices.
6. If required, enter the password '0000' to confirm pairing.
7. Once paired successfully, another indication tone will be heard.
8. If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat the above steps.

Play your favorite song on the Bluetooth source device and music will now stream through the speaker.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

Function	Operation	Button
Increase /Decrease Volume	Playing music	Turn VOLUME KNOB to adjust the volume to your desired level, or Adjust volume from the source device (in Bluetooth mode only).
Pause	Playing music	Short press PLAY/PAUSE button once to pause music
Play	Pause	Short press PLAY/PAUSE button once to resume music
Previous track	Playing music	Short press the PREVIOUS TRACK/STATION button to the previous track
Next track	Playing music	Short press the NEXT TRACK/STATION button to the next track

TWS pairing use (if you own 2 Kickstand Karaoke Speakers)

1. Make sure both speakers are "ON" and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
2. Choose either one as your master speaker.
3. Long press the TWS button on both units at the same time.
4. Both units will wirelessly connect with each other, and you would hear an indication tone after they pair together successfully.
5. Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
6. Search for available Bluetooth devices and you would find "**SL-KICKSTAND**" –Pair it with this device.
7. You might be prompted with "Pair with **SL-KICKSTAND**?"message on your source device, with "Cancel" and "OK" options. Please click "OK".
8. If required, enter the password "0000" to pair with the device.
9. Once paired successfully, another indication tone would be heard.
10. You can now stream wireless music on your speaker through your source device.

Note: TWS stands for True Wireless. If you want to separate 2 speakers again for individual use, long press the TWS button on one speaker.

Listening to Music using USB / Micro SD (TF) Card Slot

1. Turn on the speaker.
2. Insert USB flash drive into the USB slot or Micro SD (TF)card into the Micro SD(TF) card slot accordingly. LED display will show 'USB/TF' first, and music will play automatically with LED display showing 'USB/TF', track number & music time.
3. Short press the NEXT TRACK/STATION button or PREVIOUS TRACK/STATION button to move forward or backward on your playlist.
4. Short press PLAY/PAUSE button to Play or Pause a track.

Note: USB / Micro SD (TF) Card: Supports up to 32GB; Supports music file format: MP3, WAV. USB Flash Drive or Micro SD (TF) Card not included.

Listening to Music using AUX-In

1. Turn on the speaker.
2. Plug the 3.5 mm Aux cable (included) into the AUX-In port of the speaker, LED display will show 'AUX'.
3. Plug the other end of the cable to the audio device (such as computer / tablet /MP3 Player etc.).
4. Select your favorite song at the source device to play.

(**Note:** While using AUX-In function, except volume function, all functions such as playing next/previous

track can only be controlled through your source device).

Listening FM radio

1. Turn on the speaker.
2. Short press the MODE button repeatedly, until it reaches FM radio mode, LED display will show 'FM' with a radio frequency with sound.
3. Short press the SCAN button once for searching and recording all radio stations with in frequency range 87.5-108MHz.
4. Short press the NEXT TRACK/ STATION button or PREVIOUS TRACK/ STATION button for listening next or previous already saved radio station.

Tips!!

1. Short press the MODE button to switch different functions of the speaker. The functions are – Bluetooth / FM radio / AUX / USB-Micro SD (TF).
2. When the speaker is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the speaker.

Color changing LED lights in front of speaker

1. Turn on the speaker.
2. Long press the "LIGHT" button to turn on/off the color changing LED lights.

Using the Microphone

1. Insert the plug of the Microphone (included) into the MIC INPUT of the speaker.
2. Turn on the Microphone, and speak for microphone operation or sing for Karaoke operation.
3. Turn Mic volume/echo knob to adjust the volume/echo of the microphone.

Do's and Don'ts

- ☑ Do not play music at excessive levels as damage to hearing and/or equipment may result.
- ☑ Do not use outdoors in wet or in damp surroundings.

Care and maintenance

Clean the unit with a soft, dry cloth. Never use chemicals or harsh abrasives.

Keep this unit away from wet or damp surroundings.

Product Specifications:

Bluetooth version : 5.3
Speaker size : 8.0"
Speaker power : 10W
Unit size : 10.63" L x 8.67" W x 16.93" H
Unit weight : ~5.7 lbs
Power input : DC 5V 1A
Charging Time : 4-6 hours
Play time : Up to 1.5hours (max. volume)
Bluetooth range : 33 Feet
FM frequency range : 87.5-108MHz
Built-In Rechargeable Lithium Battery: 3.7V1800mAh

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
No sound	Volume in minimum position. The connected device is not in play mode. Input source incorrect.	Turn VOLUME knob to increase the volume. Play the music in the connected device and make sure the volume level is turned up high. Press the MODE button to set the input source to the desired function.
Sound distortion	Volume level too high	Turn VOLUME knob to decrease the volume.

FCC Instructions

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@midtradegroup.com or by calling 1 (866) 815-4714, Monday to Friday 8am to 4pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

SERVICEADDRESS:
3400 CENTER CIRCLE, DOWNERS GROVE, Illinois 60515, United States(US)