InAndOn KOD Karaoke Machine

Operation Guide

Product Type: ☐ With HD(Copyright) ■ Without HD   A7

---

1 Use notice before operation

1-1 Functions

This product has those major functions, with details as follows:
1. This product is the hi-tech computer-based multimedia karaoke machine. It can automatically record the backup song movie, repeat the ordered songs without frequently changing the backup disc. It is a professional karaoke entertainment device.
2. Play files from USB: this hi-tech multimedia karaoke machine also supports playing files from USB, including formats such as DVD, VCD, CD and so on, and brings you into the excellent experience of video playing.
3. Application: Not only is it a home entertainment center, but the revolutionary breakthrough point song android dual system intelligent integration entertainment diversification.

1-2 Original Configuration

1. Main unit
2. Operation guide
3. Certificate

1-3 Safety Information

1. Read the instructions in detail: please read the instructions in detail before using and follow their instructions to use this product.
2. Power supply:Please use the power provided in this instruction manual to avoid the irreparable damage of this product; It should be noted that too many electrical equipment should not be used in single platoon, so that the phenomenon of power overload can cause fire. If you are not sure of the specification of the power supply, please consult the power company or the distributor of this product.
3. Heat source:This product no matter whether is in working status, all should be placed in ventilated place, and stay away from other heating equipment or environment, such as heating machine, electric equipment, gas stove, etc., in order to avoid the product can't work normally, causing the destruction of this product can not be restored.
4. Damp:This product is not in the working condition, please keep the environment dry, avoid the use of this product in the environment of excessive humidity, such as damp basement, swimming pool, etc.
5. Foreign material intrusion: Users can dismantle the screws on the bottom of the machine to add new hard disks or handle the old hard disks. There is no manual addition or modification item for the user to disassemble the other parts. Do not disassemble the shell of the product to avoid intrusion of foreign materials. Damage to product protection services and risk of electric shock.
6. Bearing overload:Do not place any other weight on this product or make the product suffer a heavy blow and squeeze, so as not to be able to work properly.
7. Anti-lightning:If the product is not used for a long time, or if the weather is expected to change, t hen the risk of a lightning strike will be made, then the plug of the product is recommended to be taken down to prevent the product from being damaged by lightning strike. Maintenance:If the product does not work properly, do not disassemble the shell and try to repair it. Please contact the local dealer maintenance station and send it to maintenance.
Note: The equipment should be connected to the power supply outlet with the protective grounding connection and the power plug and the device coupler as the disconnect ing device, the disconnecting device should be easy to operate.

1-4 Machine panel operation instructions

Touch Panel
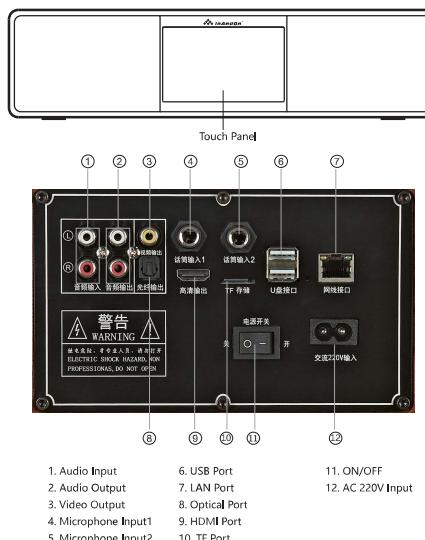
1. Audio Input	6. USB Port	11. ON/OFF
2. Audio Output	7. LAN Port	12. AC 220V Input
3. Video Output	8. Optical Port	
4. Microphone Input1	9. HDMI Port	
5. Microphone Input2	10. TF Port	

1-5 Remote Control instructions

1. Power Switch: Turn on.
2. Mute: mute.
3. Original/Accomp: Change original/ accomp with KOD mode.
4. NEXT: Next song.
5. REPLAY: Replay song.
6. PLAYLIST: Play list.
7. MIC+: Microphone vol+.
8. APPS: Unavailable.
9. MIC-: Microphone vol-.
10. TV: TV mode.
11. VOL+: Volume+.
12. VOL-: Volume-.
13. HOME: Change to Home page.
14. RETURN: Return.
15. UP/DOWN/LEFT/RIGHT: up, down, left, right.
16. OK: Confirm. Keep a few seconds to change Chinese/ English pronunciation.
17. MENU: Menu button.
18. SOUND SOURCE: Unavailable.
19. 0-9: 0-9 button.
20. Priority Microphone: Unavailable.
21. Multimedia: USB Play.

---

2 Instructions for ordering song

2-1 The way of ordering song

Click on the songs you want to play in the songs, songs, new songs, dance music, ratings, hits, categories, high definition, charts, and foreign languages. In the "dot" list, you can view the current on-demand songs and do the "top", "delete", and so on. (Fig 1)

Ordering song: It's a quick way to click on the song, and then pop up the pinyin song and click on the song to find the songs that you want to sing.
Priority: Set this song as a priority, and the song will be played after the song is played.
Favorite: Enter your convenient account password to collect this song, and find a collection of songs in my favorites list.

Fig 1

2-2 Searching instructions

The search method has a song name display page, pinyin, hand-written input relevant song name, find related songs.
Song name: According to the language, it is divided into all languages, mandarin, cantonese, hokkien, English, Japanese, Korean and Vietnamese (Cambodian, Malaysian, Hindi, Thai, Indonesian)
Singer: According to the geographical category, there are mainland male, mainland actress, Hong Kong Taiwan actor, Hong Kong actress, overseas male star, overseas actress, band group and all singers.
New song: According to the language, it is divided into all languages, mandarin, cantonese, hokkien, English, Japanese, Korean and Vietnamese (Cambodian, Malaysian, Hindi, Thai, Indonesian)
Dance: According to the categories of different dance music: hot dancing, disco, tango, cha, cha, Prussia, gitmo, slow.
Ranking list: according to the ranking category is divided into: new song ranking, douyin music ranking, wangyiyun music ranking, QQ music ranking, mandarin, mandarin, Japanese, English, cantonese, and min dialects was out, love song duet ranking.
Hot: According to the music program category: China's voice, I am a singer, I am the song crazy, the all-powerful star war, the most beautiful harmony, the masked king, the dream star partner, China good song.

Category: According to be fond of different categories can be divided into: the film and television, woman, nostalgic mood, love song antiphonal singing songs, network songs, music appreciation, celebration song yao songs, praise to the motherland, the people, foreign language song, dance, disco, spun prairie songs, drama, children's songs, man inn
HD: The high definition songs include mandarin, cantonese, hokkien, English, Japanese, Korean, Vietnamese, and more (Cambodian, Hindi, Thai, Malaysian, Indonesian).
Foreign language: English, Japanese, Korean, Vietnamese, Thai, Russian, Cambodian, Malaysian, Indonesian.
Cloud: The song with cloud on the right of the song is not on the local hard drive, which will be downloaded to the local hard disk and added to the location.

3 Recording

Users can save the songs that they want to store through the USB tray to the USB drive for later viewing.
1. Switch to songs that the user wants to record;
2. Click on the front page to record;
3. Click "microphone" icon to start recording after entering the recording interface;
4. After the recording is completed (and can be manually clicked to save interrupted recording), the recording can be auditioned, deleted, downloaded (copied to usb flash disk) and Shared. (Fig 2)

Fig 2

Fig 3

4 Atmosphere

You can send the image to the song with the specified expression, flower pictures and sound effects. The atmosphere was divided into applause, cheers, whistles, and backlights. (Fig 3)

---

5 Tuning

Click the -Tuning function key in the upper right corner to adjust the tone and sound effects.
Musical pitch: Adjust multiple tones.
Music: Adjustable music related parameters.
Microphone: Adjustable microphone related parameters.
(Fig 4-6)

Fig 4

Fig 5

Fig 6

6 Application

Is not only a Karaoke machine, is family entertainment center, so the android dual system intelligent integration, diversified entertainment, online cinema, cable TV, live events, mobile phone games, add APP, perfect system configuration large storage capacity. (Fig 7)

Fig 7

7 Tool

Click "Tools" for more settings. (Fig 8)

7-1 System Password

You can modify the default: login password of the karaoke machine to make it easier for you to remember.
Each time you set a password, System default password is 347437. (Fig 9)

Fig 8

Fig 9

7-2 Favorite

This function can be used to collect your favorite songs, so that you can click on it later. (Fig 10)
Operation: click the love button below the song name, pop star, ranking list, etc., to collect the love button below the name of the song. If there is no login, it will pop up the password for the account.
Check: click "tools" to enter your own easy log account password into the collection list.

Fig 10

Fig 11

7-3 Change the background

The user can choose the interface U I change mode according to the preference of the user: "service" - "background change" - select the preferred background. (Fig 11)
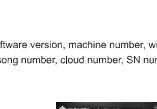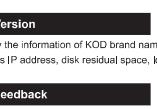
7-4 Version

Display the information of KOD brand name, software version, machine number, wired IP address, wireless IP address, disk residual space, local song number, cloud number, SN number.
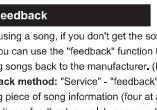
7-5 Feedback

When using a song, if you don't get the song you want to sing, you can use the "feedback" function to feed the missing songs back to the manufacturer. (Fig 12)
Feedback method: "Service" - "feedback" - fill in the missing piece of song information (four at a time) - fill in the Suggestions, feedback people's names, phone Numbers, addresses, etc. "submit".
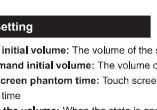
Fig 12

7-6 Setting

Public initial volume: The volume of the song automatically played after startup
On demand initial volume: The volume of the first song when it is launched
Total screen phantom time: Touch screen MT V small window without operation automatic full screen time
Follow the volume: When the state is open, the upper and lower volumes remain unchanged; When the state is closed, the lower bend turns back to the initial volume.

Tool

Follow the original accompaniment: When the state is open, the lower music will keep the accompaniment; When the state is closed, the lower bend becomes the original
HDMI sound: When the state is open, HDMI has sound output; When the state is closed, HDMI output is silent.
Video QR code: When the state is open, the mobile phone is connected to the qr code to display on the song screen. When the state is closed, the song screen does not show the phone to connect the qr code
Recording Volume: 1-5, set the sound size of the recorded song.
Interface output: HDMI output resolution, 1080P and 720P
Shutdown saved point
Yes: the songs that have been left behind in the back of KOD.
No: Have point songs become to blank after start KOD.
Password switch: Yes: Each time you set a password, the default is 347437. **No:** No password is required to enter settings directly.
System upgrade: Fix current version of BUG, add stability and experience the latest functions see 6 for details)
System maintenance: (see 6 for details) (Fig 13)

Fig 13   Fig 14

7-7 Central control

KOD connect the control box can realize service, sound, lighting and other functions
Service: call service, cancel service.
Voice control: control amplifier microphone, volume sound and tone.
Lighting: dynamic, soft, bright, secret, automatic mode, full open, draft mode, full customs.
Sound effects: singing, magic sound, live, KTV.(Fig 14)

7-8 Language

InAndon karaoke machine is a device for users of different nationalities to consider built-in: simplified Chinese (by default), traditional Chinese, English, Japanese, and Korean 5 languages, and users can change the system language on their own.(Fig 15)

Fig 15

Tool & Bluetooth

7-9 Cloud & Cloud Download

The native songs can be downloaded from the cloud. According to the song name search and pop star search, find the song that you want to click on, find the song with cloud icon on the right side of the song, click and download from the cloud to local hard disk and add to the point. Download the progress of the song can be viewed through the cloud download. Users can click on multiple songs to the cloud download list.(Fig 16)
You can "download", "delete download", "first song download" and so on in the "cloud download" interface.
Note: the song is downloaded as a queuing download. Only after downloading the current first song can you download the second song of the current queue automatically.

Fig 16

8 Bluetooth

Open the app and find the bluetooth mode.(Fig 17)
Turn on bluetooth to use.
Bluetooth mode can be divided into transmit mode and receive mode, Can be connected to other put the device.(Fig 18)

Fig 17

Shutdown & WeChat order song & Voice order song

9 Shutdown

Click the shutdown icon on the interface to shutdown.

10 WeChat order song

Turn on the "scan" and use wechat to scanning the QR code show on the screen then you can order songs through our app by Wechat .(Fig 19)
confirm the KOD machine and your mobile phone are connected to the internet before you use this function .

QR code

Fig 18

11 Voice order song

The users can use the microphone (make sure the microphone is connected to the karaoke machine) and say "Xiao Wei、 Xiao Wei" and call for a small secretary. Again, demand. such as
User:"Xiao Wei Xiao Wei"
System respond:"Xiao Wei in"
User:"help me order LIU DE HUA BING YU"
Successfully complete the speech song, also support the normal operation of the volume of the song, and chat with the voice small secretary.

Troubleshooting

Troubleshooting

When the machine malfunction, please check the corresponding item and adjust method, so that can find and solve the problems. If the problems can't solve, please contact the distributor.

Fault Phenomenon	Test Mode	Adjustment Method
Power supply dead	◆ Please check attaching plug whether insert correctly ◆ Please check attaching plug whether have the power supply.	◆ Insert attaching plug correctly ◆ Check the socket whether can work.
No sound output	◆ Whether audio cable is correctly connected	◆ Check connection port and perform correct connection.
Voice irregular or Picture occasionally disappear	◆ Whether the AV/HDMI cable in bad contact ◆ Whether the AV/HDMI cable was damaged	◆ Connect the AV/HDMI cable again ◆ Change the AV/HDMI cable.
No picture	◆ Check the plug whether insert the output port(Video signal)	◆ Press the TV/Video key of the TV ◆ Check the TV electric wire

Specification

Specification

No.	Item	Description
1	Optical output	1
2	Recording port	1
3	Audio port	1 （R/L Channels）
4	Video output port	1
5	Network RJ45 port	1
6	HDMI	1
7	USB port	2
8	Microphone input	2
9	TF card	1
10	Input voltage	AC 100-240V
11	Rated power	45W
12	Amplifier rated power	400W
13	Video output	NTSC, 75Ω, 1VP-P
14	Analog sound output	STEREO R/L, 1KΩ 20HZ-20KHZ
15	Quiet calm tone	-105db
16	VGA output	RGB, 75Ω, MONITOR
17	Optical fiber digital output	Optical fiber output terminal
18	Digital coaxial output	PCM, 91Ω, 0.5VP-P, 0.15-1MHZ
19	Receive	IR38KHZ
20	Distortion	<0.01%
21	Size	680*220*170(mm)
22	Weight	10.5KG

Solemnly declare

1. The machines of this company are divided into with hard disk and without hard disk.
A. This company is the authorized unit of the collective management association of Chinese audio-visual copyright (hereinafter referred to as "the voice collection association"), which legally sells authorized songs. The copy of the copyright song for the sale of the company is attached to the machine, and it is attached with the authorization certificate.
B. to meet customer demand at all levels and factory without hard disk of the machine, the machine without the authorization from the set of marks and authorization certificate, please buy a hard disk and dealers at all levels or users through legal channels to obtain the songs. It is also responsible for its content.
C. This machine includes the function of adding songs. The user can copy the song to the machine hard drive after obtaining the songs through legal channels, and can complete the compilation procedure at the same time.
The company provides the hard disk information to place the instruction files and the track structure information.
2. The company reserves the right to amend the products described in this manual without prior notice. Make necessary changes to the printer's errors and procedures at any time and add new ones;
3. The company reserves the right to upgrade the software, and the final function is based on the actual situation of the karaoke machine. The company has the right of interpretation.

Service Hotline: 400 8368 000

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.