Q68-Max Quick Start Manual

| Product Overview

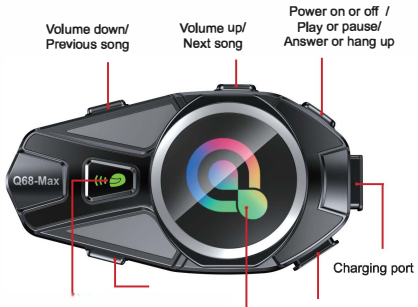

Important Reminder:
Before installing the headset, please connect your mobile phone according to the quick manual guide to test the sound effect and volume.
If there is a big difference in sound effectand volume after installing into the helmet, please adjust the position of the speaker inside the helmet.

Power on/off

Double click to switch voice announcement (Disconnect wireless, Intercom)

Press and hold for 3 seconds to switchon/off → On/Off Tone → Accompanying power on/off animation

Wireless connection

Wireless waiting to pair: Wireless icon flashing slowly → Wireless Mode Tone → **Wireless pairing is successful:** Wireless icon lights up

Intercom pairing

intercom button — intercom button

Intercom pairing status: Intercom icon flashes slowly → Paired cue → **Intercom pairing is successful:** Show intercom connection success icon

After the machine is switched on, the two devices short press the intercom key to enter the intercom pairing, the display intercom icon flashes slowly, the intercom key green LED flashes quickly, after successfulpairing, there will be a beep prompting successful pairing 'intercom connection', the display intercom icon is connected to the success of this time you can two people intercom call, long press to exit the intercom mode

Telephone function

Double-tap to switch manual/ automatic answer(when not connected to wireless, intercom)

- **Automatic** (after 15 seconds) → (Incoming call) Accompanying ring tone → Answer the phone
- Manual answer "short press" → (Incoming call) Accompanying ring tone → Answer the phone
- **Long press** 2 seconds → (Incoming call) → Decline to answer the phone
- "Short press" during a cal → (On the phone) → Hang up the phone
- Double click → Redial the lastnumbe
- Short press → (Making a phone call) → Cancel a call

Music function

- Short press → (while music is paused) → Play
- (while music is playing) → Pause
- Volume down button → (while music is playing) Intercom not connected → Short press previous song
- (while music is playing) → Long press volume down Minimum display of digits 0
- Volume up button → (while music is playing) Intercom not connected → Short press next song
- (while music is playing) → Long press Volume up Maximum number of digits on the display 16

Music radio pairing

Double-click on the 'music broadcast button' to switch to music broadcast mode. → **Music broadcast pairing status:** transmitter icon flashes fast; receiver icon flashes slow → Music broadcast mode tone → **Music broadcast mode pairing is successful:** The receiver displays the Music Radio Connection Success icon

After the two devices are switched on, one mobile phone connects to the device to play music wirelessly the other device double clicks the music broadcast key to enterpairing, the music broadcast icon on the transmitting end flashes fast; the music broadcast icon on the receiving end flashes slowly; after pairing is successful, the music broadcast icon on the receiving end shows that the connection has been successful; in the music broadcasting mode, press 'Music Broadcast Key' briefly to switch between music broadcast receiving mode and music broadcast transmitting mode; double click again to exit music broadcast mode.

Music Sharing

Music sharing button → Intercom and wireless are paired successfully → Navigator / Intercom / Music

Music Sharing Mode: In the state of successful intercomconnection, long press the music sharing button to open the musicsharing, coexist with the intercom, long pressagain to close the music sharing coexistence.
Mixing function: intercom and wireless can work independently without affecting each other, when the intercom and wireless are connected successfully, the sound of the two can be mixed out to the speaker, and you can hear the sound of the two modes at the same time.
Intercom connected to the successful mode, the volume up and down keys operate as follows: ① short press the volume up and down keys to adjust the volume size of the wireless music ② long press the volume up and down keys to adjust the volume size of the intercom ③ double-click the volume up and down keys to switch between the wireless music of the next song and the previous song
Music sharing mode, the volume up and down keys operate as follows: Long press the volume up and down keys to adjust the volume of music sharing and wireless music volume at the same time.

Voice assistant

Short press the 'Voice button' to wake up the voice assistant. → (under successful wireless pairing) → Short press again to exit the voice assistant (Exiting the voice assistant depends on the mobile phone)

FM radio function

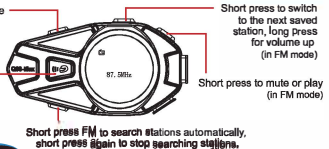

Short press FM to search stations automatically, short press again to stop searching stations. (Auto save after searching) (in FM mode)

Intercom reset

Press and hold SS at the same time to clear all pairing information.

Introduction to wireless intercom connection (Intercom and music sharing are turned off by default every time you switch on the phone)
I. The first time the two machines are connected to talk to each other.After the machine is switched on, the two devices short press the intercom button to enter the intercom mode, the display intercom icon flashes slowly, the intercom button green LED flashes quickly, after successful pairing, there will be a tone prompting successful pairing 'intercom connection', at this time you can two people intercom call.
II.Intercom back to connect: After switching on the machine, both short press the intercom button to enter the intercom mode, the two machines will automatically intercom back to the connection.
III. Clear intercom pairing and restore factory settings: When you switch on the computer without connecting wireless and intercom, press and hold the volume down and volume up buttons at the same time for SS, after the indicator light flashes quickly, it will restore the factory settings and clear all the pairing information.
IV: Music broadcast mode: After the two devices are switched on, one mobile phone connects to the device to play music wirelessly, the other device double clicks the music broadcast button to enter pairing, the music broadcast icon on the transmitting end flashes fast, and the music broadcast icon on the receiving end flashes slowly; accompanied by a tone 'music broadcast receiving mode' or 'music broadcast transmitting mode 'After successful pairing, the music broadcast icon shows successful connection and accompanied by 'music broadcast connection successful beep, the music broadcast sharing is successful.
V: Coexistence of music sharing mode and intercom mode.After the two devices are switched on, the two machineswill be connected and talk to each other successfully; one device will be connected to the mobile phone to play music, and then the music sharing mode and talkback mode will coexist.

Charging function

Red light is always on when charging → (When the device is switched on and the charger is plugged in, the device will automatically switch off) → Lights go out whenfully charged

Product List

Q68-Max Device*1 | Speakers & Microphone*1 | Clip on Base*1
Velcro Package*1 | Type-C Charging Cable*1 | User Manual *1

Caveat

1. To avoid explosion,please do not put the product into the flame;
2. Please do not disassemble the product to avoid damage to the electronic components of the product;
3. Please keep away from sharp objects to avoid damage to the product.;
4. Please keep in a dry place if not used for long time;
5. Before using the wireless device, please fully charge it;
6. If the red light does not come on while charging, it may be the voltage is too low;
7. To extend the life of thebuilt-in lithium polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This product has been tested, meet the restrictions of Class B digital device, pursuant to part 15 of the FCC Rules.
These limits aredesigned to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or tel evision reception.
which can be determined by turning the equipment off and on.
the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna.
-Increase the separation between the device and receiver.
-Connect the device into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user'sauthority to operate thed evice.
This device complies with Part15 of the FCC Rules. The operation needs to fulfil the following two conditions.
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

Q68-Max Hızlı Başlangıç Kılavuzu

| Ürüne Genel Bakış

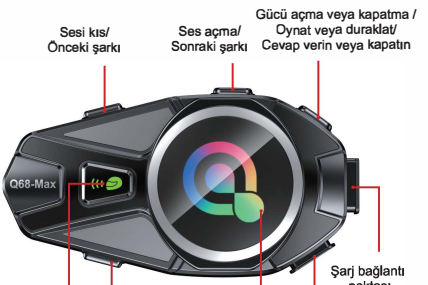

Önemli Hatırlatma:
Kulaklığı takmadan önce, ses efektini ve ses seviyesini test etmek için lütfen cep telefonunuzu hızlı kılavuz kılavuzuna göre bağlayın.
Kaska taktıktan sonra ses efekti ve ses seviyesinde büyük bir fark varsa, lütfen kaskın içindeki hoparlörün konumunu ayarlayın.

Güç açma/kapama

Ses değiştirmek için çift tıklayın duyuru (Bağlantıyı Kes kablosuz, interkom)

3 saniye basılı tutun açmak/kapatmak için → Açma/Kapama Tonu → Açma/kapama animasyonu eşliğinde

Kablosuz bağlantı

Kablosuz eşleşmeyi bekliyor: Kablosuz simgesi yavaşça yanıp sönüyor → Kablosuz Mod Tonu → **Kablosuz eşleştirme başarılı:** Kablosuz simgesi yanar

İnterkom eşleştirme

Interkom düğmesi — Interkom düğmesi

İnterkom eşleştirme durumu: İnterkom simgesi yavaşça yanıp söner → Eşleştirilmiş işaret → **İnterkom eşleştirmesi başarılı:** İnterkom bağlantı başarı simgesini göster

Makine açıldıktan sonra, iki cihaz interkom eşleştirmesine girmek için interkom tuşuna kısa basın, ekran interkom simgesi yavaşçayanıp söner, interkom tuşu yeşil LED'i hızlıca yanıp söner. başarılı eşleştirmeden sonra, başarılı eşleştirme 'interkom bağlantısı' isteyen bir bip sesi duyulur, ekran interkom simgesi bağlanır Bu sefer iki kişi interkom göğşmesi yapabilir, interkom modundan çıkmak için uzun basın

Telefon fonksiyonu

Manuel/otomatik cevaplamayı **değiştirmek için çift** dokunun (kablosuz, interkomu bağlı değilken)

- **Otomatik** (15 saniye sonra) → (Gelen arama) Eşlik eden zil sesi → Cevap telefon
- Manuel cevap "kısa basın" → (Gelen arama) Eşlik eden zil sesi → Cevap telefon
- 2 saniye uzun basın → (Gelen arama) → Reddetmek telefona cevap ver
- "Kısa basın" bir arama sırasında → (Telefonda) → Telefonu kapat
- Çift tıklama → Son numarayı yenidenarama
- Kısa basın → (Telefon görüşmesi yapıyor) → Bir aramayı iptal etme

Müzik fonksiyonu

- Kısa basın → (müzik duraklatılmışken) → Müzik çalın
- (müzik çalarken) → Duraklat
- Ses kısma düğmesi → (müzik çalarken) İnterkom bağlı değil → Kısa basın önceki şarkı
- (müzik çalarken) → Sesi kısmaya uzun basın Rakamların minimum gösterimi 0
- Ses açmadüğmesi → (müzik çalarken) İnterkom bağlı değil → Kısa basın sıradaki şarkı
- (müzik çalarken) → Sesi açmaya uzun basın Maksimum basamak sayısı ekranda 16

Müzik radyo eşleştirmesi

'Müzik' üzerine çift tıklayın yayın düğmesine' geçmek için müzik yayını modu. → **Müzik yayını eşleştirme durumu:** verici simgesi hızlı yanıp söner; alıcı simgesi yavaş yanıp söner → Müzik yayını mod sesi → **Müzik yayını modu eşleştirme başarılı:** Alıcı, Müzik Radyo Bağlantısı Başarı simgesi

İki cihaz açıldıktan sonra, bir cep telefonu kablosuz olarak müzik çalmak için cihaza bağlanır, diğer cihaz eşleştirmeye girmek için müzik yayını tuşuna çift tıklar, verici uçtaki müzik yayını simgesi hızlı yanıp söner; alıcı uçtaki müzik yayını simgesi yavaş yanıp söner; eşleştirme başarılı olduktan sonra, alıcı uçtaki müzik yayını simgesi bağlantının başarılı olduğunu gösterir; müzik yayını modunda, müzik yayını alma modu ile müzik yayını gönderme modu arasında geçiş yapmak için 'Müzik Yayını Tuşu'na kısacabasın; müzik yayını modundan çıkmak içintekrar çift tıklayın.

Müzik Paylaşımı

Müzik paylaşım düğmesi → İnterkom ve kablosuz başarıyla eşleştirilir → Navigatör / İnterkom / Müzik

Müzik Paylaşım Modu:Başarılı interkom bağlantısı durumunda, müzik paylaşımını açmak için müzik paylaşım düğmesine uzun basın, interkom ile bir arada bulunun, müzik paylaşımını bir arada kapatmak için tekrar uzun basın.
Karıştırma işlevi: interkom ve kablosuz birbirini etkilemeden bağımsız olarak çalışabilir, interkom ve kablosuz başarılı bir şekilde bağlandığında, ikisinin sesi hoparlöre karıştırılabilir ve iki modun sesini aynı anda duyabilirsiniz.
İnterkom başarılı moda bağlandığında, ses açma ve kısma tuşları aşağıdaki gibi çalışır: ① kablosuz müziğin ses boyutunu ayarlamak için ses açma ve kısma tuşlarına kısa basın ② interkomun ses boyutunu ayarlamak için ses açma ve kısma tuşlarına uzun basın ③ sonraki şarkının ve önceki şarkının kablosuz müziği arasında geçiş yapmak için ses açma ve kısma tuşlarına çift tıklayınyes to switch between the wireless music of the next song and the previous song
Müzik paylaşım modunda, ses açma ve kısma tuşları aşağıdaki gibi çalışır:Müzik paylaşımı ve kablosuz müzik ses seviyesini aynı anda ayarlamak için ses seviyesi artırma ve azaltma tuşlarına uzun basın.

Sesli asistan

'Ses düğmesine' kısa basın sesli asis tanı uyandırmakiçin. → (başarılı kablosuz eşleştirme altında) → Sesli asistandan çıkmak için tekrar kısa basın (Sesli asistandan çıkmak şunlara bağlıdır ceptelefonunda)

FM radyo fonksiyonu

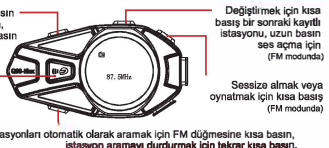

İstasyonları otomatik olarak aramak için FM düğmesine kısa basın, istasyon aramayı durdurmak için tekrar kısa basın. (Aramadan sonra otomatik kaydetme) (FM modunda)

İnterkom sıfırlama

SS düğmesini basılı tutun hepsini temizlemek için aynı anda Eşleştirme bilgileri.

Ses açma düğmesi — Sesi kısın düğme

Kablosuz interkom bağlantı işlemine giriş (Telefonu her açtığınızda interkom ve müzik paylaşımı varsayılan olarak kapatılır)
I. İki makine birbiriyle konuşmak için İlk kez bağlandığında
Makine açıldıktan sonra, iki cihaz interkom moduna girmek için interkom düğmesine kısa bir süre basar, ekran interkom simgesi yavaşça yanıp söner, interkom düğmesi yeşil LED'i hızlı bir şekilde yanıp söner; başarılı eşleştirmeden sonra, başarılı eşleştirme 'interkom bağlantısı' isteyen bir ton olacaktır, şu anda iki kişi interkom görüşmesi yapabilir.
II: İnterkom geri bağlanmak için
Makineyi açtıktan sonra, her ikisi de interkom moduna girmek için interkom düğmesine kısa süre basın, iki makine otomatik olarak bağlantıya geri dönecektir.
III. Interkom eşleştirmesini silme ve fabrika ayarlarını geri yükleme
Kablosuz ve interkom bağlantısı olmadan bilgisayarı açtığınızda, SS için ses kısma ve ses açma düğmelerini aynı anda basılı tutun, gösterge ışığı hızlı bir şekilde yanıp söndükten sonra fabrika ayarlarını geri yükleyecek ve tüm eşleştirme bilgilerini temizleyecektir.
IV: Müzik yayınımodu
İki cihaz açıldıktan sonra, bir cep telefonu kablosuz olarak müzik çalmak için cihaza bağlanır, diğer cihaz eşleştirmeye girmek için müzik yayını düğmesine çift tıklar, verici uçtaki müzik yayını simgesi hızlı yanıp söner ve alıcı uçtaki müzik yayını simgesi yavaş yanıp söner; bir ton eşliğinde 'müzik yayını alma modu' veya 'müzikyayını iletme modu' Başarılı eşleştirmeden sonra, müzik yayını simgesi başarılı bağlantıyı gösterir ve 'müzik yayını bağlantısı başarılı' bipsesi eşliğinde müzik yayını paylaşımı basarılıdır.
V: Müzik paylaşım modu ve interkom modunun bir arada bulunması
İki cihaz açıldıktan sonra, iki makine birbirine bağlanacak ve birbiriyle başarılı bir şekilde konuşacaktır; bir cihaz müzik çalmak için cep telefonuna bağlanacak ve ardından müzik paylaşım modu ve talkback modu bir arada bulunacaktır.

Şarj fonksiyonu

Şarj olurken kırmızı ışık her zaman yanar → (Cihaz açıldığında ve şarj cihazı takılı olduğunda, cihaz otomatik olarak kapanır) → Tam şarj olduğunda ışıklar söner

Ürün Listesi

Q68-Max Cihaz*1 | Hoparlörler & Mikrofon*1 | Klipsli Taban*1
Velcro Paket*1 | C Tipi Şarj Kablosu*1 | Kullanıcı Kılavuzu *1

Uyarı

1. Patlamayı önlemek için lütfen ürünü alevin içine koymayın;
2. Ürünün elektronik bileşenlerinin zarar görmesini önlemek için lütfen ürünü sökmeyin;
3. Ürünün zarar görmesini önlemek için lütfen keskin nesnelerden uzak tutun;
4. Uzun süre kullanılmayacaksa lütfen kuru bir yerde saklayın
5. Kablosuz cihazı kullanmadan önce lütfen tamamen şarj edin;
6. Şarj olurken kırmızı ışık yanmazsa, voltaj çok düşük olabilir
7. Dahili lityum polimerpilin ömrünü uzatmak için lütfen cihazı ayda en az bir kez şarj edin.