Onn 5.1.2 Atmos Soundbar

Model: 100002634

User Manual

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on the equipment.

DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to, equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.

DON'T use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.

ABOVE ALL

– NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock.

– NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused - resulting in leakage or, in extreme cases, fire or explosion.
Here are some simple guidelines to safe battery use designed to eliminate any such problems.

Take care to fit your batteries correctly; observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion.
Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion.
Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.
Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage.
Never dispose of batteries in fire as this can cause them to explode. Please recycle dead batteries; do not put with the normal household waste.
Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such.
Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed.
Make sure battery compartments are secure.

DOLBY ATMOS Apple AirPlay Bluetooth HDMI

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Walmart Inc. is under license. Other trademarks and trade names are those of their respective owners.

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage
- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit
- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.

Temperature
- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames
- Never place any type of candle or naked flame on the top of or near the unit.

Moisture
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Mains Adapter
- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the adapter plugged in the mains socket while for long periods of time. Disconnect the adapter from the power supply.

Safety
- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket before a lightning storm.

Mains Adapter Cable
- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.

Interference
- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries
- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Please dispose of batteries correctly by following the guidance in this manual.

Supervision
- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service
- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance
- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.
- No naked flame sources,such as lighted candles, should be placed on the apparatus.
- Aucune source de flamme nue, telle que des bougies allumées, ne doiktre placé sur l'appareil.

CAUTION: Risk of explosion if the battery is replaced by an incorrect type;
CAUTION: replacement of a battery with an incorrect type that can defeat a safeguard;
CAUTION: disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
CAUTION: leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
CAUTION: a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;

Where a plug on the power supply cord is used as the disconnect device, the installation instructions shall state that for pluggable equipment, the socket-outlet shall be easily accessible. For pluggable equipment intended for installation by an ordinary person, the installation instructions shall be made available to the ordinary person.

Service

How to get service:
- Call 1-800-925-6278. contact:Walmart Inc. Walmart.com,Bentonville,AR 72716
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart, Inc. based upon the Walmart, Inc. Limited Warranty Statement.
- At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- Onn 5.1.2 Atmos Soundbar **that has been modified or incorporated into other products.**
- A unit purchased or serviced outside the USA.
- A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

FCC Statement:
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure.

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

FCC RF Radiation Exposure Statement Caution:To maintain compliance with the FCC'S RF exposure guidelines,place the product at least 20cm from nearby persons.
working ambient 0℃ ~35℃ , voltage input range 100V~240V.
Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE).
The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.
We continually strive to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

Warranty

Walmart , Inc. Limited Warranty

LIMITATION OF WARRANTY
- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

How State Law relates to this warranty:
- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or seek warranty coverage outside the United States: This warranty does not apply. Contact your store for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Thank you for purchasing your new **Onn 5.1.2 Atmos Soundbar**

We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

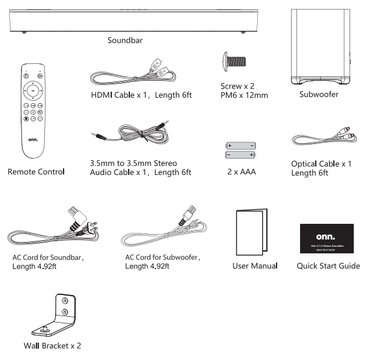

www.walmart.com

Product Overview

Front View

1. Standby indicator 2. Front panel display 3. Remote control sensor

Remote control sensor: Receives signal from the remote control.

Top View



1. ⏻ Power 2. Source 3. VOL-
4. VOL+ 5. ⏯ Play/Pause

1. Switches the unit between ON and OFF modes.
2. Press to change source input from ARC→HDMI 1→HDMI 2→HDMI3→BT →AUX→OPTICAL→USB→ARC.
3. Decreases the volume.
4. Increases the volume.
5. Play/Pause function in USB/BT/Wifi(AirPlay 2) Mode.

Bottom View



1. AUX IN PORT 2. OPTICAL PORT 3. LAN PORT
4. USB PORT 5. HDMI OUT(eARC) PORT 6. HDMI IN 3 PORT
7. HDMI IN 2 PORT 8. HDMI IN 1 PORT 9. AC IN

Rear View of Subwoofer

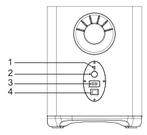

1. **POWER Indicator**
Light up orange when the pairing succeed

2. **PAIR**
Pair with the soundbar

3. **AC 100-240V**
Power Socket

4. **On/Off Switch**
Switch the subwoofer On or Off

Remote Control

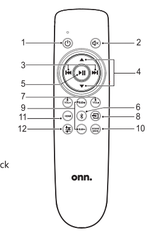

1. ⏻ **Power**
Switches the unit between ON and OFF modes.

2. 🔇 **Mute**
Mute the sound or resume the sound

3. ⏮ / ⏭ **Previous/Next**
Short press to control previous/next track

4. ▲/▼ **Up/Down**
In channel control，Increase/Decrease the volume for Treble/FL&FR/Center/Top L&R/Side L&R

5. ⏯ **Play/Pause**
Press to start play/pause in USB/BT/WIFI playback

6. **Bluetooth mode**
Press to enter Bluetooth mode, in this mode, long press to enter Bluetooth pairing mode

7. **Vol + -**
Press to Increase/Decrease volume, hold to Increase/decrease volume continually

8. **Source**
Press to change source input from Optical→ USB→ AUX→ Optical

9. **SUB + -**
Press to Increase/Decrease BASS level

10. **Sound mode**
Press to change sound mode from Standard → Movie → Music

11. **HDMI mode**
Press to change HDMI source，ARC→ HDMI 1→ HDMI2→ HDMI3→ ARC

12. **Channel controls**
Press to enter each channel(FL&FR....)

Preparation

Battery Replacement for the Remote Control

1. Press and slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure the (+) and (–) ends of the batteries match the (+) and (–) ends indicated in the battery compartment.
3. Close the battery compartment cover.

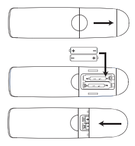

Connections

Using the AUX Connection

Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV' s audio output socket to the soundbar' s AUX IN socket.

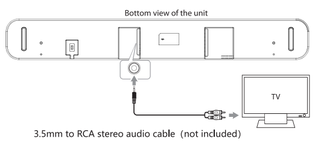

3.5mm to RCA stereo audio cable（not included）

Or use a 3.5mm to 3.5mm stereo audio cable (included) to connect the TV' s headphone socket to the soundbar' s AUX IN socket.

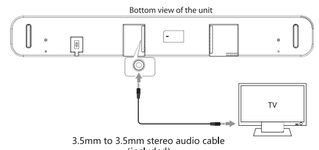

3.5mm to 3.5mm stereo audio cable (included)

Using the OPTICAL Connection

Use an OPTICAL cable（included）to connect the TV's OPTICAL socket to the soundbar's OPTICAL socket.

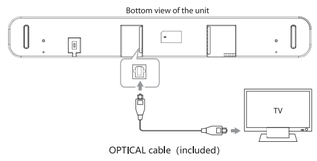

OPTICAL cable（included）

Using the HDMI Connection

Connecting with a TV

If you connect this unit to a TV that supports HDMI CEC and eARC (Enhanced Audio Return Channel), you can enjoy the TV audio through the speakers of this unit without connecting the optical cable.

The eARC function enables an HDMI capable TV to send the audio stream to HDMI (eARC) of the unit.

Use an HDMI cable(included) to connect the TV's eARC socket to the soundbar's HDMI OUT(eARC) socket.

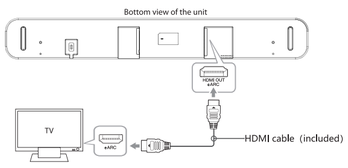

Connecting with a TV and other devices

1. Connect HDMI IN socket on the back of the unit to HDMI OUT socket on the external device such as PS4 XBOX DVD player etc.
2. Connect HDMI OUT (eARC) socket on the back of the unit to HDMI IN (eARC) socket on the TV.
3. Set the input source to HDMI1,HDMI2 or HDMI3/eARC Press repeatedly HDMI Button on the remote control or Source Button on the unit until the function is selected.

You can enjoy DOLBY ATMOS contents if connecting normally between this soundbar and your TV.

Caution：DOLBY ATMOS supports 5.1.2 channel .This unit supports 4K pass through When you play a disc which has a 4K video signal this unit delivers the signal to your TV.
If the sound bar does not have sound or the video on TV is not smooth, the HDMI cable may be the problem.

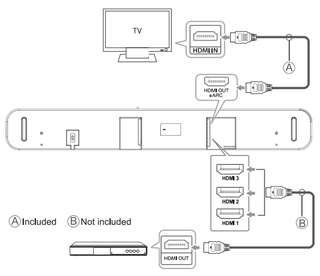

Using the LAN connection

Use an LAN cable（not included）to connect the router's LAN socket to the soundbar's LAN socket.
The following illustration is the example for connection of the system to your home network.

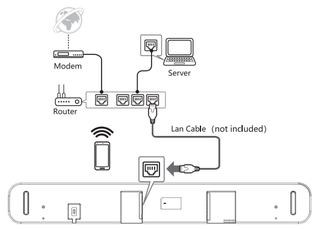

Using the USB Connection

1.Play music
Use a USB flash disk connect to USB IN socket of soundbar.



Establish Bluetooth connection

1. When unit power on，press ⏻ on soundbar change to Bluetooth mode，display "BT" lighting 3s.In this mode, long press ⏻ 3s to enter Bluetooth pairing mode. If hold ⏻ on the soundbar 5s,will clear previous paired devices and goes to pairing mode.

2. When unit power on,press ᛒ on remote control change to Bluetooth mode, display "BT" lighting 3s. In this mode, long press to enter Bluetooth pairing mode, the display will show "PAIRING".

3. Select the Bluetooth search function on your device，your device should discover the soundbar which is called Onn 5.1.2 Soundbar.

4. Select Onn 5.1.2 Soundbar, your device is paired with the soundbar when display "PAIRED"lighting.

5. After the speaker and your device are paired，you can stream music from your device to the Soundbar.

AirPlay 2

To control this AirPlay 2 enabled speaker, iOS 11.4 or later is required on your device.

Set up your device in the Apple Home app located on your iPhone or iPad

1. Connect your iOS device to the WiFi
2. Follow the Apple Home app configure process

Ⅰ Open Apple Home app.
Ⅱ Click the "+" icon , select "Add Accessory"
Ⅲ Click "Don't Have a Code or Can't Scan"
Ⅳ Search the device and when you find the device, click the device name.
Ⅴ When prompted "Add Accessory to Network" click Allow
Ⅵ Waiting for network connection.
Ⅶ After networking successfully, Accessory Added.
Ⅷ Go to My Home, you can find there has a new device that you added.

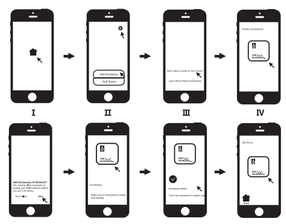

3.When Soundbar has connected to the network, AirPlay music to Soundbar :
Ⅰ Select one music player, such as Apple music app, Click the AirPlay icon.
Ⅱ Select the device name and click to connect, Play control when casting,like volume down/up, play/pause, prev/next etc.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Selecting the Sound Effect

You can easily enjoy pre-programmed sound effects that are tailored to different kinds of sound sources.
Press sound mode button repeatly on the remote control until the sound effect you want.

Sound effect	On display	Description
Standard	STD	You can enjoy optimized sound
Movie	MOVIE	You can enjoy more immersive and cinematic surround sound
Music	MUSIC	You can enjoy more good sound for music source

Specification

Sound effect	Source	Input	Output
Standard	HDMI AUX Optical	2.0Ch	5.1.2Ch
		5.0Ch	5.1.2Ch
		5.1Ch	5.1.2Ch
		7.1Ch	5.1.2Ch
	Bluetooth USB AirPlay	2.0Ch	3.1Ch
		5.0Ch	3.1Ch
		5.1Ch	3.1Ch
		7.1Ch	3.1Ch
Movie	HDMI AUX Optical	2.0Ch	5.1.2Ch
		5.0Ch	5.1.2Ch
		5.1Ch	5.1.2Ch
		7.1Ch	5.1.2Ch
Music	HDMI AUX Optical	2.0Ch	5.1.2Ch
		5.0Ch	5.1.2Ch
		5.1Ch	5.1.2Ch
		7.1Ch	5.1.2Ch

Connecting to the Power outlet Supply

· This unit is designed to operate with the provided AC cord.
· Connecting the unit to any other power source may damage the unit. Unwind the AC cord to its full length. Connect the end of the cable to the AC IN Socket at the bottom of the unit and then connect the power cord cable to the Power outlet Make sure the AC cord is firmly inserted into the Power outlet.
The unit is now connected and ready to use.
· To switch the unit off completely, unplug the AC cord from the Power outlet.

Ensure all audio connections of the unit are connected before connecting to the AC socket.

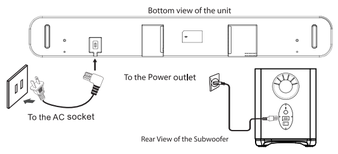

Subwoofer connection

Connect the AC cord to the subwoofer. Turn on the unit. The orange light on the rear panel will flash to indicate pairing mode, light will become solid once the subwoofer is paired to the soundbar.

1.When AC cord insert AC socket, open the rocker switch on the rear panel, the orange light which is on the rear panel, flashing to show pairing,it will become solid light when subwoofer connect with soundbar automatically.
2.When soundbar shut down or enter the standby mode, subwoofer also enter the standby mode automatically, the light is off.
3.If the subwoofer is not connected, display shows CHK SUB flashing in 20s and then back to the current channel, the fifth meter show '--' in 10S.
4.In case of subwoofer automatic pairing fails with soundbar, you should attempt to manual pairing.Hold Source and Vol+ on the soundbar together 3S,display CNCT SUB fast flashing, then hold PAIR button on the subwoofer 3S,the LED light fast flashing, the subwoofer pairing and success after about 2S.

General Operation

When you first connect the unit to the Power outlet,the unit will be in OFF mode. NO display on the LED screen.

1.Press ⏻ on the unit or the remote control to switch the unit to ON mode .The screen display "WELCOME" , the LED display will shut down without any operation in 10S, enter the dormant state, only the fifth meter of the screen retain the word "--" . At same time,the red indicator slow flash to indicate wifi starting up lasting 15 minutes if network not set up and then off.And if it is set up before that,the indicator should be switched off as well once the device has been joined to the wifi network.
2.Press ⏻ again to shut down. The screen will display "GOODBYE" then off, system will go to standby mode. In standby mode there is a red led indicator will lit on.
3.If no input ,no operation and silent state after 10 minutes, soundbar goes into standby automatically.
4.Disconnect the mains plug from the Power outlet if you want to switch the unit off completely.

LED Screen activity

Bluetooth
Bluetooth mode: the screen display "BT"
Bluetooth is pairing: the screen display "PAIRING"
Bluetooth is paired: the screen display "PAIRED"
Bluetooth disconnected:the screen display "UNPAIRED"

AUX IN: the screen display "AUX"
Optical: the screen display "OPTICAL"
HDMI: the screen display "HDMI 1" , "HDMI 2" or "HDMI 3"
ARC: the screen display "ARC"
USB: the screen display "USB"
AirPlay 2: the screen display "WIFI"

Adjusting the Volume

MASTER VOLUME
Press VOL +/- on the unit or the remote control to adjust the volume（Volume range Min.,1 to 39,Max）.
If you wish to turn the sound off, press🔇on the remote control.Press🔇again to resume normal listening.

SUB VOLUME
Short press 'SUB+' / 'SUB-' on the remote control to adjusting SUB volume（Volume range Min.,-9 to 9,Max）.

You can adjust the sound level of treble and other Channel volume.
1. Press ⚙ button repeatedly on remote to select the channel you want to adjust.
2. Press ▲/▼ button to adjust the sound level.

Channel	Display	Range
Treble	TREB	Min.,-9 ~ 9,Max.
Front left and right channels	FLnR	Min.,-5 ~ 5,Max.
Top left and right channels	TLnR	Min.,-5 ~ 5,Max.
Side left and right channels	SLnR	Min.,-5 ~ 5,Max.
Center channel	CEN	Min.,-5 ~ 5,Max.

Source change

- WiFi streaming: Once detect signal from AirPlay 2 , auto switch to WiFi mode to play music. In standby mode, still can detect signal and wake up to stream music.
- Bluetooth: In Bluetooth mode, once unit be paired with device, can play music, if WiFi is playing music, stop or pause WiFi playing first.

Factory Default Resetting

- Holding vol-&vol+ at the same time for 3s to reset the soundbar, and display RESET, then return ARC mode in 10S.

Handling the Battery
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Remote Control Operation Range

- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away and within a maximum of a 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

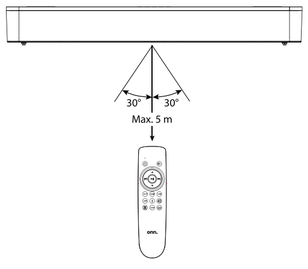

Placement

Place your Soundbar and Subwoofer as shown below.

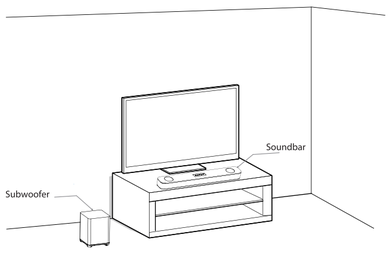

Note: Soundbar should not block the TV's remote control sensor.

Wall Mounting

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

1. Drill 4 parallel holes(φ8mm each according to wall type) in the wall.The distance between the left and right holes should be 814mm.And the distance between the upper and lower holes should be 20mm.



2. Firmly fix 1 dowel D10.2*L30mm (not included) into each hole in the wall if necessary.

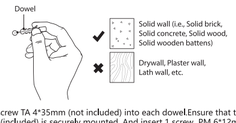

3. Insert 1 screw TA 4*35mm (not included) into each dowel.Ensure that the wall brackets (included) is securely mounted .And insert 1 screw PM 6*12mm (included) into each threaded hole at the bottom of the soundbar.

Caution:Ensure that the front panel should not face the wall during installation.



Maintenance

Cleaning the Unit

Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Attaching Self Adhesive Pads

- Peel back the adhesive cover on the foot pad.
- Align and attach the adhesive side of the pad to the foot pad cutaway section on the bottom of the soundbar.
- Press the pads firmly to ensure they are well secured.

Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table contains various tips:

Problem	Solution
No power.	•Ensure the AC cord is connected securely at both ends. •Make sure that the ON mode is selected.
The remote control is not functioning.	•Use the remote control near the unit. •Point the remote control at the remote sensor on the unit. •Replace the battery in the remote control with a new one. •Remove any obstacles between the remote control and the unit.
Loud hum or noise is heard.	• The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non-abrasive cleaning solution.
Cannot connect to Wi-Fi	•Make sure that the wireless network