PRONTOTEC

AXIUS series
User Manual

Product Name: Tablet PC
Model: Axius
Trade Mark: prontotec
Manufacturer: Shenzhen Citus Technology Co.,Ltd
B09-10, Shenzhen International E-Commerce Base,
No.101 Huanguan South Rd, Longhua, Shenzhen, Guangdong, PRC

Q8 Tablet : Front View

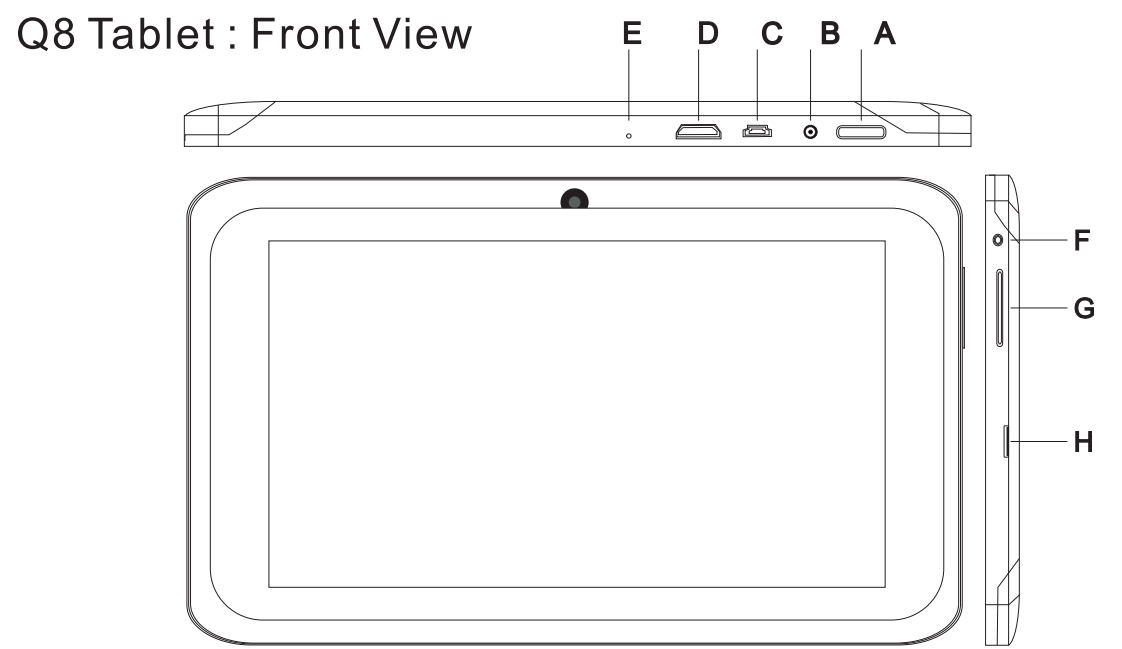

Q8 Tablet : Back View

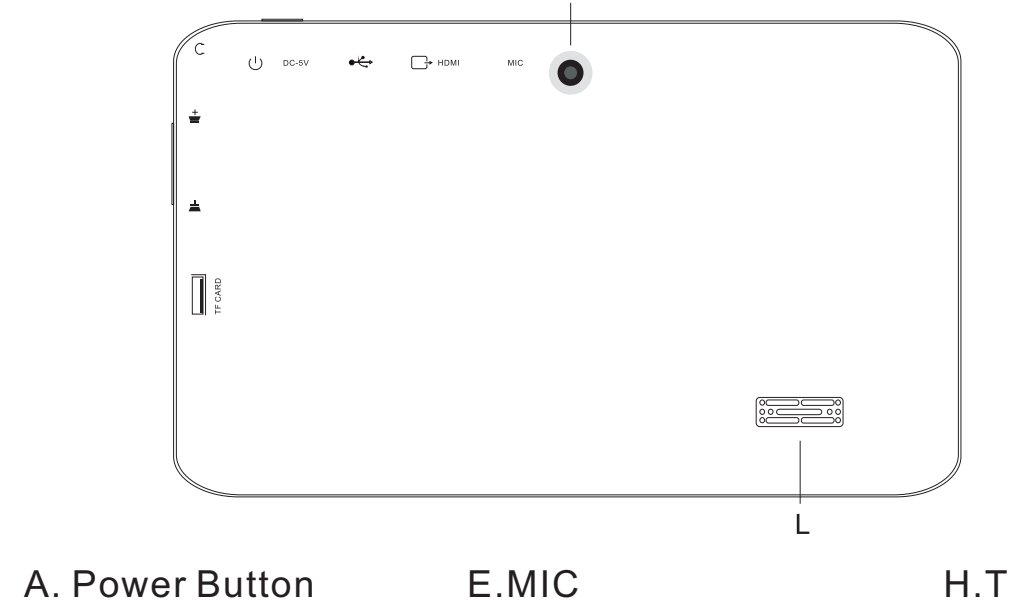

A. Power Button
B.Charging Jack
C.Mini USB Port
D.HDMI
E.MIC
F.Earphone Jack
G.Volume Buttons
H.TF Slot
J.Camera
L.Speaker

Safety Precautions

Make sure to charge the battery to full for first time usage.
Please don't use tablet PC while charging.
Disconnect the charger before use.
Do not use the Device if the screen is cracked or broken.
Cracked and / or broken screens could cause injury.
To reduce the risk of motion injuries:
While using your tablet PC, hold it with a relaxed grip and hold with two hands.
Do not handle the tablet PC with wet hands.
Use hands-free accessories.
Switch off the tablet PC before cleaning it.
Keep your tablet PC and all accessories out of reach of small children and animals.

Careful Handling

Avoid potential damage to your tablet PC as under:
Keep away from liquids.
Avoid using and / or storing in dusty and / or dirty places / environments.
Do not drop, knock, throw or otherwise handle the tablet PC roughly.
Avoid exposing your tablet PC to extreme temperatures.
Extre me temperatures reduce the charging capacity and life of batteries and tablet PC.
Never use damaged chargers. Use only approved chargers.
Use Fiber cloth which is provided with tablet PC.

Turn Off In Restricted Areas:
Use of tablet PC in certain areas / places / conditions can be hazardous.
Switch off your tablet PC.

System Icons

in Andriod 4.2

- APPS & WIDGETS
- WIFI Signal
- Battery Status
- USB Connected
- Recently Runed Apps
- Back
- Home/Desktop
- Menu
- Volume Plus
- Volume Minus
- Screenshot

Basic Operation

Switch On/Off

You must fully charge your tablet before using for the first time.

Switch On and Unlock: When the device is in the OFF mode, press and hold "Power" key for 3 seconds to enter the Android startup progress bar, it need about 20 seconds enter to the system desktop, when the LCD is under locked mode,please press and Drag the icon to the Right side unlock point,then the LCD will automatically.

Internet Browser

- Before you use internet browse function, please make sure your network is connected. See network access guidance in former part.
- Click IE Browser icon to enter to the IE interface, click the address bar and input website and click go to enter a corresponding web page,you can view the corresponding website information.
- Click icon to view bookmark and history record.
- Click menu icon to access settings.
- The device also supports other internet browsers, detail functions of those internet browsers refer to their own instructions.

Storage File Copy

- Connect the device to computer by USB Cable, there will be notification in the status bar that USB connected.
- Choose USB Connected.
- Choose USB Connected. Then, Turn on USB storage. Then you can find the table device on your computer.

System Settings

Data Usage: It provides a graphical representation of the data usage for a specified Data Usage cycle through Mobile Internet or Wi-Fi.

More-VPN: VPN stands for Virtual Private Mode. Using this feature, you can connect to your private network through a public network in a secured way. You can add a VPN connection,customize it as per your requirement and then save the settings.
Once the network is created, select the network again to connect to it.

Portable hotspot: Using hotspot, you can share your mobile network wit other wifi enabled devices.

- Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by your wireless operator.

Sound Setting: You can adjust Volume, Screen locks sound, and touch sound.

Display Setting: You can adjust Brightness, Auto-rotate screen, Animation, Sleep mode, Wallpaper, Font size, Accelerometer coordinate system.

HDMI Setting: You can choose HDMI on or off, and adjust the resolution, screen zoom, screen timeout.

Sreenshot setting: you can set the location of screenshot , storage choose to show the screenshot button in the status bar or not.

Storage Setting: In this setting, you can check storage use and Mount & Erase TF cards.

Notice: Before you fetch out TF Card (if you have inserted TF card),please Unmount TF card first, in case that some

Battery: It gives you the current battery level, along with the distribution of battery consumption by different apps.

Applications Setting: You can manage applications here, and check storage & battery usage.

Notice: If you want to install applications which are not downloaded from Google Android Market, you should turn on Unknown sources in advance.

Accounts & Sync Setting: In this setting, you can manage accounts in the device.

Location service: In this setting, you can set up Google location service And Location & Google search; Location & Google search

WiFi

Turn WiFi on connect to a WiFi Network

If you're adding a WiFi networkwhen first setting up your device,WiFi is turned on automatically.
1.Touch the setting icon on desktop or in APPS.
2.Touch Wireless & Network>WiFi.
3.Slide the WiFi switch to the "On" position.

The device scans for available WiFi networks and displays the names of those it finds Secured network are indicated with a Lock icon.If the device finds a network that you connected to previously,it connects to it.

4.Touch a network name to see more details or connect to it. If the network is secured you're prompted to enter a password or other credentials.

(Ask your network administrator for details.)
To modify a network's settings,touch&hold the network name.

Add a WiFi Network

You can add a WiFi network so your device will remember it, along with any securitry credentials, and connect to it automatically when it's in range. You must also add a WiFi network if the network does not broadcast its name (SSID), or to add a WiFi network when you are out of range.

To join a secured network, you first need to learn security detailsfrom the network's administrator.
1.Turn on WiFi, if it's not already on.
2.In the WiFi settings screen, touch Add Network.
3.Enter the SSID(name) of the network. If necessary,enter security or other network contiguration details.
4.Touch Save.
The information about the network is saved. Your device will connect to this network automatically the next time you can within range.

File Manager

1. Touch the File Manger icon. You will see from left to right at the top of screen command buttons of back,internal storage, external SD-CARD,usb,Image,Video,tool box and copy-paste.
2. Long touch a file. A menu will pop up. There are options of Delete File, Rename File, Copy File,Move(Cut) File and Emaile File.
3. Long touch a folder. Amenu with options of Delete Folder, Rename Folder, Copy Folder, Move(Cut) Floder,Zip Folder, Paste Folder, Copy Folder, Move(Cut) Floder,Zip Folder, Paste into folder and Extract here.

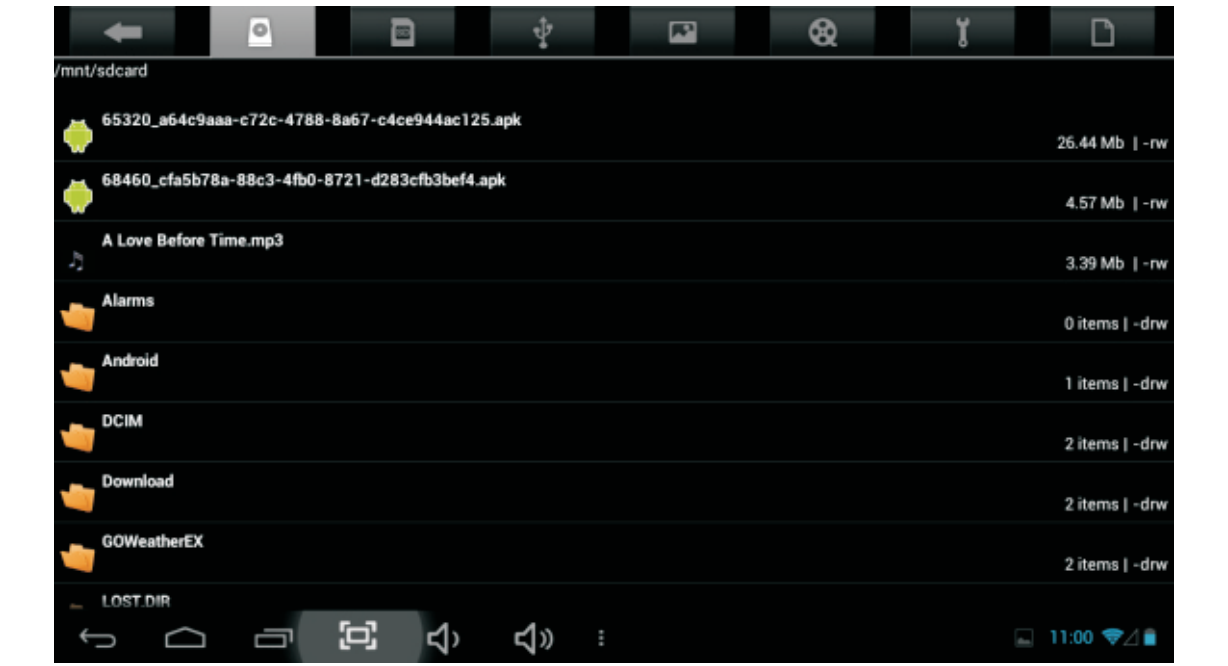

```
/mnt/sdcard
65320_a64c9aaa-c72c-4788-8a67-c4ce944ac125.apk    26.44 Mb | -rw
68460_cfa5b78a-88c3-4fb0-8721-d283cfb3bef4.apk    4.57 Mb | -rw
A Love Before Time.mp3                            3.39 Mb | -rw
Alarms                                            0 items | -drw
Android                                           1 items | -drw
DCIM                                              2 items | -drw
Download                                          2 items | -drw
GOWeatherEX                                       2 items | -drw
LOST.DIR
11:00
```

4. How to cut a file to a folder? Long touch the file. Touch Move (Cut) File in the popped-up menu. Long touch the floder where you want to move the file to. Touch Paste into folder .
5. How to copy several files to a folser once? Touch the copy-paste in the top-right corner. Select files you want to copy one by one.
Touch copy the file to. Touch again the copy-paste in the top-right corner .Touch Paste in the menu at the bottom.

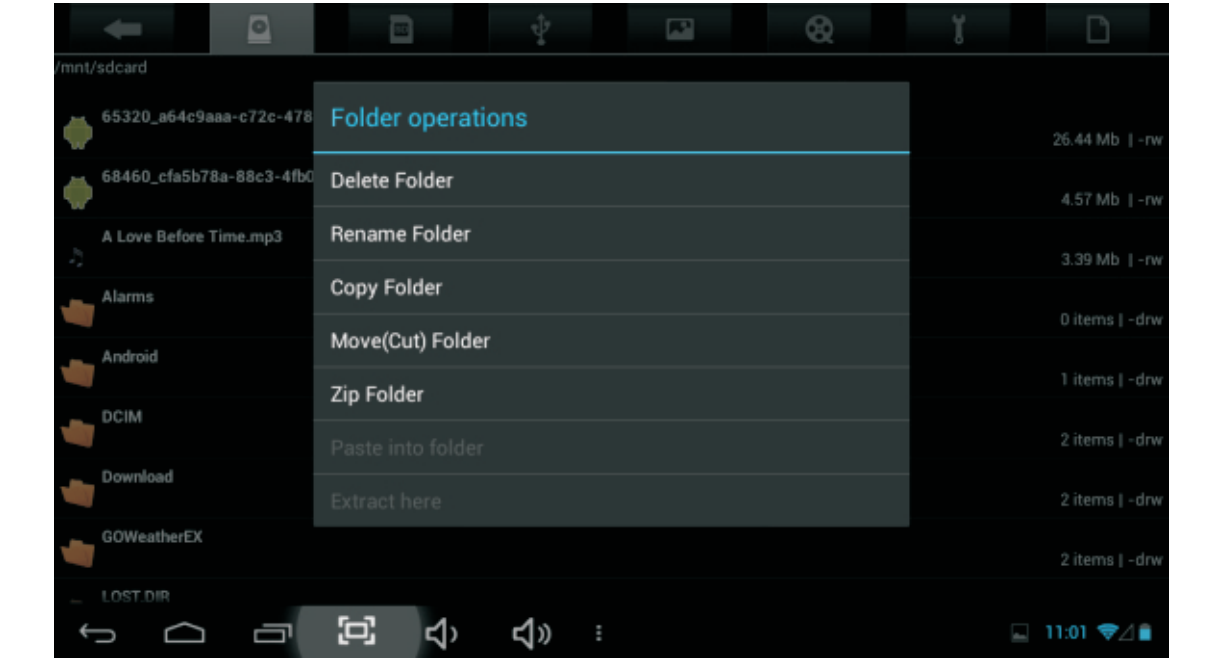

Transmit Files

1. Connect the device and a computer with a USB cable.
2. A tip saying USB connected will appear in the status bar in the right corner. Touch it and you will go to the screen where there is a Turn on USB storage button. Touch the button.
3. Now you can transmit files between the device and computer.
4.When a tablet is connected as a USB storage to a PC, most APPS can't run. So after file transmission, you must

In the USB mass storage screen, touch Turn off USB storage button. And then click in the task bar of the computer to safely delete USB mass storage device drivers.

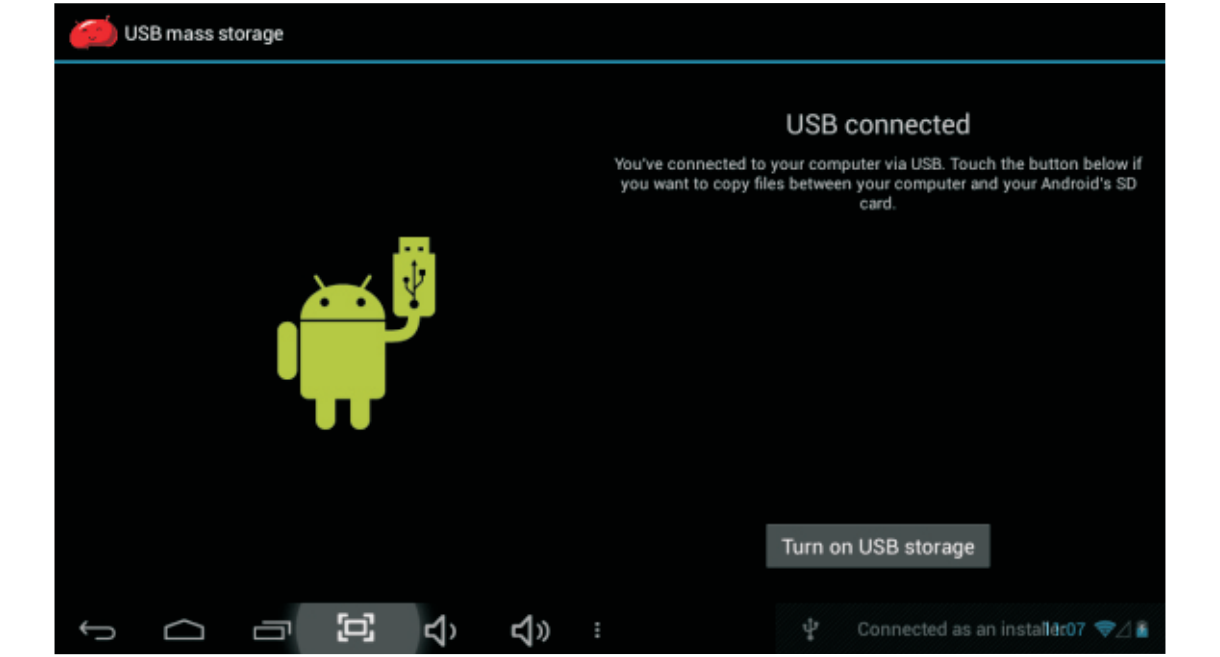

USB mass storage

USB connected

You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.

To take pictures and videos, touch the Camera icon on desktop or in APPS.

When camera opens, you can touch the round button in the middle right to take a picture or a video recording.

To change between the front and back cameras, firstly touch the button on top right and then touch the cam button in the popped up buttons in the middle.

To change between picture-taking and video-recording modes, touch the lower righe cam button to know.

You can view photos and videos you take with Camera in the Super -HD Player.

- Click on the applications tab to display all applications, then click "take photos" or "camera shooting " into the shooting model.
- Before filming, you can click on camera's work environment to have associate setting.

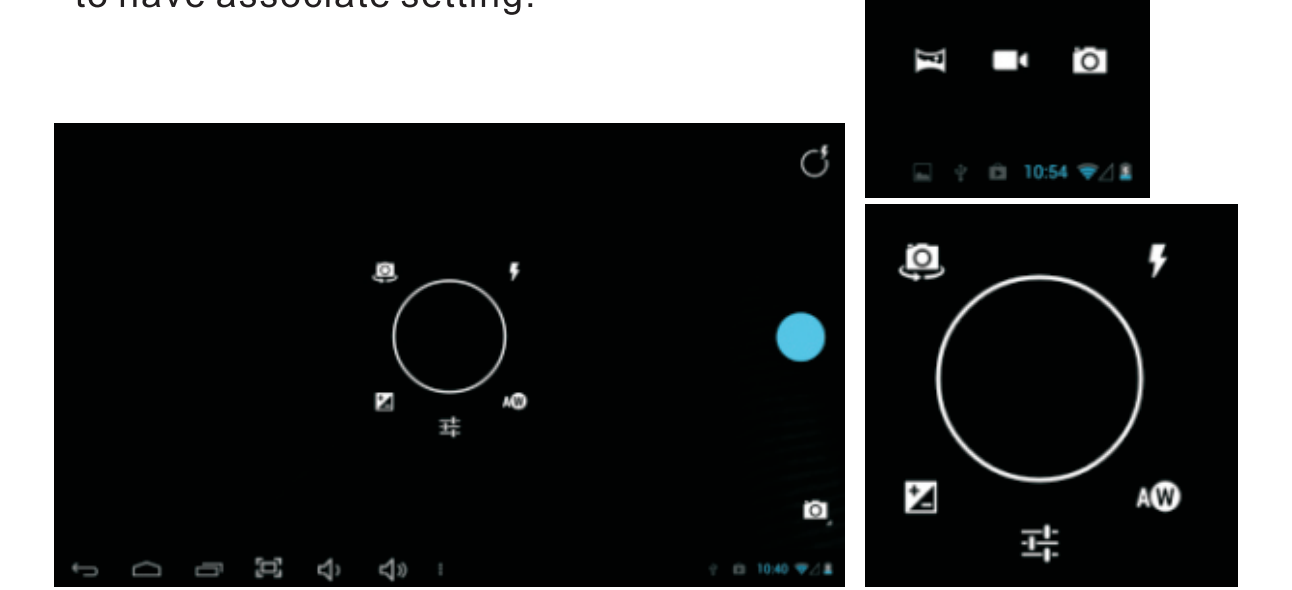

Music/Video

Touch the Music icon in APPS.
There are options of Artists,Albums.Songs,Plsylist and Now playing in the screen
Choose a music you love and touch to play.

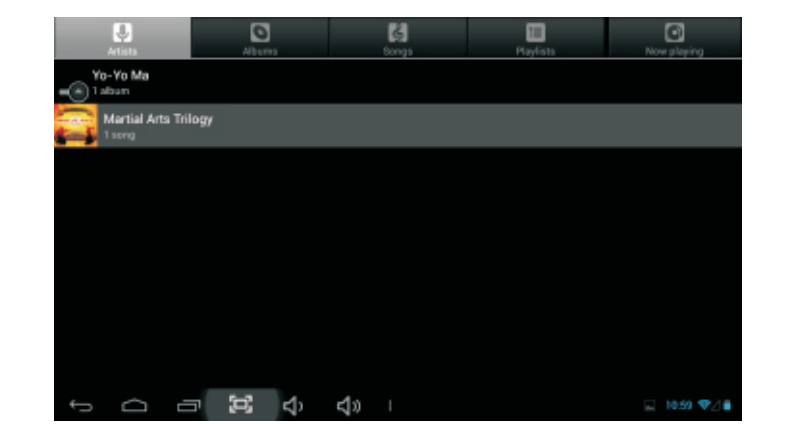

Touch the Super-HD Player icon in APPS.
Then you can play a video or view a picture in the tablet.

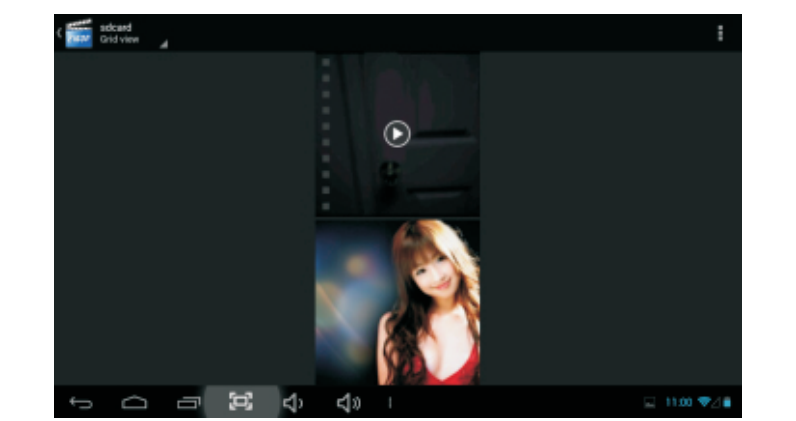

Audio & Video Player

1.Enter the Music player: In music player mode, double-click the favorite in the list to play music as shown in the following picture.

When no music files in the audio player playlist, the system will automatically load the music files from the card to the audio player playlist after turning on the audio player (the device supported audio file format: mp3, wav, Tablet PC, wma). The playlist as shown in the above figure .

2.If two more songs in the Music playlist area, slide up/down the touch screen to page up/down.

- Double-click the favorite in the list to play music.
- Click the Video player icon to enter the video player interface, open the video files.
- The device supported audio file format: MKV, RM, RMVB, MP4, MOV, AVI, WMV, TS, 3GP, etc.
- When no video files in the video player playlist, the system will automatically load the video files from the card to the video player
playlist after turning on video player.
- Drag the playback progress barto adjust video playback progress.

Picture

Click the UHD Player to enter the viewing interface.

- Add image (supports the format of picture: BMP, JPG, JPEG, PNG, GIF)

When there is no file in the photo list, the system will automatically load the image files from the card to the photo browsing list after opening the photo browser.

Open the corresponding folder, find the image file and add picture you want.

- Click menu button, the photo can be set as wallpaper.

Record

Click the record icon to enter the record interface,click record button to start recording. Click stop button to stop recording. The system will remind you to use this system will remind you to use this recording or give up, please select manually.

Recording playing:please select audio player to play the recording, firstly select record files from the explorer, then click it and playing.

Add portal sites email accounts

（Example: Gmail, MSN, Yahoo, etc.）
Take Google email account for an example here.
Email address: ----------------
Password: *********

- For portal sites email accounts, directly input your email address and password, then click next.
- After successful connection, input Account Name and Your Name. Account Name means the name of this account in the device.

Your Name means the displayed name of your email in receivers' account.

- Then you will access the account. Click email titles to read emails,long press email titles to access options.
- Click menu Key to access settings

Refresh: Checking new emails.
Compose: Write new emails.
Folders: Manage emails to different folders.
Accounts: View accounts in the device, add new accounts, delete accounts, set main account.
Accounts settings: More options for email account.

APK Installer

This device supports the third party's Application Package (APK format) based on Android OS. Many Application Package can be downloaded from internet, or copied from other devices into the storage.

- If the Application Package is not downloaded from Google Android Market, you should operate the following steps before installation.

Please check Settings – Applications, make sure Unknown sources is chosen.

- Click the File Manager icon and choose the file you want to install APK, press prompted to install .

Install: Click Install, enter into the APK installer interface.
- Internal Memory means built-in Flash memory, SD card means inserted T-Flash.

- After entering, select the APK format setting program in the right side, click the application to install, back to the main interface.
When complete this operation, then it finished the installing, and there will be a relevant icon in application list.

- **Manage:** Click settings and Choose APPS
- Click the APPS, Choose the file you want to cancel software
- Click the software, uninstall the software.
- Exit: Go back to the main interface.

Note: All installed applications will be shown in application list menu. Here applications include games, chatting TM, internet browser, media player, system tool, etc.

FCC Warning:This equipment has been tested and found to comply with the limits for a Class Bdigital device,pursuant to part 15 of the FCC Rules. These limits are designed toprovide reasonable protection againstharmful interferencein a residential installation.This equipment generates, uses and can radiateradio frequency energy and, if notinstalled and used in accordance with the instructions, may cause harmfulinterferenceto radio communications. However, there is no guarantee that interference will notoccurin a particular installation. If this equipment does cause harmful interference toradio or television reception,which can be determined by turning the equipment offand on, the user is encouraged to try to correctthe interference by one or more of thefollowing measures:•Reorient or relocate the receiving antenna.•Increase the separation between the equipment and receiver.•Connect the equipment into an outlet on a circuit different from that to which thereceiver is connected.•Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitlyapprovedbymanufacturer could voidyourauthority to operate thisequipment. This device complies with part 15 of the FCC Rules. Operation is subject to thefollowing two conditions:(1) This device may not cause harmful interference,and (2)this device must accept any interference received, including interference that maycause undesired operation

Citus.LLC
Add : 1 Solutions Way,Waynesboro,VA,22980
www.Prontotec.co