GAMESIR

ENGLISH

TARANTULA PRO

MULTI-PLATFORM WIRELESS
SYMMETRIC PRO CONTROLLER

[E-Manual]
https://www.gamesir.hk/pages/manuals-gamesir-t3pro

PACKAGING CONTENTS

Controller *1 Im Type-C cable *1 Manual *1 Thank You & After-sale Service card *1
GameSir Sticker *1 Certification *1 Receiver *1 Charging Dock *1

REQUIREMENT

•Switch
•Windows 10 or above
•Android 8.0 or above
•iOS 13 or above

DEVICE LAYOUT

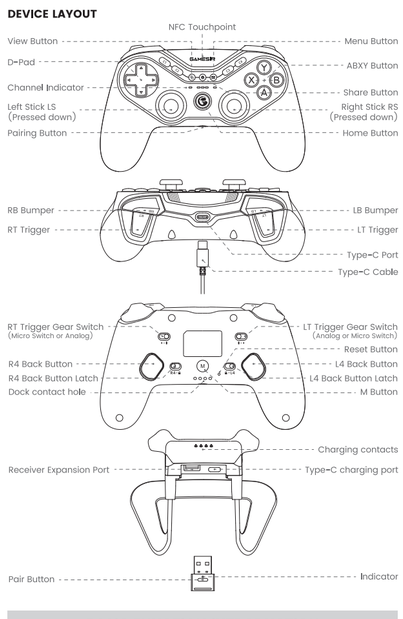

BASIC FUNCTION INTRODUCTION

CONNECTION STATUS

Indicator	Description
Flash Slowly (Once per second)	Reconnection State *Connecting to a previously paired device
Flash Rapidly (4 times per second)	Pairing State *Can be searched and paired by devices only in pairing state
Solid	Connected State *Long press the Home button for 5 seconds to turn off the controller

OTHER DESCRIPTIONS

Description	Operation
Charging Indicator	When the controller is charging while powered off, the top indicator shows the charging progress: Red (0%-25%), Orange (25%-50%), Yellow (50%-75%), Green (75%-90%), Solid Green for 2 seconds and then extinguished(90%-100%)
Low Battery Alert	When the controller's battery is below 10%, the top indicator flashes red twice every 10 seconds
Dock Charging	When the dock is powered on, place the controller on the charging dock; the dock synchronizes with the controller's charging indicator
Auto Power-Off	No operation in connection status: 10 minutes Not connected in pairing status: 1 minute Not connected in reconnection status: 3 minutes

CHANNEL INDICATOR STATUS

Channel Indicator	Mode	Connection Method	Recommended Platform
	DS4		Win 10 or above iOS 13 or above
	XInput		Win 10 or above Android 8.0 or above
Flash Horizontally	NS		Switch
	HID		Android 8.0 or above

WINDOWS CONNECTION TUTORIAL

WIRED CONNECTION

1. Use the included Type-C cable to connect the controller to the computer.
2. The connection is successful when the channel indicator stays solid.

BLUETOOTH CONNECTION

1. Long press the controller's + buttons for 2 seconds until the channel indicators 2, 3, and 4 flash, then release the buttons.
2. Open the Bluetooth list on your computer, find the device named "Wireless Controller", and click to connect.
3. The connection is successful when the Channel indicator stays solid.
* If the connection is not successful, long press the controller's pairing button for 2 seconds to re-enter pairing mode.

RECEIVER CONNECTION

1. Plug the receiver into the USB port of the device to be connected; the receiver indicator will flash.
2. Long press the controller's + buttons for 2 seconds until the Channel indicators 1, 2, 4, and 5 flash, then release the buttons and wait for the controller to connect to the receiver.
3. The connection is successful when the indicators on both the controller and the receiver stay solid.
* If the connection is not successful, long press the pairing buttons on both the controller and the receiver for 2 seconds to re-pair.

SWITCH CONNECTION TUTORIAL

BLUETOOTH CONNECTION

1. On the Switch main menu, go to Controllers - Change Grip/Order and wait on this screen.
2. Long press the controller's + buttons for 2 seconds until the Channel indicators start flashing horizontally, then release the buttons and wait for the connection.
3. The connection is successful when the Channel indicator stays solid.
* If the connection is not successful, long press the controller's pairing button for 2 seconds to re-enter pairing mode.

ANDROID CONNECTION TUTORIAL

BLUETOOTH CONNECTION

1. Long press the controller's + buttons for 2 seconds until the Channel indicators 1 and 5 flash, then release the button.
2. Open the Bluetooth list on your phone, find the device named GameSir-Tarantula Pro, and click to connect.
3. The connection is successful when the channel indicator stays solid.
* If the connection is not successful, long press the controller's pairing button for 2 seconds to re-enter pairing mode.

IOS CONNECTION TUTORIAL

BLUETOOTH CONNECTION

1. Long press the controller's + buttons for 2 seconds until the Channel indicators 2, 3, and 4 flash, then release the buttons.
2. Open the Bluetooth list on your phone, find the device named Wireless Controller, and click to connect.
3. The connection is successful when the Channel indicator stays solid.
* You can change the Home indicator color in your phone's settings: Settings - General - Game Controller.
* If the connection is not successful, long press the controller's pairing button for 2 seconds to re-enter pairing mode.

ADVANCED TUTORIAL

MACRO BUTTON CONFIGURATION



Programmable as single or multi-button (up to 12)
Can be programmed to A/B/X/Y/LB/RB/LT/RT/LS/RS/View Button/Menu Button/D-pad/Left Stick/Right Stick

1. Set macro button value: Press and hold the M button and the macro button simultaneously until the Home indicator flashes, then press the desired button(s) to map (supports single button/combo buttons), and finally press the macro button again to save and exit.
2. Cancel macro button value: Press and hold the M button and the macro button simultaneously until the Home indicator flashes, then press the macro button again to save and exit.
* If the setting process exceeds 10 seconds, it will automatically save and exit.

TURBO SETTING

There are 4 modes: Slow (8Hz), Medium (12Hz), Fast (20Hz), and Off.
Programmable buttons: A/B/X/Y/LB/RB/LT/RT
1.Set Turbo function: Press and hold the M button, then press the button you want to set to enable Turbo function with Slow mode. Repeat this operation to cycle through the Turbo modes (Slow, Medium, Fast, Off).
2.Clear Turbo function: Double-click the M button.
*When a button with Turbo function is activated, the Home indicator flashes continuously.

COMBINATION BUTTONS

Combination buttons	Description
Long press M + LT/RT for 2 seconds	Enable/disable hair trigger mode. After the hair trigger mode is enabled, the indicator flashes when LT/RT is pressed. *The setup will still be saved after restart.
M + View button /Menu button	Decrease/increase the vibration intensity of the grip motors. 5 levels: Level 1 - vibration off, Level 2 - 25% vibration, Level 3 - 50% vibration, Level 4 - 75% (default), Level 5 - 100% vibration. *The setup will still be saved after restart.
Long press View button + Menu button for 2 seconds	*Only supported in receiver and wired modes. By performing this operation, you can manually switch between XInput/NS/and DS4 modes, fixing the connection mode for use. The next time you connect using the same method, the mode will remain as previously switched. *Long press the Home button for 10 seconds to power off. Upon restarting, the controller will restore the automatic platform recognition function.
Long press M + LS/RS for 2 seconds	Enable/Disable zero Dead Zone Mode for the Left/Right Stick *The setup will still be saved after restart.
Long press for 2 seconds	Interchange the button value and layout of A-B, X-Y. *The setup will still be saved after restart.
M + Left Stick left/right	There are 6 lighting effects in total. You can cycle between lighting effects in Monochrome-Breathing -Fantasy(default)Rainbow-Radar-Off. *The setup will still be saved after restart.
M + D-pad left/right	Decrease /increase the animation speed for Breathing, Fantasy, and Rainbow modes. 5 levels in total: 1st/2nd/3rd(default)/4th/5th. *The setup will still be saved after restart.
M + Left Stick up/down	Increase/Decrease the brightness level of the lighting. 5 Levels: 0%/25%/50%(default)/75%/100% *The setup will still be saved after restart.
M + Right Stick Rotation	Adjust the color value in Monochrome, Breathing, and Radar modes based on the position of the right stick. *The setup will still be saved after restart.
M + D-pad up/down	Increase/Decrease the color saturation values in Monochrome, Breathing, and Radar modes. 5 levels in total: 0%/ 25%/50%/75%/100%(default). *The setup will still be saved after restart.

STICKS & TRIGGER CALIBRATION

1. With the controller powered on, long-press the + + buttons for 2 seconds until the Home indicator flashes white slowly.
2. Press LT and RT to their maximum travel 3 times each, and rotate the left and right joysticks to their maximum angle in circles 3 times each, then press the button.
Calibration is complete when the Home indicator returns to its mode color.

GYROSCOPE CALIBRATION

Place the controller horizontally on a flat surface, then long-press + + buttons for 3 seconds. At this point, the Home indicator will flash red and blue alternately rapidly. Calibration is complete when the Home indicator returns to its mode color.

DOWNLOAD THE "GAMESIR" OR "GAMESIR CONNECT" SOFTWARE FOR CUSTOM CONFIGURATION

Visit gamesir.hk official website or scan the QR code on the right with your phone to download the "GameSir" app. Using the "GameSir" or "GameSir Connect" software, you can perform functions such as firmware upgrades, adjustment of joystick and trigger effective range, LED lighting effects adjustment, vibration intensity adjustment, button mapping, and button testing.

CONTROLLER RESET

In case of abnormal behavior or being unable to power the controller on or off, you can use an object similar to the size of a SIM ejector pin to press the reset button located in the circular hole on the back of the controller to force shutdown.

⚠ PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)
Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
-- Consult the dealer or an experienced radioTV technician for help.
RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC CAUTION

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir Tarantula Pro Controller is in compliance with Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.

GAMESIR

简体中文

TARANTULA PRO

MULTI-PLATFORM WIRELESS
SYMMETRIC PRO CONTROLLER

[电子手册]
https://doc.xiaoji.com/zh/t3pro

包装内容

手柄*1 Type-C数据线(1米)*1 说明书*1 售后感谢卡*1 GameSir贴纸 *1
合格证*1 接收器*1 充电底座*1

要求

•Switch
•Windows 10 或更高版本
•Android 8.0 或更高版本
•iOS 13 或更高版本

设备布局

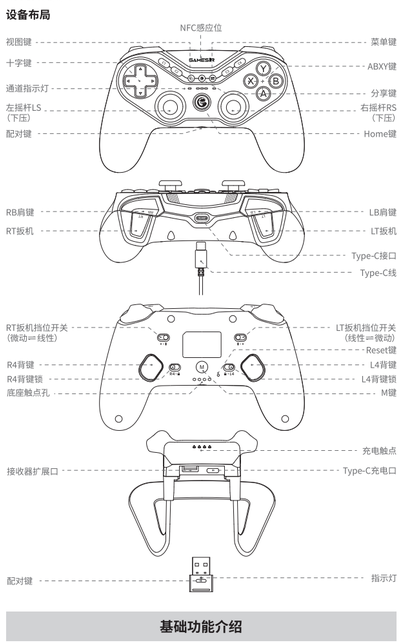

基础功能介绍

连接状态

指示灯	说明
缓慢闪烁 (1秒闪烁1次)	回连状态 *与已经配对的设备连接
快速闪烁 (1秒闪烁4次)	配对状态 *处于配对状态时,才可以被设备搜索配对
常亮	已连接状态 *长按Home键5秒,可将手柄关机

其它说明

描述	操作
充电指示灯	手柄处于关机状态充电时,顶部指示灯呼吸提示充电进度:红(0%-25%)、橙(25%-50%)、黄(50%-75%)、绿(75%-90%)、绿2s熄灭(90%-100%)
低电提示	手柄电量低于10%时,顶部指示灯每隔 10 秒红色闪烁两次
底座充电	底座通电,手柄放置底座,底座同步手柄充电指示灯
自动关机	连接状态无操作:10分钟 配对状态未连接:1分钟 回连状态未连接:3分钟

通道灯状态

通道指示灯	模式	连接方式	推荐系统平台
	DS4		Win 10 或更高版本 iOS 13或更高版本
	XInput		Win 10 或更高版本 Android 8.0 或更高版本
左右循环亮起	NS		Switch
	HID		Android 8.0 或更高版本

Windows连接教程

有线连接

1.使用附赠的Type-C线连接手柄与电脑。
2.通道灯常亮亮后表示连接成功。

蓝牙连接

1.手柄长按2秒 + + 至通道灯二三四闪烁,松开按钮。
2.打开电脑蓝牙列表,找到设备:Wireless Controller,点击连接。
3.通道灯常亮后表示连接成功。
*若连接未成功,请长按手柄配对键2秒,重新进入配对状态

接收器连接

1.将接收器插在连接设备的USB接口上,接收器指示灯闪烁。
2.手柄长按2秒 + + 至通道灯一二四五闪烁,松开按钮后,等待手柄与接收器连接。
3.手柄与接收器指示灯常亮后表示连接成功。
*若连接未成功,请分别长按手柄与接收器的配对键2秒,重新配对

Switch连接教程

蓝牙连接

1.前往Switch主界面,依次点击【手柄】-【更改握法/顺序】,在此界面等待。
2.手柄长按2秒 + + 至通道灯左右循环亮起,松开按钮后,等待连接。
3.通道灯常亮后表示连接成功。
*若连接未成功,请长按手柄配对键2秒,重新进入配对状态

Android连接教程

蓝牙连接

1.手柄长按2秒 + + 至通道灯一五闪烁,松开按钮。
2.打开手机蓝牙列表,找到设备:GameSir-Tarantula Pro,点击连接。
3.通道灯常亮后表示连接成功。
*若连接未成功,请长按手柄配对键2秒,重新进入配对状态

iOS连接教程

蓝牙连接

1.手柄长按2秒 + + 至通道灯二三四闪烁,松开按钮。
2.打开手机蓝牙列表,找到设备:Wireless Controller,点击连接。
3.通道灯常亮后表示连接成功。
*可在手机【设置】-【通用】-【游戏控制器】中更改Home灯颜色
*若连接未成功,请长按手柄配对键2秒,重新进入配对状态

进阶教程

拓展键设置

可编程为单键或多键(最多12个)
可编程为:A/B/X/Y/LB/RB/LT/RT/LS/RS/视图键/菜单键/十字键/左摇杆/右摇杆

1.设定拓展键键值:同时按住M键+拓展键,至Home灯闪烁,按下需映射的按键(支持单键/组合键),最后按下拓展键后保存并退出。
2.取消拓展键键值:同时按住M键+拓展键,至Home灯闪烁,按下拓展键后保存并退出。
*设定过程超过10s后,自动保存并退出

连发设定

共4档:慢档8Hz,中档12Hz,快档20Hz,关闭
可设置的按键:A/B/X/Y/LB/RB/LT/RT
1.设置连发:按住M键,再按需要设置连发的按键,即可开启连发功能慢档。重复此操作可循环设置连发档位(慢、中、快、关闭)。
2.清空连发:双击M键。
*按键触发连发时,Home灯持续闪烁

组合键

组合键	说明
长按2秒 M + LT/RT	开启/关闭 快速扳机 快速扳机模式开启后:按下LT/RT键时,指示灯闪烁 *手柄重启后,仍保存此项设置
M + 视图键 / 菜单键	减弱/增强 握把马达震动强度 共5档:1档震动关闭,2档震动25%,3档震动50%,4档震动75%(默认),5档震动100% *手柄重启后,仍保存此项设置
长按2秒 视图键 + 菜单键	*仅接收器与有线模式支持此操作 进行此操作,可以在XInput/NS Pro/DS4模式之间手动切换,固定此连接方式使用的模式,下次使用同样方式连接时,仍是已切换过的模式 *长按 10 秒 Home 键关机,开机后恢复自动识别平台功能
长按2秒 M + LS/RS	开启/关闭 手柄的左/右摇杆的无死区模式 *手柄重启后,仍保存此项设置
长按2秒	A与B的键值和字符互换,X与Y的键值和字符互换 *手柄重启后,仍保存此项设置
M + 左摇杆左/右	共6组灯光效果: 可以将灯效在单色-呼吸-幻彩(默认)-彩虹-雷达-关闭之间循环切换 *手柄重启后,仍保存此项设置
M + 十字键 左/右	降低/提高呼吸、幻彩、彩虹模式的动画速度 共5档:1档/2档/3档(默认)/4档/5档 *手柄重启后,仍保存此项设置
M + 左摇杆上/下	提高/降低灯光的亮度指位 共5档:0/25%/50% (默认) /75%/100% *手柄重启后,仍保存此项设置
M + 右摇杆转圈	根据右摇杆停留的位置,可以调整单色、呼吸、雷达模式下的颜色值 *手柄重启后,仍保存此项设置
M + 十字键上/下	提高/降低单色、呼吸、雷达模式的颜色饱和度数值 共5档:0%/25%/50%/75%/100%(默认) *手柄重启后,仍保存此项设置

摇杆、扳机的校正

1. 手柄开机状态下,长按 + + 键,直至Home灯白色慢闪。
2. 按压LT和RT至最大行程3次,最大角度旋转左右摇杆各3圈后,按下 ,待Home灯恢复模式灯色后,校正完成。

陀螺仪校准

将手柄水平放置到平面,长按3秒 + + ,此时手柄Home灯红蓝交替快闪,待Home灯恢复模式灯色后,校正完成。

安装"小鸡游戏世界"或"GameSir Connect"软件自定义配置

前往xiaoji.com官网或用手机扫描右侧二维码下载"小鸡游戏世界"手机软件。
使用"小鸡游戏世界"或"GameSir Connect"软件,可实现固件升级、摇杆和扳机有效范围调整、LED灯效调整、震动强度调节、按键映射和按键测试等功能。

手柄Reset

当遇到手柄使用异常卡住,如无法正常开关机的情况,可用类似于卡针尺寸的物件,按下手柄背部圆孔里的Reset键可将手柄强制关机。

⚠ 使用前请务必阅读本注意事项

- 内含细小零件,请务必放在3岁以下儿童触及不到的地方。若不慎吞食或吸入,请立即就医。
- 请勿靠近火源使用产品。
- 请勿将产品暴露于阳光直射或高温的环境中。
- 请勿将产品置于潮湿或多尘的环境中。
- 请勿撞击产品或使其跌落。
- 请勿直接接触USB端口,否则可能会导致故障。
- 请勿用力弯曲或拉扯线缆。
- 请使用柔软的干布清洗。
- 请勿使用汽油或稀释剂等化学品。
- 请勿自行拆卸、修理、或改装。
- 请勿将产品用于原本设计用途以外的用途。对用于非原本用途而造成的事故或损坏,我们概不负责。
- 请勿直视光束。它可能会伤害你的眼睛。
- 如果您有任何有关产品质量的问题或建议,请联系GameSir或您当地的经销商。

⚠ 售后事项

1. 若商品有质量问题,请首先联系我们的客服进行登记。
联系方式:
QQ:800082537
电话:400-8828035(时间:9:00-18:00)
官网:www.xiaoji.com
出品:广州小鸡快跑网络科技有限公司
地址:广州市天河区员村西街2号大院19号1001、1003房
2. 如需退、换商品,请确保商品完好无损(包括商品外包装、附赠品、说明书、售后卡、标签等),不影响二次销售。
3. 如要保修商品,请务必完整填写用户姓名、联系电话、联系地址,正确填选售后要求与详细说明售后原因,将售后卡随货寄回(如不完整填写保修卡信息,恕无法提供任何的售后服务)。

保修卡	
(售后政策:非人为损坏,3个月包换、1年保修)	
用户姓名	
联系电话	
联系地址	
售后要求	□退 □换 □保修
售后原因	
订单编号	
(注:非小鸡官网途径购买的产品,售后问题请直接与购买商家联系)	

感谢您的购买与支持

微信扫码添加[小鸡福利官]即享多重超级福利

GAMESIR

DEUTSCH

TARANTULA PRO

MULTI-PLATFORM WIRELESS
SYMMETRIC PRO CONTROLLER

[E-Handbücher]
https://www.gamesir.hk/pages/manuals-gamesir-t3pro

PAKETINHALT

Controller *1 USB-C-Kabel, 1 m *1 Bedienungsanleitung *1 GameSir Aufkleber *1
Dankes- und Kundendienstkarte*1 Zertifikat *1 Receiver *1 Ladestation *1

ANFORDERUNG

•Switch
•Windows 10 oder höher
•Android 8.0 oder höher
•iOS 13 oder höher

GERÄTELAYOUT

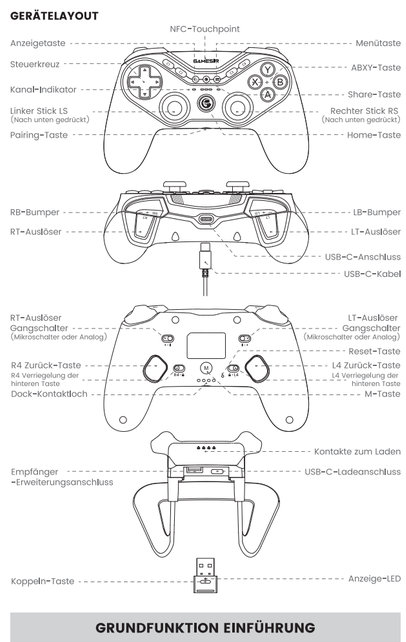

GRUNDFUNKTION EINFÜHRUNG

VERBINDUNGSSTATUS

Anzeige	Beschreibung
Langsam blinken (einmal pro Sekunde)	Wiederverbindungsstatus *Verbinden mit einem zuvor gekoppelten Gerät
Schnelles Blinken (4 Mal pro Sekunde)	Pairing-Status *Kann nur im Pairing-Status von Geräten gesucht und gekoppelt werden
Stabil	Verbundener Zustand *Halten Sie die Home-Taste 5 Sekunden lang gedrückt, um den Controller auszuschalten

ANDERE BESCHREIBUNGEN

Beschreibung	Bedienung
Ladeindikator	Wenn der Controller im ausgeschalteten Zustand geladen wird, zeigt die obere Anzeige den Ladefortschritt an: Rot (0%-25%), Orange (25%-50%), Gelb (50%-75%), Grün (75%-90%), leuchtet 2 Sekunden lang grün und erlischt dann (90%-100%)
Warnung bei niedrigem Batterielstand	Wenn die Batterie des Controllers weniger als 10 % beträgt, blinkt die obere Anzeige alle 10 Sekunden zweimal rot
Dock-Ladung	Wenn die Station eingeschaltet ist, setzen Sie den Controller auf die Ladestation, und die Station synchronisiert sich mit der Ladeanzeige des Controllers
Automatisches Ausschalten	Kein Betrieb im Verbindungsstatus: 10 Minuten Nicht verbunden im Pairing-Status: 1 Minute Nicht verbunden im Status Wiederverbindung: 3 Minuten

STATUS DER KANALANZEIGE

Kanal-Indikator	Modus	Verbindungsmethode	Empfohlene Plattform
	DS4		Windows 10 oder höher iOS 13 oder höher
	XInput		Windows 10 oder höher Android 8.0 oder höher
Horizontal blinken	NS		Switch
	HID		Android 8.0 oder höher

WINDOWS-VERBINDUNGSTUTORIAL

KABELGEBUNDENE VERBINDUNG

1. Verwenden Sie das mitgelieferte Typ-C-Kabel, um den Controller mit dem Computer zu verbinden.
2. Die Verbindung ist erfolgreich, wenn die Kanalanzeige dauerhaft leuchtet.

BLUETOOTH-VERBINDUNG

1. Drücken Sie die + + -Tasten der Controller-Taste 2 Sekunden lang, bis die Kanalanzeigen 2, 3 und 4 blinken, und lassen Sie dann die Tasten los.
2. Öffnen Sie die Bluetooth-Liste auf Ihrem Computer, suchen Sie das Gerät mit dem Namen „Wireless Controller", und klicken Sie auf "Verbinden".
3. Die Verbindung ist erfolgreich, wenn die Kanalanzeige dauerhaft leuchtet.
* Wenn die Verbindung nicht erfolgreich ist, halten Sie die Pairing-Taste des Controllers 2 Sekunden lang gedrückt, um den Pairing-Modus erneut zu aktivieren.

VERBINDUNG ZUM RECEIVER

1. Stecken Sie den Receiver in den USB-Anschluss des anzuschließenden Geräts, und die Receiver-Anzeige blinkt.
2. Drücken Sie die + + -Tasten des Controllers 2 Sekunden lang, bis die Kanalanzeigen 1, 2, 4 und 5 blinken, lassen Sie dann die Tasten los und warten Sie, bis der Controller eine Verbindung mit dem Receiver herstellt.
3. Die Verbindung ist erfolgreich, wenn die Anzeigen sowohl am Controller als auch am Receiver dauerhaft leuchten.
* Wenn die Verbindung nicht erfolgreich ist, drücken Sie die Pairing-Tasten auf dem Controller und dem Receiver 2 Sekunden lang, um die Verbindung erneut herzustellen.

TUTORIAL SWITCH-VERBINDUNG

BLUETOOTH-VERBINDUNG

1. Gehen Sie im Switch-Hauptmenü zu Controller-Change Grip/Order und warten Sie auf diesen Bildschirm.
2. Drücken Sie die + + -Tasten des Controllers 2 Sekunden lang, bis die Kanalanzeigen horizontal zu blinken beginnen, lassen Sie dann die Tasten los und warten Sie auf die Verbindung.
3. Die Verbindung ist erfolgreich, wenn die Kanalanzeige dauerhaft leuchtet.
* Wenn die Verbindung nicht erfolgreich ist, halten Sie die Pairing-Taste des Controllers 2 Sekunden lang gedrückt, um den Pairing-Modus erneut zu aktivieren.

TUTORIAL ANDROID-VERBINDUNG

BLUETOOTH-VERBINDUNG

1. Drücken Sie die + + -Tasten der Controller-Taste 2 Sekunden lang, bis die Kanalanzeigen 1 und 5 blinken, und lassen Sie dann die Taste los.
2. Öffnen Sie die Bluetooth-Liste auf Ihrem Handy, suchen Sie das Gerät mit dem Namen GameSir-Tarantula Pro, und klicken Sie auf "Verbinden".
3. Die Verbindung ist erfolgreich, wenn die Kanalanzeige dauerhaft leuchtet.
* Wenn die Verbindung nicht erfolgreich ist, halten Sie die Pairing-Taste des Controllers 2 Sekunden lang gedrückt, um den Pairing-Modus erneut zu aktivieren.

IOS-VERBINDUNGS-TUTORIAL

BLUETOOTH-VERBINDUNG

1. Drücken Sie die + + -Tasten der Controller-Taste 2 Sekunden lang, bis die Kanalanzeigen 2, 3 und 4 blinken, und lassen Sie dann die Tasten los.
2. Öffnen Sie die Bluetooth-Liste auf Ihrem Handy, suchen Sie das Gerät mit dem Namen Wireless Controller, und klicken Sie darauf, um die Verbindung herzustellen.
3. Die Verbindung ist erfolgreich, wenn die Kanalanzeige dauerhaft leuchtet.
* Sie können die Farbe der Home-Anzeige in den Einstellungen Ihres Telefons ändern: Einstellungen - Allgemein - Game Controller.
* Wenn die Verbindung nicht erfolgreich ist, halten Sie die Pairing-Taste des Controllers 2 Sekunden lang gedrückt, um den Pairing-Modus erneut zu aktivieren.

ERWEITERTES TUTORIAL

KONFIGURATION DER MAKROTASTE

Programmierbar als Einzel- oder Mehrfachtaste (bis zu 12)
Kann auf A/B/X/Y/LB/RB/LT/RT/LS/RS/Ansichtstaste/Menütaste/D-Pad/
Linker Stick/Rechter Stick programmiert werden

1. Makrotastenwert einstellen: Halten Sie die M-Taste und die Makrotaste gleichzeitig gedrückt, bis die Home-Anzeige blinkt, drücken Sie dann die gewünschte(n) Taste(n), die Sie zuordnen möchten (unterstützt Einzeltasten/Kombinationstasten), und drücken Sie abschließend erneut die Makrotaste, um zu speichern und zu beenden.
2. Makrotastenwert abbrechen: Halten Sie die Taste M und die Makrotaste gleichzeitig gedrückt, bis die Home-Anzeige blinkt, und drücken Sie dann erneut die Makrotaste, um zu speichern und den Vorgang zu beenden.
* Wenn der Einstellvorgang länger als 10 Sekunden dauert, wird er automatisch gespeichert und beendet.

TURBO-EINSTELLUNG

Es gibt 4 Modi: Langsam (8 Hz), Mittel (12 Hz), Schnell (20 Hz) und Aus.
Programmierbare Tasten: A/B/X/Y/LB/RB/LT/RT
1. Turbofunktion einstellen: Halten Sie die Taste M gedrückt und drücken Sie dann die Taste, die Sie einstellen möchten, um die Turbofunktion im Langsam-Modus zu aktivieren. Wiederholen Sie diesen Vorgang, um die Turbo-Modi (Langsam, Mittel, Schnell, Aus) zu durchlaufen.
2. Löschen Sie die Turbofunktion: Doppelklicken Sie auf die Taste M.
* Wenn eine Taste mit Turbofunktion aktiviert ist, blinkt die Home-Anzeige kontinuierlich.

KOMBI-TASTEN

Kombi-Tasten	Beschreibung
Langes Drücken von M + LT/RT für 2 Sekunden	Aktivieren/Deaktivieren des Haartrigger-Modus Nachdem der Haartrigger-Modus aktiviert wurde, blinkt die Anzeige, wenn LT/RT gedrückt wird. *Die Einstellungen bleiben auch nach dem Neustart erhalten.
M + Ansichtstaste /Menütaste	Verringern/Erhöhen Sie die Vibrationsintensität der Griffmotoren. 5 Stufen: Stufe 1 - Vibration aus, Stufe 2 - 25% Vibration, Stufe 3 - 50% Vibration, Stufe 4 - 75% (Standard), Stufe 5 - 100% Vibration. *Die Einstellungen bleiben auch nach dem Neustart erhalten.
Drücken Sie die Ansichtstaste und die Menütaste 2 Sekunden lang	*Nur im Receiver und im kabelgebundenen Modus unterstützt. Mit diesem Vorgang können Sie manuell zwischen den Modi XInput/NS/und DS4 umschalten und den Verbindungsmodus für die Verwendung festlegen. Wenn Sie das nächste Mal eine Verbindung mit der gleichen Methode herstellen, bleibt der Modus wie zuvor eingestellt. *Drücken Sie die Home-Taste 10 Sekunden lang, um das Gerät auszuschalten.Nach einem Neustart stellt der Controller die automatische Plattformerkennung wieder her.
Langes Drücken von M + LS/RS für 2 Sekunden	Aktivieren/Deaktivieren des Null-Totzonen-Modus für den linken/rechten Stick *Die Einstellungen bleiben auch nach dem Neustart erhalten.
Langes Drücken für 2 Sekunden	Tauschen Sie den Tastenwert und das Layout von A-B, X-Y aus. *Die Einstellungen bleiben auch nach dem Neustart erhalten.
M + Linker Stick links/rechts	Insgesamt gibt es 6 Lichteffekte. Sie können zwischen den Lichteffekten Monochrom-Atmung-Fantasie (Standard) Regenbogen-Radar-Aus wechseln. *Die Einstellungen bleiben auch nach dem Neustart erhalten.
M + D-Pad links/rechts	Verringern/Erhöhen Sie die Animationsgeschwindigkeit für die Modi Atmen, Fantasie und Regenbogen. Insgesamt 5 Stufen: 1./2./3.(Standard)/4./5. *Die Einstellungen bleiben auch nach dem Neustart erhalten.
M + Linker Stick auf/ab	Erhöhen/Verringern Sie die Helligkeit der Beleuchtung. 5 Stufen: 0%/25%/50%(Standard)/75%/100% *Die Einstellungen bleiben auch nach dem Neustart erhalten.
M + Rechts Stick Rotation	Passen Sie den Farbwert in den Modi Monochrom, Atmung und Radar basierend auf der Position des rechten Sticks an. *Die Einstellungen bleiben auch nach dem Neustart erhalten.
M + D-Pad auf/ab	Erhöhen/verringern Sie die Farbsättigungswerte in den Modi Monochrom, Atmung und Radar. Insgesamt 5 Stufen: 0%/ 25%/50%/75%/100% (Standard). *Die Einstellungen bleiben auch nach dem Neustart erhalten.

STICKS & AUSLÖSER-KALIBRIERUNG

1. Drücken Sie am eingeschalteten Controller die Tasten + + für 2 Sekunden lang, bis die Home-Anzeige langsam weiß blinkt.
2. Drücken Sie die Tasten LT und RT jeweils 3 Mal bis zum maximalen Ausschlag und drehen Sie den linken und rechten Joystick jeweils 3 Mal im Kreis bis zum maximalen Winkel, dann drücken Sie die Taste . Die Kalibrierung ist abgeschlossen, wenn die Home-Anzeige wieder in ihre Modusfarbe zurückkehrt.

GYROSKOP-KALIBRIERUNG

Legen Sie den Controller waagerecht auf eine flache Oberflä