英文(面)

CC-KSPK-RED
Operation manual

Please read the manual before operating this product.

M&S Accessory Network declares that radio equipment CC-KSPK-RED is in compliance with Directive 2014/53/EU.
The EU Declaration of conformity is available at https://gabbagoods.com/pages/compliance-documents

Contents

1. Introduction.....1
2. Package Contents / Diagram.....2
3. Instructions - How To Charge.....3
4. Mode.....4
5. Pairing.....4
6. Using The Speaker.....5
7. Using The Microphone.....5
8. Receiving An Incoming Call.....6
9. Specifications.....7

Compatible with all Bluetooth® enabled devices

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

INTRODUCTION:

Thank you for purchasing the Karaoke Mic. In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speakers features and functions!

Caution:

Please use and store this product at room temperature.
DO NOT leave out in hot temperature
Do not expose this product to rain or wet conditions
Do not throw or drop this product, as it will cause damage
Do not try to dismantle or repair the product on your own
Do not use a chemical solvent to clean the product
Please do not leave this product near a fire or open flame

Safety Rules

1	Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.
2	Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging to prevent any possible injury or damage.
3	Do not modify, repair or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.
4	Do not use any diluent or volatile liquid to clean the product.
5	Do not use the product in a hazardous location.

PACKAGE CONTENTS / DIAGRAM:

1x USB charging cable

1X Instruction Manual

Karaoke Mic

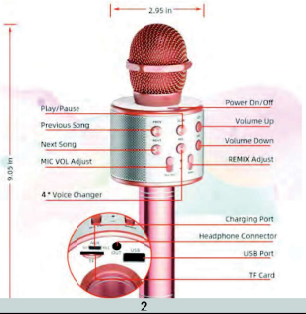

INSTRUCTIONS - HOW TO CHARGE:

To begin charging your microphone, connect the provided micro USB cable to the microphone charging port, then connect the other end of the cable to any USB port or any power source. The red LED indicator will go on, showing it is in charging mode. After a full charge the red light will automatically turn off. When the battery power is too low, the karaoke microphone will automatically turn off.

Always disconnect the cable when charging is finished.

FCC Compliance Statements

FCCID: 2AFXXGG-KSPK2

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

MODE:

Press power button to switch different modes, such as Bluetooth Pairing mode, Memory Card mode

Note: Memory Card mode is only available when a micro SD card is installed.

PAIRING:

Turn the power switch on your microphone and a blue light will go on, you will hear pairing mode indicating the speaker is in pairing mode.
Open your Bluetooth settings on your mobile device and search " KARAOKE MIC ", select it. The Karaoke Mic is now connected and you will hear Bluetooth connected successfully.

USING THE SPEAKER:

Once the Karaoke Mic is connected you can now stream audio from your mobile device. Use the speaker volume controls to adjust the sound from low to high. You can also adjust the audio from your mobile device too.

Press next to go to the next song
Press previous to replay a song. Use the play/pause Button to Play/Pause your music.

USING THE MIC:

To use the mic for singing make sure that the MIC Volume is raised to the desired level. You can then adjust the remix strength of the mic using the "Remix" control.
You can now sing alone or sing along to the audio streaming from the microphone.

RECEIVING AN INCOMING CALL:

When there is an incoming call you will hear "incoming call" or a beep press the Play/Pause button to accept the call press it a second time to disconnect the call.

*Make sure to charge the speaker for a minimum of 3 hours before initial use.

SPECIFICATIONS:

Frequency Range 100Hz-10KHz
Maximum sound pressure level:>115dB 1KHz THD<1%
Reverb Mode: Echo sound reverberation
Power Supply: Build-in-Li-ion Battery
Battery Capacity: 600mAh
Charging Voltage: DC 5V-500mA

Support

If you have problems with your device, please consult the instructions in this manual.

Manufacturer Warranty

We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com

COCA-COLA, COKE, DIET COKE, FANTA, SPRITE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. ©The Coca-Cola Company. All rights reserved.
Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.

CC-KSPK-RED

Designed in the U.S.A. | Made In China

Manufactured, marketed, and distributed under license by M&S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001
Designed in the U.S.A | Made in China.
For support call: (877) 995-8505 or
Email: info@mnsbrands.com

www.mnsbrands.com