Animal Planet

Toys"R"Us®	File Name: US_F16_AN_295_B_FIN_IM Mfr#: 5F63F61R Skn#:
Studio: Sunrise	Vendor: brightkingdom
Product Description:	RC TRICERATOPS
Flat Art Size: 59" W x 29" H Packaging Dimension: Width:15.4"(390mm) Height:7.5"(190mm) (if box) Depth:5.7"(145mm) Raster Effect: 300 PPI	Coating: PP/Gloss UV PKG color K Insert color Date: 31May, 2016
(PDP) Primary Display Panel Size: 15.4" W x 7.5" H Warning Size/Legal Panel:	

*REMINDER: Open space above UPC on packaging (and end of sewn-in-label if applicable) is the DATE CODE STAMP area. Please refer to TRUGPSQC Manual for date code requirements detail.

Reference

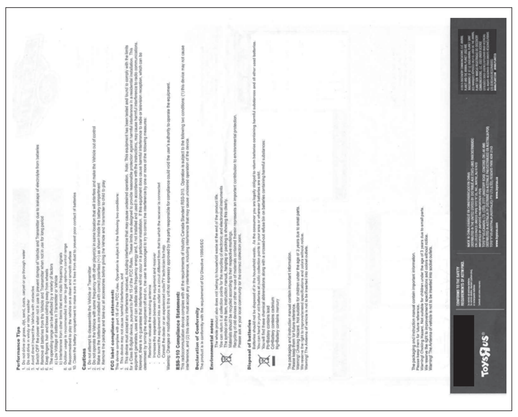

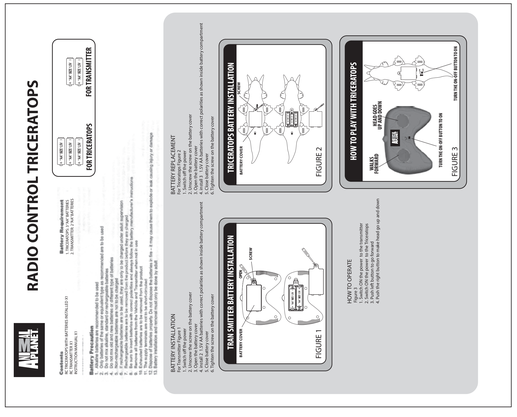

size: 210mm(W) x 297mm(H)

English

Front

#5F63F61R

5+

R/C CHARGING TRICERATOPS

CONTENTS :
1 x RC Triceratops with batteries installed
1 x Transmitter
1 x Instruction manual

BATTERY REQUIREMENT
1. Triceratops: 3 "AA" batteries
2. Transmitter: 2 " AA" batteries

Battery precaution
1. Alkaline batteries are recommended to be used.
2. Only batteries of the same or equivalent type as recommended are to be used.
3. Do not mix alkaline, standard or rechargeable batteries.
4. Do not mix old and new batteries or different type of batteries.
5. Non-rechargeable batteries are not to be charged.
6. If rechargeable batteries are to be used, they are only to be charged under adult supervision.
7. Rechargeable batteries are to be removed from the product before they are charged.
8. Be sure to insert batteries with correct polarities and always follow the battery manufacturer's instructions.
9. Remove all batteries from the Dino and Transmitter when not in use.
10. Exhausted batteries are to be removed from the product.
11. The supply terminals are not to be short-circuited.
12. Dispose of batteries properly. Do not dispose the batteries in fire — it may cause them to explode or leak causing injury or damage.
13. Battery installation and removal must only be done by adult.

Battery installation:

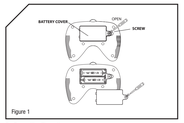

Figure 1

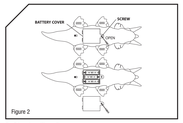

Figure 2

For Transmitter (Figure 1)
1. Switch off the power.
2. Unscrew the screw on the battery cover.
3. Open the battery cover.
4. Install 2 " 1.5V AA batteries" with correct polarities as shown inside battery compartment.
5. Close battery cover.
6. Tighten the screw on the battery cover.

For Triceratops (Figure 2)
1. Switch off the power.
2. Unscrew the screw on the battery cover.
3. Open the battery cover.
4. Install 3 " 1.5V AA batteries" with correct polarities as shown inside battery compartment.
5. Close battery cover.
6. Tighten the screw on the battery cover.

Back

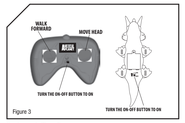

Figure 3

How to operate (Figure 3)
1. Switch ON the power to the transmitter.
2. Switch ON the power to the Triceratops.
3. Push left button to go forward.
4. Push the right button to make head go up and down.

Performance Tips
1. Do not operate on grass, dirt, sand, dust, carpet or go through water.
2. Do not operate in windy or rainy weather.
3. Avoid direct impact with obstacles.
4. Switch OFF the power when not in use to prevent damage of Dino and Transmitter due to leakage of electrolyte from batteries.
5. Remove all batteries from the Dino and Transmitter when not in use for long period.
6. Keep fingers, hair and loose clothing away from wheels.
7. The operating range can be affected by a variety of factors.
   a) Low Voltage of batteries in Transmitter or Dino.
   b) Interference from other items that emit radio frequency signals.
8. Outdoor usage is recommended in order to get optimum control range.
9. Recommended to play on a clean and smooth surface.
10. Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries.

Cautions
1. Do not attempt to disassemble the Dino or Transmitter.
2. Do not operate the Dino with same frequency with other player(s) in same location that will interfere and make the Dino out of control.
3. Make sure the batteries are installed with correct polarities (+/-) as shown inside the battery compartment.
4. Remove the package and take out all accessories before giving the Dino and Transmitter to child to play.

FCC label compliance statement:
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
   - Reorient or relocate the receiving antenna
   - Increase the separation between the equipment and receiver
   - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
   - Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-210 Compliance Statement:
This radiocommunication device complies with all the requirements of Industry Canada Standard RSS-210. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Declaration of Conformity
The product is in conformity with the requirement of EU Directive 1999/5/E.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Toys"R"Us®
Contents and colors may vary.
CONFORME ÀS NORMAS DE SEGURANÇA ASTM FNL1.
Não use baterias recarregáveis.
Não misture pilhas alcalinas, estándar (carbono-zinc) ou recarregáveis.
Pilhas gastas devem ser retiradas do brinquedo.
Pilhas usadas devem ser retiradas do brinquedo.
Os terminais de alimentação não devem ser curto-circuitados.
Pilhas devem ser retiradas do brinquedo quando não estiverem sendo usadas.
Pilhas devem ser colocadas sob supervisão de um adulto.
Não jogue pilhas no fogo.
Não recarregue pilhas que não sejam recarregáveis.
Pilhas devem ser colocadas com a polaridade correta.
Siga as instruções do fabricante das pilhas.
Remova as pilhas do produto quando não estiver sendo usado.
Remova as pilhas do produto quando estiver sem uso por um longo período.
Remova as pilhas do produto quando estiver sem uso.
Pilhas devem ser colocadas sob supervisão de um adulto.
Pilhas devem ser retiradas do produto antes de serem carregadas.
Pilhas devem ser colocadas com a polaridade correta.
Pilhas devem ser retiradas do produto.
Os terminais de alimentação não devem ser curto-circuitados