2302312

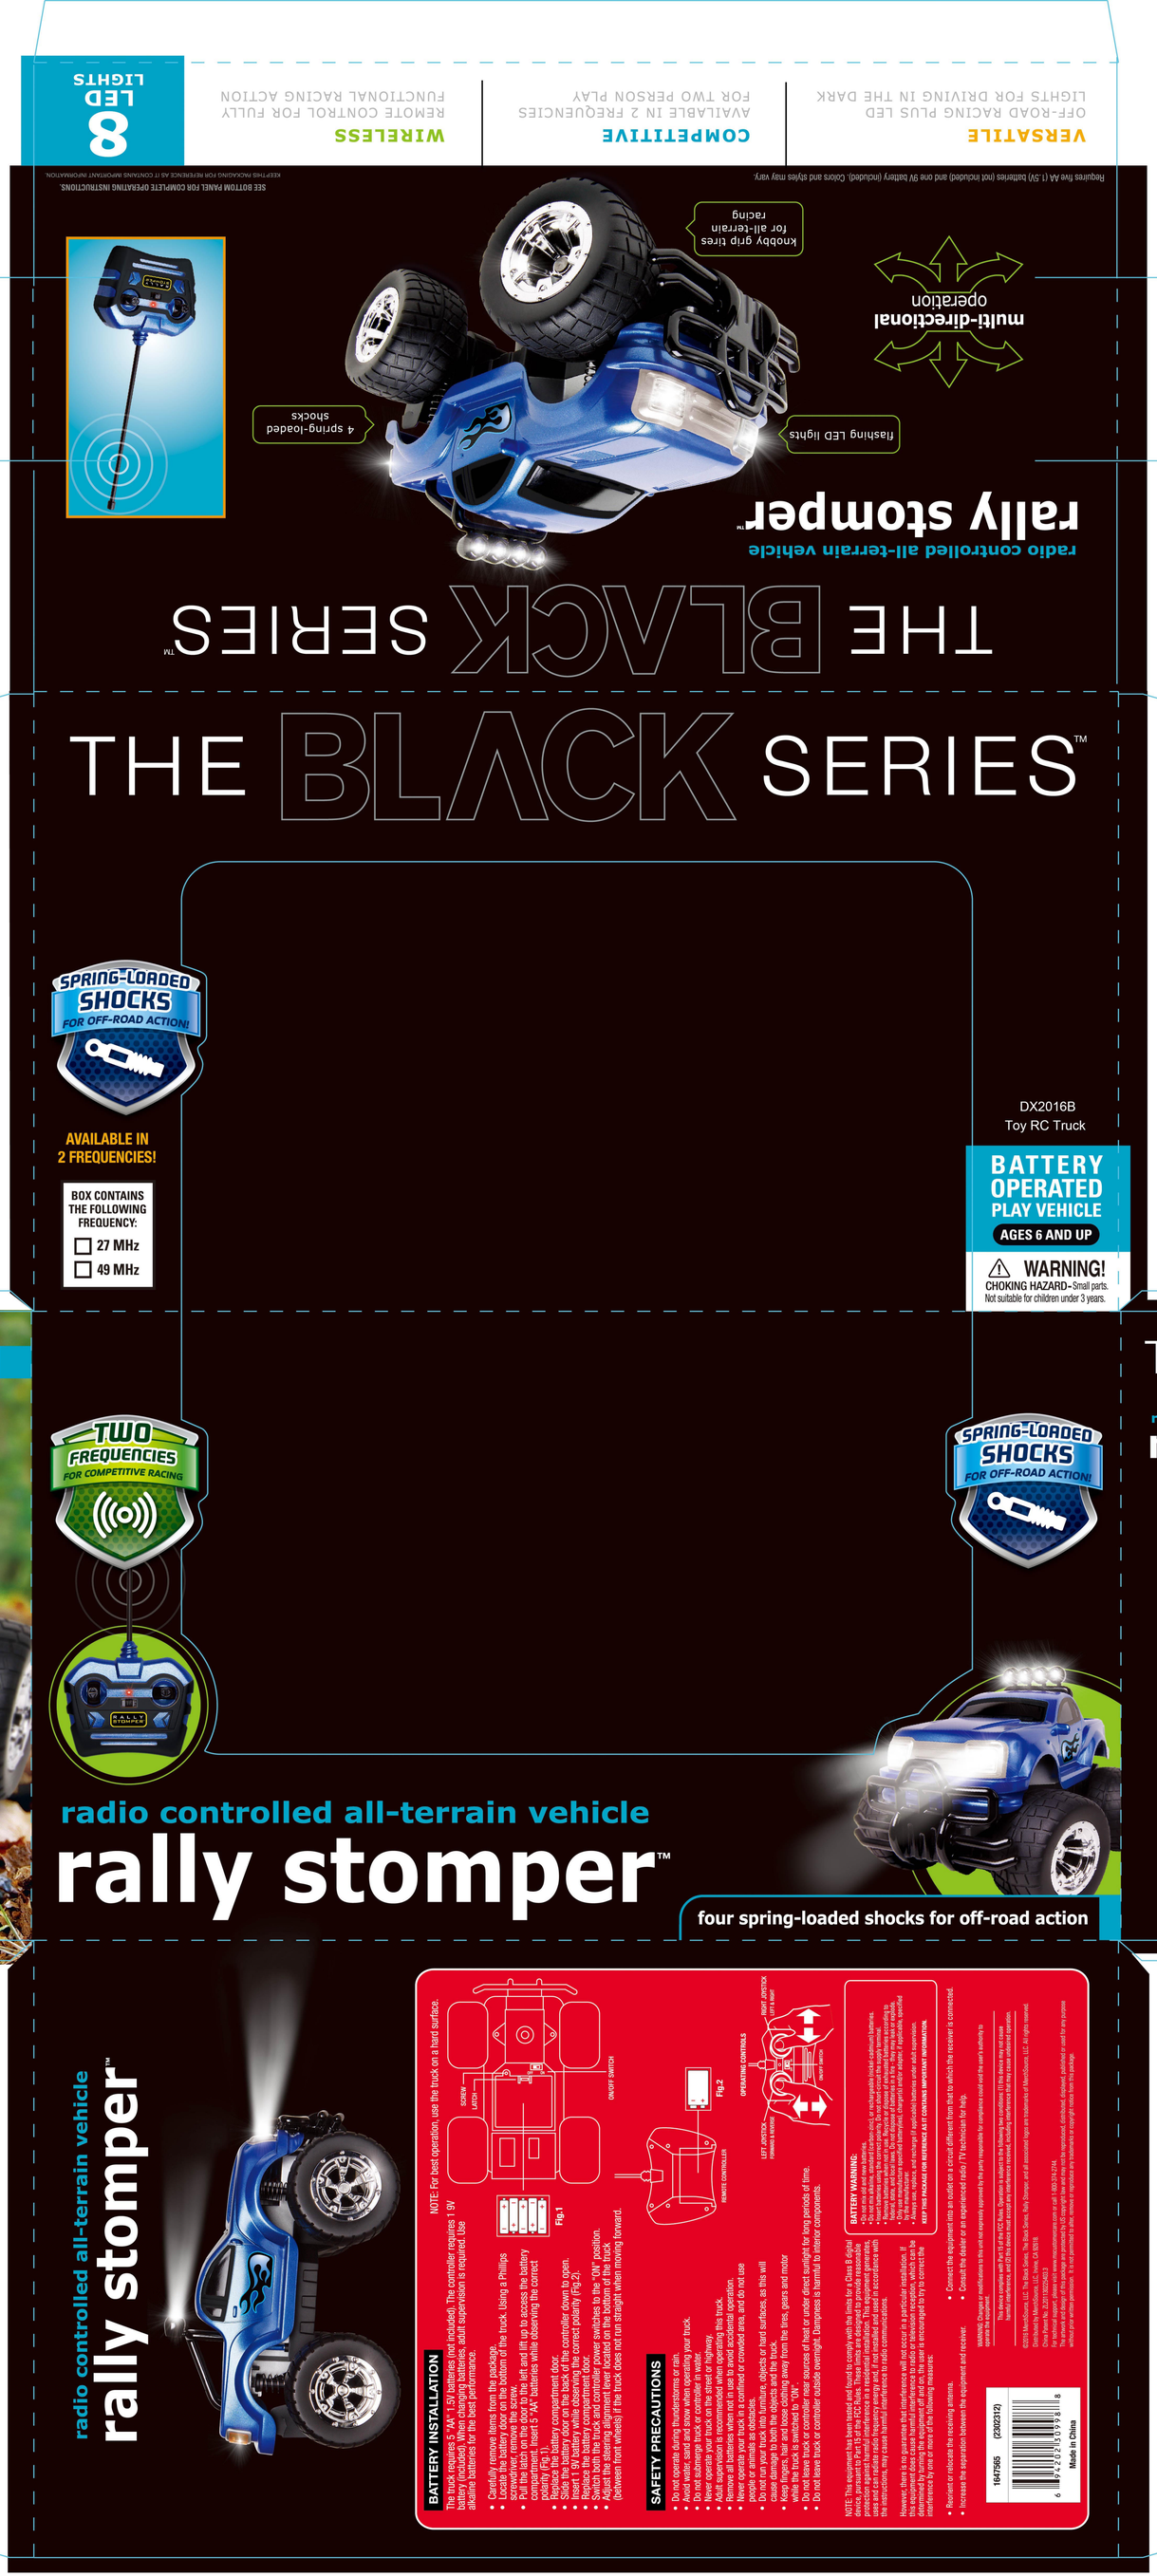
VERSATILE
OFF-ROAD RACING PLUS LED LIGHTS FOR DRIVING IN THE DARK
COMPETITIVE
AVAILABLE IN 2 FREQUENCIES FOR TWO PERSON PLAY
WIRELESS
REMOTE CONTROL FOR FULLY FUNCTIONAL RACING ACTION
8 LED LIGHTS
SEE BOTTOM PANEL FOR COMPLETE OPERATING INSTRUCTIONS
KEEP THIS PACKAGING FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.
Requires five AA (1.5V) batteries (not included) and one 9V battery (included). Colors and styles may vary.
multi-directional operation
knobby grip tires for all-terrain racing
flashing LED lights
4 spring-loaded shocks
THE BLACK SERIES™
radio controlled all-terrain vehicle
rally stomper™
THE BLACK SERIES™
SPRING-LOADED SHOCKS FOR OFF-ROAD ACTION!
AVAILABLE IN 2 FREQUENCIES!
BOX CONTAINS THE FOLLOWING FREQUENCY:
27 MHz
49 MHz
DX2016B
Toy RC Truck
BATTERY OPERATED PLAY VEHICLE
AGES 6 AND UP
WARNING!
CHOKING HAZARD-Small parts.
Not suitable for children under 3 years.
SPRING-LOADED SUSPENSION AND KNOBBY TIRES FOR ALL-TERRAIN RACING
TWO FREQUENCIES FOR COMPETITIVE RACING
SPRING-LOADED SHOCKS FOR OFF-ROAD ACTION!
THE BLACK SERIES™
radio controlled all-terrain vehicle
rally stomper™
8 LED LIGHTS
radio controlled all-terrain vehicle
rally stomper™
four spring-loaded shocks for off-road action
35cm x 20,3cm x 20cm
radio controlled all-terrain vehicle
rally stomper™
BATTERY INSTALLATION
NOTE: For best operation, use the truck on a hard surface.
The truck requires 5 "AA" 1.5V batteries (not included). The controller requires 1 9V battery (included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance.
• Carefully remove items from the package.
• Locate the battery door on the bottom of the truck. Using a Phillips screwdriver, remove the door screw.
• Pull the latch on the door to the left and lift up to access the battery compartment. Insert 5 "AA" batteries while observing the correct polarity (Fig.1).
• Replace the battery compartment door.
• Slide the battery door on the back of the controller down to open.
• Insert 1 9V battery while observing the correct polarity (Fig.2).
• Replace the battery compartment door.
• Switch both the truck and controller power switches to the "ON" position.
• Adjust the antenna on the controller so it points toward the rear of the truck (between front wheels) if the truck does not run straight when moving forward.
SAFETY PRECAUTIONS
• Do not operate during thunderstorms or rain.
• Do not operate your truck in water, damaging your truck.
• Do not disassemble truck & controller, as it will void warranty.
• Never operate your truck on the street or highway.
• Adult supervision is recommended when operating this truck.
• Remove all batteries when not in use to avoid accidental operation.
• Never operate your truck in a cluttered or crowded area, and do not use near people or pets.
• Do not run your truck into furniture, objects or hard surfaces, as this will cause damage to both the objects and the truck.
• Keep fingers, hair and loose clothing away from the tires, gears and motor while the truck is switched to "ON".
• Do not place truck or controller near sources of heat or under direct sunlight for long periods of time.
• Do not leave truck or controller outside overnight. Dampness is harmful to internal components.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio / TV technician for help.
WARNING Caution:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
BATTERY WARNING:
• Do not mix old and new batteries.
• Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
• Insert batteries using the correct polarity. Do not short circuit the supply terminal.
• Remove batteries when not playing for an extended period of time. Do not dispose of batteries in fire. They may rupture or explode.
• Remove dead batteries from the product. Do not dispose of batteries in fire. They may rupture or explode.
• Do not recharge batteries.
• Remove any batteries that are damaged or show signs of leakage.
• Always use batteries of the same or equivalent type.
• KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.
©2016 Mattel Brands. LLC. The Black Series, The Black Series, Rally Stomper, and all associated logos are trademarks of MattelBrands. LLC. All rights reserved.
Distributed by Mattel Brands. LLC. Irvine, CA 92618
Customer Service: 1-800-524-7644
For technical support, please visit www.mattelbrands.com or call: 1-800-524-7644.
The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to place, remove, reproduce, any trademarks or copyright notices from this package.
1647565 (2302312)
6 09422 05393 8 8
Made in China
FRONT
SCREW
LATCH
ON/OFF SWITCH
Fig.1
REMOTE CONTROLLER
Fig.2
OPERATING CONTROLS
LEFT JOYSTICK
FORWARD & REVERSE
RIGHT JOYSTICK
TURN & HEAT
ON/OFF SWITCH
Black
Cyan
Magenta
Yellow
RALLY STOMPER
RC CONTROLLER STICKER
TRUCK DOOR STICKER (LEFT & RIGHT)