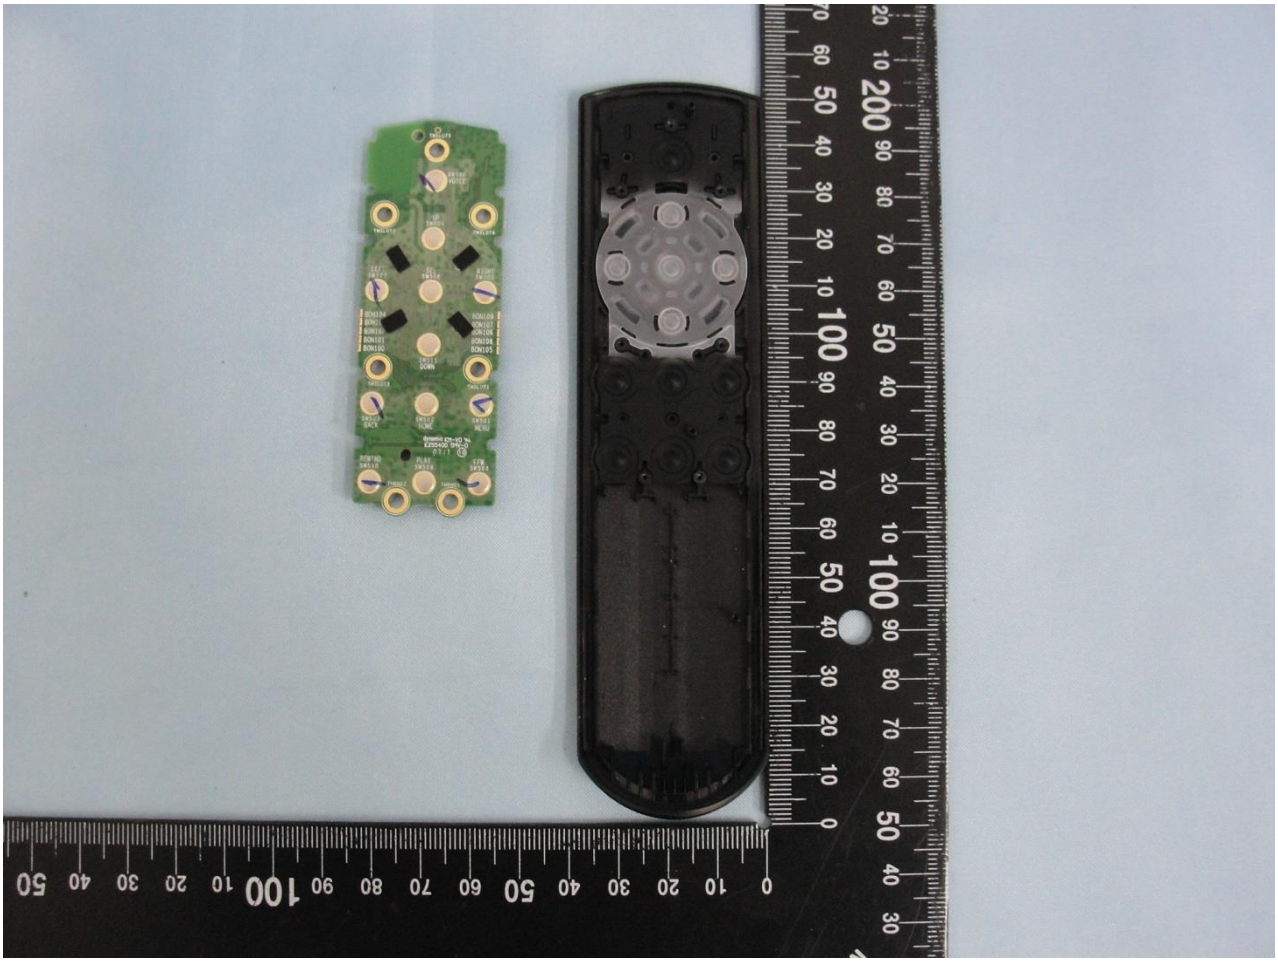

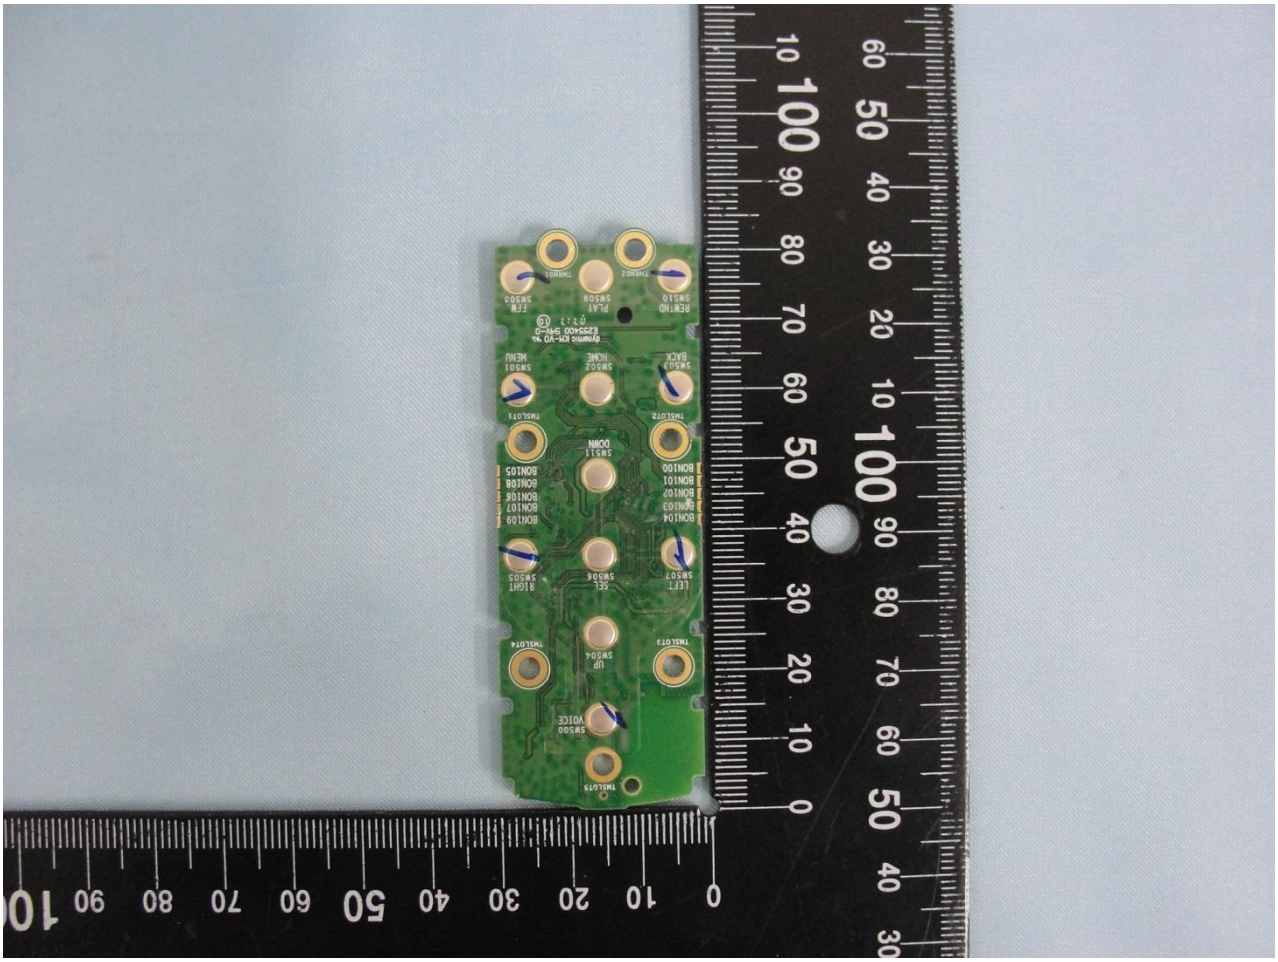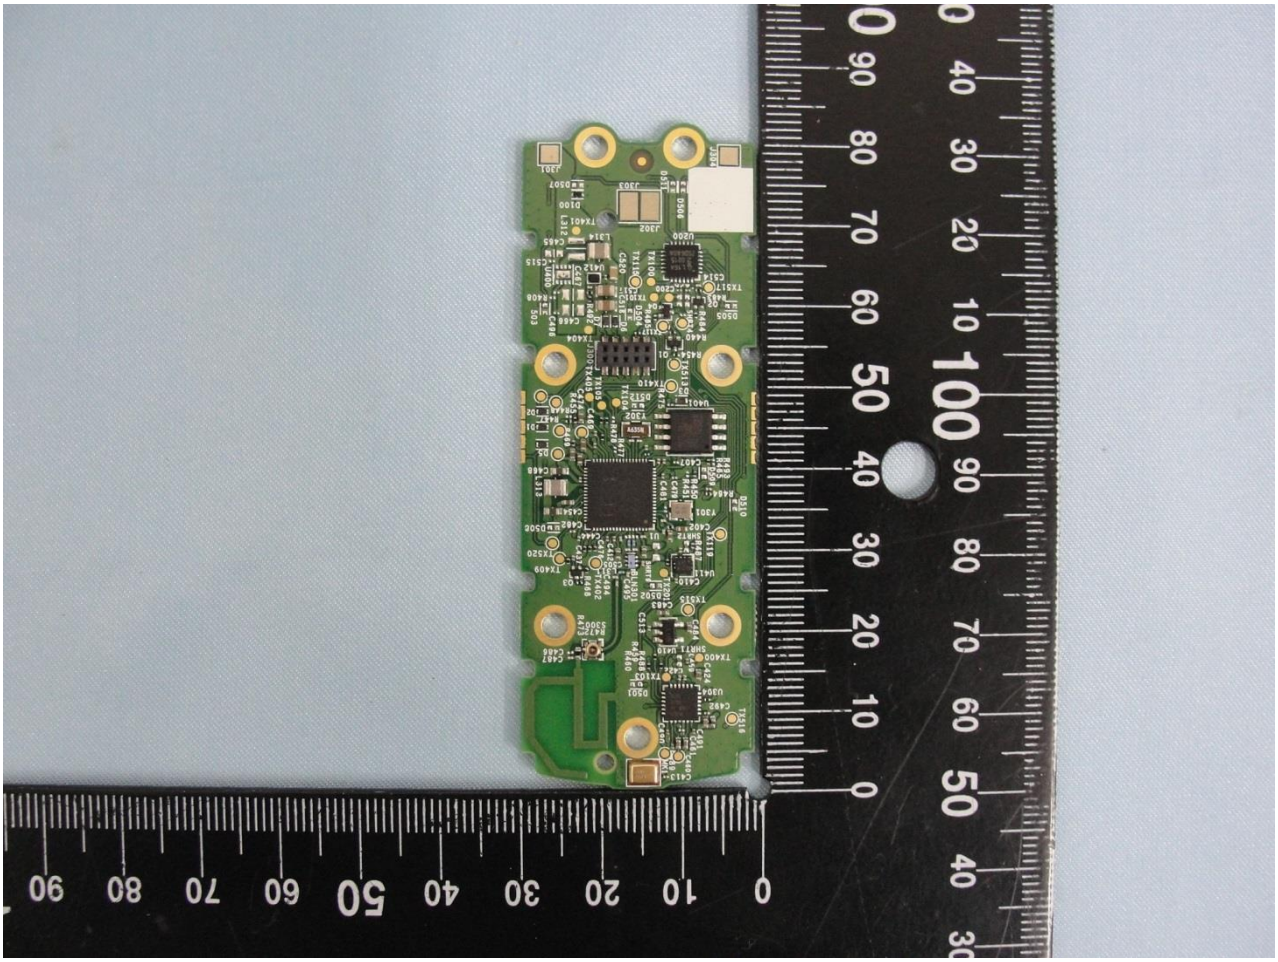
SW500
VOICE
UP
SW504
SEL
SW506
LEFT
SW507
RIGHT
SW505
SW511
DOWN
SW502
HOME
SW503
BACK
SW501
MENU
PLAY
SW509
REWIND
SW510
FFW
SW508