NR-8809带麦克风 User manual EN+CH (20231005) Size：520 x 86mm Double sided printing

PANTONE 2009 C
CMYK (0,35,87,0)

NewRixing®

NR-8809

WIRELESS

SPEAKER & KARAOKE MICROPHONE

User manual

Dear customer:

Thank you for choosing our product. please read all the instructions carefully and retain the manual for future use.

Presentation of the product

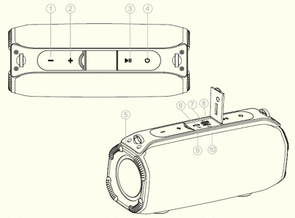

1. Short press : Previous track. Long press : Volume decrease
2. Short press : Next track Long press : Volume increase
3. Short press: Pause / Play Long press: turn on/off pure singing mode
4. Short press: Wireless connection/ USB / TF card mode Long press: Turn on/off speaker Press twice:trun on/off LED light/ switch over to different flash light
5. Colorful lights
6. Type-C charging port
7. USB flash drive slot
8. TF card slot
9. LED indicator
10. Colorful lights

Speaker and microphone charging

Wireless speakers and microphones have built-in rechargeable lithium batteries. When the battery runs out, the speaker and microphone will automatically turn off. Please charge your speakers and microphones promptly.

Charging method:

- Plug the Type-C end of the charging cable into the charging port of the speaker or microphone, and plug the other side into the charger slot or the USB port of the computer/other USB charging device used on the USB charging device. When charging successfully, the indicator light under the charging port will be shining red LED, and the red LED light will turn off when the speaker is fully charged.

Important reminder

- Do not disassemble, repair or modify the speaker without authorization.
- The speaker contains a built-in lithium-ion battery, please do not discard the battery or put the speaker in the fire.
- Do not expose the speaker to rain or humid environment to prevent the speaker from being damaged.
- Do not expose the speaker to exposure to the sun or high temperature environment to prevent the speaker from being damaged.
- Do not charge the device repeatedly for a long time to avoid accelerated aging of the built-in lithium-ion battery.

Instructions for wireless microphone

- Long press⏻ to turn on the speaker. Long press the✚ or ━ key to adjust a comfortable volume.
- Press and hold⏻ button to turn on the microphone, then it will connect to the speaker automatically.
- When the microphone pairing is complete, the indicator LED will shining blue light.

Action buttons	Use features
Long press ⏻ key	Microphone:Power on/off
Press twice ⏻ key	Speaker control: Play/Pause
Long press ✚ key	Speaker control: Next song
Long press ━ key	Speaker control:Previous song
Short press **EFF** key	Different effect of voice
Short press ⏻ key	Switch to adjust speaker volume
Short press ✚ key	Speaker control:Volume increase
Short press ━ key	Speaker control:Volume decrease



Action buttons	Use features
Short press ⏻ key	Switch to adjust microphone volume
Short press ✚ key	Microphone:Volume increase
Short press ━ key	Microphone:Volume decrease
Short press ⏻ key	Switch to adjust microphone echo
Short press ✚ key	Increase the echo of microphone
Short press ━ key	Decrease the echo of microphone
Short press: press once	Long press: hold for 2 seconds

Karaoke mode：Pure singing in your way

- Turn on the speaker and microphone to ensure that both are paired successfully.
- Open the music APP and select your favorite song.
- Long press the⏯button on the speaker to turn on the pure singing function: Singing mode.
- Long press the⏯button on the speaker twice to turn off the pure singing function: background music mode
- In order to save power, please remember to turn off BT speaker and microphones when you are not using them.

Magic voice on the microphone

- Turn on the speaker and microphone to ensure that both are paired successully.
- Press the **EFF** button on the microphone to change voice modes:

Remix effect/Echo effect/Male voice/Female voice/Children's voice,etc.

Instructions for wireless speaker

- Long press⏻ to turn on the speaker. Long press the ✚ or ━ key to adjust a comfortable volume.
- Power on:flash blue light, connected:shining blue light. Power off: the light turn off.
- Wireless connection would be the start-up mode when the speaker is turned on,ready for your wireless device.
- USB mode&TF card mode: the speaker will play songs automatically when insert USB or TF Card.
- Please long press ⏻ to turn off the speaker when it is not needed

Wireless connection

- Long press ⏻ to turn on the speaker，select wireless paring name" **NR-8809** "in your device(phone,tablet,etc.). then wireless Connteced.
- Power on:flash blue light, connected:shining blue light. Power off: the light turn off.
- The speaker will reconnect to the last paired wireless device automatically when power on.

USB/TF Card mode

- Insert the USB or TF Card. Music will play automatically.

How to use

Mode	How to fuction	Functional effects
Wireless / USB flash drive / Micro TF card	Long press ✚ key	Volume up
	Long press ━ key	Volume down
	Short press ⏯ key	Switch to Play/Pause
Wireless / USB flash drive / Micro TF card	Short press ━ key	Previous track
	Short press ✚ key	Next track

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) volume too low.	Adjust source volume
	Low battery or battery dead	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery
No sound at all	Source (Tablet, Mobile phone, Laptop.) turned off.	Turn the source on
	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
Wireless cannot connect	There are short functional obstacles in the product	Restart the speaker
	Speaker has been connected with other devices	Disable wireless of other source devices and search for wireless again

Microphone specifications

Built-In rechargeable battery	3.7V / 800mAh
Operating frequency	2.4G

Sound specifications

Wireless version	5.0 + EDR
Wireless distance	up to 10 metres
Output power	10W x 2
Horn size	57mm
FM frequency range	50Hz-20KHz
Unit size	L220.5 x W75 x H64.7mm
Power input	DC 5V 1A
Charging time	6 hours
Play time	6 hours (70% Volume)
Built-In rechargeable battery	3.7V / 4000mAh
Micro TF card	Support up to 32GB
Multiple functions	Wireless play / USB flash drive / Micro TF card / Colorful lights

Tip:

Please Long press the ⏻ switch to turn OFF the power of the speaker

Safety Instructions

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

Care & Maintenance

Read the following recommendations before using the Wireless Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

Warning

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  (1) this device may not cause harmful interference
  (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  --Reorient or relocate the receiving antenna.
  --Increase the separation between the equipment and receiver
  --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  --Consult the dealer or an experienced radio/TV technician for help
- NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

RoHS FC CE

MADE IN CHINA

新乐欣®
NewRixing

NR-8809

多功能无线K歌音箱

使用说明书

尊敬的用户：

感谢您选用本公司的无线音箱产品。 在您使用该产品之前，请详细阅读本说明书， 并请善存以备后用。

音箱部件说明

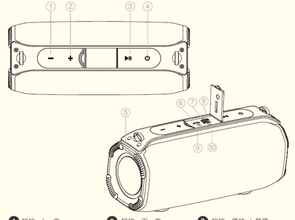

1. 短按：上一曲 长按：减小音量
2. 短按：下一曲 长按：增加音量
3. 短按：播放 / 暂停 长按：打开/关闭唱歌模式
4. 短按：无线连接/ USB / TF 卡模式 长按：打开/关闭扬声器 按两次：打开/关闭彩灯/ 切换彩灯模式
5. 彩灯
6. 充电口(Type-C)
7. U盘插槽
8. TF卡插槽
9. 指示灯
10. 彩灯

扬声器和麦克风充电

无线扬声器和麦克风内置循环可充电锂电池。电池电量耗尽后，扬声器和麦克风将自动关闭。请及时为扬声器和麦克风充电。

音箱和话筒充电

■ 将充电线的Type-C端插入扬声器或麦克风的充电端口，另一侧插入充电器或USB充电设备上使用的计算机/其他USB充电设备的USB端口。充电成功后，充电端口下方的指示灯将呈红色LED亮起，扬声器充满电后红色LED灯将熄灭。

重要提示

■ 请勿擅自拆卸、修理或改造无线音箱。

■ 音箱含有内置锂离子电池，请勿随意丢弃电池或将无线音箱置于火中。

■ 请勿将无线音箱置于雨中或潮湿的环境中，以防无线音箱遭到损坏。

■ 请不要重复对无线音箱反复充电，以免造成内置锂离子电池加速老化。

话筒开关机与使用说明

■ 长按 ⏻ 键打开扬声器的电源。长按 ✚ 或 ━ 键调节舒适的音量。

■ 按住⏯按钮打开麦克风，它将自动连接到扬声器。

■ 麦克风配对完成后，指示灯 LED 将亮起蓝色。

操作按钮	使用功能
长按 ⏻ 按键	话筒开/关机
双击 ⏻ 按键	控制扬声器播放或暂停音乐
长按 ✚ 按键	切换音响下一曲
长按 ━ 按键	切换音响上一曲
短按**EFF**按键	切换话筒变声音效
短按 ⏻ 按键	切换到伴奏调节
短按 ✚ 按键	增加音响播放音量
短按 ━ 按键	降低音响播放音量



操作按钮	使用功能	操作按钮	使用功能
短按 ⏻ 按键	切换到话筒音量调节	短按 ⏻ 按键	切换到音响调节
短按 ✚ 按键	增加话筒音量	短按 ✚ 按键	增强话筒混响效果
短按 ━ 按键	降低话筒音量	短按 ━ 按键	减弱话筒混响效果

短按：按一下　长按：按住不放2秒

唱K模式

■ 打开扬声器和麦克风，确保两者配对成功。

■ 打开手机APP选择您喜欢的音乐进行播放。

■ 长按音箱上的⏯按键开启消原音功能：歌曲伴奏唱K模式。

■ 长按音箱上的⏯按键关闭消原音功能：歌曲原声唱K模式。

■ 为了节省产品电源，请在使用完成后，请记得关闭无线音箱与麦克风的电源。

趣味变声模式

■ 打开音箱电源与话筒电源，确保音箱无线配对模式与话筒成功配对。

■ 短按话筒上的**EFF** 按键切换多种变声效果，混响效果/回声效果/低沉男声/清脆女声/趣味童声。

音箱开关机与使用

■ 长按⏻键打开扬声器的电源。

长按 ✚ 或 ━ 键调节舒适的音量。

■ 开机：闪烁蓝光，连接：闪亮蓝光，关机：灯熄灭。

■ 无线连接将是扬声器打开时的启动模式，为您的无线设备做好准备。

■ USB模式&TF卡模式：插声器插入时会自动播放歌曲。

■ 为了节省产品电源，请在使用完成后，请记得关闭蓝牙音箱与麦克风的电源。

音乐播放功能操作说明

无线模式：

■ 音箱开机默认无线模式，打开手机无线搜索新设备，点击" **NR-8809** "进行连接配对，配对成功后，会有语音提示，表明该音箱已配对，并且状态LED会保持稳定的蓝色。

■ 确保你的音源设备(手机、平板电脑或其他音源设备)与本产品蓝牙成功配对连接，打开手机或平板音乐APP或者内部音频进行播放。

U盘/TF卡模式：

■ 音箱开机默认无线模式，插入U盘或者TF内存卡后自动播放内部音频文件。

播放功能

使用模式	操作方法	功能效果
无线模式/U盘模式/ TF卡模式	长按 ✚ 键	增加音量
	长按 ━ 键	降低音量
	短按 ⏯ 键	切换到播放/暂停
无线模式/U盘模式/ TF卡模式	短按 ━ 键	上一曲
	短按 ✚ 键	下一曲

常见问题及解决方案

问 题	可能的起因	解决方案
音量过小	音源（平板电脑，手机，笔记本电脑等）的音量太低	调整音源设备的播放音量
	电池电量低或电池已损坏	请为设备充电或更换电池
失音 / 破音	电池电量低或电池已损坏	请为设备充电或更换电池
没有声音	音源（平板电脑，手机，笔记本电脑等）已关闭	打开音源设备
	音箱设备已关闭	打开该音箱设备
	播放暂停状态	打开该音箱设备
无线连接不成功	重启该音箱设备	重启该音箱设备
	音箱设备已与附近其他设备相连接	关闭附近其他音源设备，重新将音乐设备与该该音箱相连接

麦克风规格

工作电压/电池容量	3.7V / 800mAh
工作频率	2.4G

音响规格参数

无线版本	5.0 + EDR
连接距离	大约 10 米
输出功率	10W x 2
喇叭尺寸	57mm
调频频率范围	50Hz-20KHz
音箱尺寸	长220.5 x 宽75 x 高64.7mm
电源输入	DC 5V 1A
充电时间	6 小时
播放时间	6 小时（70% 音量）
电 池	3.7V / 4000mAh
TF卡/U盘扩展支持最大容量	32GB
支持功能	无线播放 / U盘播放 / TF卡播放 / 彩灯

提示

当无线音箱在无线 / 音源输入 / U盘 / TF卡模式待机状态下，如果您不需要使用无线音箱时，请关闭无线音箱电源以节省电池电量

请详细阅读如下保养须知，保障该音箱产品的使用寿命：

■ 手机快充头不适用，请使用与音箱匹配的电源适配器（直流5V 1A以内）对音箱进行充电，如果不匹配有可能导致充不进电，甚至损坏音箱内部电路板。（请注意规范使用）

■ 请勿将该产品至于液体、湿气之中，以避免内置的电路板收到损害。

■ 请勿使用含有腐蚀性用的布料擦拭该设备。

■ 请勿将该设备暴露于极高或极低的温度环境之下，否则该设备内部的电子元器件将受到损害，甚至部分塑胶部件也会受到损伤。

■ 请勿将该设备置于火中，因为可能会引起爆炸。

■ 请勿将该设备存放于尖锐的物体旁边，以免该设备遭到刮花。

■ 请不要使该设 备从高处跌落，因为内部元器件将受到损害。

■ 如果您不是专业人士，请勿试图打开或组装该设备，否则设备可能遭到损坏。

安全提示信息

■ 请保持该音频设备远离热源，阳光直射，湿气,水或任何其他液体。

■ 如果该音频设备已暴露于水、 湿气或其他液体,请不要在进行任何操作。

■ 如果环该音频设 备已将由高处跌落或因为其他原因而损坏，请不要继续使用。

■ 如果该设备需要维修， 请找专业人士寻求帮助，不要擅自处置;不当的处置将带来巨大风险!

■ 请不要用湿手操作该音箱产品。

■ 请不要在该设备 的任何借口放置其他无关物品。

■ 请将该音箱设备远离灰尘,低湿等物品。

■ 请将该音箱产品放置于小孩能够触及的范围之外。

■ 该音箱产品不是玩具。

注意：敬请消费者认真阅读以上注意事项，由以上事项导致产品损坏与安全事故，消费者需自担责任，商家不承担任何责任！

RoHS FC CE

中国制造