INSTRUCTION MANUAL
使用說明 / 使用說明

momax

1-VIBE GO
Magnetic Bluetooth speaker
磁吸藍芽音箱
磁吸藍芽音箱

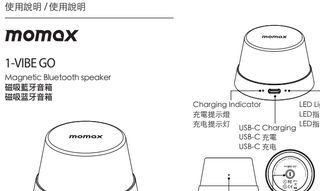

BS6

INSTRUCTION FOR USE
操作/操作

Function	Key Operation	Function Details Function description in detail
Power on	Long press the bottom button for 2 seconds	When manually long pressing the bottom button for 2 seconds, power on with a prompt tone.
Power off	Long press the bottom button for 2 seconds	When manually long pressing the bottom button for 2 seconds, power offAnd there is a prompt tone
BT Search Pairing	Default to BT mode when powered on	When powered on, the blue light flashes, entering pairing mode.And there is a prompt tone - It will automatically search for your device, and once your device finds the Bluetooth name of this unit, you can directly press to pair and connect.
Pairing Successful	When in BT mode after powering on	Simultaneously search and pair, pairing OK.There is a prompt tone;
After BT pairing is successful (automatically reconnects when powered on)	Long press the bottom button for 2 seconds	Long press the bottom button for 2 seconds.Power on with a prompt tone. Bluetooth automatically pairs successfully, and there is a prompt tone;
TWS Dual-speaker mode	Double-click the bottom button of the speaker	After powering on two speakers, connect one of them to the phone's Bluetooth, and do not connect the other to any device. Then, double-click the buttons on both speakers respectively. The working indicator light will alternately flash blue and white. Once pairing is complete, the speaker with the blue indicator light on is the left channel speaker, and the one with the white indicator light on is the right channel speaker. The next time you power on, the two speakers will automatically reconnect to TWS and the phone. A prompt tone will indicate successful reconnection to the phone; a TWS Teaming prompt tone will indicate successful TWS reconnection
Play/Pause Music	Short Press The Bottom Button	When music is playing, short press the bottom button to pause the music. When music is paused, short press the bottom button to play the music.
In Call	NA	NA
Answer Incoming Call	Short Press the Bottom Button	When there is an incoming call, short press the bottom button to answer the call.
Reject Incoming Call	Long Press the Bottom Button	When there is an incoming call, long press the bottom button to reject the call.
End Call	Short Press the Bottom Button	When in call, short press the bottom button to end the call, and the music will automatically play.
Clear Connection Restore Factory Settings	Triple Press the Bottom Button	Triple-clicking the bottom button will clear and disconnect Bluetooth and TWS connections, restoring factory settings (i.e., resetting volume to default, TWS initialization, Bluetooth initialization), and the speaker will enter pairing mode. And there is a prompt tone
Charging	Insert 5V Charger	When charging, the red light stays on. The device can also be powered on in this state.
Fully Charged	When powered on or in standby mode	When the built-in battery of the main unit is fully charged, the green light next to the Type-C port stays on.
Low Battery Alarm	In Power-On State	When the speaker is in the power on state and the battery is low, there is a "Low Battery!" prompt tone every 2 minutes.When the battery level drops to the limit of 3.3V, the red light flashes. - When the battery level drops to 3.0V, it will automatically shut down.

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒,開機併伴有提示音
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒,關機併有提示音
BT搜索配對	開機後藍牙默認在BT時	當開機後藍燈閃烁，並進入配對狀態，併有提示音，此時會自動搜索到設備，當搜尋到您的設備名稱，直接可點擊配對連接。
配對成功	當開機時狀態下	同時搜索後配對，配對OK，有提示音；
BT配對成功（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，當已配對成功後，當在開機後，會自動搜索到曾經配對過的設備，並進行自動連接，當連接成功後，會有一聲提示音。

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒,開機併伴有提示音"Power on"，藍牙自動配對成功。有"connected"的提示音;
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒,關機併伴有提示音"Power off"，藍牙自動斷開。有"disconnected"的提示音;
BT搜索配對	開機後藍牙默認在BT時	當開機後藍燈閃烁，並進入配對狀態，併有提示音，此時會自動搜索到設備，當搜尋到您的設備名稱，直接可點擊配對連接。
配對成功	當開機時狀態下	同時搜索後配對，配對OK，有提示音；
BT配對成功（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，當已配對成功後，當在開機後，會自動搜索到曾經配對過的設備，並進行自動連接，當連接成功後，會有一聲提示音。
充電中	插入5V充電器	當在電量未滿時，紅燈常亮，此狀態時也可以開機
充飽電	開機或待機時	當主機為飽電狀態時，Type-c端口仍處於機體常亮
低電報警	在開機狀態	當音量在開機狀態下，電量不足時，會有一聲"Low Battery!"提示音，每2小時提示一次，當電量至機器3.3V時自動關機，低至3.0V時自動關機
播放/暫停音樂	短按底部按鍵	當在音樂播放狀態時，短按底部按鍵，暫停音樂，當在音樂暫停狀態時，短按底部按鍵，播放音樂；
通話中	NA	NA
來電接聽	短按底部按鍵	當有來電呼入時，短按底部按鍵可以接聽來電
來電拒接	長按底部按鍵	當在通話狀態下，短按底部按鍵，音樂自動重啟；
連接連接恢復出廠設置	3擊底部按鍵	三連擊底部按鍵會清除保護膜藍芽和TWS連接,恢復出廠設置

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒,開機併伴有提示音"Power on"，藍牙自動配對成功。有"connected"的提示音;
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒,關機併伴有提示音"Power off"，藍牙自動斷開。有"disconnected"的提示音;
BT搜索配對	開機後藍牙默認在BT時	當開機後藍燈閃烁，並進入配對狀態，併有提示音，此時會自動搜索到設備，當搜尋到您的設備名稱，直接可點擊配對連接。
配對成功	當開機時狀態下	同時搜索後配對，配對OK，有"connected"的提示音;
BT配對成功（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，當已配對成功後，當在開機後，會自動搜索到曾經配對過的設備，並進行自動連接，當連接成功後，會有一聲提示音。
充電中	插入5V充電器	當在電量未滿時，紅燈常亮，此狀態時也可以開機
充飽電	開機或待機時	當主機為飽電狀態時，Type-c端口仍處於機體常亮
低電報警	在開機狀態	當在電量在開機狀態下，電量不足時，會有一聲"Low Battery!"提示音，每2小時提示一次，當電量至機器3.3V時自動關機，低至3.0V時自動關機
播放/暫停音樂	短按底部按鍵	當在音樂播放狀態時，短按底部按鍵，暫停音樂，當在音樂暫停狀態時，短按底部按鍵，播放音樂；
通話中	NA	NA
來電接聽	短按底部按鍵	當有來電呼入時，短按底部按鍵可以接聽來電
來電拒接	長按底部按鍵	當有來電呼入時，長按底部按鍵可以拒接來電
結束連線	短按底部按鍵	當在通話狀态下，短按底部按鍵可結束連線，音乐自动播放。
清除連接恢復出廠設置	3击底部按鍵	三连击底部按键会清除并断开蓝牙和TWS连接,恢复出厂设置（指恢复音量至默认，TWS初始化，蓝牙初始化，）。音箱进入等待配对状态并有一声提示音
充電中	插入5V充電器	当在充电状态时，红灯常亮，此状态时也可以开机。
充飽電	开机或待机时	当主机内置电池充满电后，Type_c端口常边的绿灯常亮。
低電報警	在开机状态	当音箱在开机状态下，电量不足时，每2分钟提示一次，当电量低至机器3.3V时红灯闪烁低至3.0V时自动关机

LEDLight Status (LED status)
LED燈的狀態/LED灯的状态

Power on 開機/开机	The working indicator light flashes blue 工作指示燈藍閃爍/工作指示灯蓝灯闪烁
Power off 關機/关机	The blue indicator light turns off, entering shutdown mode. 指示燈熄滅，進入關機。 指示灯蓝灯灭，进入关机。
BT Search Pairing BT搜索配對 BT搜索配对	The working indicator light flashes blue 工作指示燈藍閃爍 工作指示灯蓝灯闪烁
Pairing Successful 配對成功 配对成功	The working indicator light flashes blue light stays on. 藍燈閃爍OK後，藍燈常亮 蓝灯闪烁OK后，蓝灯常亮
After BT pairing is successful (automatically reconnects when powered on) BT配對成功後（開機自動回連） BT配对成功后（开机自动回连）	After Bluetooth pairing is OK, the blue light stays on. 藍牙配對OK後，藍燈常亮 蓝牙配对OK后，蓝灯常亮
TWS Dual-speaker mode TWS 組隊 TWS 组队	The working indicator light will alternately flash blue and white. 工作指示燈將交替閃爍藍色和白色 工作指示灯将交替闪烁蓝色和白色
In Call 通話中/通话中	Default LED Light Always On 默認LED燈常亮/默认LED灯常亮
Reject Incoming Call 來電拒絕/来电拒绝	Default LED Light Always On 默認LED燈常亮/默认LED灯常亮
Clear Connection Restore Factory Settings 清除連接 恢復出廠設置 清除连接 恢复出厂设置	The working indicator light flashes blue 工作指示燈將閃爍藍色/工作指示灯蓝灯闪烁
Charging 充電中 充电中	The orange light next to the Type-C port stays on, and the power-on status light is not affected. Type_c端口旁邊的橙色燈常亮，開機狀態燈不受影響； Type_c端口旁的橙色灯常亮，开机状态灯不受影响
Fully Charged 充飽電/充饱电	The green light next to the Type-C port stays on, and the power-on status light is not affected. Type_c端口旁邊的綠燈常亮,開機狀態燈不受影響 Type_c端口旁的绿灯常亮,开机状态灯不受影响
Low Battery Alarm 低電報警/低电报警	When the battery level drops to the limit of 3.3V, the orange light flashes. 當電量低至機器3.3V時橙色燈閃爍 当电量低至机器3.3V时橙色灯闪烁

www.momax.net

BS6_Manual_NewSize_aw 背面

FCC Caution
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2)this device mustaccept any interference received,including interference that may cause undesired operationAny Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to providereasonable protection against harmful interference in a residential installation.This equipmentgenerates uses and can radiate radio frequency energy and, if not installed and used inaccordance with the instructions, may cause harmful interference to radio communications.However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, whichcan be determined by turning the equipment off and on, the user is encouraged to try tocorrect the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiveris connected. -Consult the dealer or an experienced radio/TV technician for helpThe device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Magnetic sheet* installation steps
引磁片*安裝步驟 / 引磁片*安装步骤

3. 撫平氣泡，確認靜電膜與手機殼有效貼合
3. 抚平气泡，确认静电膜与手机壳有效贴合
4. 撕開引磁片貼紙貼於保護膜上
4. 撕开引磁片贴纸贴在保护膜上

*Phone models support magnetic wireless charging natively may not require such Magnetic sheet. *Because the corresponding wireless charging position of each mobile phone model that supports wireless charging (non-native magnetic charging support) may be different, please consult the corresponding mobile phone brand to obtain such information.

*原生支持磁吸充電的手機可能不需要使用引磁片。
*因為每款手機型號能應無線充電位置可能會有所不同, 請請詢相應的手機品牌以獲取此類資訊。

*原生支持磁吸充電的手机可能不需要使用引磁片。
*因为每款手机型号相应无线充电位置可能会有所不同, 请咨询相应的手机品牌以获取此类信息。

SPECIFICATION
產品規格 / 产品規格

MODEL: BS6

USB-C Input	: 5V =350mA
Capacity	: 700mAh
Charging Time	: < 3 hours
Working time	: Up to 2 hours(100% Volume)
Frequency Response	: 120Hz - 20kHz
Driver size	: ø40mm
Output RMS	: 3W
Wireless connectivity	: V5.3
Effective range	: < 10m / TWS > 5m
Material	: ABS + Aluminum + Fabric
Dimension	: ø 60mm*H37.3mm
Weight	: 85g

CONTAINS:
1. Magnetic Bluetooth speaker
2. USB-A to USB-C Cable (30cm)
3. Magnetic patch and protective film
4. Instruction Manual and Warranty Card

型號: BS6

輸入	: 5V =850mA
容量	: 700mAh
充電時間	: < 3小時
續航時間	: 約2小時 (100%音量)
頻率響應	: 120Hz - 20kHz
驅動單元尺寸	: ø40mm
額定輸出功率	: 3W
無線版本	: V5.3
有效距離	: < 10m / TWS > 5m
材質	: ABS + 鋁合金+布
產品尺寸	: ø 60mm*H37.3mm
產品重量	: 85g

包裝內容：
1. 磁吸藍牙音箱
2. USB-A 至 USB-C 連接線 (30cm)
3. 磁性貼片及保護膜
4. 使用說明書及保用證: 7.95 x ⌀ 59.5 mm

型号: BS6

USB-C输入	: 5V = 350mA
容量	: 700mAh
充电时间	: < 3小时
续航时间	: 约2小时 (100%音量)
频率响应	: 120Hz - 20kHz
驱动单元尺寸	: ø40mm
额定输出功率	: 3W
无线版本	: V5.3
有效距离	: <10m / TWS > 5m
材质	: ABS + 铝合金+布
产品尺寸	: ø 60mm*H37.3mm
产品重量	: 85g

包裝內容：
1. 磁吸藍牙音箱
2. USB-A 至 USB-C 連接線 (30cm)
3. 磁性貼片及保護膜
4. 使用說明書及保用證: 7.95 x ⌀ 59.5 mm

WARNING
1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
5. Make sure to remove metallic or magnetic protective case of your device when charging;
6. While charging, the 1-VIBE GO may heat up. This is normal and should not affect 1-VIBE GO's performance. If the battery feel hot to the touch during this charging process, remove the 1-VIBE GO from the charger and allow it to cool down before restarting the charging process;
7. Avoid using bent or damaged USB cable.

DISPOSAL OF ELECTRONIC PRODUCTS
1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local legislation.
3. MOMAXencourages you to participate in electronics recycling program.

WARRANTY CONDITIONS
1. For any defect in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company.
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product: (a) It has explicitly modified or repaired in any way by persons other than technicians of this company; or (b) It has been damaged through misuse, malicious acts, negligence, inflow of any liquid; or; (c) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone / PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit www.momax.net for latest product information.

警告
1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您有熱外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，1-VIBE GO 有可能產生熱力，此乃正常現象，並不會影響產品表現，但如果感到手機電池或 1-VIBE GO 過熱，請斷開 1-VIBE GO 電源供應，待冷卻後，再嘗試充電；
7. 避免使用彎曲或損壞的USB線材。

如何處理廢棄電子產品
1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法例規定處理廢棄的電子產品；
3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款
1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務。
2. 維修時必須出示保用證及購買商號之發票正本；如果用戶不能提供，本公司有權不提供維修服務，用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效；
(c) 非本公司人員重新拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源；以及水、污穢物浸入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經更改，保用證自動失效；
5. 本公司有權隨時任何修改及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 異廠產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格時間可能變更，恕不另行通告；
8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

警告
1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您有熱外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，1-VIBE GO 有可能產生熱力，此乃正常現象，並不會影響產品表現，但如果感到手機電池或 1-VIBE GO 過熱，請斷開 1-VIBE GO 電源供應，待冷卻後，再嘗試充電；
7. 避免使用彎曲或損壞的USB線材。

如何處理廢棄電子產品
1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法例規定處理廢棄的電子產品；
3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款
1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務。
2. 維修時必須出示本保用證及購買商號之發票正本；如

果用戶不能提供，本公司有權不提供維修服務，用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效；
(c) 非本公司人員重新拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源；以及水、污穢物浸入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經更改，保用證自動失效；
5. 本公司有權隨時任何修改及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 異廠產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格時間可能變更，恕不另行通告；
8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

部件名稱	有毒有害物質或元素					印刷
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr6+)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
主機	X	O	O	O	O	O
配件	X	O	O	O	O	O

O：表示該有毒有害物質在該部件所有均質材料中的含量均在GB/T 26572規定的限量要求以下。
X：表示該有毒有害物質至少在該部件的某一均質材料中的含量超出GB/T 26572規定的限量要求以上。
注：本產品標明"環保期"，時期指正常使用條件下的安全期。

Copyright 2024 MOMAX Technology Ltd. All rights reserved.
MOMAX is a registered trademark of MOMAX Technology Ltd.
All other trademarks are the property of their respective owners.
版權所有©2024 MOMAX Technology Ltd。保留所有權利。
MOMAX是MOMAX Technology Ltd的註冊商標。
所有其他商標均為其各自擁有者的財產。
版權所有©2024 MOMAX Technology Ltd。保留所有權利。
MOMAX是MOMAX Technology Ltd的注冊商標。所有其他商標均為其各自擁有者的財產。

momax
WARRANTY/保用證/保用證
Model/型號/型号: .....
Date of Purchase/購買日期/購買日期: .....
Remarks/備註/备注: .....
Customer Service/客戶服務中心/客户服务中心
Hong Kong and Macau:
Unit A, 4/F, Cheung Lung Ind. Bldg.,
Lai Chi Kok, Kowloon, Hong Kong10 Cheung Yee Street,
Hotline: 852-2402 3186 E-Mail: info@momax.net
香港及澳門:
香港九龍荔枝角長義街10號昌隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net
中國內地:
摩本士科技(深圳)有限公司
廣東省深圳市龍崗區坂田街道南湖社區雪南路2016号或
平湖市長青路A棟
郵編: 518000 全國服務熱線: 86-400-886-0010
電郵: info@momax.net.cn