WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE

HY-IMPACT™
Instruction Manual

Read instruction manual carefully before first use.
Retain the instruction manual for future reference.

Package Includes:

BOOM BUDDY Karaoke Machine x 1 **Type-C Charging Cable x 1**
Wireless Microphones x 2 **Instruction Manual x 1**

Product Description

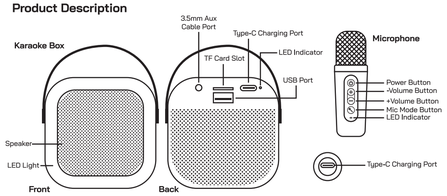

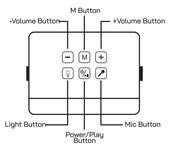

Operating Instructions for Speaker:

- Press & Hold power button for few seconds to turn on the Speaker.
- Turn on Bluetooth on your source device (such as smart phone etc).
- Select BB-2 from the available list of pairable devices.
- When the Speaker is powered on, the LED lights will begin flashing.
- To turn OFF the speaker, Press & Hold the Power Button for few seconds.
- Press Light Button to change between different lighting modes. Press & Hold light button to turn off the lights.
- Press volume button < to reduce volume and press and hold the button to skip backward.
- Press volume button > to increase volume and press and hold the button to skip forward.
- Press M button to switch between Bluetooth/ TF Card / USB / Aux. When TF Card or USB is inserted, it will automatically switch to the respective mode.
- Press Power/Play Button to Pause and Play when already connected to your phone.

Charging Instructions for Speaker:

- Connect the Type-C end of the cable to the Type-C Charging port located at the back of the speaker. And the USB end of the cable to a suitable power source.
- While charging, the LED indicator at the back of speaker will blink red. When fully charged, the red light will turn off.

Operating Instructions for Microphone (Mic):

- Press & Hold the Power Button on the Mic to start it while the LED indicator is blinked blue. It will automatically pair with speaker and connect when the LED indicator is turn blue.
- Use + or – buttons to increase or decrease the volume.
- Short Press Mic Button for Echo effect. Long Press Mic button to switch between different funny voice modes built-in.

Charging Instructions for Mic:

- Connect the Type-C end of the cable to the Type-C Charging Port located at the bottom of the Mic. And the USB end of the cable to a suitable power source.
- While charging, the LED Indicator on the Mic will turn red. It will turn off when fully charged.

Troubleshooting:

1. The indicator light does not turn on, pls check if the speaker is sufficiently charged. If not, sufficiently charge the speaker.
2. There is no sound in the microphone. Check if the mic is on. Alternatively check if it is on the correct mode. Also check if the speaker etc. please re-adjust the position of the microphone.
3. The microphone produces static noise, it may be due to ambient noise, signal interference, or microphone being too close to the speaker etc. Please re-adjust the position of the microphone.
4. Bluetooth playback is interrupted, it may be because the source device is too far from speaker, or there is an obstacle between the source device and the speaker, affecting the signal transmission. Please keep speaker within appropriate range from the source device.
5. Bluetooth cannot be connected, it may be because the distance is too far, or there are obstacles, or the speaker is already paired devices.
6. If speaker / mic does not charge, please check if charging cable is connected appropriately, and if the charging source is a suitable one.

Caution:

- Failure to follow all instructions may result in electric shock, fire and/or serious injury.
- Do not dispose of batteries in the garbage. Dispose of batteries in the garbage is illegal in the United States, under state and federal environmental laws and regulations.
- All rechargeable batteries will degrade over time, eventually limiting the battery's ability to retain a charge. This unit contains a lithium-ion or rechargeable battery pack, which must be disposed of properly when it no longer retain a charge.
- Do not expose battery to heat or place near or dispose of in a fire as this might result in an explosion.
- Do not expose to extreme sunlight or temperatures above 120F (49C).
- Do not expose to moisture or submerge in liquid.
- Do not disassemble the product on your own.
- If unit is not working despite all trouble shooting methods, take it to a qualified technician for repairs.
- This is not a toy.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product Information

Bluetooth Model: BB-2	
Speaker output: 5W	
Battery: 1800 – 800mAh/ 1450 – 400mAh Lithium battery	
Charging voltage: DC5V	
Frequency range:GHz-1MHz	
Power mode: DC Charging and built-in Battery	
3.7V high performance battery	

LIMITATION OF LIABILITY
Liability limited to the purchase price of the product. TV Direct LLC shall not be liable for any consequential or incidental damages or any implied warranty on this product. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

TV Direct LLC,
385 Fifth Avenue,
New York City, NY 10016

©2025
Item No : 03879
MADE IN CHINA

WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT™
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 Type-C Charging Cable x 1
Wireless Microphones x 2 Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Charging Instructions for Mic:
Troubleshooting:
Caution:
Product Information
LIMITATION OF LIABILITY
TV Direct LLC,
385 Fifth Avenue,
New York City, NY 10016
©2025
Item No : 03879
MADE IN CHINA
WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT™
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 Type-C Charging Cable x 1
Wireless Microphones x 2 Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Charging Instructions for Mic:
Troubleshooting:
Caution:
Product Information
LIMITATION OF LIABILITY
TV Direct LLC,
385 Fifth Avenue,
New York City, NY 10016
©2025
Item No : 03879
MADE IN CHINA
WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT™
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 Type-C Charging Cable x 1
Wireless Microphones x 2 Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Charging Instructions for Mic:
Troubleshooting:
Caution:
Product Information
LIMITATION OF LIABILITY
TV Direct LLC,
385 Fifth Avenue,
New York City, NY 10016
©2025
Item No : 03879
MADE IN CHINA
WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT™
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 Type-C Charging Cable x 1
Wireless Microphones x 2 Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Charging Instructions for Mic:
Troubleshooting:
Caution:
Product Information
LIMITATION OF LIABILITY
TV Direct LLC,
385 Fifth Avenue,
New York City, NY 10016
©2025
Item No : 03879
MADE IN CHINA
WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT™
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 Type-C Charging Cable x 1
Wireless Microphones x 2 Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Charging Instructions for Mic:
Troubleshooting:
Caution:
Product Information
LIMITATION OF LIABILITY
TV Direct LLC,
385 Fifth Avenue,
New York City, NY 10016
©2025
Item No : 03879
MADE IN CHINA