VANKYO | Google TV

Model:V702P

PERFORMANCE V700G PRO

An ultra-bright smart portable theater

USER MANUAL

V1.03

VANKYO SUPPORT

support@ivankyo.com

www.ivankyo.com | @VankyoOfficial | VANKYO

CONTENTS

READ BEFORE USE 01
IN THE BOX 02
PRODUCT OVERVIEW 02
Projector 02
Remote Control 03
QUICK START 04
1. Projector Installation 04
2. Power On/Off 05
3. Remote Control Pairing 05
4. Setup Wizard 06
5. Image Adjustment 06
PROJECTOR CONNECTION AND INPUT SOURCE 09
WIFI CONNECTION 09
GOOGLE ASSISTANT 10
GOOGLE CAST™ 10
BT SPEAKER MODE 11
MORE SETTINGS 12
PROJECTION DISTANCE AND SIZE 13
SPECIFICATION 13
TROUBLESHOOTING GUIDE 14

READ BEFORE USE

Please read the Product instructions carefully:
Thank you for purchasing and using this product.
For your safety and interests, please read the Product Instructions carefully before using the product.

About the Product Instructions:
The trademarks and names mentioned in the Product Instructions are the property of their respective owners.
All Product Instructions shown are for illustration purposes only. The actual product may vary due to product enhancements.
We shall not be liable for any personal injury, property damage, or other damages caused by the failure of the user to comply with the Product Instructions or precautions.

VANKYO reserves the right to interpret and modify the Product Instructions.

IN THE BOX

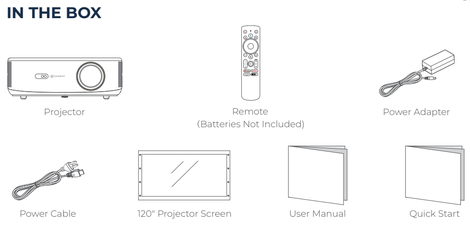

PRODUCT OVERVIEW

Projector

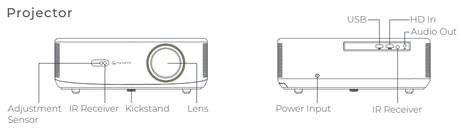

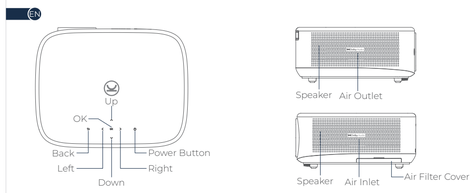

Remote Control

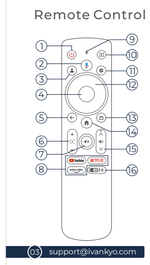

① Power
Press to power on / switch to standby mode / wake up / press and hold for 3s to power off

② Google Assistant
Press and hold and talk

③ User Profile
Press to see profile page

④ OK
Confirm a selection / pause / resume

⑤ Back
Return to previous page

⑥ Focus Adjustment

⑦ Mute

⑧ Streaming Apps
Jump to video streaming pages

⑨ Indicator Light

⑩ Input Source
Press to choose from input sources

⑪ Settings
Press to access dashboard

⑫ Navigation
Control cursor on the screen

⑬ Live Guide (TV)
Press to enter live guide page

⑭ Home
Access homepage

⑮ Volume +/-

⑯ Projector Setting (Shortcut)
Access projector setting shortcut menu

* Please install 2 AAA batteries (not included) into the remote control before use.

QUICK START

1. Projector Installation

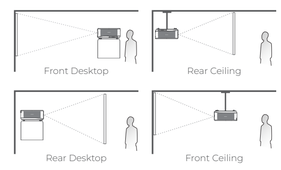

Note:
Whichever installation option you select, please make sure:
* To go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **Advanced Settings** > **Projection Mode** to select the corresponding projection mode, so the images can be projected correctly.
* Mounting Screw: M5*4 (not included)

2. Power On/Off



Take off the lens cover.

Connect the power adapter to an outlet.

Press the **Power Button** to turn on the projector; press and hold the **Power Button** for 3s to turn off the projector.

⚠ Note:
Please use the power adapter provided in the box to prevent product damage.

3. Remote Control Pairing

Turn on the projector and wait for the pairing prompt on the screen. Bring the remote control within 0.33 ft/10 cm of the projector, then simultaneously press and hold the ← and ⌂ buttons. Wait for the pairing to complete.

Tip:
We recommend pairing the remote control with the projector via BT before use. If you skip this, you can go to **Homepage** > **Dashboard** > **All settings** > **Remotes & Accessories** to pair the remote control via BT later.

4. Setup Wizard

Follow the setup wizard to choose your preferred language, select the correct region, sign in with your Google Account or set up basic TV.

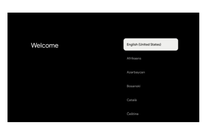

5. Image Adjustment

Focus

1. Auto Focus

When the projector detects shaking/rapid movement, it will automatically adjust the image quality.

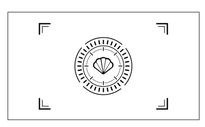

2. Electric/Manual Focus

You can also press the **Focus** buttons on the remote or go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **Focus** > **Manual Focus** to sharpen the image focus until the blurry image becomes clear.

Keystone Correction

1. Auto Keystone Correction

When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.

2. Manual Keystone Correction

Go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **Image Correction** > **Manual Keystone Correction** to manually correct the image shape by four points.

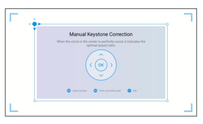

Intelligent Screen Fit

Go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **Image Correction** > **Fit to Screen** and follow the on-screen instructions, enabling the projector to automatically adjust the projected image to fit the screen.

Intelligent Obstacle Avoidance

Go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **Image Correction** > **Advanced** > **Avoid Obstacles** to enable the function. The projector will automatically adjust the projected image to avoid any objects on the projection surface.

Image Scaling

Go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **Image Correction** > **Zoom & Shift** > **Zoom** to reduce or enlarge the image size .

PROJECTOR CONNECTION AND INPUT SOURCE

Connect your device to the projector correctly, then select the right input source.

USB Connection: Insert the disk. Then go to **Homepage** > **Apps** and select **IMPlayer** under **Your apps** tab to locate and play the file.

Tip:
For Basic TV, go to **Homepage** and select **IMPlayer** to locate and play the file.

HD Connection: Connect the device. Then press **Input** button on the remote control or go to **Homepage** > **Dashboard** > **Inputs** and select **HD**.

Wired Speaker and Headphones Connection: Not required to select any input source.

WIFI CONNECTION

You can connect your projector to your router's WiFi by going to **Homepage** > **Dashboard** > **All settings** > **Network & Internet**.

GOOGLE ASSISTANT

Your TV is more helpful than ever. Use your voice to find movies, streaming apps, play music and control the TV. Ask Google Assistant to find a specific title, search by genre, or get personalized recommendations. Even get answers on screen, control smart home devices, and more. Press the **Google Assistant** button on the remote to get started.

GOOGLE CAST™

Google Cast is a platform that lets you stream your favorite entertainment from your phone, tablet or laptop right to your projector. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook.

To use Google Cast, please ensure you are using a Google Cast-enabled app and follow the instructions below.
① Connect your device and the projector to the same wireless network.
② Open the streaming app on your device.
③ Play a video and tap the casting icon on the video screen.
④ Select " **V702P** " to connect. The projector will display the video from your device.

* Due to copyright restrictions, certain content cannot be cast to the projector. You can stream the content on the projector by installing same applications from the **Apps** tab.

* How to use the AirScreen App

You can mirror the entire screen from your device onto the projector screen.
① Ensure that both your device and the projector are connected to the same wireless network.
② Install AirScreen – AirPlay is available on your projector.
③ Open AirScreen app and follow the on-screen instructions to complete the process.



BT SPEAKER MODE

You can use this projector as a BT speaker by connecting your mobile device to it through a BT connection.

Step 1:
Go to **Homepage** > **Dashboard** > **All settings** > **Projector** > **BT Speaker Mode** to make the projector ready for a BT connection.

Step 2:
Access your mobile device's BT settings and activate BT. Search for **V702P** in the available devices list to pair your mobile device with the projector.

Tip:
To exit the **BT Speaker Mode**, simply press ← button on the remote control for 2 seconds.

MORE SETTINGS

1. Reset
Go to **Homepage** > **Dashboard** > **All settings** > **System** > **About** > **Reset** to restore the projector to factory settings.

2. System & Product Info
Go to **Homepage** > **Dashboard** > **All settings** > **System** > **About** to check system & product information.

PROJECTION DISTANCE AND SIZE

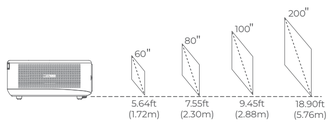

* The recommended projection distance varies with different projection contents. Please adjust the distance between the wall/screen and the projector as needed.
* Ambient darkness will improve the clarity of the projected images.

SPECIFICATION

Display Technology	LCD	Light Source	LED
Resolution	Native 1920 x 1080P	Input Signal	576i/576P/720i/720P/1080i/1080P
Installation Type	Front/Rear/Ceiling	Aspect Ratio	16:9/4:3/Auto
Focus	Auto and Electric/Manual	Keystone	Auto and Electric/Manual
Speaker	8W x2	Power Supply	AC 100-240V~, 50/60Hz, 150W

Unit Dimension	11.9 x 9.3 x 4.0 inches (302 x 237 x 101 mm)	Net Weight	5.29 lbs/2.4 kg
Photo Format Supported	JPEG/BMP/GIF/PNG	Audio Format Supported	MPEG-1/2/3, mp3, aac, dd+(9630-B)
Video Format Supported	HDR10, HLG, HEVC, PRIME HDR, AV1, MPEG-1/2/ 4 1080P30fps H.264/ H.265 4KP60pfs	Ports	HD In x 1 / USB x 1 / Audio Out x 1
Mounting Screws	M5	Screw Number	4(not included)

TROUBLESHOOTING GUIDE

1. The copyrighted content from Hulu, Netflix, and similar services can not be mirrored or cast.
* This projector offers a range of pre-installed streaming apps that are officially licensed. You can go to the **homepage** > **Apps**, search for the app, and log in to your account to play the content. For casting, refer to the "Google Cast" section.

2. Fuzzy Image
* Adjust the focus or keystone correction of the projector.
* Make sure the projection distance is in the effective focal range of the projector.
* Remove the dust or dirt from the lens with a blower or soft-bristled brush.

3. Non-rectangular Image
* Place the projector perpendicular to the screen/wall if keystone correction function is not used.
* Use the keystone correction function to adjust image shape.

4. Automatic keystone correction failure
* Make sure the adjustment sensor on the front of the projector is not blocked or smudged.
* Move the projector until it is perpendicular to the projection surface and try again.

5. Autofocus failure
* Make sure the adjustment sensor on the front of the projector is not blocked or smudged.
* Move the projector back and forth until the projector is in recommended projection distance.

6. Remote control unresponsive
* Make sure the batteries are installed correctly and not drained.
* Remove any obstructions between your projector and remote control.
* Ensure the remote control is successfully paired with projector via BT.
* Make sure no button is pressed or stuck and check if the power indicator is still on. If yes, please contact customer support or local service center.

7. Connect the BT devices
* Enter **Homepage** > **Dashboard** > **All settings** > **Remotes & Accessories** to check the BT device list, and connect the device.

8. Others
* Please feel free to contact us at **support@ivankyo.com**.

Statement

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube and Google Cast are trademarks of Google LLC.

Dolby Audio

Dolby, Dolby Audio and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

NETFLIX

Netflix is a trademark of Netflix, Inc.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information:
— The radiated output power of this device meets the limits of FCC radio frequency exposure limits. This device should be operated with a minimum separation distance of 20cm (8 inches) between the equipment and a person's body.
— The remote control has been evaluated to meet general RF exposure requirement. It can be used in portable exposure condition without restriction.

Canada compliance statement /Conformité réglementaire canadienne :
This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
Operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
Exposure to radio frequency energy:
— The radiated output power of this device meets the limits of IC radio frequency exposure limits.
This device should be operated with a minimum separation distance of 20 cm (8 inches) between the equipment and a person's body.
— The remote control has been evaluated to meet general RF exposure requirement. It can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
La bande 5150–5250 MHz est réservée uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

L'exposition à l'énergie radiofréquence:
— La puissance de sortie rayonné de cet appareil est conforme aux limites de la IC limites d'exposition aux fréquences radio. Cet appareil doit être utilisé avec une distance minimale de séparation de 20 cm entre l'appareil et le corps d'une personne.
— La télécommande a été évaluée et répond aux exigences générales d'exposition aux RF. Il peut être utilisé dans des conditions d'exposition portables sans restrictions.

CAN ICES (B) / NMB (B)

The product label and certification information are located at the bottom of the product.