front: 6cm x 8cm

HL8478
Wireless Speaker Bottle

It is recommended to read this user manual carefully and keep it for future reference

Product Description:

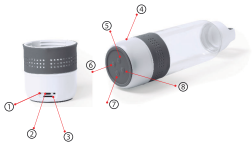

1. LED indicator
2. Micro USB port
3. Micro SD card slot
4. Microphone
5. ⏻: Turn On/Off; Mode
6. -: Previous track/ Volume down
7. ▶II: Play/Pause/Pick up/Hang up/ Reject/Redial
8. +: Next track/ Volume up

Specifications:
- Wireless version 4.2
- Charge voltage: 5V ⎓
- Lithium battery: 300mAh, 3.7V
- Frequency: 100Hz - 15KHz
- Working time: Up to 3 hours
- Working distance: Up to 10M
- Impedance: 4 ohms
- Power: 3W
- Distortion: less than 1%
- SNR: 78dB
- Support Micro SD card up to 64GB

Operation:
Long press ⏻ to power on the device, to use the following functions:
Note: Once finished using, long press ⏻ to turn off the device.

Playing music via Wireless:
When the speaker is powered on, the blue LED light will flash quickly, which indicates that the device is ready to be paired.

From the Wireless menu of your device, search for new devices and select "WB9489". Once paired, the blue LED light of the receiver will remain fixed.
From this moment, you can control the music from your mobile device, or from the speaker.
- Short press ▶II to play/pause the music
- Short press + and 1 to change the song and long press to adjust the volume

Note: Short press ⏻ to change mode

Hands-free:
When the device is connected via Wireless, you can use the hands-free function.
- Short press ▶II to pick up/hang up a call and long press to reject the incoming call.
- Short press ▶II twice consecutively to redial the last outgoing phone number.

Note: During the call, you can adjust the volume of the call by keep press + or - .

Playing music by Micro SD card:
Insert the SD card into the appropriate slot and the music will start playing automatically.
From this moment, you can control the music from the speaker.
Note: It is not necessary that the device is connected via Wireless. If it is previously, the speaker will switch to SD card mode automatically. Short press ⏻ to change mode.

Charging:
Insert the Micro USB connection into the Micro USB port on your device and connect the other end of the cable to your PC or AC/DC adaptor to charge the speaker. During the charging process, a red indicator light will remain on. When the charging process has finished, the indicator light will turn off. At the end of charging, do not forget to disconnect the cable.

Troubleshooting:

Fault	Solutions
Unable to pair up with other devices	1. Check whether the speaker is still on the process of search or switch it off and on again. 2. There are too many Wireless devices in the proximity that cause difficulty in connection. Turn off other Wireless devices. 3. Make sure your earphone is in "Pairing mode".
The sound is low or distorted	1. Check the Wireless device's volume and then adjust it to an appropriate level. 2. Recharge the battery.
Occasionally the music stops	1. Check whether the speaker effective transmission range is exceeded or if there is an obstacle standing between the speaker and other Wireless devices.

Warnings:
1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately or throw it into the fire as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.

CE
MADE IN CHINA
2AQPT-HL8478

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

back: 6cm x 8cm

Il est recommandé de lire ce manuel d'utilisation et le conserver à titre de référence.

Description du produit:

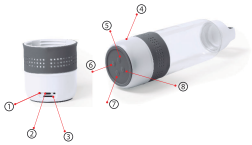

1. Indicateur LED
2. Port Micro USB
3. Emplacement pour carte Micro SD
4. Microphone
5. ⏻: ON/OFF/Mode
6. -: Piste précédente/Moins volume
7. ▶II: PlayPause/reprendre/raccrocher/ Rejeter/Recomposer
8. +: Piste suivante/Plus volume

Spécifications:
- Version sans fil 4,2
- Tension de charge: 5V ⎓
- Batterie au lithium 300mAh, 3.7V
- Fréquence: 100Hz - 15kHz
- Durée de lecture: Jusqu'à 3 heures
- Distance de travail: Jusqu'à 10m
- Impédance: 4 ohms
- Puissance: 3W
- Distorsion: moins de 1%
- De rapport signal-bruit: 78dB
- Support Carte Micro SD jusqu'à 64GB

Opération:
Un appui long ⏻ pour allumer l'appareil, utilisez les fonctions suivantes:
Remarque: Une fois terminé l'utilisation, appuyez longuement ⏻ pour éteindre l'appareil.

Lecture de musique via sans fil:
Lors d'utiliser le haut-parleur, la lumière bleu LED clignote rapidement, ce qui indique que le périphérique est prêt à être.

Utilisez le menu sans fil de votre appareil pour chercher de nouveaux périphériques et sélectionnez "WB9489". Une fois couplé, la lumière bleu LED du récepteur reste fixe.
Maintenant vous pouvez contrôler la musique de votre appareil mobile, ou de le haut-parleur.
- Un appui court sur ▶II pour play/pause la musique.
- Un appui court sur les touches + et - pour changer la chanson et un appui long sur pour ajuster le volume

Remarque : Un appui court sur ⏻ pour changer de mode

Mains-libres:
Lorsque l'appareil est connecté via Wireless, vous pouvez utiliser la fonction mains libres.

- Un appui court sur ▶II pour prendre/ raccrocher un appel et un appui long pour rejeter l'appel.
- Un appui court deux fois sur ▶II pour recomposer le dernier numéro appelé

Remarque : Au cours de l'appel, vous pouvez régler le volume en appuyant sur + ou -

Lecture de musique par carte Micro SD:
Insérez la carte SD pour jouer la musique automatiquement.
Maintenant vous pouvez contrôler la musique de le haut-parleur.
Remarque : Il n'est pas nécessaire que l'appareil soit connecté via sans fil. S'il est déjà connecté, le haut-parleur va changer en mode carte SD automatiquement. Appui court ⏻ pour changer de mode.

Chargement:
Insérez la connexion micro USB dans le port Micro USB sur votre appareil et branchez l'autre extrémité du câble à votre PC ou l'adaptateur c.a./c.c. pour charger le haut-parleur. Pendant le processus de charge, une lumière rouge reste allumé. Lorsque le processus de charge est terminé, la lumière s'éteint. À la fin du chargement, ne pas oublier de déconnecter le câble.

Dépannage:

Faute	Solutions
Impossible de jumeler avec d'autres appareils	1. Vérifiez si l'enceinte est toujours en cours de recherche ou éteignez-la et rallumez-la. 2. Il y a trop d'appareils sans fil à proximité qui causent des difficultés de connexion. Éteignez les autres périphériques sans fil. 3. Assurez-vous que votre écouteur est en mode "Pairing".
Le son est faible ou déformé	1. Vérifiez le volume du périphérique sans fil, puis réglez-le au niveau approprié. 2. Rechargez la batterie.
De temps en temps la musique s'arrête	1. Vérifiez si la portée de transmission effective du haut-parleur est dépassée ou s'il existe un obstacle entre le haut-parleur et les autres périphériques sans fil.

Avertissements:
1. Ne pas exposer cet appareil à la pluie ni à l'humidité.
2. Ne pas laisser tomber l'appareil, pour éviter des dommages significatifs.
3. Ne pas désassembler, réparer ou modifier ce produit par vous-même, contactez un spécialiste.
4. Afin d'éviter tout risque, de ne pas disposer ce produit de façon inappropriée ou la jeter dans le feu car il contient une batterie au lithium intégrée.
5. Nettoyer le haut-parleur avec un chiffon sec.
6. Ne pas placer l'appareil près de sources de chaleur ni l'exposer à la lumière directe du soleil.
7. N'insérez pas d'objets métalliques dans l'appareil car il porte un risque de court-circuit .

CE
FABRIQUÉ EN CHINE