We'd love to hear from you. Scan with your Walmart app and let us know what you think.

100023515

6 81131312240

onn.™

36"2.1 Soundbar

User Manual

Battery Replacement for the Remote Control the First Step 01

Lift up the back cover to open the battery compartment of the remote control.

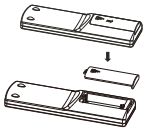

Battery Replacement for the Remote Control the Second Step 02

Insert two AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.



Battery Replacement for the Remote Control the Third Step 03

Close the battery compartment cover.

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 15' away and within a maximum of 60 arc.

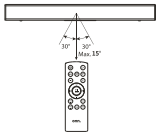

LED Screen activity

- LED Screen activity
  Bluetooth mode: the screen display "ST"
  Bluetooth is pairing: the screen display "PAIRING"
  Bluetooth is paired: the screen display "PAIRED"
  Bluetooth disconnected: the screen display "UNPAIRED"
- AUX IN: the screen display"AUX"
  Optical: the screen display"OPTICAL"
  HDMI IN: the screen display"HDMI IN"
  HDMI ARC: the screen display"HDMI ARC"

Adjusting the Volume

- Press VOL +/- on the unit or the remote control to adjust the volume(Volume range Min.1 to 35 Max.),the screen shows like VOL 1, VOL 2, VOL MAX.
- If you wish to turn the sound off, press on the remote control, the screen shows MUTING.Press again to resume normal listening.

WARNING

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.
For more information, please contact the local authority or your retailer where you purchased the product.

The above mark is in compliance with the Waste Electrical and Electronic Equipment (directive and amendment) WEEE.
The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available to consumers in accordance with legislation. Batteries containing lead, mercury and cadmium exceed the EU Directive 2006/66/EC, Annex II, Part B, Article 11 limits of more than 0.004% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.
We continually strive to improve our products, specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment.
All trademarks are the property of their respective owners and all rights are acknowledged.

Service

How to get service:

- Call 1-808-825-4278, contact Walmart Inc. Walmart.com, Bentonville, AR 72716
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart, Inc. based upon the Walmart, Inc. Limited Warranty Statement.
- At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Center or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- A unit purchased or serviced outside the USA.
- A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with Defects.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- FCC RF Radiation Exposure Statement: Caution: To maintain compliance with the FCC RF exposure guidelines, place the product at least 20cm from nearby persons.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device cannot be used with this unit to ensure compliance with the Class B FCC limits.

Warranty

Walmart, Inc. Limited Warranty

LIMITATION OF WARRANTY

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. TO THE EXTENT PERMITTED BY LAW, THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

How State Law relates to this warranty:

- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or seek warranty coverage outside the United States: This warranty does not apply. Contact your store for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

What's in the Box? Check to make sure you have everything below.

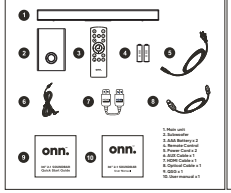

1. Main unit
2. Subwoofer
3. AAA Battery x 2
4. Remote Control
5. AUX Cable x 1
6. AUX Cable x 1
7. HDMI Cable x 1
8. Optical Cable x 1
9. QSG x1
10. User manual x1

Get to Know Your 36" 2.1 SOUNDBAR

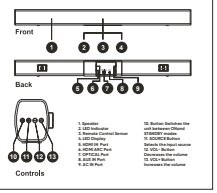

1. Speaker
2. LED Indicator
3. Remote Control Sensor
4. VOL+ Button
5. HDMI IN Port
6. HDMI ARC Port
7. OPTICAL Port
8. AUX IN Port
9. AC IN Port
10. Button Switches the unit between Official STANDBY modes
11. Pairing button
Switch the input source
12. VOL- Button
Decreases the volume
13. VOL+ Button
Increases the volume

Controls

Get to Know Your 36" 2.1 SOUNDBAR

Rear View of Subwoofer

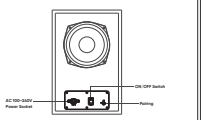

Remote Control Overview

1. Button Switches the unit between ON and STANDBY modes.
2. Press AUX button, device will play audio from aux input.
3. Press OPTICAL button, device will play audio from optical input.
4. Press HDMI button, device will play audio from HDMI input.
5. Fast press skip to previous track in Bluetooth mode.
6. Press and hold to play/ pause music in Bluetooth mode.
7. Fast press skip to next track in Bluetooth mode.
8. VOL- button decreases the volume.
9. MUTE- button decreases bass.
10. TREB- button decreases treb.
11. Press EQ button to select music, movie and talk EQ mode.
12. Press and hold to enter pairing mode in Bluetooth.
13. Press HDMI ARC button, device will play audio from HDMI IN input.
14. Press HDMI ARC button, device will play audio from HDMI ARC input.
15. Fast press to pair the last paired Bluetooth device, press and hold to enable bluetooth pairing if there is an existing connection then disconnect the devices, unit will enter pairing mode.
16. Fast press to next track in Bluetooth mode.
17. MUTE+ button increases bass.
18. TREB+ button increases treb.



Using the HDMI IN or HDMI ARC connection

Use DVD to connect via HDMI cable to sound bar HDMI IN. Sound bar connects to TV via HDMI cable in HDMI ARC. Same as the TV HDMI ARC. Sound bar needs to be on HDMI IN source. The screen shows HDMI IN



DVD connects via HDMI cable to TV HDMI IN. Sound bar connects to TV via HDMI cable in HDMI ARC. Same as the TV HDMI ARC. Sound bar needs to be on HDMI ARC source. You should have audio and video. The screen shows HDMI ARC



Using the AUX or Optical Connection

Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV's audio output Port to the soundbar's AUX IN port.

Use a 3.5mm to 3.5mm stereo audio cable (included) to connect the TV's headphone Port to the soundbar's AUX IN port.

Use an optical cable (included) to connect the TV's OPTICAL OUT Port to the soundbar's OPTICAL Port.



Bluetooth Connection and 2.1 Connection

Establish bluetooth connection

When unit powers on, press source button on soundbar or press the bluetooth key on the remote control to enter bluetooth BT sate. Set "2.1 Soundbar" mode to enter bluetooth pairing mode, the screen displays BT flashing, the BT remain solid bright when bluetooth connected.

Pairing the subwoofer

Subwoofer is paired with the soundbar when it leaves the factory. When the soundbar is turned on, the subwoofer will automatically connect automatically. If this does not happen, please pair the subwoofer to the soundbar manually.

Pair manually: Press and hold mute on the remote for 7 sec, soundbar's LED display will show SUB LINK, then press and hold pairing button on subwoofer for 5 sec, the subwoofer's LED will fast blink blue until paired with each other. After connected, led indicator on the subwoofer will remain solid and this LED display on the front of the soundbar will show LINKED 3s.



Using the Bluetooth Connection

- Turn on the power, press ⏻ on the unit or remote control to switch the unit to ON mode with a prompt tone.
- Keep the distance of the soundbar and your mobile phone, PC, tablet or other Bluetooth enabled device within 1 meter. The closer, the better.
- Ensure Bluetooth is enabled on your device and that your device is discoverable.
- Select the Bluetooth mode on the soundbar:
  Using the remote control press the Bluetooth button. The BT is flashing on the screen.
  Alternatively press the source button on the soundbar until the BT is flashing on the screen.
- Select the Bluetooth search function on your device. Your device should discover "2.1 Soundbar" and then select "2.1 Soundbar".
- Select pairing mode:
  Using the remote control press and hold the Bluetooth button for 5 seconds until the BT flashing on the screen.
  Alternatively, press and hold the source button on the soundbar for 3 seconds until the BT flashing on the screen.
- Select the Bluetooth search function on your device. Your device should discover the soundbar which is called "onn. 36" 2.1 Soundbar".
- Select "onn. 36" 2.1 Soundbar" your device is paired with the soundbar when the BT is solid on the LED display.

Connecting to the Power Outlet

- Connect the AC IN port to the power outlet by power cable.



Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Product Wall Mounting the First Step 01

1. On 2 pcs of holes (Ø 8mm each according to wall tape) in the wall. The distance between the holes should be 58 mm.



- It is illegal to install or mount the unit in any way other than specified in this manual and/or in any way that may be hazardous to people or property.
- Improper installation, incorrect mounting and/or installing the unit in a way other than specified in this manual may result in the unit falling from the wall, causing serious injury and/or damage to property.
- Installing the unit on a wall that is not able to support the weight of the unit may result in the unit falling from the wall, causing serious injury and/or damage to property.
- Do not install the unit in any way that may cause electromagnetic interference, if you do, the unit may malfunction and cause interference to other electronic devices.
- Do not install the unit in any way that may cause the unit to overheat, ensure that ventilation openings are not blocked or covered.
- Do not install the unit in any way that may cause the unit to become unstable, ensure the unit is well ventilated.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- The unit must be installed in a location that is sufficient for the unit to stay full off or by one.
- The mains socket must be located near the unit and should be easily accessible.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit and keep from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other heat sources.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If any liquid or foreign object enters the unit, immediately switch off and remove the mains plug from the socket and contact your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that our ventilation materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or any other confined space. Ensure the unit is well ventilated.

Mains Adapter

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary wastage of electricity, the mains adapter plugged in the mains socket will be for long periods of time. Disconnect the adapter from the power supply.
- Working ambient 0°C~35°C, relative input range 20%-80% (adapter).

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Disconnect the unit from the mains socket before a lightning storm.

Mains Adapter Cable

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.

Product Wall Mounting the Second Step 02

2. Firmly fix screw Ø 10.2*L38mm (not included) into each hole in the wall if necessary.

Product Wall Mounting the Third Step 03

3. Insert 1 screw TA-Ø40mm (not included) into each anchor. Be sure to leave a gap between the wall and the screw head of 10mm for hanging the unit. Ensure that heads of the screws and anchors place

Safty Warnings

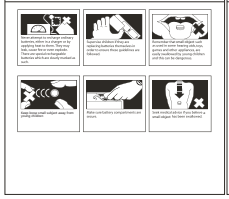

Safety Warnings

Location of Unit

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include the manual.
- Check that the voltage marked on the rear panel of the unit matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- The unit must be installed in a location that is sufficient for the unit to stay full off or by one.
- The mains socket must be located near the unit and should be easily accessible.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit and keep from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other heat sources.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If any liquid or foreign object enters the unit, immediately switch off and remove the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that our ventilation materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or any other confined space. Ensure the unit is well ventilated.

Mains Adapter

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary wastage of electricity, the mains adapter plugged in the mains socket will be for long periods of time. Disconnect the adapter from the power supply.
- Working ambient 0°C~35°C, relative input range 20%-80% (adapter).

Safety

- Always disconnect the unit from the mains supply before connecting/ disconnecting other devices or moving the unit.
- Disconnect the unit from the mains socket before a lightning storm.

Mains Adapter Cable

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.

Neatness

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, the unit may malfunction and cause interference to other electronic devices.
- Do not place any objects on the top of the unit, as this may cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and like a sweet or candy.
- Please dispose of batteries correctly by following the guidance in the manual.

Cleaning

- Ventilation should be a open need to ensure that they do not play with the unit and keep out of reach.
- Never let anyone especially children push anything into the holes, slots or any other openings in the unit. We could result in a fatal electric shock.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Installation

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pads or abrasive cleaning solutions as these may damage the unit's finish.
- Do not use liquids to clean the unit.
- Do not place flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

THIS LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCTS ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK.

Warning: To reduce the risk of electric shock, do not remove cover (or back). There are no user serviceable parts inside. Refer servicing to qualified personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

- **No naked flame sources, such as lighted candles, should be placed on the apparatus.**
- **Excessive sound pressure from earphones and headphones can cause hearing loss.**
- **The product is designed to use in moderate climates.**

Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control

- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control in a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Thank you for purchasing your new ONN Soundbar.
We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you make the most out of your new ONN Soundbar. Please read the safety instructions carefully before use and keep this instruction manual for future reference.

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.
DO ensure that electrical connections (including the mains plug, extension leads and interconnections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.
DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
DO be careful with glass panels or doors on the equipment.
DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.
DON'T remove any fixed cover as this may expose dangerous voltages.
DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.
DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.
DON'T place hot objects or naked flame sources such as lighted candles or night lights on or near the equipment. High temperatures can melt plastic and lead to fires.
DON'T use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
DON'T use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.
DON'T listen to headphones at high volume, as such use can permanently damage your hearing.
DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that you can easily access the mains plug or socket. Special arrangements may need to be made for elderly or handicapped people.
DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, remove the mains plug from the mains socket and consult your dealer.

ABOVE ALL

- NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment - this could result in a fatal electric shock.
- NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

Specifications

Model	100023515
AC IN	Input AC 100~240V 50/60Hz
Total Power	100W
Power Consumption	10W
Net Weight	2.8kg
Dimension	Main bar: 918mm(W) x 69mm(D) x 88mm(H) Subwoofer: 200mm(L) x 200mm(D) x 300mm(H)

Features and specifications are subject to change without prior notice.

Hints and Tips

If a problem occurs, it may often be due to something very minor. The following table contains remedies.

- When switching to another channel, the Bluetooth will be in disconnected status.
- When LED indicator is flashing slowly, the Bluetooth is in pairing and be in disconnected status.
- When LED indicator becomes solid, the Bluetooth will be connected successfully with a paired time.

Problem	Solution
No power	• Ensure the mains adapter is connected securely at both ends. • Make sure that the socket is switched.
No remote control function	• Set the remote control near the unit. • Remove any obstacles between the remote and the unit. • Replace the batteries in the remote control with a new batteries. • Remove any obstacles between the remote control and the unit.
Impossible to make a connection	• Ensure that you are using a blue tooth device that is equipped with an appropriate manufacturer cleaning solution.

Tip: If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

IMPORTANT SAFETY INSTRUCTIONS

1.Read these instructions. – All the safety and operating instructions should be read before the product is operated.
2.Keep these instructions. – The safety and operating instructions should be retained for future reference.
3.Heed all warnings. – All warnings on the appliance and in the operating instructions should be adhered to.
4.Follow all instructions. – All instructions should be followed and operated as directed.
5.Do not use this apparatus near water. – The appliance should not be used near water or moisture – for example, in a wet equipment or near a swimming pool, and the like.
6.Clean only with dry cloth.
7.Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8.Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9.Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10.Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11.Only use attachments/accessories specified by the manufacturer.
12.Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13.Unplug this apparatus during lightning storms or when unused for long periods of time.
14.Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15.CAUTION: These servicing instructions are for use by qualified service personnel only.
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
16.Do not install this equipment in a confined or building in space such as a book case or similar unit, and remain a well ventilation conditions at open tube. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths, curtains, etc.
17.WARNING: Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc).
18.WARNING: Refer to the label or the information on exterior bottom enclosure for electrical and safety information before installing or operating the equipment.
19.WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
20.WARNING: The mains plug or appliance coupler is used as disconnect device. The disconnect device shall remain readily operable.
21. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

User Manual_Ver.02 Rev 08/18/19
Unfold dimension : 287.5X290mm
fold dimension: 143.5X72.5mm
Material : 80g writing paper
Printing : 2C , double sides
FW1816 说明书80g书写纸 287.5*290*T=0.2mm 白底黑字 双面印刷