Need help?
We're here for you every day
from 7 a.m. – 9 p.m. CST.
Give us a call at 1-888-516-2630
We 'd love to hear from you. Scan with your Walmart app and let us know what you think.

November 23, 2020_V1

6 81313151237

onn.™

36" 5.1 SOUNDBAR

Model: 100027812

USER MANUAL

November 23, 2020_V1

Thank you for purchasing your new onn. Soundbar.
We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will find some hints and tips to help you make easy issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.
DO ensure that all electrical connections (including the mains plug, extension leads and interconnections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.
DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
DO be careful with glass panels or doors on the equipment.
DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DONT remove any fixed cover as this may expose dangerous voltages.
DONT obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.
DONT allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.
DONT place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires.
DONT use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
DONT use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.
DONT listen to headphones at high volume, as such use can permanently damage your hearing.
DONT leave equipment switched on when it is unattended unless it is specifically stated that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.
DONT continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.

ABOVE ALL
- NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock.
- NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused and, in extreme circumstances, batteries can leak or explode. Here are some simple guidelines to safe battery use designed to eliminate any such problems.

BATTERY SAFETY GUIDELINES

Always check that batteries are correctly oriented by lining up their + and – ends with the diagrams in the equipment. Incorrect fitting can cause leakage, in extreme cases, fire or explosion.

Never short circuit a battery or allow its terminals to bridge across any conductive material. Short circuits can lead to leakage, fire or even an explosion.

Remove the batteries if the equipment is going to be left unused for a long period of time. Leaving batteries in the equipment can lead to leakage.

Never mix batteries of different types, or new batteries with used batteries. Mixing can cause leakage, in extreme cases, fire or explosion.

Dispose of batteries correctly by following the guidance in this manual.

Keep batteries out of reach of young children.

Never throw batteries into a fire, as this can cause their to explode. Batteries should be taken to a local recycling point.

Never attempt to recharge batteries unless specifically stated that they are designed for this purpose. Recharging batteries that are not designed for recharging can cause them to explode.

Never use batteries that have been damaged in any way – such as those with cracked or broken casings.

Remove rechargeable batteries from the equipment and all batteries from battery chargers when they are no longer in use. Do not leave unused batteries in the equipment or battery chargers for extended periods of time.

Keep the battery contacts clean and free from corrosion. Wipe the battery contacts with a clean, dry cloth before fitting the batteries into the equipment.

Never use batteries or battery chargers that show signs of damage or overheating such as discoloration or deformation of the casing.

Never attempt to take batteries apart or to open the casing.

Never place any metal objects, such as coins or jewellery, near batteries. Batteries can short circuit if they come into contact with metal objects.

Use only batteries of the correct type and size for the equipment.

Keep the battery contacts clean and free from corrosion. Wipe the battery contacts with a clean, dry cloth before fitting the batteries into the equipment.

Never use batteries or battery chargers that show signs of damage or overheating such as discoloration or deformation of the casing.

Never attempt to take batteries apart or to open the casing.

Never place any metal objects, such as coins or jewellery, near batteries. Batteries can short circuit if they come into contact with metal objects.

Use only batteries of the correct type and size for the equipment.

Safty Warnings

WARNING
The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Notes for battery disposal
The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. In the EU, batteries should be taken to a local recycling point.
For more information, please contact the local authority or your retailer where you purchased the product.

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE).
This product contains batteries covered MOT to dispose the equipment including any spent or discarded batteries or unpacked/uncapped spare parts, but can be return and collection centers available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.
We reserve the right to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment.
All trademarks are the property of their respective owners and all rights are acknowledged.

Safty Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include the manual.
- Check that the voltage marked on the unit or original matches your mains voltage.

Damage
- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about the safe operation or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Ventilation
- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on soft furnishings or anything that could block the ventilation slots or fan vents.
- The mains socket must be located near the unit and should be easily accessible.

Temperature
- Avoid extreme high degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Moisture & Water
- Never place any type of candle or naked flame on the top of or near the unit.

Moisture
- To reduce the risk of fire, electric shock or product damage, do not expose the unit to rain or moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If any liquid or foreign object enters the unit, it can cause serious damage. Switch it off at the mains socket and have the unit checked by an authorised repair dealer.

Ventilation
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other objects do not block the ventilation openings.
- Do not install or place the unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Mains Adaptor
- The mains adaptor will continue to draw electricity from the mains socket while it is plugged into the socket. In the interests of safety and to avoid unnecessary energy consumption, never leave the mains adaptor plugged in when not in use for long periods of time. Disconnect the adaptor from the power supply.
- Working ambient 0°C-35°C, ≤80% input range 100-240Vac adaptors.

Safety
- Please disconnect the unit from the mains supply before connecting/ disconnecting other devices or before cleaning the unit.
- Unplug the unit from the mains socket before a lightning storm.

Mains Adaptor Cable
- Make sure the unit or unit stand is not resting on top of the mains adapter cable, in the weight of the unit may damage the cable and creates a safety hazard.

Interference
- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may affect the operation of the unit and cause a distorted picture or sound.

Batteries
- Batteries used in the remote control for this unit are easily swallowed by young children and this is a choking hazard.
- Please dispose of batteries correctly by following the guidance in this manual.

Supervision
- Children should be supervised to ensure that they do not play with the product/equipment.

Service
- Do not open the unit and risk shock, do not remove screws. This product contains no user serviceable parts. Please leave all maintenance work to qualified service personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance
- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solution as these may damage the unit's surface.
- Do not use liquids to clean the unit.
- No naked flame sources such as lighted candles, should be placed on the apparatus.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user serviceable parts inside. Refer servicing to qualified service personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

- **Do not heat flame sources, such as lighted candles, should be placed on the apparatus.**
- **Attention should be drawn to environmental aspects of battery disposal.**
- **This product is designed to use in moderate climates.**

Handling the Battery
- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, injury or damage to the product.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by onn. is under license. Other trademarks and trade names are those of their respective owners.

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

IMPORTANT SAFETY INSTRUCTIONS

1.Read these instructions. – All the safety and operating instructions should be read before the product is operated.
2.Keep these instructions. – The safety and operating instructions should be retained for future reference.
3.Heed all warnings. – All warnings on the appliance and in the operating instructions should be adhered to.
4.Follow all instructions. – All instructions should be followed.
5.Do not use this apparatus near water. – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6.Clean only with dry cloth.
7.Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8.Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9.Do not defeat the safety purpose of the polarized or grounding-type. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10.Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11.Only use attachments/accessories specified by the manufacturer.
12.Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13.Unplug this apparatus during lightning storms or when unused for long periods of time.
14.Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15.CLASS II DEVICE: These servicing instructions are for use by qualified service personnel only.
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
16.Do not install this equipment in a confined or building in space such as a book case or similar unit, and remain in well ventilation conditions or open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths, curtains, etc.
17.WARNING: Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adaptor, battery etc).
18.Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
19.CAUTION: These servicing instructions are for use by qualified service personnel only.
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
20.Do not install this equipment in a confined or building in space such as a book case or similar unit, and remain in well ventilation conditions or open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths, curtains, etc.
21.WARNING: The mains plug or appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
22. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Service

How to get service:

Call 1-888-816-2630 contact Walmart Inc. Walmart.com, Bentonville,AR72716
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart, Inc.
- Service is provided in accordance with the Walmart, Inc. Limited Warranty Statement.
- At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Center or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- FREE AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCTS TO AN AUTHORIZED SERVICE CENTER.
- A unit purchased or serviced outside the USA
- A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- FCC RF Radiation Exposure Statement: Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Warranty

Walmart, Inc. Limited Warranty

LIMITATION OF WARRANTY
- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY ENLARGE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

How State Law relates to this warranty:
- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply in you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or such warranty coverage outside the United States: This warranty does not apply. Contact your local retailer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Unfold dimension : 287.5X290mm
fold dimension: 143.5X72.5mm
Material : 80g writing paper
Printing : 2C , double sides
FW1816 说明书80g书写纸 287.5*290*T=0.2mm 白底黑字 双面印刷

What's in the Box? Check to make sure you have everything below.

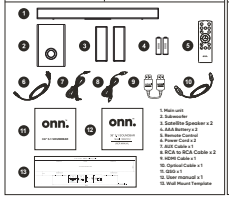

1. Main unit
2. Subwoofer
3. Satellite Speaker x 2
4. AAA Battery x 2
5. Remote Control
6. AUX Cable x 1
7. AUX Cable x 1
8. RCA to RCA Cable x 2
9. HDMI Cable x 1
10. Optical Cable x 1
11. Cable x 1
12. User manual x 1
13. Wall Mount Template

Get to Know Your 36" 5.1 SOUNDBAR

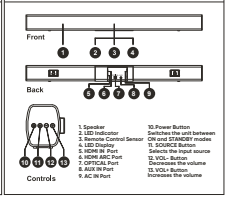

1. Speaker
2. LED Indicator
3. Remote Control Sensor
4. LED Display
5. HDMI IN Port
6. HDMI ARC Port
7. OPTICAL Port
8. AUX IN Port
9. AC IN Port
10. Power Button
Switches the unit between ON and STANDBY modes
11. SOURCE Button
Selects the input source
12. VOL- Button
Decreases the volume
13. VOL+ Button
Increases the volume

Get to Know Your 36" 5.1 SOUNDBAR

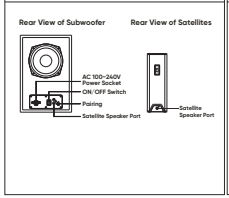

Remote Control Overview

1. ⏻ Button Switches the unit between ON and STANDBY modes.
2. Press AUX button, device will play audio from aux input.
3. Press OPTICAL button, device will play audio from optical input.
4. VOL+ button increases the volume.
5. ⏭ button skip to previous track in Bluetooth mode.
6. MUTING button mutes the unit or resumes the sound.
RESET button to reset device to the factory default settings.
7. VOL- button decreases the volume.
8. BASS- button decrease bass
9. TREB- button decrease treb
10. Press EQ button to select music, movie and talk EQ mode.
11. 🔇button mutes the unit or resumes the sound.
12. Press HDMI ARC button, device will play audio from HDMI IN input.
13. Press HDMI ARC button, device will play audio from HDMI ARC input.
14. ⏯ Bluetooth Connection switches to Bluetooth mode, press and hold to enable bluetooth pairing if there is an existing connection then disconnect the devices, unit will enter pairing mode.
15. ⏭ button skip to next track in Bluetooth mode.
16. BASS+ button increase bass
17. TREB+ button increase treb



Battery Replacement for the Remote Control the First Step 01

Lift up the back cover to open the battery compartment of the remote control.

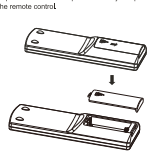

Battery Replacement for the Remote Control the Second Step 02

Insert two AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.

Battery Replacement for the Remote Control the Third Step 03

Close the battery compartment cover.

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 15' away and within a maximum of a 60 arc.

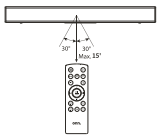

LED Screen activity
- LED Screen activity
  Bluetooth mode: the screen display "BT"
  Bluetooth is pairing: the screen display "PAIRING"
  Bluetooth is paired: the screen display "PAIRED"
  Bluetooth disconnected: the screen display "UNPAIR"
- AUX IN: the screen display"AUX"
  Optical: the screen display"OPTICAL"
  HDMI IN: the screen display"HDMI IN"
  HDMI ARC: the screen display"HDMI ARC"
  Standby ON: the screen display"APS ON"
  Standby OFF: the screen display"APS OFF"

Adjusting the Volume
- Press VOL +/- on the unit or the remote control to adjust the volume(Volume Min to Max), the screen shows the VOL MIN/ VOL 1/ VOL MAX
- If you wish to turn the sound off, press 🔇 on the remote control, the screen shows MUTING.Press 🔇 again to resume normal listening.

Standby Mode
- The soundbar will be in standby mode if no audio source input in 15 minutes. You can press "⏻" or"Up+" or"Source" to turn off and turn on the auto power standby(APS) mode.

Connecting to the Power Outlet

- Connect the AC IN port to the power outlet by power cable.

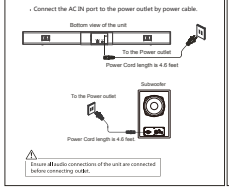

Ensure all audio connections of the unit are connected before connecting outlet.

Subwoofer and Satellites Connection

Pairing the Subwoofer
When the soundbar is turned on, the devices will connect automatically:
If this does not happen, please pair the subwoofer to the soundbar manually.
Pair manually:
1. Press and hold mute on the remote for 7 sec., soundbar's LED display will show SUB LINK.
2. Press and hold pairing button on subwoofer for 3 sec., the subwoofer's LED will fast blink blue until paired with each other.
3. The soundbar connected subwoofer, Blue Led indicator on the subwoofer remain solid and the LED display on the front of the soundbar show LINKED 3s.

Connect Subwoofer and Satellites:
Connect the Satellite Speaker Ports between Subwoofer and Satellites Via RCA cables(included) like the following illustration.

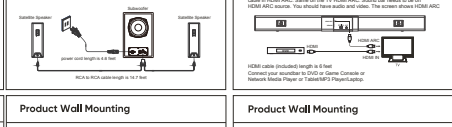

Using the HDMI IN or HDMI ARC connection

The best way to connect your soundbar is via HDMI/HDMI ARC, shown below:
Use DVD to connect via HDMI cable to sound bar HDMI IN. Sound bar connects to TV via HDMI cable in HDMI ARC. Same on the TV HDMI ARC. Sound bar needs to be on HDMI IN source. The screen shows HDMI IN.



HDMI cable (included) length is 6 feet

DVD connects via HDMI cable to TV HDMI IN. Sound bar connects to TV via HDMI cable in HDMI ARC. Same on the TV HDMI ARC. Sound bar needs to be on HDMI ARC source. You should have audio and video. The screen shows HDMI ARC

HDMI cable (included) length is 6 feet
Connect your soundbar to DVD or Game Console or Network Media Player or Tablet/MP3 Player/Laptop.

Using the AUX or Optical Connection

Use an AUX cable (included) to connect the TV's headphone Port to the soundbar's AUX IN port.



AUX cable length is 6 feet

Use an optical cable (included) to connect the TV's OPTICAL OUT Port to the soundbar's OPTICAL Port.



Optical cable length is 6 feet

When there is no sound through an HDMI or OPTICAL connection, please set the output of your TV or DVD to PCM.

Using the Bluetooth Connection

- When unit power on, press ⏯ on soundbar change to Bluetooth mode, "BT" is lighting on the LED display;
- When unit power on, press ⏯ on remote control change to Bluetooth mode, "BT" is lighting on the LED display;In this mode, if long press ⏯ 3 seconds, will clear previous paired devices and goes to pairing mode.the LED display will show "PAIRING".
- Select the Bluetooth search function on your device,your device should discover the soundbar which is called onn. 36" 5.1 Soundbar.
- Select onn. 36" 5.1 Soundbar, your device is paired with the soundbar when LED display shows "PAIRED".
- When Bluetooth connects successfully, the LED display shows "BT" for a while and then changes to "- -".
- After the soundbar and your device are paired, you can stream music from your device to the Soundbar.

Product Wall Mounting

1. Drill 2 parallel holes (Ø 8mm each according to wall type) in the wall . The distance between the holes should be 580 mm.

- Installation must be carried out by qualified personnel only. Incorrect assembly can result severe personal injury and property damage. If you intend to install the product yourself, please read the following. Onn. Will not be responsible for any damage or injury due to improper installation. It is the installer's responsibility to verify that the wall is of a suitable support material and that the fasteners are adequate.
- Additional tools (not included) are required for the installation.
- Do not exceed the specified load capacity.
- Refer to the installation manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

2. Firmly fix 1 dowel D10.2*L30mm (not included) into each hole in the wall if necessary

Product Wall Mounting

3. Insert 1 screw TA 4*40mm (not included) into each anchor. Be sure to leave a 6mm gap between the wall and the screw's head. Lift the unit over the heads of the screws and slot into place

Specifications

Model	100027812
DC IN	Input DC 100~240V 50Hz
Peak Power	400W
Power Consumption	100W
Net Weight	7.5kg
Dimension	Main bar: 914mm(W) x 90mm(D) x 59mm(H) Subwoofer: 200mm(W) x 200mm(D) x 200mm(H) Satellite: 90mm(W) x 90mm(D) x 200mm(H)

Features and specifications are subject to change without prior notice.

Hints and Tips

Problem	Solution
No power	• Ensure the Power cord is connected securely at both ends • Make sure that the ON mode is selected.
The remote control is not functioning.	• Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the batteries in the remote control with new batteries. • Remove any obstacles between the remote control and the unit.
Loud hum or noise is heard.	• The Plugs and sockets are dirty.Wipe them with a cloth slightly and moistened with an appropriate non-abrasive cleaning solution.
Cannot find "onn. 36" 5.1 Soundbar" on my Bluetooth - device.	• Ensure the Bluetooth function is activated on your Bluetooth device. • Ensure you have paired your unit with the Bluetooth device.
Sound is not produced.	• Adjust the volume. • When you are using connection with a wired device(Bluetooth device ect.), adjust volume level of the device. • Press mute button or adjust the volume level to cancel the mute function. • Check the input source and select the correct input source.
No woofer sound.	• Plug the AC cord of subwoofer into the wall outlet securely. • Connect the unit and the subwoofer
HDMI connection cannot be completed.	• Ensure the HDMI cable is connected securely. • Check if the HDMI cable is damaged.

Need help? Customer Support: 1-888-516-2630 7am-9pm CST daily