声波电动牙刷

使用说明书

产品型号：LJ-SZ216

①

请仔细阅读本产品说明书。

警告：

1. 每次使用前要检查是否有明显的损坏，如果损坏或产生异味，请勿使用。
2. 在充电时请遵守工业、信息产业部规定适合于该产品的产品说明书。
3. 如果充电器有任何损害，请勿使用。
4. 本产品（含充电器）适用于：家庭用途和室内使用，禁止商业应用。
5. 充电器不可在潮湿或高温环境使用。
6. 请勿在有易燃或爆炸性气体的环境使用本产品。
7. 如果您的口腔或牙齿有过敏的迹象，请咨询您的牙医或医生。
8. 如果您使用本产品有任何疑问，或在出现不适症状或出现问题，请咨询您的牙医或医生。
9. 请勿使用非随品附带的牙刷头。
10. 若出现上述情况请暂停使用本产品，并立即与客户服务中心联系。
11. 本产品不适合下列人群：婴儿和不会操作说明书的人士，有心脏起搏器的人士，有癫痫症状的人士，有皮肤敏感的人士，有精神问题的人士，有感觉障碍的人士，有残疾的人士，有精神障碍的人士。
12. 本产品不适合儿童，婴儿和不会操作说明书，请非成年人士及在无人看管的情况下使用本产品。
13. 请勿自行拆卸或改装产品，不可自行更换电池。
14. 如果不按内容执行警示语，小孩可能造成触电（例如不当的用途等），请在适当情况下在场或监护下使用。

产品规格：

产品名称	声波电动牙刷
产品型号	LJ-SZ216
工作电压	110~240V50
额定功率	2W
环境条件	室内或非潮湿
整机芯片	LGSHT
显示界面	1.8cm*1.8cm 单色显示
震动频率	31000~41000次/分钟
工作时间	正常使用（每日刷两次）
电池方式	锂离子电池（可永续重复充电循环，MRC）
充电时间	约3.5小时
续航电量	30天
电池容量	锂电池 容量400mAh/3.7V
保护装置	断电器、电磁干扰保护功能设计
防水等级	IPX7

②

配件规格：

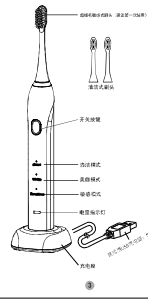

超细柔软毛刷头（清洁第一范围）
清洁孔凸起设计
开关按键
洗涤模式
美白模式
敏感模式
电量指示灯
充电电源接口 - 5V/DC
充电器

③

故障诊断：

情况	可能原因	排除
震动频度减弱	1、牙刷刷毛长度过长。 2、刷头生活体磨损太深的。	1、修剪长刷毛使其长度达上。 2、刷头生活体磨损太深的。
刷毛已老化，牙齿出现工作效率降低	1、生活体的刷毛磨损变形或断裂。 2、电量不足。	1、更换新的牙刷头。 2、充电一个多小时直到电量充足。
无指示工作	请检查电源是否上插好电源是否已充电器插头，并确认是否插好充电器。	1、请充电。

关于充电：

- 首次使用之前，请进行消刷，如确保电清用完再充电。
- 6个月以上没有使用，请对手刷充电1.5小时以上，充满电后，分离时可连续使用60天。
- 电量关所对照图。种全大大强超锂电池寿命，请用完电量再充电。
- 使用过程中，如发电量所可通过闪烁警示灯来提醒电量不足。
- 请将手刷置放于干燥处，切勿将手刷放入，以免电源非充满电量不足。
- 充电过程中，指示灯闪烁，电池充满电后，指示灯长亮。
- 如果强长时间没有充电，那么再次充电时指示灯会等6—09分钟才会亮，属于正常现象。
- 您至少一年需要充电两次——次，充电时间下开电插头，并正常使用直至电池电量耗尽。

④

关于保养：

清洁刷头

1. 每次使用过刷子清洁后用清水冲洗。
2. 不要拉扯刷毛，保持清洁表面光滑，以防刷毛脱落。

清洁手柄主体

1. 用长湿巾，并每周一次。
2. 请勿用水清洗主体。
3. 不要用酒精或其他溶剂清洁手柄。

清洁充电座

1. 每周有规律地拔出插头清洁干净。
2. 清洁充电座，请使用清洁棉棒或干布。
3. 用干燥棉棒或棉球，避免碰撞。

更换刷头

1. 牙刷使用三个月更换一次刷头。

刷牙时间：

1. 刷牙建议：每次刷牙两分钟。
2. 使用时，请以45度，顺时针或逆时针方向，沿着牙齿表面刷牙。
3. 清洁口腔时间不宜短，以达到最佳效果为宜。

使用步骤

第一步

将牙刷放入牙膏中，挤出牙膏，请将电动牙刷放入小时内充电至指示灯熄灭。

充电1.5小时

⑤

第二步

将牙刷放入口腔，轻轻地将牙刷头放入口腔，并且与牙齿成45度角。

45°

第三步

按住清洁模式按钮，开始清洁牙齿。

第四步

每次刷牙两分钟，请按照顺时针方向，沿着牙齿表面，从牙根部刷起。

45°

第五步

按住开关键，以提高或降低功率，切换开关按键或模式。



1. 在产品使用过程中，如遇到任何问题，请立即关闭开关，并拔出充电器插头。

⑥

第六步

用完后清洁刷头，并且放回牙刷架。

3种模式专业护理：

Sensitive
敏感模式
Clean
洗涤模式
Mode Switching
模式切换
Whiten
美白模式

1. 在产品使用过程中，如遇到任何问题，请立即关闭开关，并拔出充电器插头。

⑦

注意：

1. 请勿将本品浸泡（如：放进水桶中）入任何液体。
2. 请勿在有易燃有毒气体的环境中使用。
3. 本产品含有内置充电电池，请勿将其投入火中，加热或者改变其结构。请勿拆解。
4. 请勿随意拆卸、改装、修理本产品，如发现异常请使用该产品受伤，请不要使用。
5. 请勿将刷毛长度修剪至原长。

禁止：

1. 请勿将充电器插入水中或将其浸泡水。
2. 在使用前，请确认充电器电源插口完全干燥，方可再次插装电源充电。
3. 本产品含有内置充电电池，请勿将其投入火中，加热或者改变其结构。请勿拆解。
4. 请勿随意拆卸、改装、修理本产品，如发现异常请使用该产品受伤，请不要使用。
5. 请勿自行改造，除非经授权产品，本产品在无线环境电磁辐射（如电磁炉等）。

⑧

保修及服务

此产品是一款设计精良，经高压蒸汽消毒的电器，若正常使用及保养下应能发挥其长期性能。在真正行使用的质量出现问题前工艺或正常的造成之损坏，请检查说明书是否按要求操作。

以下情况将不在保修服务范围之内：

1. 使用不当引起的人为损坏，例如摔入不适当地点，按照不适当配件，不适当之安装，不按说明书使用，错误使用或造成其他或间接，因消费品本身所示消费之损坏，非由生产公司本之间接或直接，其他因不可抗力（如自然灾害，电压异常等）造成的损坏。
2. 一般磨损以外损害（如工具，应由用）所造成的损坏。
3. 正常保养与维护品的产品老化，腐蚀等，但不包括产品的正常使用。
4. 如果出现更多信息请参，请访问 www.zjchandle.com 网站。

www.zjchandle.com

浙江海顿电器有限公司

浙江省宁波市大榭开发区4号路甲百海国际商务大厦1102室

产品质量检测：GB 4706.1—2005, GB 4706.54—2008标准

⑨

Warranty Card

保修卡

客户信息 完本卡保修

产品名称		产品型号	
销售日期		联系电话	
销售商地址		邮编	
顾客姓名		联系电话	
收货地址			
故障描述			

保修条款

1. 商品保证之日期为一个月内，因发生性能故障，商品本身及外包装盒均完好的（无刮痕），可更换同样型号的商品；保证期限：但不包括人为破坏。
2. 商品自购买之日起保修一年，配件不在保修范围之内
3. 保修服务只限正常使用下享受。

⑩

Electric Toothbrush

User Manual

Model No: LJ-SZ216

①

Please read the manual of this product carefully before using.

Warning:

1. Do not use it if there any obvious damage every time before use.
2. Do not use it if there is a damage or bad smell.
3. Please check if the fixed power voltage operates with the voltage marked on the electric toothbrush when you connect the USB charging line.
4. Do not charge if the charging stand has any damage.
5. Do not use the charging stand in a wet place.
6. Do not charge in any type of storage.
7. The charging stand can not be used outdoor or nearby the extremely hot surface.
8. Do not use it while you are taking a bath or shower.
9. If you have any sensitive symptoms in your mouth or gums had an operation or your mouth or gums over the past 2 months.
10. Please consult your dentist if you have a bleeding or even the bleeding lasts over 1 week after using.
11. Please stop using it if it does not meet our manufacture requirements.
12. Please consult your doctor or the manufacturer that installed the device before using if you are implanted a pacemaker or have implanted other devices.
13. It is designed for cleaning teeth, gums, and tongue. Do not use it for other purposes. Please stop using and turn to the doctor if you feel unwell or painful after using. Please consult your doctor first before using if you have any concerns about health care.
14. It is improper for children, babies, and operators who can not read the instructions. They are supposed to be supervised while using for their safety protection.
15. Please put it beyond children's and babies' reach. Do not use it as toys.
16. Please clean the toothbrush head thoroughly with soaps and rinsing after finishing brushing your teeth if there is hydrogen peroxide, sodium perborate, or other oxidizers (especially alkaline or alkaline in water toothpastes) in the toothpaste.

Product Specifications:

Product Name	Electric Toothbrush
Product Type	LJ-SZ216
Working Voltage	110~240V50/60Hz
Rated Power	2W
Switching Pattern	Touch Switch
Display	LED
Display Content	1.8cm*1.8cm Monochrome Indicator
Vibration Frequency	31000~41000 times/minute
Charging Time	About 3.5H (Minutes) (Connect with USB charger) DC5V
Charging Mode	Recycle Charging
Charging Time	About 3.5 hours
Charging Current	200mA
Battery Specification	Lithium Battery 1800/3000mA
Power Working	Whole the power is fixed, the power consumption lasts 30 days
Waterproof Grade	IPX7

②

Part Specifications

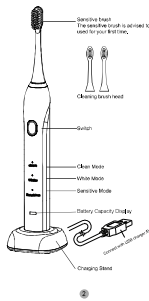

Sensitive brush
The sensitive brush is only used to be used for your first time.
Cleaning brush head
Switch
Clean Mode
White Mode
Sensitive Mode
Battery Capacity Display
Connect with USB charger for DC
Charging Stand

③

Trouble Diagnosis:

Conditions	Possible Reasons	Maintenance
The intensity of shaking is weakening.	(1) The bristle hair is pressed or the bristle hair is too long. (2) The bristle hair head is too close to the tooth.	(1) Put the toothbrush head on your tooth and trim the bristle hair. (2) Trim the toothbrush head or replace the toothbrush head if the bristle hair has been worn out.
The toothbrush stops for a very short time and then it has been charged.	(1) The body has not been out of the charger normally. (2) Insufficient power for the charger to work.	(1) Continue charging the toothbrush towards the charging time is not over 24 hours. (2) Recharge it before using when the set time has been used for over 6 months.
The toothbrush fails to work.	Charger should be connected with the power of the body. Battery is not charged and recharge for 24 hours.	Charge the toothbrush.

About Charging:

1. Wash the toothbrush before you first use it, clean up the residual amount of electricity and charge the toothbrush.
2. If you have not used it for over 6 months, it will be able to be used normally for 60 days after being up charged.
3. Charge the toothbrush after cleaning the dirt if it becomes the filthy before. It will be greatly increased if you charge it when there is some dirt on it.
4. In the charging process, the toothbrush is in blue (when it is charging indicating light has several seconds continuously and stop working.
5. Put the toothbrush back on the charging stand and confirm that the charger has been connected to the power supply. At this time, the indicating light turns red, showing that the charging begins.
6. In the charging process, the indicating light turns. When the battery is full, the indicating light turns red for 2 seconds.
7. It is normal for the indicating light to glow after only 20 minutes when the toothbrush is recharged because the toothbrush haven't been charged for a very long time.
8. Discharge the toothbrush thoroughly at least once a year. Unplug the charging stand and exhaust the battery power by using the toothbrush normally when you discharge the brush.

④

About Maintenance:

Clean the Toothbrush Head:

1. Clean the brushing and toothbrush head and let it natural drying after you use the toothbrush every time.
2. Do not pull the brushing so that it will not be transformed easily and fall out.

Clean the Toothbrush Body:

1. Clean it with water and let it natural drying
2. Do not immerse it in water.
3. Do not clean it with water above 40 degrees or acidic cleansing solution.

Clean the Charging Base:

1. Clean the smoothness of the charging stand and its sinuosity with soft cloth.
2. Do not plug the outlet before cleaning it. If not, an electric shock will be occurred easily.
3. Clean the charging with dry cloth or water to avoid the short circuit.

Change the Toothbrush Head:

Dentists advise that the toothbrush head should be changed every 3 months.

Time for Brushing Your Teeth:

1. Dentists advise that you should brush your teeth for 2 minutes every time.
2. When using, you will feel a massage pause every 30 seconds, which reminds you to clean the four areas in your mouth evenly in order to achieve the best cleaning effects.

Using Steps:

Step 1: Put the electric toothbrush into the charging base and charge it for 1.5 hours when you first use it.

Charging for 1.5 hours

④

Step 2: Put the toothbrush head into the mouth carefully. Pay attention that a gap must be left between the head and the body which is necessary for the head to vibrate normally.

45°

Step 3: Squeeze moderate toothpaste on the toothbrush head, soak the head, and wait your minutes, and start the toothbrush.

Step 4: Move the toothbrush slowly at an angle of 45 degrees between the brushing and your gum line.

45°

Step 5: Hold the toothbrush body gently and move it slowly in a circular motion. Do not press or apply it forcibly.

⑤

Step 6: Rinse your mouth with clean water and wash the toothbrush head after you brush teeth.

3 Patterns of Professional Nursing:



Sensitive
Clean
Mode Switching
Whiten

1. In the case that there is still power in the battery of the product, at any time point press the power on button can be started up, the gear position is the last shutdown position. Click the switch gear and then rotate the three gears. Long press above 0.5 seconds to shut down.

⑥

6. Long press the power on button for 5 seconds to enter the discharge operation mode switch function on the charging stand. After entering, the frost machine will be placed on the charging stand. At this point, press the power button to switch to the corresponding mode according to the displayed shift light. After selecting the mode, move the frost machine away from the charging stand and other instructions will be put out to complete the setting.

Mode 1: default discharge mode. The motor vibrates every 30 seconds during discharge, and stops automatically after 3 minutes of operation.

Mode 2: at any time after starting the machine, press the "stop" button (10 minutes). Then the working time of the next cycle will be increased from 2 minutes to 10 when pressing the "stop" button twice.

Mode 3: there is no time limit for discharging after starting up. Please give a prompt every 20 seconds until the battery is dead.

Notice:

1. Do not shake the toothbrush head with your hand or others.
2. Do not shake the toothbrush head with the electric tools when you deposit the toothbrush.
3. Do not put metal objects (such as coins, clips and so on) on the charging stand.
4. Please pull the plug in order to avoid fire or danger if you have not used the toothbrush for a long time.

Notice:

It is possible for you to have the painful or slight bleeding when you begin to use the toothbrush even if your teeth are healthy. This is because the gums is not used to this stimulus at your first use. These symptoms will usually disappear within 1 or 2 weeks. If they last over 2 weeks, then your gums may have some problems. Under this circumstances, you should stop using the toothbrush and consult the dentist.

Forbidding:

1. Do not immerse the charging stand in water or any liquids.
2. Please ensure that the power plug of the charging stand is totally dry after cleaning the toothbrush and then connect the plug to the power supply.
3. The product contains built-in rechargeable batteries, so do not put into fire, heat or change its structure. Do not disassemble or modify it.
4. Do not throw or flip the products. Do not use it again if damaged, broken or the turns and flips.
5. Do not remodel, disassemble, or fix this product by yourself.
6. Please keep this product away from the strong electromagnetic field (like induction cooker) when you are charging it.

⑦

Warranty and Service

This product is a well-designed, high-quality components manufactured electrical appliance. It plays superior performances under normal use and maintenance. If there any damage caused by manufacturing process or components, please contact the dealer for repairing or replacement service.

The following conditions are not covered within the warranty service:

1. Artificial damage caused by improper use, such as improper access to place, improper fit, improper installation, improper use, improper maintenance with the wear normal damage caused by measuring or not genuine. Damage caused by transport and other accidents. Maintenance and modification not approved by our company. Other damage caused by force majeure (such as natural disasters, voltage anomalies, etc.).
2. Normal wear and tear caused by using it beyond normal home always, instead commercial.
3. Appearance aging and wear that does not affect the normal use of the product or more information or services, please visit www.zjchandle.com.

www.zjchandle.com

Zhejiang Haidun Electrical Technology Co., LTD

Room 1102, Hundreds International Business Building, No. 4, Dahai Ocean Avenue, Ningbo City

0574-87868 -0,0086-0574-87868

⑧

Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

⑨