Mini Xpider
360(w)x135(H)x170(D)mm

Powerful claw-shaped rims

INSTALACION DE BATERIAS / BATTERIES INSTALLATION

El vehículo requiere 1 batería recargable de 4.8 V (incluída)
1. Desatornille y quite la tapa de las baterías que está en la parte posterior del vehículo.
2. Saque la batería completamente
3. Conecte el puerto de la batería al cable para carga y conécte este mismo a cualquier dispositivo electrónico o directo a la corriente eléctrica con un adaptardor.
4. Una vez cargada la batería, desconecte el cable, vuelva a guardar la batería y cóloque nuevamente la tapa.

The vehicle requires 1 4.8V rechargeable battery (included)
1. Unscrew and remove the battery cover on the back of the vehicle.
2. Remove the battery completely.
3. Connect the battery port to the charging cable and connect it to any electronic device or direct to the electric current with an adaptor.
4. When the battery is charged, unplug the cable, restore the battery and replace the lid.

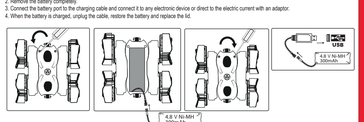

El control requiere 2 baterías "AAA" de 1.5V (incluídas)
1. Desatornille y quite la tapa de las baterías.
2. Inserte las 2 baterías "AAA" con la polaridad correcta (+) y (-) como se muestra.
3. Cóloque y atornille de nuevo la tapa del compartimento de baterías.

The control requires 2 "AAA" 1.5 V batteries (included)
1. Desatornille and remove the battery cover.
2. Insert the 2" AAA" batteries with the correct polarity (+) and (-) as shown.
3. Insert and re-screw the battery compartment cover.



PARA ÓPTIMO FUNCIONAMIENTO DE LA BATERÍA RECARGABLE DEBE CARGARSE EN SU PRIMER USO POR 8HRS. POSTERIORMENTE PUEDE CARGARSE POR 4 HRS.
INITIALLY YOU MUST CHARGE THE BATTERY FOR 8 HRS. AFTER THIS YOU MUST CHARGE THE BATTERY FOR 4 HRS.

MANUFACTURADO POR / MANUFACTURED BY:
TOY PLUS (FAR EAST) LIMITED
Unit 09 9/F, Houston Centre,
63 Mody Road, Tsim Sha Tsui East,
KL, Hong Kong (852) 2366 8480
HECHO EN CHINA. MADE IN CHINA.

ADVERTENCIA:
RIESGO DE ASFIXIA
NO APROPIADO PARA MENORES DE 3 AÑOS. CONTIENE PARTES PEQUEÑAS.

ALGUNOS CONSEJOS:
• Se recomienda jugar en espacios abiertos. Este vehículo necesita espacio para ejecutar todos los movimientos.
• Cuando tu vehículo comienza a perder potencia, puede que sus funciones y rendimiento disminuyan.
Es hora de cambiar las baterías. El tiempo que tu vehículo funcione puede depender de tu estilo de manejo.
• La interferencia de radios puede afectar el rendimiento del vehículo .
La interferencia puede ser causada por otros vehículos a control remoto que estén funcionando en la misma frecuencia, por cables eléctricos, grandes edificios o radios CB. ¡Evítelos!
• Apuntar el transmisor hacia arriba, no hacia abajo del auto. Si el vehículo se aleja demasiado, no funcionará correctamente.
• No guardar el vehículo cerca del calor o bajo la luz directa del sol.
• Para guardar el juguete siempre poner interruptores en APAGADO y retirar todas las baterías
• Siempre jugar en lugares espaciosos en donde no haya objetos frágiles o delicados.
• Evitar utilizar el vehículo sobre alfombras gruesas o pisos con polvo.
• NO utilizar el juguete en una pendiente o cerca de escaleras ya que el vehículo puede caerse o dañarse.
• Si el vehículo no funciona correctamente o sus movimientos son más lentos, intentar reemplazar todas las baterías por unas nuevas.
• No jugar con el vehículo en calles públicas o en lugares públicos.
• No jugar con el vehículo en superficies mojadas o cerca del agua.
• Evite chocar contra superficies duras.
ADVERTENCIAS DE SEGURIDAD:
• El cambio de las baterías deberá ser realizado por un adulto.
• Utilíza solamente las baterías recomendadas en el empaque y en este instructivo.
• Instala las baterías con la polaridad correcta.
• No mezcles baterías nuevas con viejas.
• No mezcle baterías alcalinas, estándar, recargables o de diferentes tipos.
• No recargue las baterías no recargables.
• Retire del juguete las baterías recargables cuando vayan a ser recargadas.
• Las baterías recargables deben cargarse siempre bajo la supervisión de un adulto.
• Es necesario retirar las baterías gastadas del juguete ya que pueden afectar el desempeño del mismo.
• NO cometa a cortocircuito las terminales de alimentación.
ADVERTENCIA BATERÍAS
- Se recomiendan baterías alcalinas.
- No se deben mezclar baterías de tipos distintos o pilas nuevas y usadas.
- Sólo se deben usar pilas iguales o equivalentes a las recomendadas.
- Las baterías deben ser cambiadas por un adulto.
- Las baterías se deben insertar con la polaridad correcta.
- Los terminales de alimentación no deben estar en cortocircuito.
- Las baterías deben retirarse cuando el producto no está en uso.
- Las baterías agotadas se deben retirar del juguete.
- No deseche las baterías en el fuego.

Battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage,
the toys must not be used with this battery charger until the damage has been repaired.
It has to be kept since it contains important information.

⚠ WARNING:
CHOKING HAZARD - Small parts
Not for children under 3 years

Tested To Comply with FCC Standards This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation

TIPS:
• It is recommended to play in open spaces. This vehicle needs space to execute all the movements.
• When your vehicle begins to lose power, its functions and performance may decrease.
It's time to change the batteries. The time your vehicle works may depend on your driving style.
• Radio interference can affect the performance of the vehicle.
Interference can be caused by other remote controlled vehicles that are operating on the same frequency, by electric cables, large buildings or CB radios. Avoid them!
• Point the transmitter up, not down the car. If the vehicle moves too far, it will not work properly.
• Do not store the vehicle near heat or in direct sunlight.
• To keep the toy always put switches on OFF and remove all batteries
• Always play in spacious places where there are no fragile or delicate objects.
• Avoid using the vehicle on thick carpets or floors with dust.
• DO NOT use the toy on a slope or near stairs as the vehicle may fall or be damaged.
• If the vehicle does not work properly or your movements are slower, try replacing all the batteries with new ones.
• Do not play with the vehicle on public streets or in public places.
• Do not play with the vehicle on wet surfaces or near water.
• Avoid hitting hard surfaces.
WARNINGS:
• The change of the batteries must be replaced/changed by an adult.
• Use only the batteries recommended in the package and in this instruction manual.
• Install the batteries with the correct polarity.
• Do not mix new batteries with old ones.
• Do not mix alkaline, standard, rechargeable or different types of batteries.
• Do not recharge non-rechargeable batteries.
• Remove rechargeable batteries from the toy when they are going to be recharged.
• Rechargeable batteries should always be charged under the supervision of an adult.
• It is necessary to remove spent batteries from the toy as they can affect its performance.
• DO NOT short-circuit the power terminals.
BATTERIES WARNINGS
- Alkaline batteries are recommended.
- Batteries of different types or new and used batteries should not be mixed.
- Only batteries equal or equivalent to those recommended should be used.
- Batteries must be replaced by an adult.
- Batteries must be inserted with the correct polarity.
- The power terminals must not be short-circuited.
- Batteries must be removed when the product is not in use.
- The exhausted batteries should be removed from the toy.
- Do not discard the batteries in the fire.

FCC COMPLIANCE
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to
Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CMYK

0	53	100	0

185 C