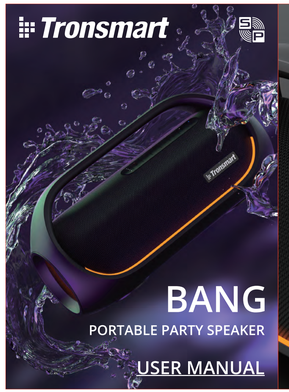

Button Configuration

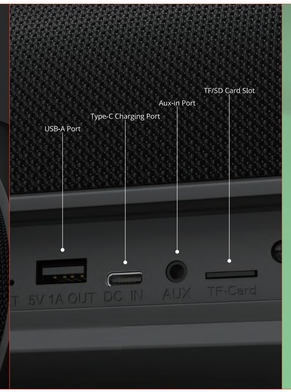

How to Use

How to Connect with up to 100 Speakers

1. Turn on one speaker as host speaker, search and click "Tronsmart Bang" to connect with your device.
2. Press "TuneConn button" once to enter broadcast mode with the orange indicator on.
3. Turn on other speakers and press "TuneConn button" once to enter broadcast mode.
4. If paired successfully, the TuneConn indicator of speakers will stay on orange.

Charging

English

Thank you for purchasing the Tronsmart Bang Portable Party Speaker. Please read the user manual before use and keep it handy for future reference. If you have any additional questions or comments, please contact us by email at: **support@tronsmart.com**

Package Contents

1 x Tronsmart Bang Portable Party Speaker 1 x 3.5mm Audio Cable
1 x Type-C Charging Cable 1 x Warranty Card 1 x User Manual

NFC Streaming

Make sure Bluetooth & NFC functions are enabled on your device, and then put the device on the NFC area of the speaker to pair automatically.

USB-A Power Bank Function

This speaker carries a USB charge out function that will automatically detect your device and begin to charge it when the charging cable is connected to the USB-A port. Note that the USB-A port is for charge out only. To maintain stable music playing performance, it's not recommended to use the music and power bank function at the same time.

Aux-in Mode

After plugging in an audio cable, press M button once to switch to Aux-in mode.

TF Card Slot Mode

After plugging in TF/Micro SD card, press M button once to switch to your TF/Micro SD card. Note that Micro SD/TF Card shall not exceed 128GB.

USB Flash Drive Mode

After plugging in USB to switch to your USB flash drive when plugging the USB into the USB-A port. Note that USB flash drive shall not exceed 128 GB.

Auto Power Off

The speaker will power off automatically after 1 hour if it does not pair with any device through Bluetooth. When in low battery, the speaker will power off automatically as well.

Care & Maintenance

- Do not use any form of detergents or cleaning material to clean the product as any type of chemical may make this device unusable.
- Do not disassemble this product, it contains no user serviceable parts.
- Do not expose this product to water, rain, extreme heat or direct sunlight for prolonged periods.
- Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place.
- Do not dispose this product in fire or batteries may explode or leak.

Warranty Information

Tronsmart Bang Portable Party Speaker, is warranted to the original owner for 12 months from the date of purchase against defects in materials and workmanship under normal use and service. Tronsmart is not responsible for the accidental use of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team at **support@tronsmart.com.**

Specifications

Model	Bang
Color	Black
Bluetooth Version	5.0
Audio Decoding	SBC
Bluetooth Compatibility	A2DP/AVRCP/HFP/HSP
Bluetooth Distance	Max10M
Frequency Range	20Hz-20kHz
Playtime	LED On: Up to 8 Hours(on a 50% Volume) LED Off: Up to 15 Hours(on a 50% Volume)
Battery Capacity	10000mAh
Power	50W
Waterproof	IP65
Charging Time	4.5 Hours
Input	5V2A via Type-C Port
Dimension	9.7*19.4*10.0 (inch) 14.2*7.2*5.9(cm)
Weight	3.08kg/108.6oz

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Warning Statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Tronsmart

SHENZHEN GEEKBUY E-COMMERCE CO., LTD.
Warehouse 101H, No. 49 Wuhe Avenue, Wuhe Community,
Bantian Street, Longgang District, Shenzhen
Email: support@tronsmart.com
800-270-1882 (USA & Canada)
+86-755-23603740 (Global)

FCC ID: 2AV3Z-BANG

www.tronsmart.com Made in China