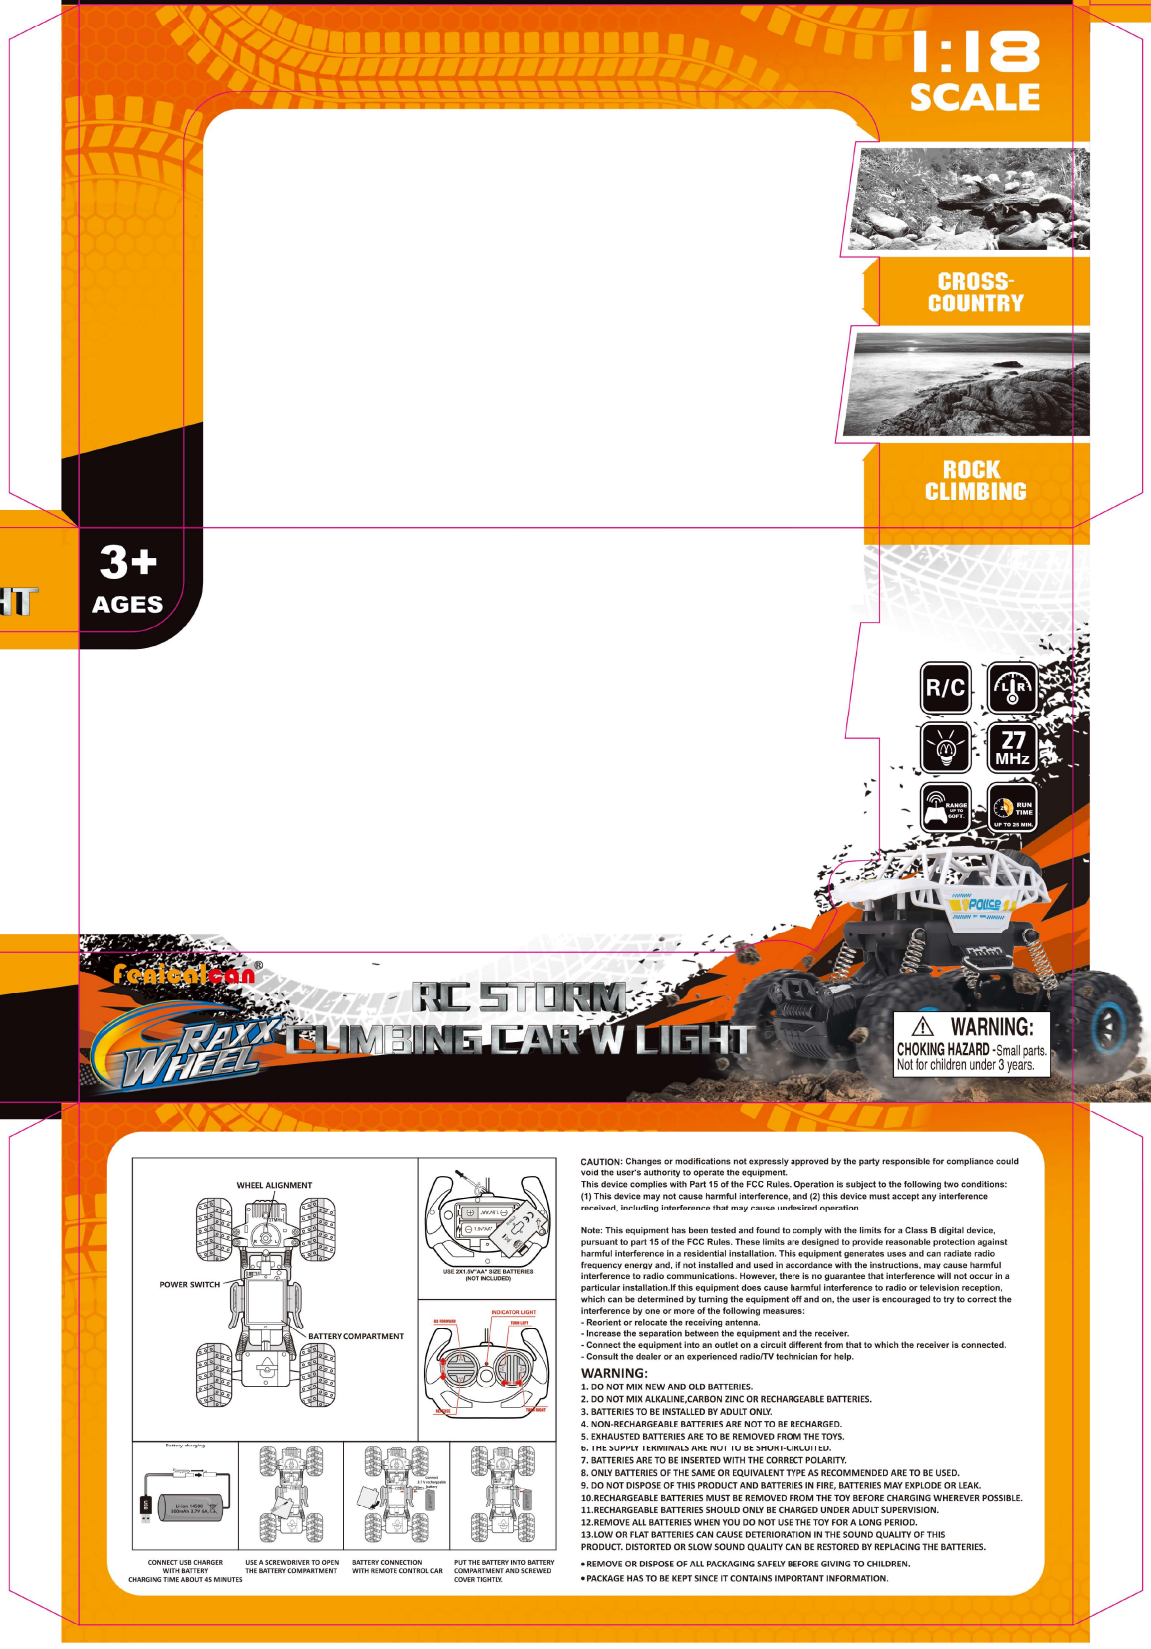

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

1. DO NOT MIX NEW AND OLD BATTERIES.
2. DO NOT MIX ALKALINE,CARBON ZINC OR RECHARGEABLE BATTERIES.
3. BATTERIES TO BE INSTALLED BY ADULT ONLY.
4. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
5. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOYS.
6. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
7. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
8. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
9. DO NOT DISPOSE OF THIS PRODUCT AND BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.
10. RECHARGEABLE BATTERIES MUST BE REMOVED FROM THE TOY BEFORE CHARGING WHEREVER POSSIBLE.
11. RECHARGEABLE BATTERIES SHOULD ONLY BE CHARGED UNDER ADULT SUPERVISION.
12. REMOVE ALL BATTERIES WHEN YOU DO NOT USE THE TOY FOR A LONG PERIOD.
13. LOW OR FLAT BATTERIES CAN CAUSE DETERIORATION IN THE SOUND QUALITY OF THIS PRODUCT. DISTORTED OR SLOW SOUND QUALITY CAN BE RESTORED BY REPLACING THE BATTERIES.

- REMOVE OR DISPOSE OF ALL PACKAGING SAFELY BEFORE GIVING TO CHILDREN.
- PACKAGE HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.

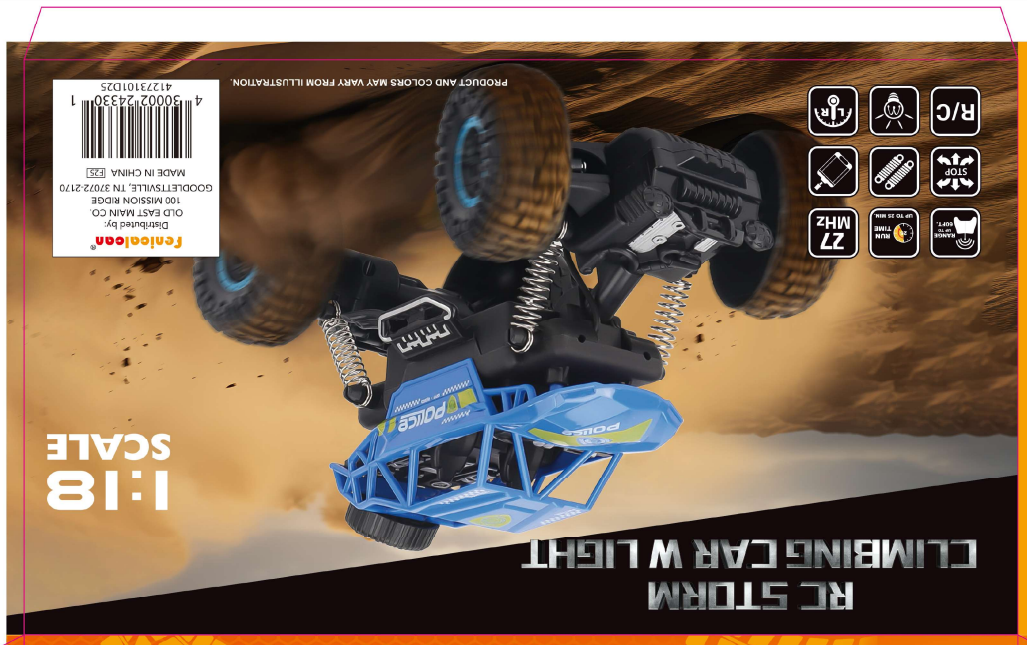

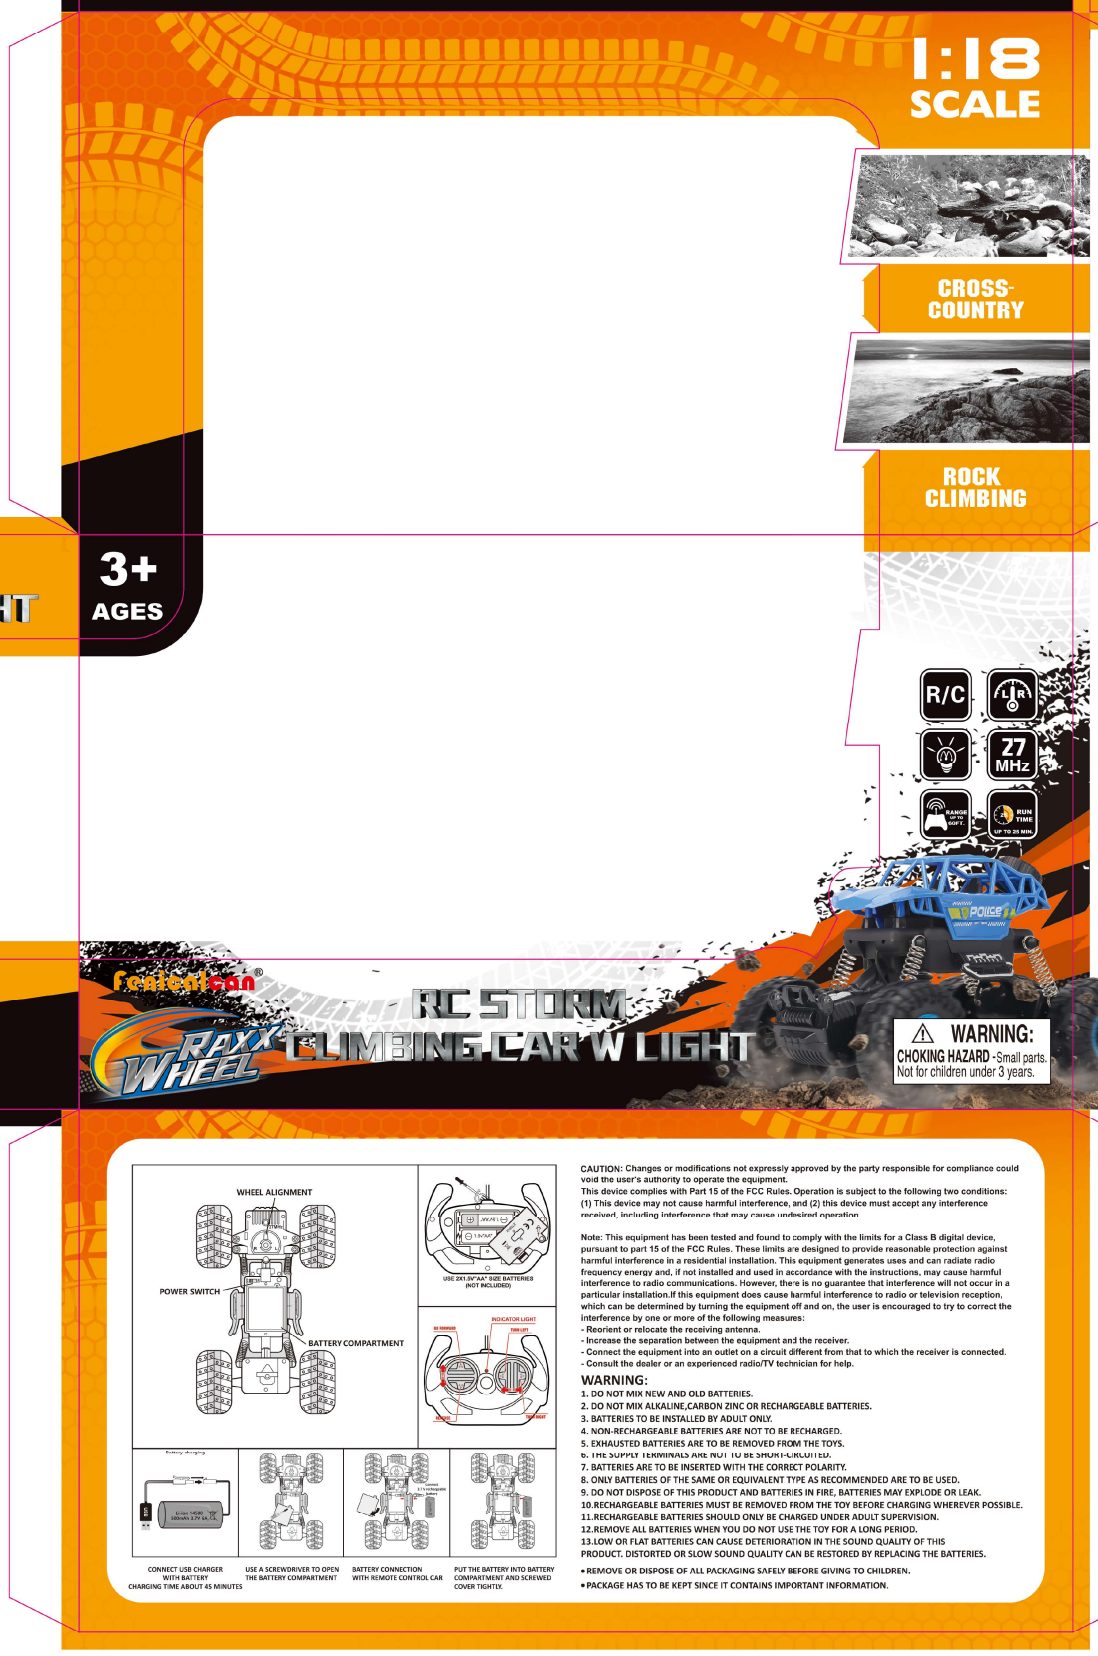

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

1. DO NOT MIX NEW AND OLD BATTERIES.
2. DO NOT MIX ALKALINE,CARBON ZINC OR RECHARGEABLE BATTERIES.
3. BATTERIES TO BE INSTALLED BY ADULT ONLY.
4. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
5. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOYS.
6. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
7. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
8. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
9. DO NOT DISPOSE OF THIS PRODUCT AND BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.
10. RECHARGEABLE BATTERIES MUST BE REMOVED FROM THE TOY BEFORE CHARGING WHEREVER POSSIBLE.
11. RECHARGEABLE BATTERIES SHOULD ONLY BE CHARGED UNDER ADULT SUPERVISION.
12. REMOVE ALL BATTERIES WHEN YOU DO NOT USE THE TOY FOR A LONG PERIOD.
13. LOW OR FLAT BATTERIES CAN CAUSE DETERIORATION IN THE SOUND QUALITY OF THIS PRODUCT. DISTORTED OR SLOW SOUND QUALITY CAN BE RESTORED BY REPLACING THE BATTERIES.

- REMOVE OR DISPOSE OF ALL PACKAGING SAFELY BEFORE GIVING TO CHILDREN.
- PACKAGE HAS TO BE KEPT SINCE IT CONTAINS IMPORTANT INFORMATION.