TEST SETUP PHOTO(S)

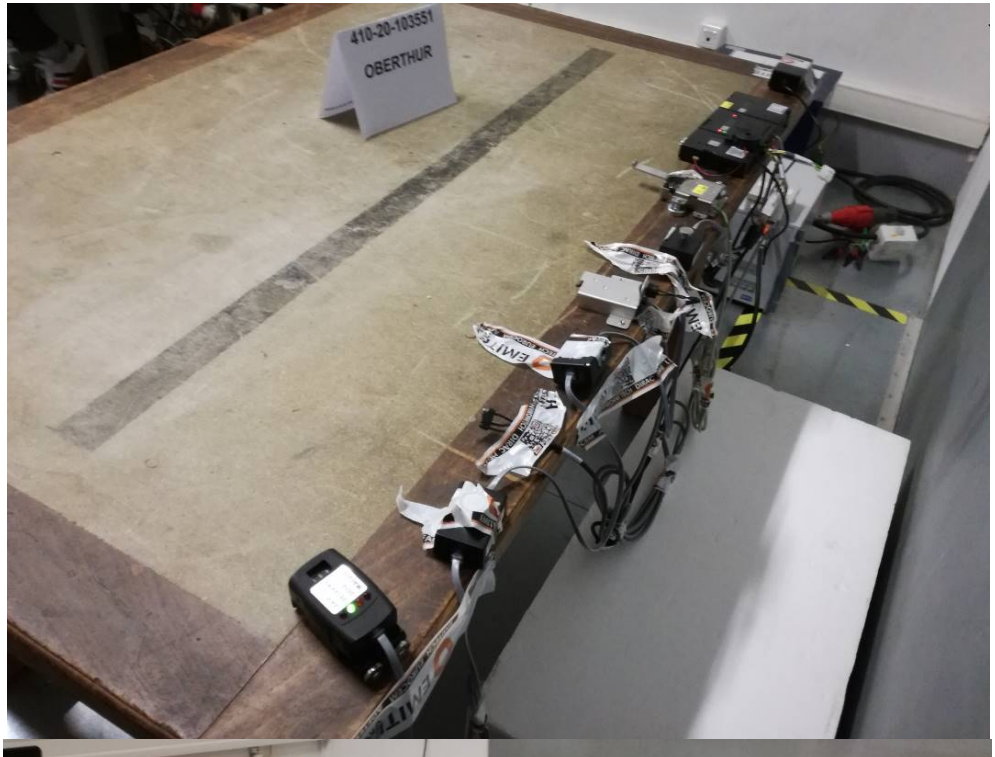

TEST SETUP PHOTO(S) – EUT POSITION

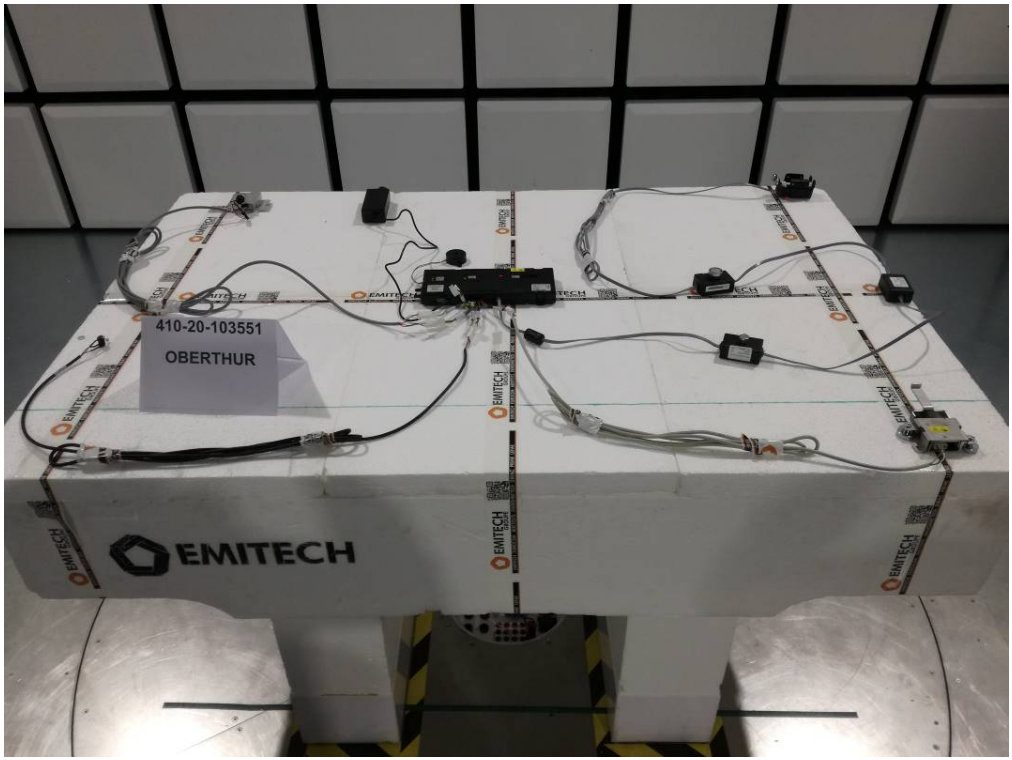

TEST SETUP PHOTO(S)

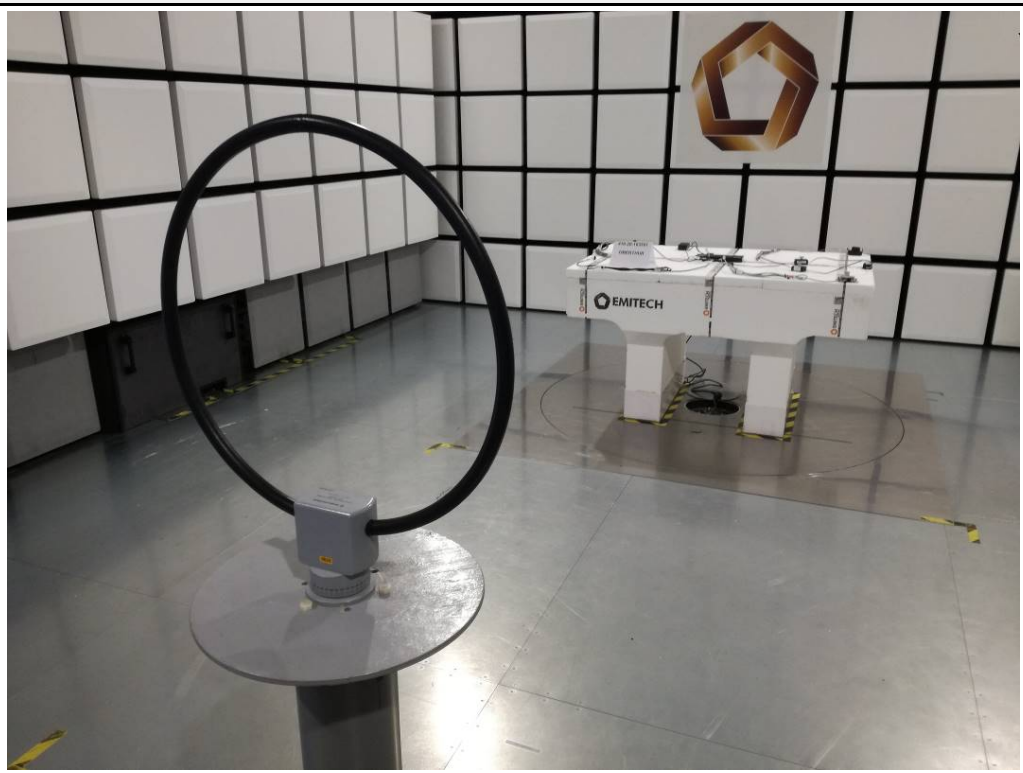

TEST SETUP PHOTO(S) – EUT POSITION FOR FREQ > 1GHZ

TEST SETUP PHOTO(S) – 30MHZ < FOR FREQ < 200MHZ

TEST SETUP PHOTO(S) - 200MHZ < FOR FREQ < 1GHZ

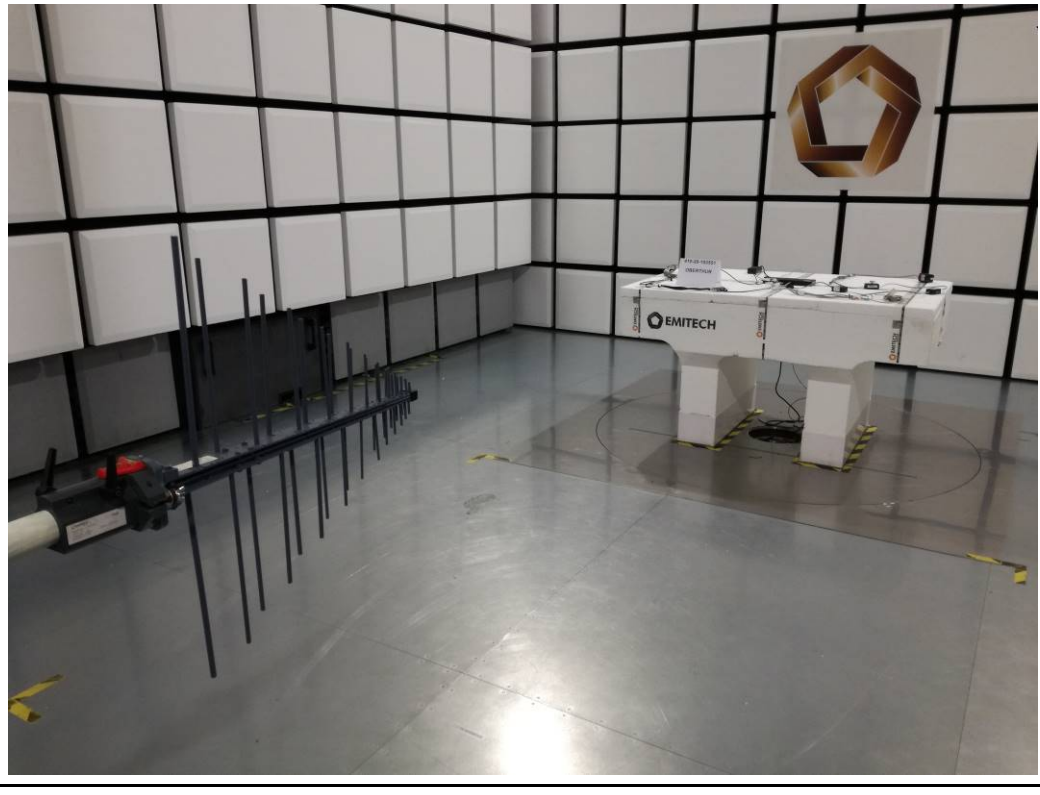

TEST SETUP PHOTO(S) - FOR FREQ > 1GHZ