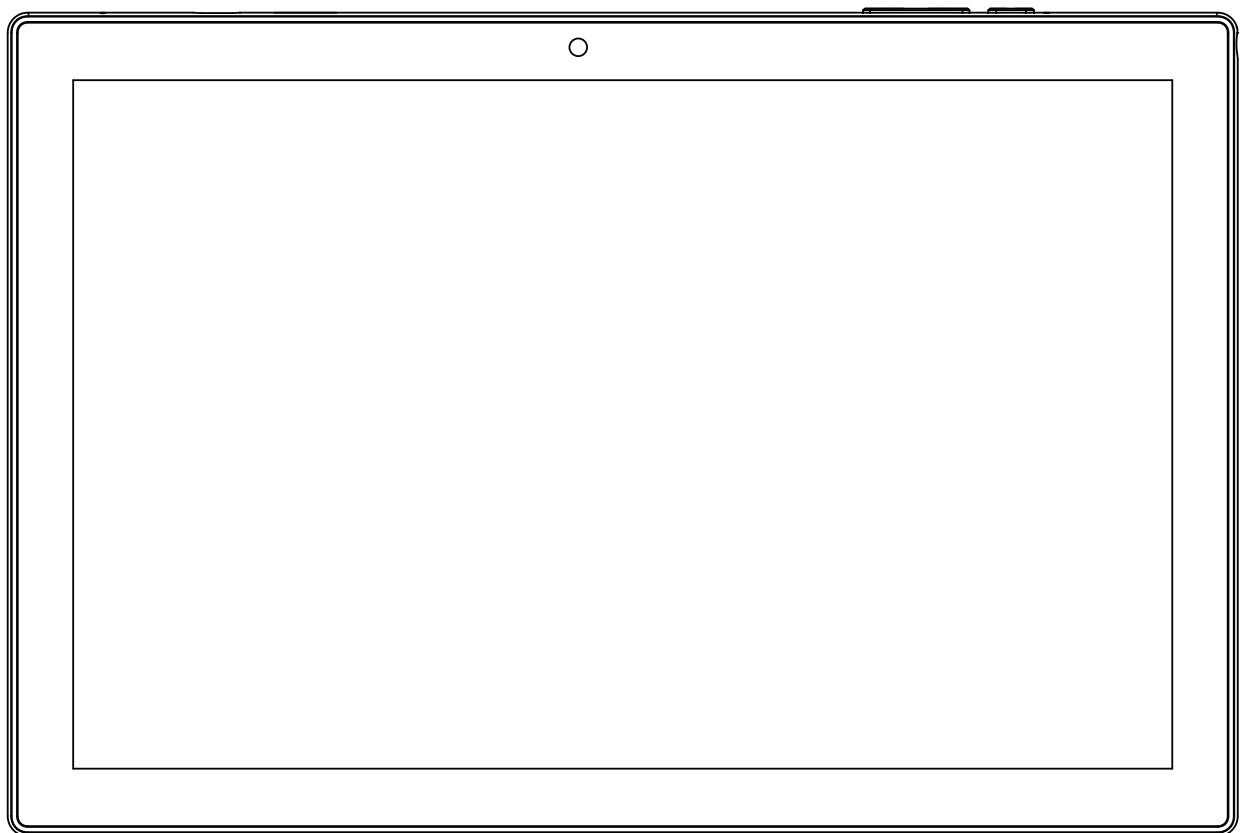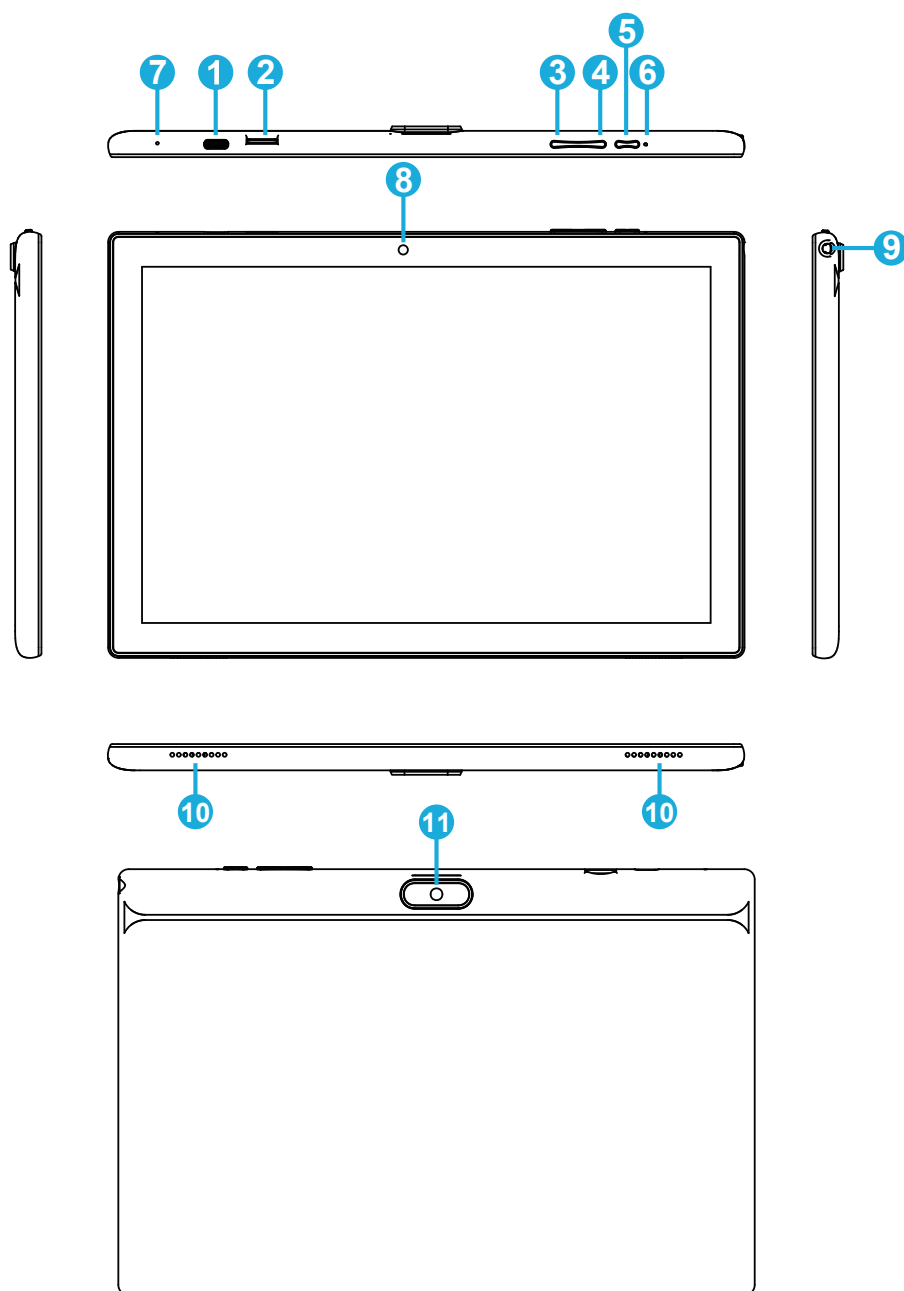# ユーザマニュアル

10.1インチタブレットPC

YQ10S

製品概要

1.タイプCポート

2.メモリーカードスロット

3.音量 +

4.音量 -

5.電源オン/オフ

6.リセット

7.マイク

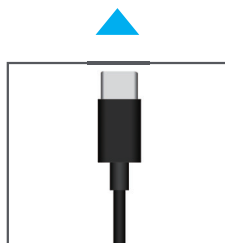8.正面カメラ

9.ヘッドフォンジャック

10.二人の話者

11.バックカメラ

充電

最初の使用の前に6時間あなたのタブレットをullyに充電してください

付属のチャージャを使ってください

バッテリーインジケータは、デバイスが充電されて表示されます

スクリーン基本

サーチ

Wi‐Fi信号

バッテリー

9:04 AM

あなたの通知設定を明らかにするために下にスライド

スワイプは、ホーム画面の間を切り替えるには、左またはrigth

ドック

背中

Home

最近のアプリ

ホームを保持し、現在のアクセスをGoogleにスライド

Wi－Fi接続

① アプリmenutapのWi-Fiで設定された設定を入力してください

② 確かに、Wi-Fiはターネドンです

③ ネットワークの選択とパスワード入力

グーグルアカウント

あなたはGoogleのプレイストアアプリケーションを参照してください最初の時間は、Googleアカウントを作成するプロンプトが表示されます。既にAgmail Mアカウントがある場合。あなたは、Gmailのアドレスとパスワードを使用してログインするオプションがあります。GMiAccountがない場合は、アカウントを作成するプロンプトに従ってください

セットアップの終わりには、Googleの財布とクレジットカードを入力するように求められます。あなたが購入するときに、この手順をスキップして後で情報を入力することができます
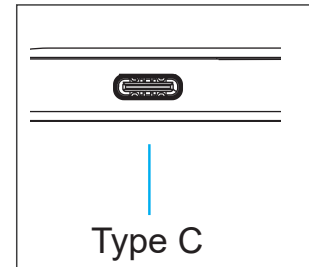
その他のアカウントの追加

また、他のソーシャルネットワーキングとインストールされているアプリをメッセージングからアカウントを追加することができます。設定とtapaccountに移動
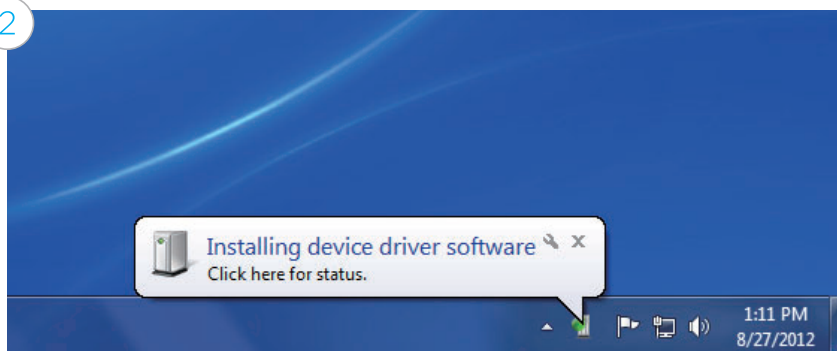
コンピュータに接続する

1

USB
USB

タイプCでコンピュータ
に接続してください

Type C

Windows™

2

Installing device driver software
Click here for status.

1:11 PM
8/27/2012

デバイスドライバ

3

AutoPlay

EGQ375(E:)

☐ Always do this for pictures:

Pictures options

Import pictures and videos
using Windows

Import Music, Video, and Pictures

OS (C:)
228 GB free of 297 GB

▲ Devices with Removable Storage (3)

DVD RW Drive (D:)

(E:)

ファイルを表示する
には

4

MP3

Music
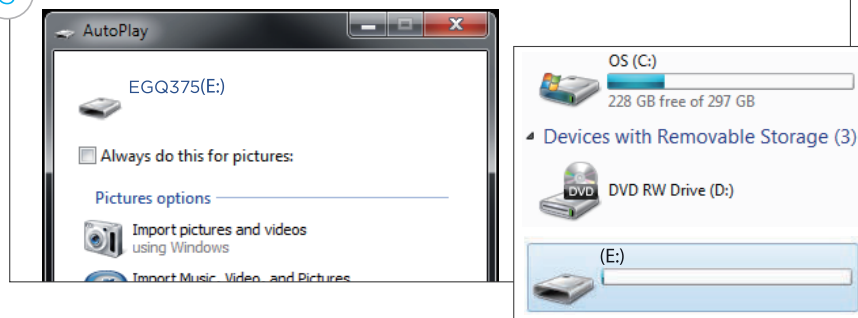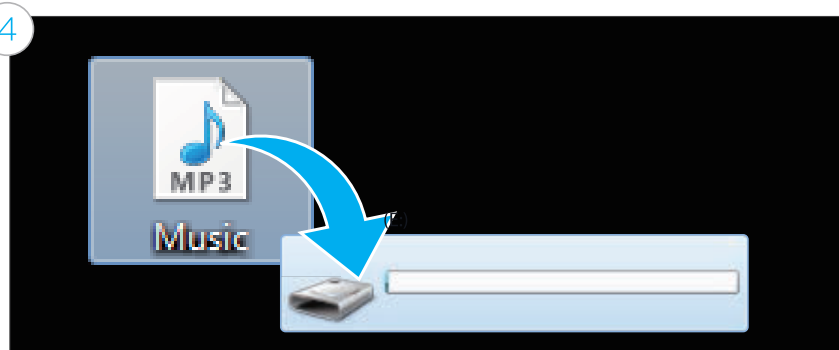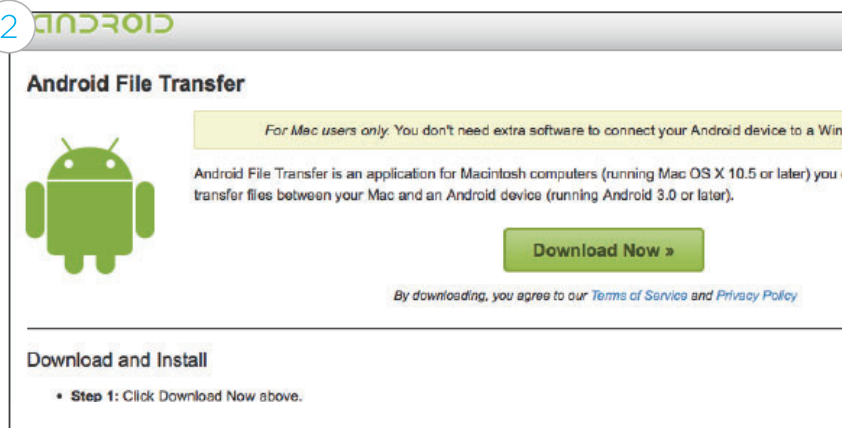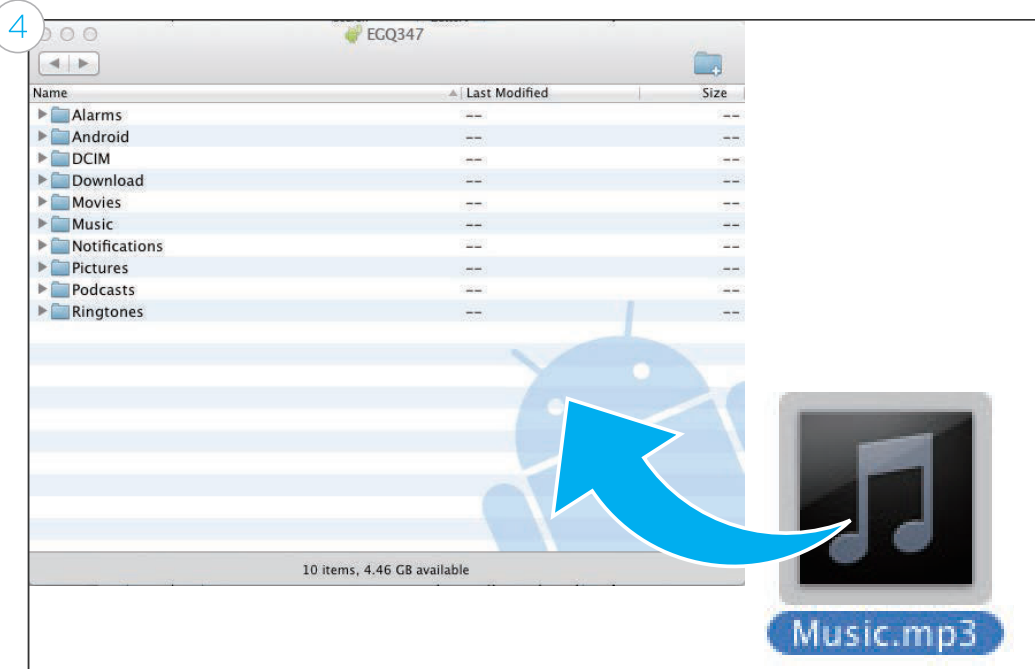
これで、AUSBフラッシュ
ドライブを使用すると、
タブレットからのファイ
ルをドラッグアンドドロ
ップすることができます

Mac®

Mac用のAndroidファイル転送アプリケーションをインストールします。
アンドロイド.今すぐダウンロードする

③ アプリケーションのインストール

あなたのタブレットを接続するとき、Androidファイル転送アプリケーショ
ンは自動的に起動します。ドラッグドロップのファイルを転送する

リセット/復元
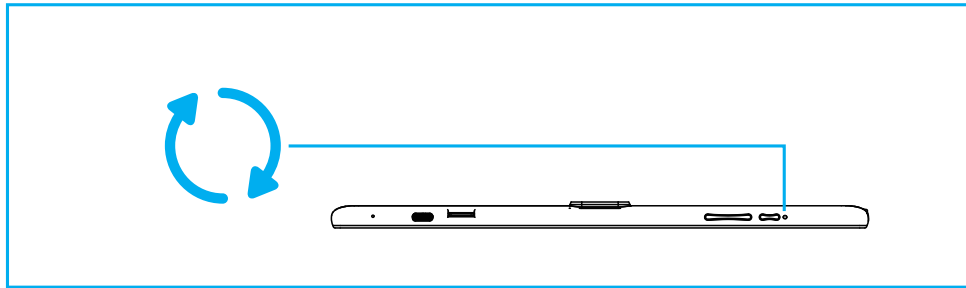
リセットクリップボタンなどのsmalObjectでリセットボタンを押してデバイスを

仕様

OS	Android™ 11
Screen	10.1" HD1280*800
CPU	RK3326S
RAM	2GB
ROM	64GB
WiFi	802.11b/g/n 2.4G Wifi
Camera	Front 2.0MP+ Back 8.0MP with flash light
Battery	6000mAh
Video	1080P

User Manual

10.1inch Tablet PC

YQ10S

Product overview

1. Type-C Port
2. Memory Card Slot
3. Volume -
4. Volume +
5. Power On/Off
6. Reset
7. Microphone
8. Front-facing Camera
9. Headphone Jack
10. Two Speakers
11. Back Camera

Charging

Fully charge your tablet for 6 hours before the first use.

Use the included wall charger.

The battery indicator will show that your devices is charging.

Screen basics

Wi-Fi signal

Battery

Search

9:04 AM

Slide down to reveal your notifications & settings

Swipe left or rigth to switch between home screens

Dock

Back   Home   Recent apps
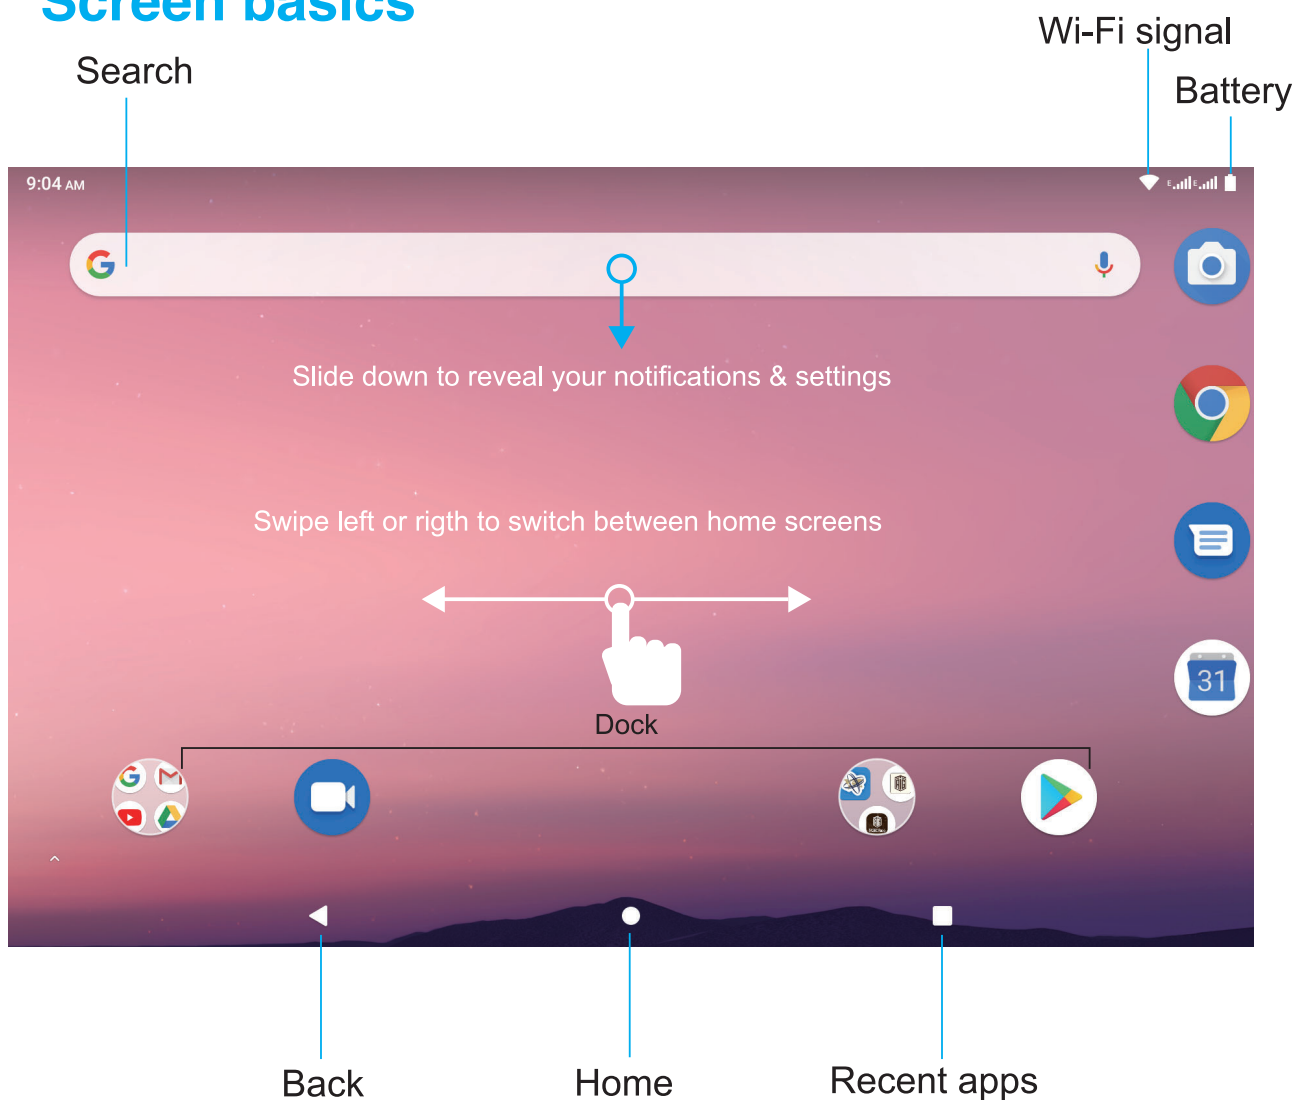
Hold Home and slide up to access Google™ Now

Connecting to Wi-Fi ®

1   Wi-Fi   Enter the settings app located in the apps menu, tap Wi-Fi.

2   On   Be sure Wi-Fi is turned on.
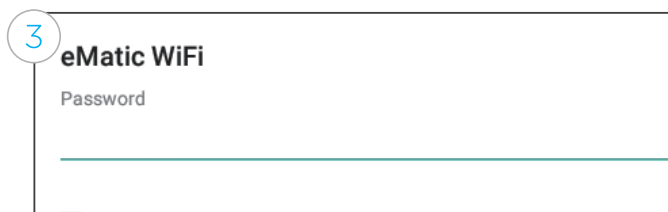
3   eMatic WiFi   Password   Choose your network and enter your password .
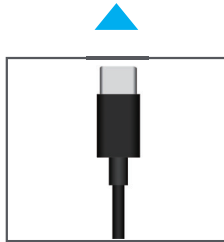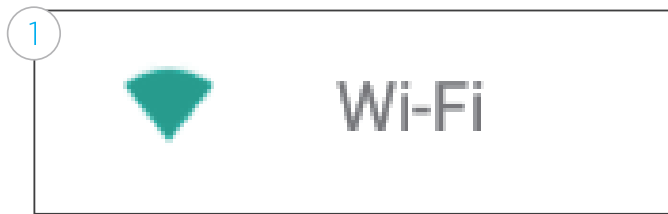
Google account

The first time you see the Google play store app you will be prompted to create a Google account. If you already have a Gmail™ account. You have the option to sign in using your Gmail address and password. If you do not have a Gmail account, follow the prompts to create an account.

At the end of the setup, you will be asked to enter a credit card with Google wallet. You can skip this step for now and enter your information later when you make a purchase.

Adding Other Accounts

You can also add accounts from other social networking and messaging apps you have installed. Go to settings and tap accounts.

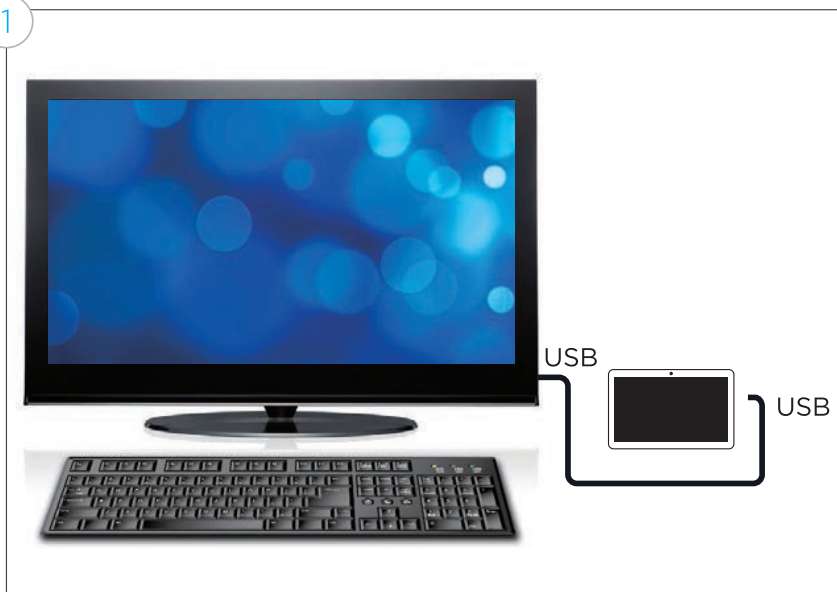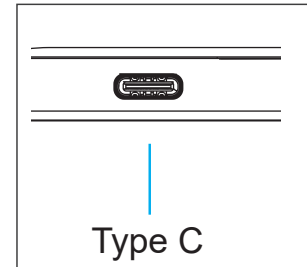# Connecting to a computer

1 Connect to your computer by Type C

USB
USB

Type C

Windows™
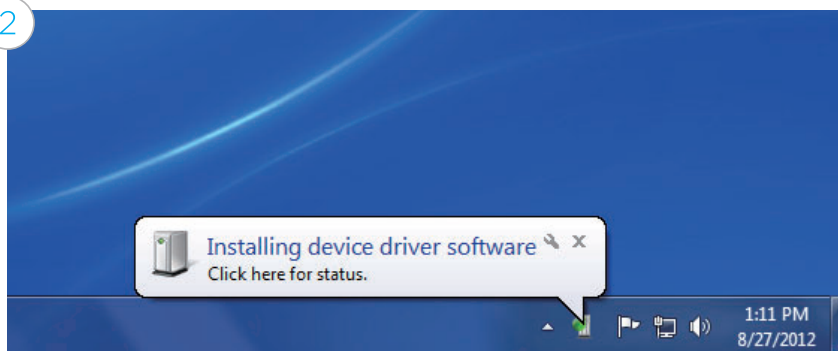
2 The device driver will install

Installing device driver software
Click here for status.

1:11 PM
8/27/2012
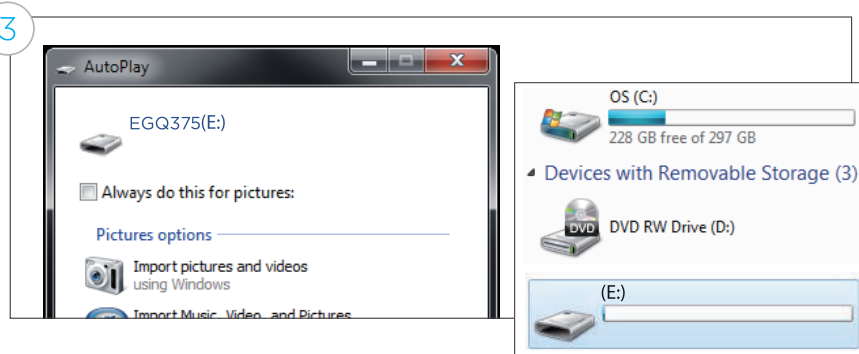
3 Choose open folder to view files or to select the removable disk

AutoPlay

EGQ375(E:)

☐ Always do this for pictures:

Pictures options

Import pictures and videos
using Windows

Import Music, Video, and Pictures

OS (C:)
228 GB free of 297 GB

▲ Devices with Removable Storage (3)

DVD RW Drive (D:)

(E:)
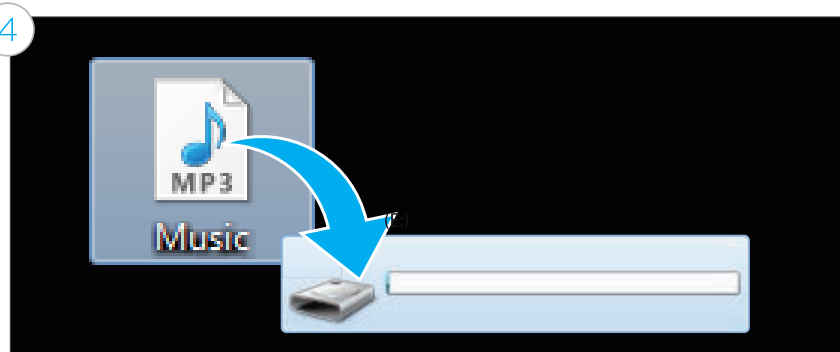
4 You will now be able to drag and drop files from your computer onto your tablet just as you would with a USB flash drive

MP3
Music

Mac®
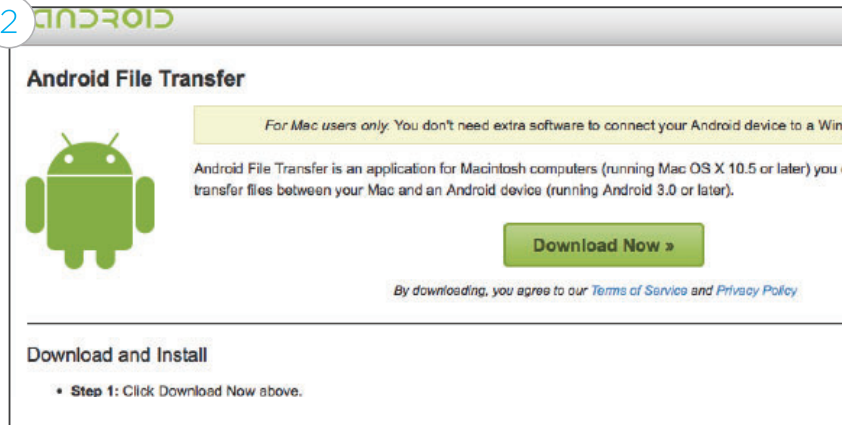
First install the android file transfer application for Mac. Go to android.com/filetransfer and choose download now.

③ Install the application

The Android™ file transfer application will launch automatically when you connect your tablet. Drag & Drop files to transfer.

Reset/Restore

Reset Device by pressing the reset button with a small object, such as a paperclip.

SPECIFICATION

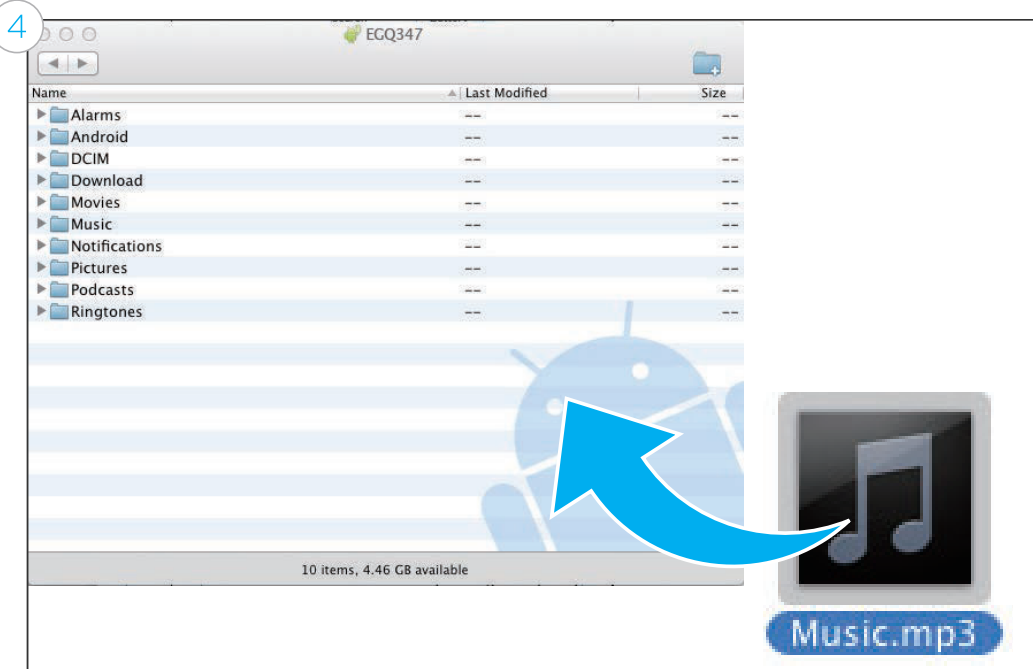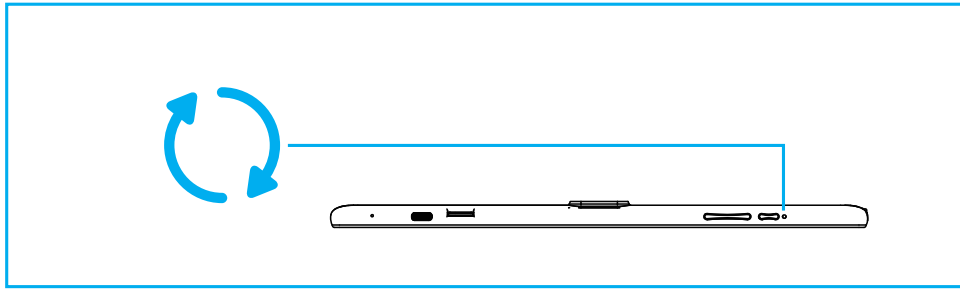|	
OS	Android™ 11
Screen	10.1" HD1280*800
CPU	RK3326S
RAM	2GB
ROM	64GB
WiFi	802.11b/g/n 2.4G Wifi
Camera	Front 2.0MP+ Back 8.0MP with flash light
Battery	6000mAh
Video	1080P

Google, Android, Google Play and other marks are trademarks of Google LLC.
The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.