材质及工艺：128g 铜版纸双面印刷 风琴折

注：四色印刷

acer

WIRELESS GAMING HEADSET

MODEL:K2

Package Contents

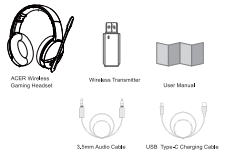

Overview

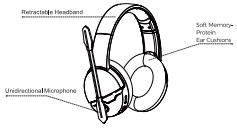

Power ON/OFF

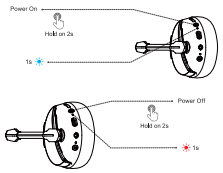

Wireless Mode Usage



MIC ON/OFF

Tone

On: Microphone On

Off: Microphone Off



Note: On the wired mode, the microphone mute function does not work.

Headset Charging

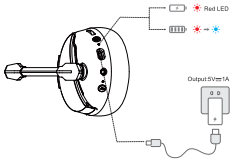

Note

1.If your headset is disconnected from your devices and no operation is performed for five minutes, your headset will turn off automatically.

2.Insert the 3.5mm audio cable, then the headset turns off and enters the wired mode.

3.Low Battery Reminder: When you hear the low battery tone 'battery low' and the red light flashes, please charge the headset in time.

Device	Wireless/USB dongle			Wired		
	Sound	Mic	Mic Mute	Sound	Mic	Mic Mute
PC	✓	✓	✓	✓	✓	×
PS5/PS4 Console	✓	✓	✓	×	×	×
Xbox Series X Console	×	×	×	×	×	×
PS5/PS4 Controller	×	×	×	✓	✓	×
Xbox Series X Controller	×	×	×	✓ * Some models support	✓	×
Switch	×	×	×	✓	✓	×
Cellphone	×	×	×	✓	✓	×
Tablet	×	×	×	✓	✓	×

❶ Using with PC/Mac in Wireless Mode

1.Open Sound settings

2.Choose your output device

3.Choose your input device 'K2'

4.K2 wireless headset can be used.

❷ Using with PS4/PS5 Controller in Wired Mode



Using with PS4/PS5 Console in Wireless Mode



Route: Settings → Devices → Audio Devices

Set 'K2' as Input Device & Output Device

❸ Using with Xbox Controller in Wired Mode

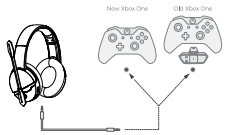

• Note: Wireless mode is not available for Xbox.

❹ Using with Phone on Bluetooth Mode



If you want to go back to wireless mode, you can press the power button 2 times and hear a tone saying 'USB Mode'.

Note: Frequent switching of modes will cause the headset connection to slow down.

Specifications

Model	K2
Headset battery capacity	lithium battery 3.7V/1200mA
BT Pattern Working time	about 100 hours(70%volume LED OFF)
Charging time	about 6 hours
Standby time	about 200 hours
Input charging standard	USB Type-c,DC5V/1A
Frequency response	20Hz - 20KHz
Sensitivity	98±3dB@1KHz
MIC sensitivity	-38±3dB@1KHz(Unidirectional)
Wireless Range	Up to 32 feet

Charging and Working Time

1.Please charge the headset with 5V/1A standard adapter or via the USB port of PC.

2.Generally,it takes 6 hours to fully charge the headset. but, actual the charging time may vary according to different charging devices;

The Microphone can not Work

Wireless mode:

1.Check whether you've set the headset as the default recording device;

2.Check if the microphone as been turned off.

Wired mode:

1.Make sure the line-in cable has been connected tightly;

2.Please use a converter cable while connecting with PC.

No Sound or Intermittent Sound from the Headset

1.Check if there are other obstacles which affect the transmitter;

2.If intermittent sound occurs when you are communicating,check whether the network of your device works smoothly;

3.Check whether you've set the headset as the default recording devkice;

4.Check whether the headset is in lowest volume setting.

Can't Connect to Devices

1.Check whether you used a USB Extension Cable or USB Hub It is not recommended.

2.Plug directly into the USB jack of the devices host.

3.Try to Replace a USB jack .(Some USB jacks may be power shortage)

4.For PC, it is recommended to plug into the USB jack at the back of the host.

We can't meet all our customers' expectations, but we try to meet it.

MADE IN CHINA

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference,and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.