2024年日历

祝：

1月	周	一	二	三	四	五	六	日
01周							6	7
						元旦	廿一	廿二
02周	8	9	10	11	12	13	14	
	廿三	廿四	廿五	腊月	初二	初三	初四	
03周	15	16	17	18	19	20	21	
	初五	初六	初七	腊八节	初九	大寒	十一	
04周	22	23	24	25	26	27	28	
	十二	十三	十四	十五	十六	五九	十八	
05周	29	30	31					
	十九	二十	廿一					

2月	周	一	二	三	四	五	六	日
05周				1	2	3	4	
				北小寒	南小寒	南小年	立春	
06周	5	6	7	8	9	10	11	
	六九	七九	八九	九九	除夕	春节	初二	
07周	12	13	14	15	16	17	18	
	初三	初四	情人节	初六	初七	初八	初九	
08周	19	20	21	22	23	24	25	
	雨水	十一	十二	十三	八九	元宵节	十六	
09周	26	27	28	29				
	十七	十八	十九	二十				

3月	周	一	二	三	四	五	六	日
09周					1	2	3	
					廿一	廿二	九九	
10周	4	5	6	7	8	9	10	
	廿四	学雷锋	廿六	廿七	廿八	廿九	二月	
11周	11	12	13	14	15	16	17	
	龙抬头	植树节	初三	初四	消费日	初六	初七	
12周	18	19	20	21	22	23	24	
	初九	初十	春分	十二	十三	十四	十五	
13周	25	26	27	28	29	30	31	
	十六	十七	十八	十九	二十	廿一	复活节	

4月	周	一	二	三	四	五	六	日
14周	1	2	3	4	5	6	7	
	愚人节	廿四	寒食节	清明节	廿七	廿八	廿九	
15周	8	9	10	11	12	13	14	
	三月	三月	初二	上巳节	初四	初五	初六	
16周	15	16	17	18	19	20	21	
	初七	初八	初九	初十	谷雨	十二	十三	
17周	22	23	24	25	26	27	28	
	十四	十五	十六	十七	十八	十九	二十	
18周	29	30						
	廿一	廿二						

5月	周	一	二	三	四	五	六	日
18周				1	2	3	4	5
				劳动节	廿四	廿五	青年节	立夏
19周	6	7	8	9	10	11	12	
	廿八	廿九	四月	初二	初三	初四	母亲节	
20周	13	14	15	16	17	18	19	
	初六	初七	初八	初九	初十	十一	十二	
21周	20	21	22	23	24	25	26	
	小满	十四	十五	十六	十七	十八	十九	
22周	27	28	29	30	31			
	二十	廿一	廿二	廿三	廿四			

6月	周	一	二	三	四	五	六	日
22周							1	2
							儿童节	廿六
23周	3	4	5	6	7	8	9	
	廿七	廿八	芒种	五月	初二	初三	初四	
24周	10	11	12	13	14	15	16	
	端午节	初六	初七	初八	初九	初十	父亲节	
25周	17	18	19	20	21	22	23	
	十一	十二	十三	十四	十五	夏至	十七	
26周	24	25	26	27	28	29	30	
	十八	二十	廿一	廿二	廿三	廿四	廿五	

7月	周	一	二	三	四	五	六	日
27周	1	2	3	4	5	6	7	
	建党节	廿八	廿九	三伏	三十	小暑	初二	
28周	8	9	10	11	12	13	14	
	初三	初四	初五	初六	初七	初八	初九	
29周	15	16	17	18	19	20	21	
	初十	十一	十二	十三	十四	十五	十六	
30周	22	23	24	25	26	27	28	
	大暑	十八	十九	中伏	廿一	廿二	廿三	
31周	29	30	31					
	廿四	廿五	廿六					

8月	周	一	二	三	四	五	六	日
31周					1	2	3	4
					建军节	廿九	廿九	七月
32周	5	6	7	8	9	10	11	
	初二	初三	立秋	初五	初六	七夕节	初八	
33周	12	13	14	15	16	17	18	
	初九	初十	处暑	十二	十三	十四	中元节	
34周	19	20	21	22	23	24	25	
	十六	十七	十八	处暑	二十	廿一	廿二	
35周	26	27	28	29	30	31		
	廿三	廿四	廿五	廿六	廿七	廿八		

9月	周	一	二	三	四	五	六	日
35周							1	
							廿九	
36周	2	3	4	5	6	7	8	
	二十	八月	初二	初三	白露	初六	初七	
37周	9	10	11	12	13	14	15	
	初七	教师节	初九	初十	十一	十二	十三	
38周	16	17	18	19	20	21	22	
	十四	国际日	十六	十七	十八	十九	农本节	
39周	23	24	25	26	27	28	29	
	廿一	廿二	廿三	廿四	廿五	廿六	廿七	
40周	30							
	廿八							

10月	周	一	二	三	四	五	六	日
40周		1	2	3	4	5	6	
		国庆节	三十	九月	初二	初三	初四	
41周	7	8	9	10	11	12	13	
	初五	寒露	初七	初八	重阳节	初十	十一	
42周	14	15	16	17	18	19	20	
	十二	十三	十四	十五	十六	十七	十八	
43周	21	22	23	24	25	26	27	
	十九	二十	霜降	廿二	廿三	廿四	廿五	
44周	28	29	30	31				
	廿六	廿七	廿八	廿九				

11月	周	一	二	三	四	五	六	日
44周					1	2	3	
					寒衣节	初二	初三	
45周	4	5	6	7	8	9	10	
	初四	立冬	初六	初七	初八	消防日	初十	
46周	11	12	13	14	15	16	17	
	十一	十二	十三	十四	下元节	十六	十七	
47周	18	19	20	21	22	23	24	
	十八	十九	二十	廿一	小雪	廿三	廿四	
48周	25	26	27	28	29	30		
	廿五	廿六	廿七	感恩节	廿九	三十		

12月	周	一	二	三	四	五	六	日
48周							1	
							十一月	
49周	2	3	4	5	6	7	8	
	初二	初三	初四	初五	大雪	初七	初八	
50周	9	10	11	12	13	14	15	
	初九	初十	十一	十二	公祭日	十四	十五	
51周	16	17	18	19	20	21	22	
	十六	十七	十八	十九	二十	冬至节	廿二	
52周	23	24	25	26	27	28	29	
	廿三	平安夜	圣诞节	廿六	廿七	廿八	廿九	
53周	30	31						
	三九	腊月						

102 mm

操作指示说明
Description of operating instructions

音箱与话筒开机后，自动配对链接。
The speaker and microphone are automatically paired and linked when the power is turned on.

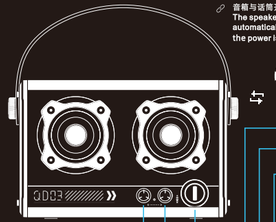

单击上一曲/双击灯光切换/长按TWS
Click previous song/double click light switch/long press TWS

单击下一曲/双击暂停，播放/长按模式切换
Click next song/double click to pause, play/long press mode switching

旋转开关机/旋转加减声音
Rotary on/off switch/rotary plus/minus sound

长按开关机/单击切换声音模式/双击转换伴唱
Long press to turn on/off/
click to switch sound modes/
double-click to switch backing vocals

短按减声音
short press to reduce sound

短按加声音
Short press to add sound

如何配对手机:产品开机后在手机蓝牙上搜索“Q003”，即可与之连接。
How to pair a cell phone:Search for "Q003" on your cell phone's Bluetooth after the product is turned on, then you can connect with it.

技术规格
technical specification

音箱尺寸：166*80*100MM
Speaker size: 166*80*100MM

话筒尺寸：121*42*42MM
MIC size: 121*42*42MM

音箱重量：500G
Speaker weight: 500G

话筒重量：72G
MIC weight: 72G

音箱电池：3.7V 1500mAh
Speaker Battery: 3.7V 1500mAh

话筒电池：3.7V 600mAh
Microphone battery: 3.7V 600mAh

喇叭参数：40MM 4Ω5W*2
Horn parameters: 40MM 4Ω5W*2

蓝牙版号：5.2
Bluetooth model: 5.2

链接距离：≥10M
Link range: ≥10M

充电接口：Type-C
Charging Interface: Type-C

输入电流：5V=1A
Input current: 5V=1A

播放时间：≈5H（70%音量）
Playback time: ≈5H (70%)

充电时间：≈2H
Charging time: ≈2H

额定功率：10W
Rated power: 10W

认证/标准
Certifications/Standards

执行标准:GB8898-2011GB13837-2012GB176251-2012
Standard:GB8898-2011GB13837-2012GB176251-2012

产品配件:主机、充电线、说明书、保修卡
Product accessories: host, charging cable, manual, warranty card

合格证
certificate of conformity
检测员 01 Pass
Inspector 01 Pass

注意事项
precautionary note

a.请勿将本产品暴露在雨中或潮湿的环境中;
b.请勿自行拆解、维修和改造本产品;
c.请在常温环境中存放以及使用本产品
d.请勿丢跌，避免因跌落造成产品损坏;
e.请使用首期提供的电源进行充电;
f.擅自拆卸将使保修失效;
g.长时间处于高音量下可能会造成听力损伤，应避免音量过高;

a.Do not expose this product to rain or humidity.
b. Do not disassemble, repair or modify this product.
c. Store and use the product at room temperature.
d. Do not drop the product to avoid damage due to falling.
e. Please use the rated voltage of the speaker to charge the power supply.
f. Unauthorized disassembly will void the warranty.
g.Prolonged exposure to high volume may cause hearing damage, avoid exces sive volume.

1.注意:如果电池更换不当会有爆炸危险，只能用同样类型或等效类型电池来更换:
2.电池不得暴露在诸如日照，火烤或类似过热环境中的警告。

1. CAUTION: There is a danger of explosion if the battery is not replaced properly, and it should only be replaced with the same type or an equivalent type of battery.
2.Warning: Batteries should not be exposed to environments such as sunlight, fire or similar excessive heat.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

228.00 mm