Label

Label location

The label is attached to the front of the module.

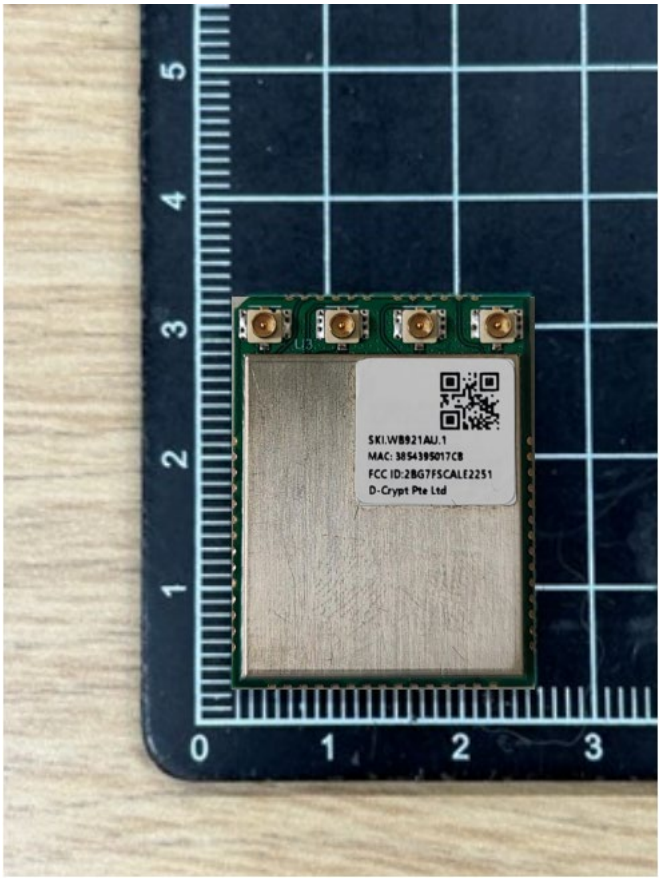

EUT External Photograph

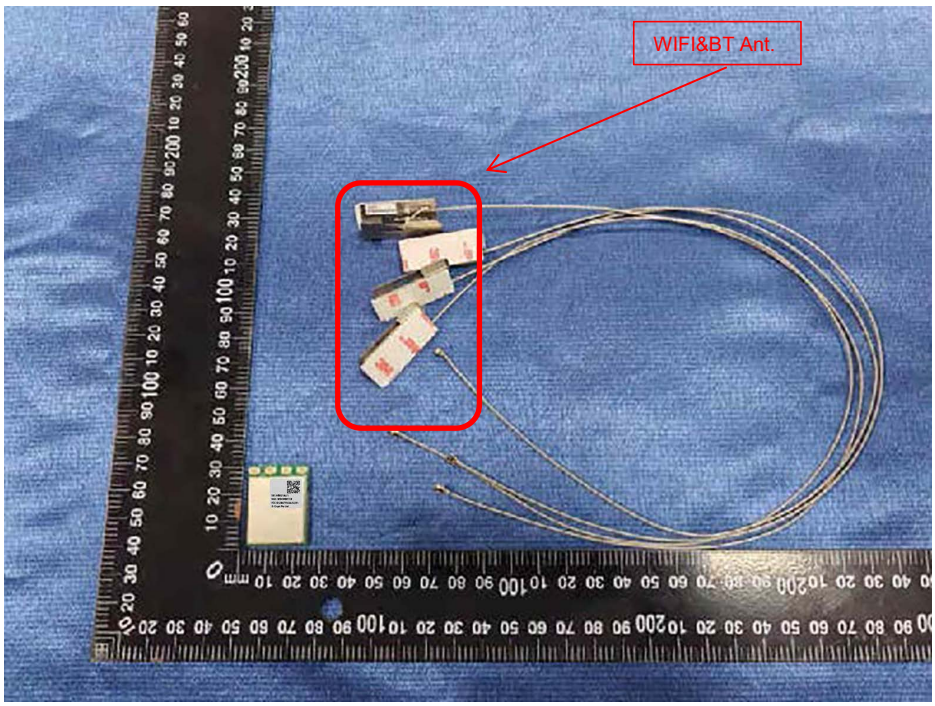

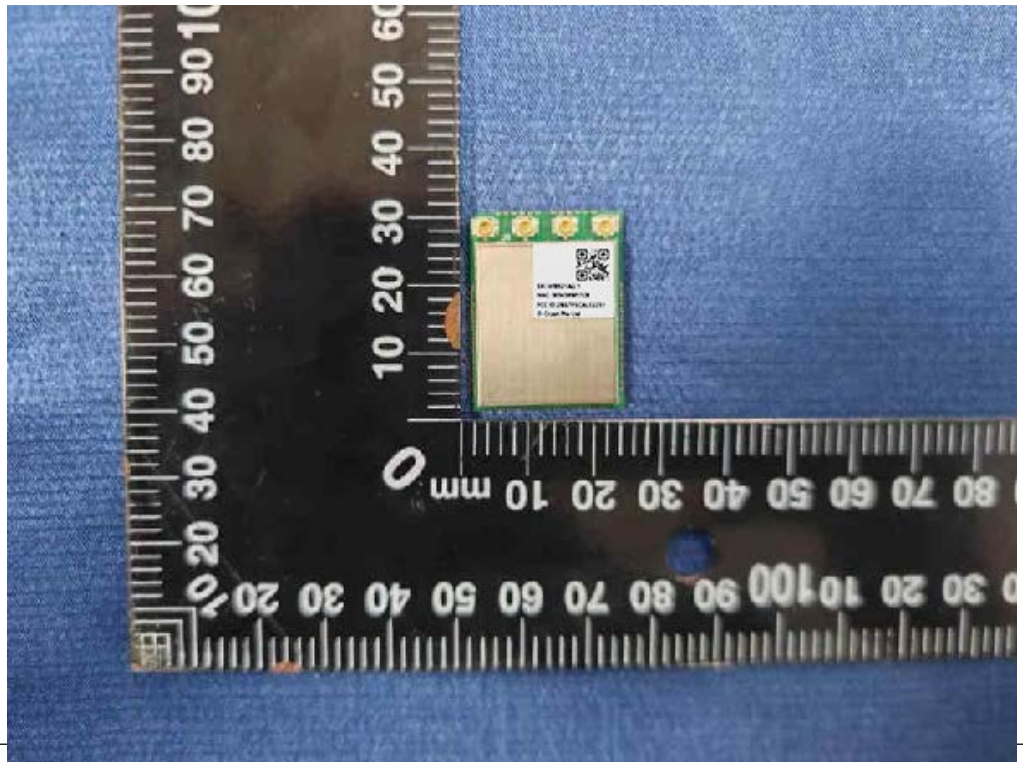

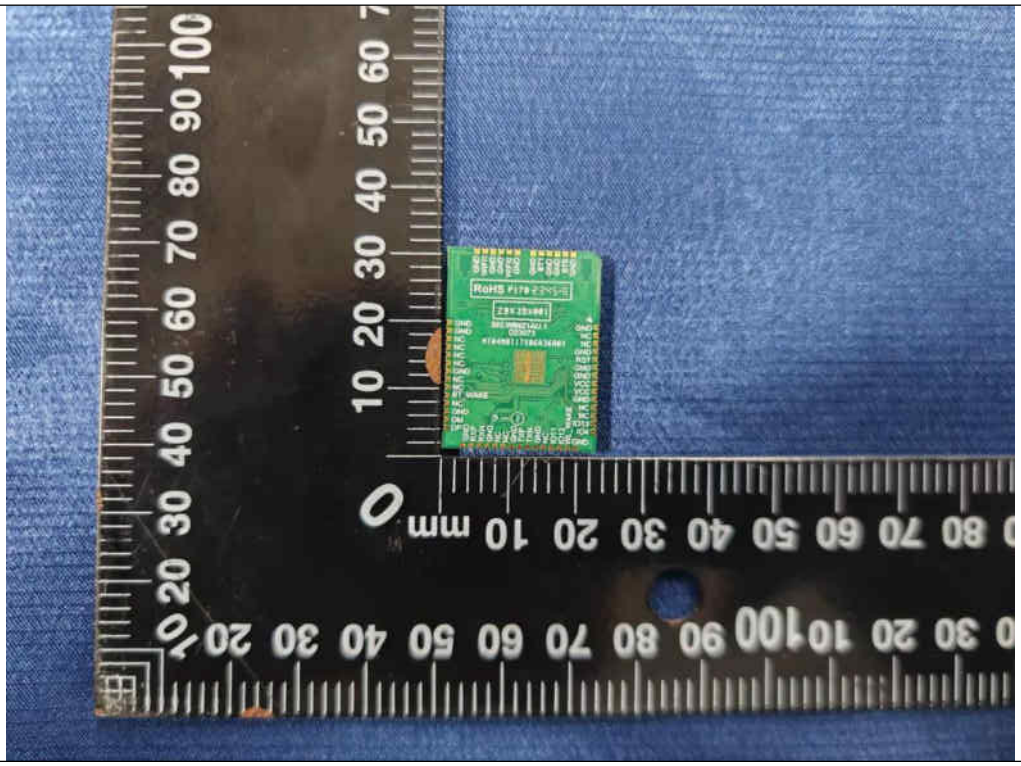
mm
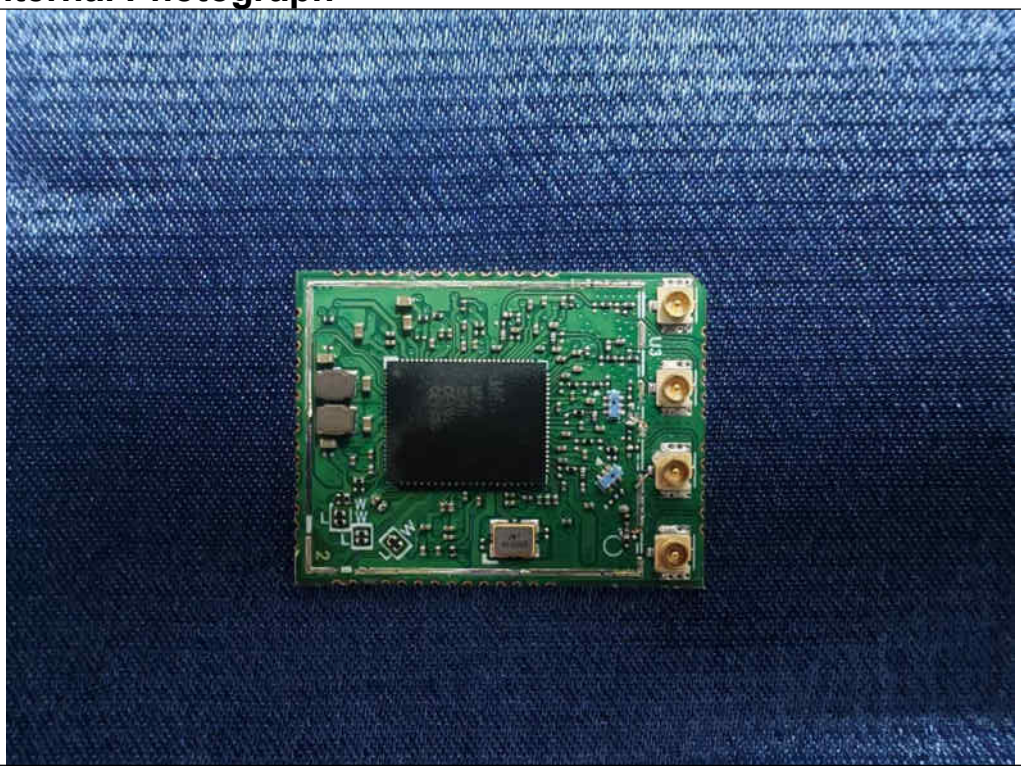
EUT Internal Photograph