MB-S820说明书 70G书写纸双面印刷/单色印刷 尺寸:105X142mm

Wireless Game Controller

User Manual(S820)

Vermilion

MULTI-PLATFORM GAME CONTROLLER

Application introduction

1.It is applicable to Switch, PS3, PS4, Android, Harmony, iOS, PC, Steam and other platforms.
2.Support Bluetooth/USB, USB wired different devices can choose different connection modes.
3.Vibration feedback & gyroscope function can be set for various games.
4.Support Simulation Key V3 & GamepadSpace APP to experience more advanced playing methods.
5.Android and Harmony HD standard mode, support HD games and various game titles.
6.Support Xbox Series & Xbox One Bluetooth connection, support PC game and Apple Arcade games.
7.Support button TURBO and AUTO TURBO functions.
8.The batteries are designed with LED breath lights.
9.The Type-C charging port is designed with a cover, which makes the attack faster.
10.Ergonomic handle and upgrade battery life bring longer durability and ease.
11.Ergonomic design brings you comfortable experience.

*Due to the problem of mobile phone system, some mobile phones may not support this device. *Due to the official game software software upgrades or service rate changes and other not controllable factors, the compatibility of this product with the corresponding game and gamepad, we have no responsibility. We reserve the right of final interpretation for this.

Instruction for key function

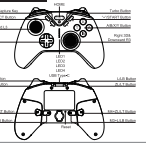

Electrical parameters

1.Working voltage：DC5V
2.Working current：≤80mA
3.Static current: 0uA
4.Continuous operation time: >8H
5.Charge current：DC5V/500mA
6.Charging time：About 3 hours
7.Battery specification：Lithium battery ≥8M
8.Battery capacity：≥70mAh
9.Standby time：100 days after fully charged
10.Product size：167.5X120X54mm

Switch console / Steam connection

1.Switch Console：turn on switch,click the Grip icon button on the main interface,Controller Grip(Switch)or enter the game & pairing mode.Harmony.
2.PC Device needs to turn Bluetooth function, Open Bluetooth search and pairing, After connecting, the corresponding LED indicator light will automatically remain on.
3.When gamepad is turn off, press the "HOME button for 5 seconds to turn on the gamepad. In order the pairing mode, the LEDS 2 lights start to flash in a circle, when one or more LEDs are always on, it has been connected, you can press HOME button directly, LEDS lights flash once to indicate reconnection automatically.
4.After it is successful connected, press the HOME button to turn on gamepad, gamepad will connect to the console automatically, then press A button to operate.

Vibration adjustment function

The game controller has a vibration adjustment function, it is divided into 3 levels: 100%, 70%, 30%. Long press RT, after the adjustment is successful, the motor is in the gear of mode for 3 seconds.
1. "T" + "Left 30 up" to increase motor dynamics.
2. "T" + "Left 30 down" to reduce motor dynamics.
3.Adjustment function just support on Switch console.

Android Harmony OS V3 Direct Plug Mode

1.When the gamepad is turn off, press A +HOME button for 5 seconds to enter the Android V3 Direct Plug Mode, gamepad LED 2 lights start to flash in a circle, when one or more LEDs are always on, it has been connected, you can press HOME button directly, LED lights flash once to indicate reconnection automatically.
2.Gamepad is turn off, press the "HOME button for 5 seconds to turn on the gamepad. In order the pairing mode, the LEDS 2 lights start to flash in a circle, when one or more LEDs are always on, it has been connected, you can press HOME button directly, LED lights flash once to indicate reconnection automatically.
3.After it is successful connected, press the HOME button to turn on gamepad, gamepad will connect to the console automatically, then press A button to operate.
4.Support Android system full or shows.
5.You can update the latest firmware of the controller through V3 app upgrade.
6.Some Apk Real Drawing Games should enter drawing After entering the game, you can enter the Bluetooth connection mode, the Bluetooth icon will flash, and the Bluetooth icon will stay on after Bluetooth first connection. You can press button buttons to switch to the mode you need.

GAME	Switch Method
Asphalt 9 APK	HOME
Genshin Impact	HOME
LOL	HOME
PUBG Mobile	HOME

Shooting Apk V3

Note: Other games which are not listed, after entering the button through V3 App, you will enter the Bluetooth connection mode, the Bluetooth icon will flash when starting. Please select your mode according to your needs.
6.Remember: in Android V3 mode, if Bluetooth is connected, but the "Device Disconnected" is shown, it is a normal phenomenon, this is because the Bluetooth connection is disconnected, problems such as Bluetooth headset, smart watch, etc.a. connect the gamepad first, and then reconnect other Bluetooth peripherals.

Android Harmony OS Standard HD Mode

1.When the gamepad is turn off, press A +HOME button for 5 seconds to enter the Android standard HD mode, gamepad LED 2 lights start to flash in a circle, when one or more LEDs are always on, it has been connected, After connected, the LED lights flash once to indicate reconnection automatically.
2.Search and download the "GamepadSpace APP" in the Google play to obtain more advanced use methods, such as: Simulation Key, Gyroscope, Vibration, Button Mapping, Joystick Sensitivity Adjustment, Trigger setting, etc. After the controller enters the configuration through software settings, the corresponding LED indicator light will remain on. You can also click the "Clear Settings" button on the APP to restore the default status of the controller.

Android Harmony PC Xbox Mode

1.When the gamepad is turn off, press RB+HOME button to enter the Xbox game pairing mode, gamepad LED 2 lights start to flash in a circle, search the device name "Xbox Wireless Controller". After connected, the LED lights will be always on.
2.Android Harmony PC, After connected, support two input modes , support button vibration setting.



iOS MFi / Apple Arcade Mode

1.When the gamepad is turn off, press RB+HOME button for 5 second to enter the iOS/Apple MFi pairing mode, gamepad LED 2 lights start to flash in a circle, search the device name "Xbox Wireless Controller" or "PowerA Fusion pro Wireless" connection, After connected, the LED lights flash once, it has been connected, you can press HOME button directly, LED lights flash once to indicate reconnection automatically.
2.Download genuine related games and other console games as below from game platform:
Apple Arcade games: Sonic Racing, Sonic Dash, Sonic Forces Game Apple APP Store which you can play Minecraft, Bad Ice Hockey,DUO,DEFENDER etc.
3.iPhone mobile support iOS 13.0 or above,Ipad and download the Gamepad Space APP in the APP Store to obtain more advanced use methods of the controller.

USB wired connection

1.It is automatically recognizes different mode under wired mode, Support Windows PC,Android devices,PS3/PS3 and NuSwitch consoles.
2.Wired connection Instructions for different devices:
a. turn off plug the USB cable into Windows PC,The default mode is Xwinput (360 mode) LED1 is always on,then "HOME" for 3 seconds to switch to DJ input mode,the LED2 is always on.
b.When the gamepad is turn off, plug the USB cable into PS4/PS3 Switch console,the controller will recognizes and distinguish LED indicator light automatically,Connect device LED is always on after connecting.



PS4/PS3 console Bluetooth connection

1.When the gamepad is turned off, insert the data cable to connect the PS3 / PS4 game console. After pressing the "PS" key, the console interface that the gamepad is connected, indicating that the Bluetooth pairing is successful. Unplug the cable to operate the console.
2.When the gamepad is turned off, press the "PS" key on the PS motion, and the Bluetooth is automatically connected back.
3.PS3/ PS4 Bluetooth is connected,left & right joysticks can be replaced with gyroscope.
4.The gamepad key corresponds to PS3/PS4 consoles , as shown in the figure below:

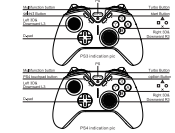

Light adjustment

TURBO&AUTO TURBO function

1.Button buttons&B/A/Y/RT/RB/LT/LB 8 buttons,TURBO function can be set manually.
2.Button TURBO function: Press and hold the button for 3 seconds to enter the button TURBO function, Repeat hitting the action button, press "T" button again to turn on the AUTO TURBO function.
3.Press and hold the button "T" button 5 seconds to cancel all battery TURBO function.
4.TURBO Speed adjustment method:
The turbo speed has 30 levels from 5/120 times per second.
Long press "T" button for 3 seconds, then press the button you want to adjust TURBO speed.
5.After the product is disconnected, the TURBO function that is set before is automatic. Enter of the TURBO function in another 5 must be ready.

Programming method

1.The macro keys are M1/M2/M3/M4/M5+L3/M6+L2 by default.When the gamepad is powered on, Press and hold the "T" button (START) and the programming button (M1/M2/M3/M4). And keep to be set at the same time, then pairing LED indicators are always on, release the button to enter the programming mode.
2.Press the or more keys,All function buttons to be paired such as pressing one of "A/B/X/Y/RT/RB/LT/LB/L3/R3", press the corresponding programming "M" button again to confirm and complete the macro programming setting is completed, and indicator light returns to the previous state.
3.Cancel macro function: after entering macro setting mode, press M key directly to exit without saving settings.
4.Multi-programming button allows to set the combination buttons up to 16 buttons.
5.The programming button has TURBO function.
6.The programming button has a memory function, no matter the gamepad is charging, shutting down or disconnection, it will remember the last setting state. If you want to cancel the M/RB/RB/RB