Fully automatic Litter Box

We have a clear mission: to enhance your pet's living environment with high quality
and innovative products. We know that
you prioritize your pet's health, so we are committed to providing you with a guarantee of superior quality

1、 **System initialization, rst connection**

Whenthmeachiinsteurnoendfonrormaloper ant Tihoe ndevice makes a "DI" sound, and the device finishes powering on.When the device is

1.The drum is installed in place. At this time: After the device emits a "Dididi" sound, it automatically performs the following operations:

Turonnthaeutomactliecanup mode The green light blinks for Clean/Clean Flavo	The "Clean/Deodorize" green light goes off →	Wait for the Cat to use it

Catalog

Declaration

● Thank you for using our company's smart cat litter box. Our company will continue to put pet safety, pet health and service experience first.

● Please read this product manual carefully before use. Once you use this product, it means that you have carefully read and accepted the following safety precautions

● The company is not responsible and does not assume any legal liability for any accidents or losses caused by illegal operations.

● The right to interpret and modify this statement belongs to our company.

⚠️

service to prevent the motherboard from burning the motherboard.
After using or adding cat litter for the first time, the machine
automatically corrects the trash tank after inserting the cat litter.
Before use, please check:
Close the Waste Collection Box, install the purifier, and turn
off the cover to   ensure that the installation is complete
otherwise the device may be faulty.
Make sure the equipment level is placed and is prohibited
on the carpet otherwise it may cause sensor errors and
equipment failure.
The voltage of the adapter is 12V. Please change the power
supply under the guidance of the manufacturer or customer

Safety Precautions

Please read and comply with the following precautions, otherwise it may cause the product to be unable to use normally or other accidental losses; for the safety of the cat, please make sure that the cat is older than 6 months or weighs more than 1.5kg.Precautions for use
1.1 Make sure that the product is placed on a flat and hard ground, and there is no foreign body at the bottom. Do not rely on objects or walls to avoid impact.

1.2 Do not put the product on the edge or height to prevent the fall from damaging the product.
1.3 Please place the product in a good WiFi signal, stay away from other interference strong home appliances.
1.4 Check whether the garbage bag is well set to ensure that the garbage collection warehouse is placed back in place.
1.5 The bottom of this product is equipped with a precise weighing sensor. When moving, you must lift it lightly. Do not drag and drag on the ground.
1.6 Do not put pressure on items or other methods on this product to avoid causing weighing abnormalities or damage to the product.
1.7 When adding cat sand, please do not exceed the MAX cable in the drum.

1.Please use a dedicated power adapter to power the product, otherwise it may cause product damage or safety hazards.
2.Please use this product indoors, keep the product dry and clean, do not use in high temperature and high humidity environments.
3.Please repair under the guidance of professionals to avoid various accidents.
In order to facilitate transportation and storage, please keep the original packaging properly.
5.This product is not suitable for people who are 8 years old or below children and people who have impaired limbs, feelings or mentally obstacles or lack of relevant experience and knowledge, unless anyone instructed them how to use this
6.product safely and supervise them to master the safe use of useful use. Essence
7. If you encounter any problems during use, please contact customer service personnel in time.

Product Components

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
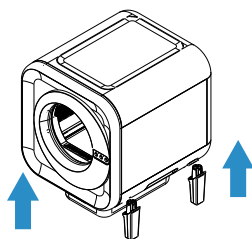-- Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC′s RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.
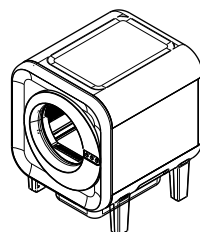
Installation Method
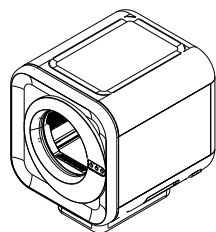
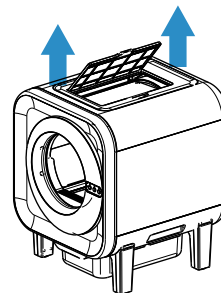1. State of the four legs retracted after unpacking

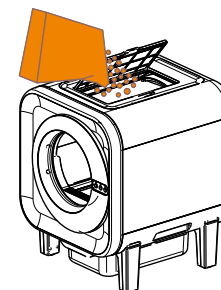2. Press and hold the arrow to install the legs in place

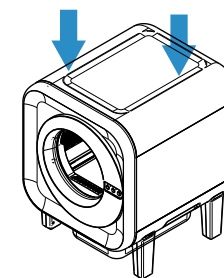3. State after installing the four legs
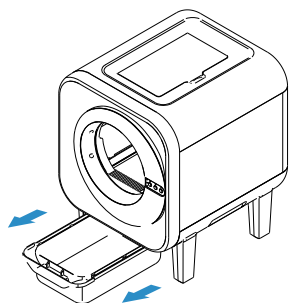
Add cat litter

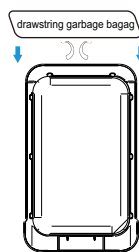1. Open the sand adding window

2. Add appropriate mount of cat litter

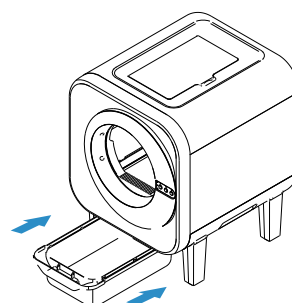3. Close the sand adding window

Replace the garbage bag

drawstring garbage bagag
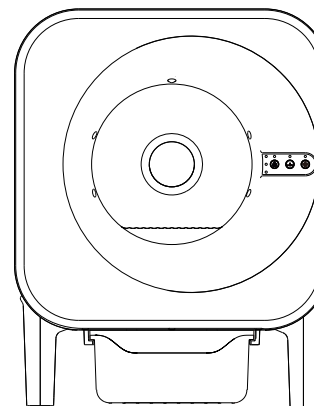
1.Take out waste collecttion box

2.Replace the garbage bag

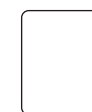3.Put back the Waste Collectation Box After the box is dismantled the fourfeet are folded

Product list

Power Adapter

Garbage Bags

User Manual

Child Lock: If there is no action on the device Panel for 30 Seconds, The Panel Butto NS Will Automatic Lock (To Prevental Operation by Children and PETS).
In thisState, the corresponding white indicator lights are often on.

Clean up the button

Click the Clean button to turn on the Clean mode; The device makes a "drip" sound and the cleaning indicator flashesTurn on the deodorant at the same time, the deodorant indicator flashes (external purifier) After the fecal cleaning is completed, the deodorant indicator is extinguished, and the deodorant indicator is turned off after the deodorization is completedDouble-click the clean button, the device emits a "drip--" sound, the child lock is released, and the white indicator light goes out

Sand Pouring Button

Press the Sand Pouring button once to make the device emit a "drip" sound and the sand pouring indicator light to flash. The device will then perform the action of smoothing the litter.Press and hold the Sand Pouring button for 3 seconds to make the device emit a "drip-" sound and the sand pouring indicator light to flash;
at the same time, turn on the odor elimination function, and the odor elimination indicator light will also flash. After completing the sand changing action, the sand pouring indicator light will turn off. The owner can then open the top cover of the device and add new litter.Once the odor elimination process is complete, the odor elimination indicator light will also turn off.

Deodorant button

Click the deodorization button, the device emits a "drip" sound, the deodorization mode is turned on, the fan is started, and the deodorization indicator flashes;Press the deodorization button again, the deodorization mode will be turned off, the fan will be turned off, and the deodorant green indicator will be turned off;(Note: This operation is invalid when the machine is not equipped with a purifier)Press and hold the deodorization button for 3 seconds, the device emits a "drop--" sound, the WIFI resets, the white WIFI indicator flashes slowly, and the device enters the network configuration

WIFI indicator light

The device is successfully connected to the network: the white light is always on;

The device is waiting for network configuration: the white   light flashes slowly;

The device is connecting to the Internet: the white light flashes quickly;

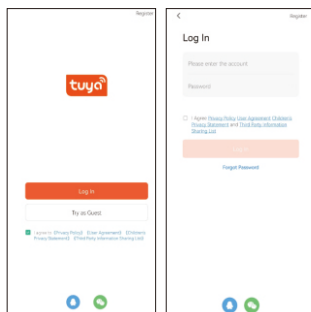## Waste collection box indicator light

Waste collection box full: The red light is on; Note: When the Waste collection box is full and   the owner does not clean the bin, the equipment will stop performing

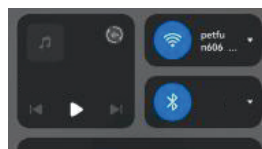**①** Please scan the QR code to download and install the app

② Open the tuya app

③ After the installation is completed, open the app to complete the account registration and   log in.

④ 1.Turn on the mobile phone Bluetooth
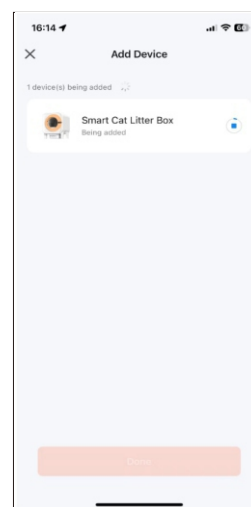2. Mobile phone connection wifi(2.4+5G)

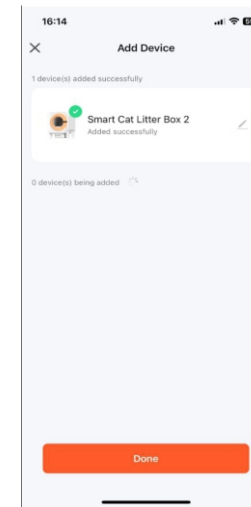**①** Open the tuya app, add the device
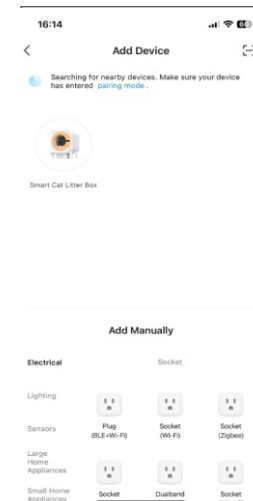
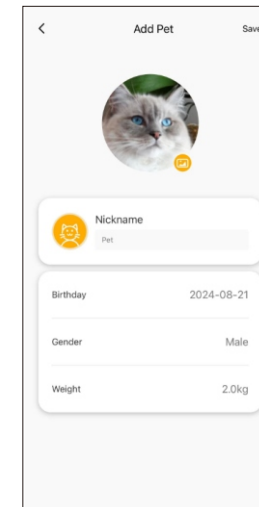**②** Click to add "Bluetooth" and find the device
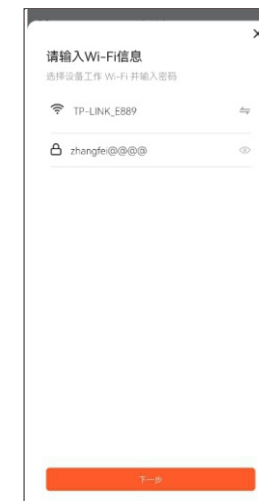
③ Enter WIFI information and click Next
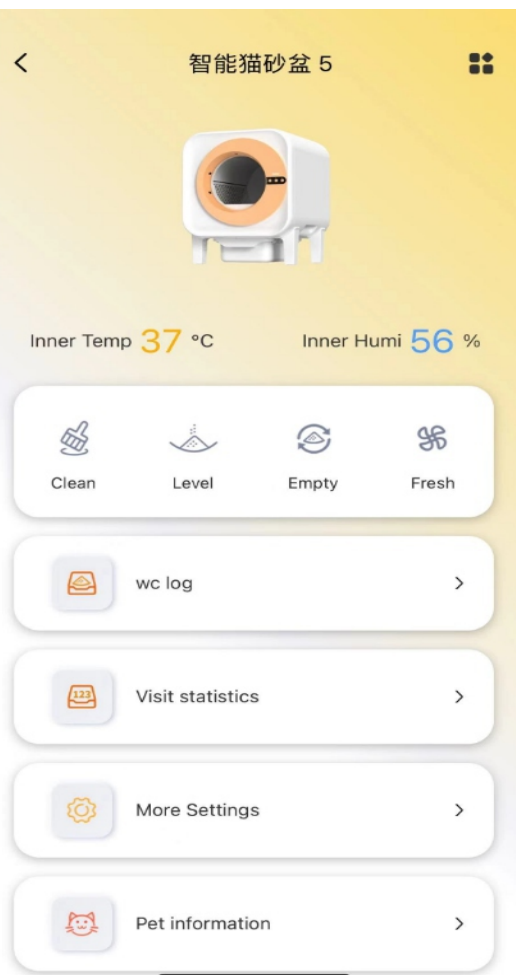
④ Equipment network

⑤ Completed with the distribution network, click " Completed" to enter the App Function Page

⑥ After connecting to the app, please add the pet's weight

智能猫砂盆 5

Inner Temp **37** °C   Inner Humi **56** %

Clean   Level   Empty   Fresh

wc log

Visit statistics

More Settings

Pet information

Clean up the button immediately, click, immediately perform the cleanup operation.

Leveling button: After clicking, the device executes leveling cat litter operation.

Sand change buttons: After clicking, the device executes the sand changing operation.

Odor Control button: After clicking, the device performs a net -flavored operation.

- Please keep as much as possible to clean the Litter Box door, clean up dirt such   as hair in time, and avoid the infrared sensor at the door or the door of the   cabin.

- Please clean up the feces in time to avoid the full Waste Collection Box,   resulting in the stop operation of the device.

- **It is recommended to clean the Litter Box once every two weeks. After washing the Litter Box, you need to dry it or dry it and put it in the device.**

- **We have used intelligent exhaust, negative ions, automatic cabin doors and other technologies to maximize the net smell, but it does not mean that the odor emitted by pet exclusion can be completely removed, so you need to clean up the stools and cleaning tube of the stools and cleaning tube. Warehouse, so as to ensure that you have a clean family environment.**

- Power off the device and then connect to the power supply again. The product   will enter the self -inspection   process. During this period, please do not touch any keys, and do not place any object above the Cat Litter   Box to patiently wait for the self -inspection program to complete.

- Perform a cleaning program, smoothing the program, and sand clearance procedures to check whether they   work normally.

- If the exhaust wind cannot work properly, please check whether the exhaust pipeline is inserted correctly.

- After inserting the exhaust pipe, you need to twist clockwise to ensure that the sensor in the exhaust pipe   reaches the correct position. Then manually execute the "Odor Control" to check whether the fan works.

- When performing the operating panel manually, you need to lift the "children's lock", otherwise the operation   button is invalid.

- When the device is carried out automatically, smoothing, and clearing the sand, it is necessary to stay away   from the device 1 meter or 3.2 feet, and wait for about

Q: Why does the litter box rotate automatically after power on? Why does the

sensor cleaning light turn on without me making any settings?
A: Because the device runs a self-check program each time it is powered on after a power outage, the litter box returns to its initial position. This process takes approximately 2 minutes. After the self-check is complete, the device automatically enters the cleaning mode, and the sensor light turns on. If you need to make other mode settings, you can adjust them manually.

Q: Why does the device take a long time to clean?
A: The device is designed with a special program that reduces the cleaning operation speed. This is done to lower the noise level of the device and save on cat litter usage. It takes approximately 2 minutes to complete a standard cleaning cycle.Additionally, the high curiosity of cats near the device, which interrupts the operation, can   also contribute to extended cleaning time. The lower speed is beneficial for timid cats as it reduces resistance.

Q: Why does the device rotate during the cleaning process?
A: The "sand-saving rotation" and "dynamic waste collection" features are specifically   designed in this product to save cat litter usage and increase the capacity of the waste   collection bin. Therefore, during the cleaning process, there will be a reverse rotation and   occasionally a small amount of waste may roll out of the waste collection bin. This is within   the normal operation of the device, and after the cleaning is complete, all waste will be   collected back into the waste collection bin.

Q: How should I choose the type of cat litter?
A: Common types of cat litter available on the market can be used.

Q: Why do I have clean cat litter when I clean up and pour it into   the Waste Collection Box?
A: Please add cat litter according to the amount of cat litter in Litter Box; when adding too   much cat litter, it will cause the cat litter to exceed the capacity of the Litter Box, and further   pour the excess cat litter into the Waste Collection Box, causing cat litter waste Essence.

Q: Do I need to clean it with water? How long is it to clean it?
A: The Litter Box and Waste Collection Box can be removed and washed with water. It is   recommended to clean it every 2 weeks to keep the indoor air environment clean, and it will   also give you a clean and tidy toilet.

1.The warranty period of this product is one year from the date indicated on the valid purchase certificate.

2.Within the one-year warranty period, if the fault is caused by the quality problem of this product during normal use by the user, our company will provide free warranty service.

3.The following situations are not covered by the warranty service:
(1)   Incorrect installation, incorrect use, malicious damage
(2) Unauthorized disassembly, repair, abnormal operation
(1) of the device or leakage of water.
(2) Faults caused by using other third-party accessories
(4) Poor usage environment
(5) Exceeding the promised warranty period
(6) Failure to provide valid purchase vouchers
(7) Faults caused by external events.

4.Communicate with the after-sales specialist in a timely manner to confirm whether you are entitled to free warranty services.

5.When returning the product, please fill out the product after-sales warranty form completely and send it along with the product.

Special reminder: For return and exchange services, please return the complete set of products, including the packaging box, main unit, all accessories, gifts (if any), etc.

Product After-sales Warranty Form

Customer Name	
Contact Phone Number	
Product Name/Model	
Purchase Date	
Problem Description	