INSTRUCTION MANUAL
使用說明

momax

1-Wear
Smart Watch
智能手錶

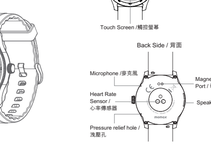

SW2S

Getting started/ 入門指南

1.Open the package and check its contents.

2.Charge the smartwatch to activate it and turn it on before first use. To charge, simply connect the magnetic charging cable to the charging port located on the back of the watch.

3.Search for "Momax Wear" in the App Store or Google Play to download and install the app.

4.Register & Log in to the app and enter your personal information, including your height and weight.

5.In the "Device" interface, tap the "+" icon in the upper right corner, select the appropriate product category, and your phone will start searching. From the list of devices found, choose your smartwatch to pair it. Alternatively, you can link the device directly by scanning its QR code using the scanning function.

1.打開包裝並檢查內容物。

2.在首次使用前，充電智能手錶以啟動並開機。如要充電，只需將磁性充電線連接到位於手錶背面的充電端口。

3.在 App Store或 Google Play 中搜尋「Momax Wear」以下載並安裝該應用程式。

4.註冊並登入應用程式，並輸入您的個人信息，包括您的身高和體重。

5.在「裝置」介面中，點擊右上角的「+」圖標，選擇正確的產品類別，您的手機將開始搜尋。從找到的裝置列表中選擇您的智能手錶進行配對。或者，您也可以通過使用掃描功能直接掃描裝置的 QR 碼來鏈接設備。

Introduction/介紹

Watch
1.After pairing, The watch will automatically record your data.

2.You can manually measure your heart rate, SpO2, and stress using the smart watch. Additionally, it can monitor your heart rate and sleep throughout the day. You can choose to operate it manually or set it to automatically monitor your health continuously.

3.To start an exercise: Open the sports app on the watch, tap the icon for the type of sport, set your goal, and then begin exercising.

App
1.Open the "Momax Wear" app, enable Bluetooth, and grant GPS location permission.

2.Wake up the Watch's screen and bring it close to your phone.

3.Tap "Bind Device" in the app and select the model from the search results to complete the binding.

4.Enter your information and set your step goal in the app to finalize the binding process.

手錶
1.配對後，手錶將自動記錄您的數據。

2.您可以使用智能手錶手動測量您的心率，SpO2 和壓力。此外，它還可以全天候監測您的心率和睡眠。您可以選擇手動操作或設置為自動持續監測您的健康。

3.要開始運動：請打開手錶上的運動應用程式，點擊運動類型的圖標，設定您的目標，然後開始運動。

應用程式
1.打開「Momax Wear」應用程式，啟用藍牙並授予 GPS 定位許可。

2.喚醒手錶的螢幕，並將其靠近您的手機。

3.在應用程式中點擊「綁定設備」，然後從搜索結果中選擇您型號以完成綁定。

4.在應用程式中輸入您的信息並設定步數目標，以完成綁定過程。

Basic Operations/ 基本操作

1.Wear the Watch Correctly: Ensure that your watch is positioned at least one finger's width above your wrist bone, with the sensor on the back touching your skin.

2.Screen Operation: The SW2S features a full touch screen, allowing for operations such as short taps, swipes left/right, and swipes up/down.

3.Button Operation: The SW2S has one physical Rotational Crown Button. The button supports "short press," "long press," and " Rotation"

(1) **Short Press on the Button:**
- Enter or exit the application list.
- Short press to pause/start during exercise.
- Wake the screen when it is off.

(2) **Long Press on the Upper Button:**
- Long press for 8 seconds to restart the device.
- Long press during exercise to end the activity.
- Turn on the watch when it is in the off state.

(3) **Rotating button :**
- Rotate the button to scroll through the application list.

1.**正確佩戴手錶：**確保手錶至少距離手腕骨一個手指的寬度，並使背面的感應器貼合您的皮膚。

2.**螢幕操作：SW2S** 配備全觸控螢幕，支持短按、左右滑動和上下滑動等操作。

3.**按鍵操作：SW2S** 具有一個實體旋轉錶冠按鈕。按鈕支持「短按」、「長按」和「旋轉」。

(1) **按鍵短按：**
- 進入或退出應用程式列表。
- 在運動中短按以暫停/開始。
- 在息屏狀態時喚醒螢幕。

(2) **按鍵長按：**
- 長按 8 秒重新啟動設備。
- 在運動過程中長按以結束運動。
- 當手錶處於關閉狀態時，開啟手錶。

(3) **旋轉按鈕：**
- 旋轉按鈕捲動瀏覽應用程式清單。

Function Description/ 功能說明

1. Dial
You can switch between watch faces manually on the watch or through the Momax Wear App' s watch face settings. The app also allows for customization of the watch face. Additional watch faces are available for download in the "Watch Face Market."

2. Application List
To access the application list while viewing the watch face, press the physical button. The applications are listed as follows (from top to bottom): Activity, Phone, Al Voice, Sports, Sports Records, Heart Rate, Blood Oxygen, Stress, Sleep, Breathe , Weather ,Cycle Tracking,, Music, Camera, Find Phone, Alarm, Stop Watch, Timer, World Clock and Settings.

2.1 Activity
The watch collects and displays various activity data, including:
- Daily exercise/activity/walking data and goals
- Hourly histogram of exercise/activity/walking data
- Total steps and distance for the day
- Recovery time and maximal oxygen uptake from the latest exercise
- Daily goal setting

2.2 Phone Functionality
1.You can add up to 10 frequent contacts through the app and call them directly from the watch.

2.Recent call history is accessible on the watch, allowing you to call displayed numbers.

3.Calls can be made using the watch' s dialer.

2.3 AI Voice
Control your phone' s built-in voice assistants, such as Siri and Google Assistant, by inputting voice commands on the watch.

2.4 Sports
a) The watch supports up to 12 default exercise types:
- Outdoor Run, Indoor Run, Outdoor Walk, Indoor Walk, Hiking, Outdoor Cycle, Indoor Cycle, Cricket, Pool Swim, Open Water Swim, Rower, Elliptical. You can add or remove exercise types and change their display order in the Momax Wear App, which offers a total of 100 exercise types.

b) The watch features intelligent exercise recognition, automatically detecting when you're running or walking. It can pause exercises automatically and remind you when an exercise ends; this feature can be toggled on or off in the app.

c) The watch provides a summary of various exercise data, which can be reviewed in the Momax Wear App.

d) Recent exercise records, including detailed data, are viewable on the watch and in the app.

2.5 Sports Records
Record the data for each exercise and view your exercise records at any time

2.6 Heart Rate
1.You can manually measure your heart rate using the watch. In the app settings, you can enable or disable the continuous around-the-clock heart rate monitoring, or view your heart data.

2.When measuring your heart rate, keep your arm and wrist still and wait patiently until the measurement is complete.

2.7 Blood Oxygen
1.You can manually measure your blood oxygen levels using the watch. Additionally, the watch supports automatic around-the-clock blood oxygen monitoring. In the app settings, you can enable or disable this function, or view your blood oxygen data.

2.When measuring your blood oxygen, keep your arm and wrist still and wait patiently until the measurement is complete.

2.8 Stress
1.You can manually measure your stress levels using the watch. The watch also supports automatic around-the-clock stress monitoring. In the app settings, you can enable or disable this function, or view your stress data.

2.9 Sleep
You can view your most recent sleep record and the status of each sleep stage.

2.10 Breathe
1.Open the app for "Breathe" function and select the desired duration.

2.Click to start, then follow the vibration frequency and animation instructions to adjust your breathing. This will help you relax.

2.11 Cycle Tracking
After opening the Women' s Health on the app, the watch will display options for cycle tracking. You can set the cycle length, reminder time, and other preferences, and the watch will provide periodic reminders.

2.12 Weather
Supports viewing the weather for seven days. You can check today' s current weather, as well as the highest and lowest temperatures for the next six days.

2.13 Music
1.When the watch is connected to the app, you can control the mobile music player to perform functions such as "next," "previous," "play/pause," and "increase/decrease volume."

2.This function can be displayed or hidden in the app settings.

2.14 Camera
When the watch is connected to the app, you can manually activate the phone's camera to take photos.

2.15 Find Phone
1.When the watch is connected to the app, you can make your phone ring.

2.Click the icon to stop the ringing.

3.This function can be displayed or hidden in the app settings.

2.16 Stopwatch
Use the watch as a stopwatch. The stopwatch features a "Lap" function.

2.17 Timer
You can set a timer with a preset duration on the watch. It will notify you when the timer expires, and you can customize the timer duration.

2.18 Alarm
The watch allows you to add, delete, and turn alarms on or off. You can also set alarms through the app and assign labels to identify each alarm.

2.19 World Clock
Users can set multiple displays in the app to show the time in various countries around the world, each in its respective time zone. The first choice will be displayed on the watch.

3. Settings
1.You can customize the watch display.

2.You can also adjust the sounds, vibrations, and Do Not Disturb (DND) mode.

3.Additionally, you can restart the watch, restore factory settings, and view device information.

4. Reminder Message
The watch supports various reminder modes, including message reminders, incoming call alerts, drinking reminders, exercise goal notifications, and exercise heart rate warning alerts, among others.

1. 底盤
您可以通過手錶和 Momax Wear 應用程式的底盤設置手動切換表盤。該應用程式還允許您自定義表盤外觀。其他表盤可從 "表盤市場 "下載。

2. 應用程式列表
在顯示表盤界面時，按下物理按鈕可訪問應用程式列表。應用程式按以下順序列出（自上而下）：活動、電話、AI 語音、運動、運動記錄、心率、血氧、壓力、睡眠、呼吸、天氣、循環追蹤、音樂、相機、尋找手機、鬧鐘、秒錶、計時器、世界時鐘和設定。

2.1 活動
手錶可收集並顯示各類活動數據，包括：
- 每日運動/活動/步行數據和目標
- 每小時運動/活動/步行數據的直方圖
- 當天的步數和距離
- 最近一次運動的恢復時間和最大攝氧量
- 每日目標設定

2.2 通話功能
1.您可以通過應用程式將最多 10 位常用聯絡人添加到手錶中，並直接從手錶撥打這些聯絡人。

2.在手錶上可以訪問最近的通話記錄，並撥打顯示的號碼。

3.可以通過手錶的揚聲器進行通話。

2.3 AI 語音
通過在手錶上輸入語音指令並和您手機內建的語音助手，如 Siri 和 Google Assistant。

2.4 運動
a) 手錶預設支持最多 12 種運動類型：
- 戶外跑、室內跑、戶外步行、室內步行、遠足、戶外騎車、室內騎車、板球、游泳池泳、開放水域游泳、划船、橢圓機。您可以在 Momax Wear 應用程式中添加或刪除運動類型，或更改它們的顯示順序，最多有 100 種運動類型可供選擇。

b)手錶支持智能運動識別，可以自動識別用戶是跑步還是步行，並支持自動暫停運動或在運動結束時發出提醒。此功能可在應用程式中啟用或關閉。

c)手錶的運動結果包含各類運動數據，您可以在 Momax Wear 應用程式中查看。

d) 您可以在手錶上查看最近的運動記錄，包括詳細的運動數據，也可以在應用程式中查看運動記錄。

2.5 運動記錄
隨時記錄每次運動的數據，並查看運動記錄。

2.6 心率
1.您可以使用手錶手動測量心率。您可以在應用程式的設定中啟用或禁用全天候監測心率，或者查看您的心率數據。

2.測量心率時，請保持手臂和手腕靜止，耐心等候測量完成。

2.7 血氧
1.您可以使用手錶手動測量血氧水平。此外，該設備還支持全天候自動血氧監測。在應用程式的設定中，您可以啟用或禁用此功能，或者查看您的血氧數據。

2.測量血氧時，請保持手臂和手腕靜止，耐心等候測量完成。

2.8 壓力
1.您可以使用手錶手動測量壓力。該款手錶還支持全天候自動壓力監測。在應用程式的設定中，您可以啟用或禁用此功能，或查看您的壓力數據。

2.測量壓力時，請保持手臂和手腕靜止，耐心等候測量完成。

2.9 睡眠
查看最近一次睡眠記錄和每個睡眠階段的狀態。

2.10 呼吸
1.打開應用程式呼吸功能，選擇所需的持續時間。

2.點擊開始，然後根據震動頻率和動畫指示調整您的呼吸，這將幫助您放鬆。

2.11 週期追蹤
在打開應用程式的女性健康功能後，手錶將顯示預測經期的提示。您可以設置期間長度、提醒時間及其他偏好，手錶將定期提供提醒。

2.12 天氣
支援七天的天氣查看，您可以查看今天的當前天氣，以及今天和接下來六天的最高和最低氣溫。

2.13 音樂
1.當手錶連接到應用程式時，您可以控制手機音樂播放器，並使用諸如「下一首」、「上一首」、「播放/暫停」以及「音量增減」等功能。

2.此功能可以在應用程式設置中顯示或隱藏。

2.14 相機
當手錶連接到應用程式時，您可以手動啟動手機的相機來拍攝照片。

2.15 尋找手機
1.當手錶連接到應用程式時，您可以使您的手機響鈴。

2.點擊圖標以停止響鈴。

3.此功能可以在應用程式設置中顯示或隱藏。

2.16 計時器
您可以將手錶用作計時器，計時器具有「圈速」功能。

2.17 定時器
您可以在手錶上設置一個具有預設持續時間的定時器。當定時器到期時，它會通知您。您也可以自訂定時器的持續時間。

2.18 鬧鐘
1.手錶允許您添加、刪除以及開啟或關閉鬧鐘。您還可以通過應用程式設置鬧鐘並為每個鬧鐘分配標籤以便識別。

2.在應用程式中，您可以設置鬧鐘的延遲時間和延遲次數限制。

2.19 世界時鐘
用戶可以在應用程式中設定多個時間顯示，以顯示世界各個的時間，每個圖案都有各自的時區。第一個選擇將顯示在手錶上。

3. 設定
1.您可以自訂手錶顯示。

2.您也可以調整音效、震動和請勿打擾（DND）模式。

3.此外，您可以重啟手錶，恢復出廠設定，並查看設備資訊。

4. 提醒訊息
1.當手錶連接到應用程式時，您可以使您的手機響鈴。

2.點擊圖標以停止響鈴。

3.此功能可以在應用程式設置中顯示或隱藏。

SPECIFICATION/ 產品規格

MODEL: SW2S

Input	: DC 5V =0.5A
Display	: 1.38 " Touch Screen
Battery capacity	: 3.8V , 300mAh Li-Po Battery
Operation Time	: Up to 5-7days per single charge
Charging time	: ~2.5Hours
Connectivity	: Wireless
Wireless range	: 10M
Sensor	: PPG Sensor,3D Accelerometer
Waterproof	: IP68
Switch	: Rotational Crown Button
Charing Port	: Magnetic Charging Port
Dimension: Watch (w/o Strap)	: 52*49*13mm
Watch (with Strap)	: 260*49*13.5mm
Weight	: 59g
Material	: Glass/Zinc-Alloy/Plastic/ Silicone
Compatibility	: iOS/ Android

Contains:
1.Wear Smart Watch
USB A to Pogo Magnetic Charging Cable
Instruction manual and warranty card

型號: SW2S

輸入	: 直流5V =0.5A
螢幕	: 直徑 1.38 " 觸控螢幕
電池容量	: 3.8V，300mAh 鋰電池
工作時間	: 每次充電最多 5-7 天
充電時間	: ~2.5小時
連接方式	: 無線
無線範圍	: 10M
傳感器	: PPG傳感器,3D加速度計
防水等級	: IP68
開關	: 旋轉錶冠按鈕
充電接口	: 磁吸充電口
尺寸：手錶（不含錶帶）	: 52*49*13毫米
手錶（含錶帶）	: 260*49*13.5毫米
重量	: 59克
材質	: 玻璃/鋅合金/塑膠/矽膠
兼容性	: iOS/安卓

包裝內容：
1.Wear 智能手錶
USB A 轉 Pogo 磁性充電線
使用說明書及保固卡

IMPORTANT SAFETY AND PRODUCT INFORMATION
重要安全和產品訊息

⚠ WARNING
- Failure to heed the following warnings could result in an accident or medical event resulting in death or serious injury.
- **Skin Irritation**
Some users may experience skin irritation after prolonged use of the watch, especially if the user has sensitive skin or allergies. If you notice any skin irritation, please remove the watch and give your skin time to heal. To help prevent skin irritation, ensure the watch is clean and dry, and do not overtighten the watch on your wrist.

Battery Warnings
- A lithium-Po battery is used in this device. If these guidelines are not followed, batteries may experience a shortened life span or may present a risk of damage to the device, fire, chemical burn, electrolyte leak, and/or injury.
- KEEP BATTERIES AWAY FROM CHILDREN. Never put batteries in the mouth or in any part of the body. Severe or fatal injuries can occur within 2 hours. Seek medical attention immediately.
- Do not force discharge, recharge, disassemble, heat above the temperature over 50C, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Do not modify, remanufacture, puncture, or damage the device or battery.
- Do not remove or attempt to remove the non-user-replaceable battery.

Battery Warnings
- To avoid possible device damage, do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle.
- Do not operate or store the device for an extended time period outside of the applicable temperature range.
- Do not use a power cable, data cable, and/or power adapter that is not supplied by Momax or is not properly certified.

Health Warnings
- If you have a pacemaker or other internal electronic device, consult your physician before using a heart rate monitor.
- The optical wrist heart rate monitor and pulse oximeter emit lights and flash occasionally. Consult your physician if you have epilepsy or are sensitive to bright or flashing lights.
- Always consult your physician before beginning or modifying any exercise program.
- The device, accessories, heart rate monitor, pulse oximeter, and related data are intended to be used only for recreational purposes, not medical purposes, and are not intended to diagnose, monitor, treat, cure, or prevent any disease or condition.
- The heart rate and blood oxygen saturation readings are for reference only, and no responsibility is accepted for the consequences of any erroneous readings.
- While the optical wrist heart rate monitor and pulse oximeter technologies typically provide accurate estimates of a user's heart rate and blood oxygen saturation respectively, there are inherent limitations with the technologies that may cause some of the readings to be inaccurate. Under certain circumstances, including the user's physical characteristics, device fit and position, and type and intensity of activity.
- Activity tracking may not accurately track your movement and other metrics. The data provided by these devices is for reference purposes only, and the independent verification of your activity and metrics tracked, but may not be completely accurate.

⚠ 警告
- 未遵守以下警告可能會導致事故或醫療事件，從而造成死亡或嚴重傷害。
- **皮膚刺激**
某些使用者在長時間佩戴手錶後可能會出現皮膚刺激，尤其是對於敏感皮膚或有過敏反應的使用者。如果您注意到任何皮膚刺激，請立即取下手錶，並給皮膚一些時間恢復。為了幫助預防皮膚刺激，請確保手錶保持清潔和乾燥，並且不要將手錶戴得過緊。

電池警告
- 本設備使用鋰聚合物電池。
- 如果不遵循這些指導方針，電池可能會縮短使用壽命，或可能會對設備造成損壞的風險，包括火災、化學燒傷、電解質洩漏和/或受傷。
- 請將電池和配件保持在兒童無法觸碰的地方。請勿將電池插入口中或身體的任何部位。嚴重或致命的傷害在 2 小時內可發生。請即尋求醫療幫助。
- 請勿強行放電、充電、拆解、加熱溫度超過50°C或焚燒。一經記錄，可能會引起傷害，洩漏或爆炸性排放或導致化學燒傷。
- 請勿改裝、重新製造、刺穿或損壞設備或電池。
- 請勿移除或試圖移除不可用戶自行更換的電池。

設備警告
- 為避免可能的設備損壞，請勿將設備置露在熱源可位置或高溫環境中，例如在無人看管的車輛中的陽光下。
- 請勿在超出適當範圍之外長時間操作或存放設備。
- 請勿使用 Momax 未提供或未經適當認證的電源線或轉換器和/或電源適配器。

健康警告
- 如果您有心臟起搏器或其他內部電子設備，請在使用心率監測器之前諮詢您的醫生。
- 光學腕式心率監測器和脈搏血氧計會發出光線並偶爾閃爍。如果您患有癲癇症或對強光或閃爍光線敏感，請諮詢您的醫生。
- 在開始任何運動計劃之前，始終諮詢您的醫生。
- 設備、配件、心率監測器、脈搏血氧計和相關數據僅供娛樂用途，而非醫療用途，並不用於診斷、監測、治療、治癒或預防任何疾病或病症。
- 心率和血氧飽和度讀數僅供參考，對於任何錯誤讀數所產生的後果不承擔任何責任。

警告光學腕式心率監測器和脈搏血氧計技術通常能提供用戶心率和血氧飽和度的準確估算，但這些技術有其固有的局限性，可能導致某些情況下的讀數不準確。包括用戶的身體特徵、設備的合適性和位置，以及活動的類型和強度。

- 活動追蹤器無法準確追踪您的運動和其他指標。這些設備提供的數據旨在供參考，並且不對您活動和追踪的指標的獨立驗證負責，但可能不完全準確。

WARRANTY CONDITIONS

1. For any defects in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company.

2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;

3. This warranty card shall not apply to the product if:
(a) It has explicitly modified or repaired in any way by persons other than technicians of this company, or;
(b) It has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
(c) losses or damages are caused by force majeure or natural disasters.

4. No alteration to this warranty card will be allowed;

5. The warranty terms and conditions are subject to change without prior notice;

6. Please retain your proof of purchase for warranty service;

7. Please consult the dealer about the product compatibility with your cell phone / PDA before purchase. Product specifications are subject to change without prior notice.

8. Please visit www.momax.net for more updated information.

保養條款
1. 自購買日期起12個月內，如產品有瑕疵或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務。
2. 維修時必須出示本保修證及購買發票之發票正本，如果用戶不能提供，本公司有權不提供維修服務，用戶得需要支付相關維修費用。
3. 保用期內，出現以下情況產品保用證自動失效：
(a) 非本公司人員擅意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物浸入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞。
4. 此保用證卻建改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致非理想結或其他電子產品有任何損害，本公司不會承擔任何責任。
7. 有關 MOMAX 原廠產品和您的手機或電子產品的相容性，請在購買時向供銷商咨詢。此產品規格如有變更，恕不另行通告。
8. 請瀏覽 www.momax.net 取得最新資訊及詳細。

momax

WARRANTY/ 保用證/保用証

Model/型號/型号:

Date of Purchase/購買日期/购买日期:

Remarks/備註/备注:

Customer Service/客戶服務中心/客户服务中心

Hong Kong and Macau:
Unit A, 4/F., Cheung Lung Ind. Bldg.,
Lai Chi Kok, Kowloon, Hong Kong/10 Cheung Yee Street,
Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:
香港九龍荔枝角長義街10號長隆大廈4樓A室
服務熱線: 852-2402 3186 Mail: info@momax.net

中國內地:
廣東省深圳市福田保税区市花路6号
广东省深圳市龙岗区坂田街道岗头社区雪岗路2016号威宇隆电子厂房2楼西面
Unit A, 4/F., Cheung Lung Ind. Bldg.,
电邮: info@momax.net

Copyright© 2025 MOMAX Technology Ltd. All rights reserved. MOMAX is a registered trademark of MOMAX Technology Ltd. All other trademarks are the property of their respective owners. 版權所有©2025 MOMAX Technology Ltd。保留所有權利。MOMAX是MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自所有者的財產。
版权所有©2025 MOMAX Technology Ltd。保留所有权利。MOMAX是MOMAX Technology Ltd 的注册商标。所有其他商标均为其各自所有者的财产。

有毒有害物質或元素表明						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电池	X	O	O	O	O	O
线材	X	O	O	O	O	O

O：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006 规定的限量要求以下。
X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006 规定的限量要求。

注：本产品型号"xx"为依据版本、销售区域等对应各项参数的动态或者静态描述。

FC CE

FCC Requirement
Any changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.