ACRUX

MAN PORTABLE LIGHTS
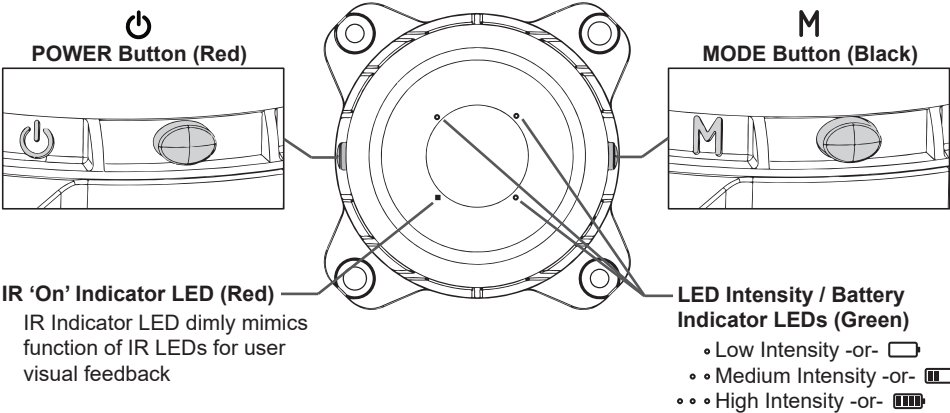

X-100-0004-01

HYPER H SPEAR™

OPERATION

⏻
POWER Button (Red)

M
MODE Button (Black)

IR 'On' Indicator LED (Red)
   IR Indicator LED dimly mimics function of IR LEDs for user visual feedback

LED Intensity / Battery Indicator LEDs (Green)
   • Low Intensity -or- ▭
   • • Medium Intensity -or- ▣
   • • • High Intensity -or- ▦

-FUNCTION-	⏻	M	⏻ + M
ON / OFF	Press and hold (> 2 sec)		
Steady / Flash	Two (2) Presses		
Battery Status	Press (while light is off)		
Intensity		Press	
Color, IR		Press and hold	
Remote Standby			Press and hold (> 2 sec)

WHITE
IR   GREEN
YELLOW   RED
BLUE
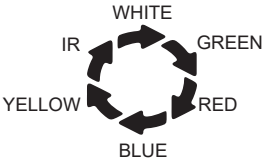
**NOTE:** Light will turn on to last used configuration

---

LIGHT SETUP

① Press and hold the '⏻' button to turn ON the light.

② Press and hold the 'M' button to cycle through the colors. Release the button when the desired color has been reached. If desired color is missed, repeat this step. *Note: IR LED is not visible to the human eye. A small RED indicating LED will glow to denote the IR has been reached.*

③ Double press the '⏻' button to chose between Steady or Flashing mode.

④ Single press the 'M' button to cycle between light intensity from Low, Medium or High.

⑤ Turn OFF light: Press and hold the '⏻' button. Next time the light is turned ON it will be on the last set configuration. Repeat Step 1 through 4 to change configuration as desired.

To place light into Remote Mode: Press and hold the '⏻' and 'M' button. Light will turn OFF, a green indicator LED will flash every 10 seconds. Light will turn ON with the remote to the set configuration.
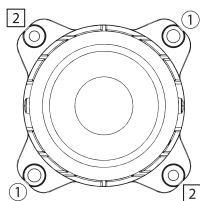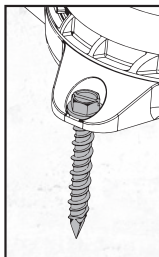
BATTERY REPLACEMENT
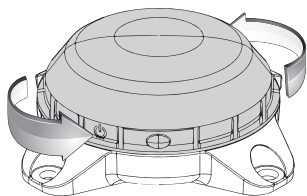
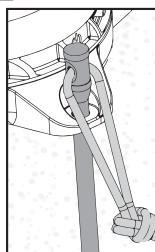**3x AA Batteries (1.5V)**
Alkaline
Lithium
Rechargeable
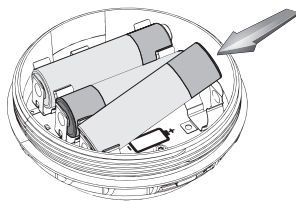
MOUNTING OPTIONS

① 1/4" CONCRETE ANCHOR

② 3/16" TENT STAKES

WARNINGS

⚠ WARNING - To reduce the risk of fire:
-Do not expose to flames.

⚠ WARNING - Battery Safety
-Do NOT attempt to recharge non-rechargeable batteries.
-Do NOT mix and match battery types.
-Handle batteries cautiously to not damage the battery casing or connections.

CARE AND MAINTENANCE

-O-ring will wear out and dry over time. Recommend replacement every 12 months under normal operational condition, or at signs of wear. Replacement kit: [P/N: X-300-0003-01]
-Keep AcruX products away from corrosive substances/solvents.

REMOTE CONTROL (OPTIONAL)

Select Light based on Color*

Select All Lights

Steady Mode

Remote ON / OFF**

Lights ON / OFF***

Flash Mode

Light Intensity

HYPER SPEAR

R   W
B   Y
G   IR

SELECT ALL   LIGHT PWR

STDY   FLASH

INT   ● ● ●
        L M H
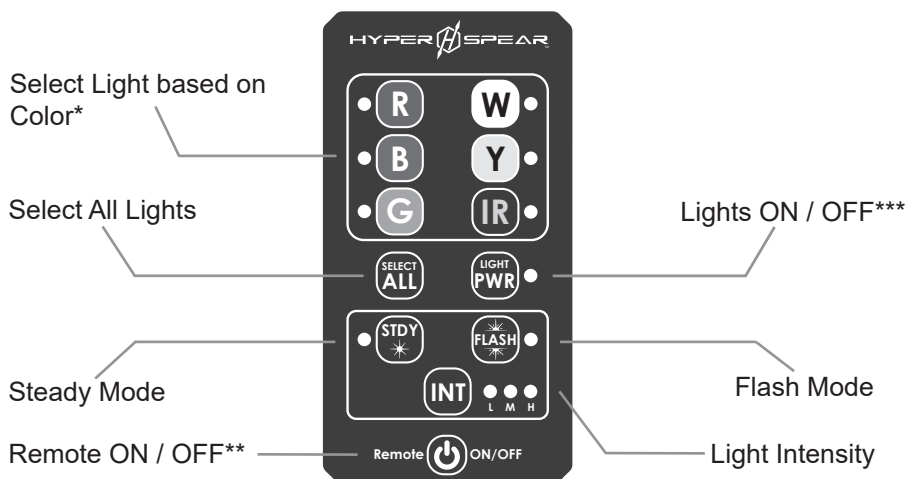
Remote ⏻ ON/OFF

OPERATION

Normal Opertation
① Turn remote ON by pressing 'Remote ON/OFF' button. Remote will flash two (2) times.

② Select the color/group of light(s) desired by pressing the corresponding color button, or the 'Select All' button. Any subsequent operation will only be received by the selected color(s).

③ Select desired function:
-LIGHT PWR: Turn light(s) ON or OFF
-STDY: Enables light(s) to steady ON mode
-FLASH: Enables light(s) to flashing mode
-INT: Changes light(s) intensity from Low, Medium, or High

Entering Covert mode
① Press and select desired light(s) or 'Select All' button.

② Press and hold 'IR" button for 5 seconds. (IR indicating LED on the remote will flash two (2) times and then remain ON).

③ If Required Press 'LIGHT PWR' button to turn lights ON.

① **Exiting Covert mode**
Press and hold 'ON/OFF' button. (Lights will revert to their last known visible configuration)

① **Leave behind mode**
Press and hold 'Steady' + 'Flash' buttons. (Indicator LEDs will flash until lights are 'bricked'. Release buttons within two (2) seconds to abort)

*Changing color of the light can only be done on the light itself.
**Remote will automatically turn OFF after 60 seconds of inactivity.
***'LIGHT POWER-OFF' leaves lights in Remote Standby mode, without emitting Visible or IR.

SPECIFICATIONS

BATTERY SOURCE: Two (2) AA (1.5V) alkaline, lithium or rechargeable. Do not mix and match.

22
PAP