WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE

HY-IMPACT
Instruction Manual

Read instruction manual carefully before first use.
Retain the instruction manual for future reference.

Package Includes:
BOOM BUDDY Karaoke Machine x 1 | Type-C Charging Cable x 1
Wireless Microphones x 2 | Instruction Manual x 1

Product Description

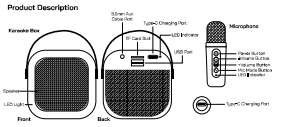



Operating Instructions for Speaker:

- Press & Hold power button for five seconds to turn on the Speaker.
- Turn on Bluetooth on your source device (such as smart phone etc).
- Select <Mic> from the available list of possible devices.
- When the Speaker is powered on, the LED lights will begin flashing.
- To turn OFF the speaker, Press & Hold the Power Button for five seconds.
- Press Light Button [L] to change between different lighting modes. Press & Hold light button to turn off the lights.
- Press volume button [-] to reduce volume and press and hold the button to skip backward.
- Press volume button [+] to increase volume and press and hold the button to skip forward.
- Press M button [M] to switch between Bluetooth/ TF Card / USB / Aux. When TF Card or USB is inserted, it will automatically switch to the respective mode.
- Press Power/Play Button [▶] to Pause and Play when already connected to your phone.

Charging Instructions for Speaker:

- Connect the Type-C end of the cable to the Type-C Charging port located at the back of the speaker. And the USB end of the cable to a suitable power source.
- While charging, the LED indicator at the back of speaker will blink red. When fully charged, the red light will turn off.

Operating Instructions for Microphone (Mic):

- Press & Hold the Power Button [⏻] on the Mic to start it while the LED indicator is blinked blue. It will automatically pair with speaker and connect when the LED indicator is turn blue.
- Use [+] or [-] buttons [🔊] to increase or decrease the volume.
- Short Press Mic Button [🎤] for Echo effect. Long Press Mic button to switch between different funny voice modes (Mic).

Troubleshooting

Problem	Solution
No sound	Check if the speaker is turned on and the volume is not muted.
Bluetooth not connecting	Ensure Bluetooth is enabled on your device and the speaker is in pairing mode.
Microphone not working	Check if the microphone is muted or the battery is low. Charge the microphone.
Distorted sound	Reduce the volume on both the speaker and your device.
Short playtime	Fully charge the speaker before first use. Avoid overcharging.
Speaker not charging	Check the charging cable and port for damage. Try a different power source.

Cautions

1. Do not place the speaker near water or in high humidity areas.
2. Do not expose the speaker to extreme temperatures.
3. Do not disassemble or modify the speaker.
4. Do not overcharge the battery.
5. Do not use the speaker at maximum volume for extended periods.
6. Do not use harsh chemicals to clean the speaker.

Product Information

- Bluetooth version: 5.0
- Speaker output: 5W x 2
- Battery capacity: 2000mAh
- Charging port: Type-C
- Battery: 3.7V Li-ion battery

Charging Instructions for Mic

- Connect the Type-C end of the cable to the Type-C Charging port located at the back of the Mic. And the USB end of the cable to a suitable power source.
- While charging, the LED indicator at the back of Mic will blink red. When fully charged, the red light will turn off.

Troubleshooting

Problem	Solution
No sound	Check if the Mic is turned on and the volume is not muted.
Bluetooth not connecting	Ensure Bluetooth is enabled on your device and the Mic is in pairing mode.
Microphone not working	Check if the microphone is muted or the battery is low. Charge the microphone.
Distorted sound	Reduce the volume on both the Mic and your device.
Short playtime	Fully charge the Mic before first use. Avoid overcharging.
Mic not charging	Check the charging cable and port for damage. Try a different power source.

Cautions

1. Do not place the Mic near water or in high humidity areas.
2. Do not expose the Mic to extreme temperatures.
3. Do not disassemble or modify the Mic.
4. Do not overcharge the battery.
5. Do not use the Mic at maximum volume for extended periods.
6. Do not use harsh chemicals to clean the Mic.

Product Information

- Bluetooth version: 5.0
- Mic output: 5W x 2
- Battery capacity: 2000mAh
- Charging port: Type-C
- Battery: 3.7V Li-ion battery

TY Direct LLC.
3511 Ryan Avenue,
Bartlett, 60103
60103
www.tydirect.com

WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 | Type-C Charging Cable x 1
Wireless Microphones x 2 | Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Troubleshooting
Cautions
Product Information
Charging Instructions for Mic
Troubleshooting
Cautions
Product Information
TY Direct LLC.
3511 Ryan Avenue,
Bartlett, 60103
60103
www.tydirect.com

WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 | Type-C Charging Cable x 1
Wireless Microphones x 2 | Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Troubleshooting
Cautions
Product Information
Charging Instructions for Mic
Troubleshooting
Cautions
Product Information
TY Direct LLC.
3511 Ryan Avenue,
Bartlett, 60103
60103
www.tydirect.com

WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 | Type-C Charging Cable x 1
Wireless Microphones x 2 | Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Troubleshooting
Cautions
Product Information
Charging Instructions for Mic
Troubleshooting
Cautions
Product Information
TY Direct LLC.
3511 Ryan Avenue,
Bartlett, 60103
60103
www.tydirect.com

WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 | Type-C Charging Cable x 1
Wireless Microphones x 2 | Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Troubleshooting
Cautions
Product Information
Charging Instructions for Mic
Troubleshooting
Cautions
Product Information
TY Direct LLC.
3511 Ryan Avenue,
Bartlett, 60103
60103
www.tydirect.com

WIRELESS HI-FI
BOOM BUDDY
KARAOKE MACHINE
HY-IMPACT
Instruction Manual
Read instruction manual carefully before first use.
Retain the instruction manual for future reference.
Package Includes:
BOOM BUDDY Karaoke Machine x 1 | Type-C Charging Cable x 1
Wireless Microphones x 2 | Instruction Manual x 1
Product Description
Operating Instructions for Speaker:
Charging Instructions for Speaker:
Operating Instructions for Microphone (Mic):
Troubleshooting
Cautions
Product Information
Charging Instructions for Mic
Troubleshooting
Cautions
Product Information
TY Direct LLC.
3511 Ryan Avenue,
Bartlett, 60103
60103
www.tydirect.com