说明书尺寸:65mm*95mm，要求：封面157g双铜，内页80g书纸，四色印刷，骑马钉装订

SoundAI

SoundAI FairyClip A1
Wireless Earphone User
Manual

Table of Contents

Instructions for Use ---- 01
Included in the package ---- 02
Product Overview ---- 03
Instructions for Use ---- 05
Product Specification ---- 10
After-sales product warranty description ---- 11
Non-warranty regulations ---- 12
Warranty card ---- 13
The names and contents of harmful substances in the product ---- 14
Maintenance and upkeep ---- 15

Instructions for Use

Please read the instruction manual carefully before using this product.

Notes: Before using and operating this product, please read and abide by the following precautions to ensure the best performance of the product and avoid dangerous or illegal situations.

① Do not use this product in dusty, high-humidity or dirty places to avoid causing internal circuit failures.
② Do not place the product near heat sources or exposed fire sources, such as electric heaters, microwave ovens, stoves, water heaters, candles or other places that may generate high temperatures.
③ Please place this product away from other Bluetooth devices, Wi-Fi devices, 2.4GHz computer peripherals, cordless phones, microwave ovens, refrigerators and other electronic devices to prevent signal interference or signal loss.
④ Please use this product within the temperature range of -20°C to 60°C.
⑤ Do not place any heavy objects on the product.
⑥ Exposure to high volumes while driving may distract attention and lead to accidents.
⑦ Please store the product and other accessories in a well-ventilated, cool place free from direct sunlight.
⑧ Please do not disassemble or modify the product and accessories without authorization. Otherwise, the product and accessories will not be covered by the warranty of our company.
⑨ Do not use strong chemical products or strong detergents to clean this product and its accessories. Please wipe this product or its accessories with a clean, dry soft cloth.
⑩ In case of thunderstorms or if the product is not to be used for a long time, please unplug all the connection wires of this product.
⑪ If the product is not used for a long time, please regularly put the headphones back in and out of the case and charge them with a charging cable to extend the battery life.
⑫ This product is strictly prohibited from consumption. Please keep it out of reach of children to prevent accidents.

Included in the package

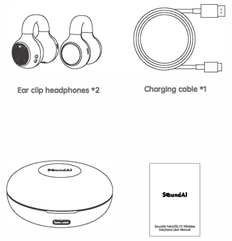

Product Overview

Headphones

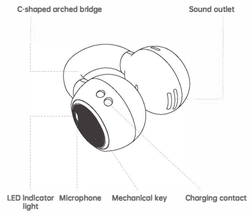

Charging case

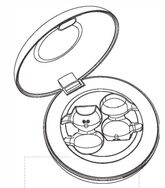

Instructions for Use

Wearing headphones

① Take the headphones out of the charging case.

② Determine the wearing position of the headphones by using the mechanical buttons (the mechanical buttons are placed behind the ears), and then gently clamp the headphones in the middle and lower part of the earlobe.

③ Adjust the wearing of the headphones and the ear bridge appropriately, with the sound outlet directly facing the ear canal to ensure comfortable and clear listening.

If there is a significant ear pinch pain when wearing it, it is recommended to slightly expand the Angle of the ear bridge to make it more comfortable to wear. In pursuit of better comfort, the material of our ear bridge does not have strong resilience. When putting the headphones back into the case, you need to hold them tightly and place them precisely. The ear bridge inside the warehouse will also automatically return to its original state.

Connect to your mobile phone's Bluetooth for use

Turn on the Bluetooth of your mobile phone, search for the Bluetooth name "SoundAI FairyClip C1" on the Bluetooth Settings page of your mobile phone, and click to connect and pair.

Volume synchronization function
For a better listening experience, if your device supports volume synchronization (such as HarmonyOS), it is recommended to enable the volume synchronization function.HarmonyOS Settings reference:Settings->Bluetooth->Headset Settings Icon->Synchronize the volume of Bluetooth devices with your phone.

Re-pair and reset

① Re-pair the headphones with each other



After pressing the two earphones five times in succession, the indicator light of the earphones will flash. Then, put the earphones into the case respectively and reopen the covers. This indicates that the two earphones have been successfully paired.

② Re-pair and reset the headphones with the mobile phone

After holding down any earphone for 10 seconds, if the indicator light flashes, it indicates a successful reset.

About charging

① Charge the headphones using the charging case.
Put the headphones into the charging case, close the case cover, and the charging will start.

Note: During the use of the headphones, if you hear a low battery prompt sound, it indicates that the battery level of the headphones is 20% or even lower. Please put them in the case for charging as soon as possible.



② Charge the charging case using a Type-C charging cable
- Charging: The LED lightring lights up in orange.
- Fully charged: The LED light ring turns on a warm yellow light and remains on for 10 seconds before going out.

Product Specification

Product Name	SoundAI FairyClipA1
Product model	SAI-SDA503A
Connection method	V5.4
Communication distance	<10 meters (open and unobstructed)
Music sustains	The battery life of the headphones is approximately 7 hours
Total battery life	30h
The battery life of the charging case	Three to four times
The time it takes for headphones to fully charge	<2h
The time required for the charging case to be fully charged	2h
Protection grade	IPX4

The specification parameters are based on the test data from the SoundAI acoustic Intelligence Laboratory

Execution standard: GB4943.1-2022

After-sales product warranty description

The after-sales service of SoundAI FairyClip C1 wireless headphones strictly adheres to the "Consumer Rights and Interests Protection Law of the People's Republic of China" and the "Product Quality Law of the People's Republic of China", implementing the "three guarantees" service for product after-sales. The service contents are as follows: During the validity period of the three guarantees, you can enjoy the rights of return, exchange and repair. In accordance with these regulations, Repair, exchange and return should be hand ed with the relevant order number or invoice.

① 7-day no-reason return (for e-commerce channels), with the logistics cost borne by the user.
② In the event of performance failure of this product, after confirmation through testing, you can enjoy the following free services.

Service type	Service Policy
Return of goods	Products within 7 days from the date of signature for receipt Free returns due to quality issues
Exchange goods	The product can be exchanged free of charge within 15 days from the date of signature for any quality issues
Maintenance	The product will be repaired free of charge within one year from the date of signature for quality or quantity issues

Non-warranty regulations

① The following circumstances (but not limited to the following circumstances) are not within the scope of the "three guarantees" service:
The content on the warranty card does not match the actual product label or has been altered.
② Unauthorized repair, private disassembly, misuse, collision with liquid intake, modification; Or quality problems of the goods caused by improper use, or tearing, defacement of product labels, anti-counterfeiting marks, machine serial numbers, etc.
③ Damage caused by failure to use, maintain or repair the product in accordance with the requirements of the product manual.
④ Damage to products and accessories caused by human factors.
⑤ Damage caused by force majeure such as floods, fires and lightning strikes.
⑥ Using non-original factory parts of Shengzhi, resulting in product failure or accidents.
⑦ Without a warranty card and valid invoice, and unable to prove that the product is within the validity period of the three guarantees.

Qualified card

QC 5 Inspector's commitment

This product has been strictly Inspected by the quality team of Shengzhi Company. Please use it with confidence

Warranty card

Warranty card

Customer Name: _____ (Sir/Madam)
Contact number: _____
Customer Address: _____
Postal Code: _____
Host model: _____
Product origin: _____
Purchase store: _____
Postal Code: _____
Store phone number: _____
Date of purchase: _____
Invoice number: _____

Seal of the selling unit

The names and contents of harmful substances in the product

Component name	Toxic and harmful substances or elements					
	Pb	Hg	Cd	Cr(VI)	PBBs	PBDEs
Plastic parts	0	0	0	0	0	0
Hardware parts	0	0	0	0	0	0
Circuit control component	X	0	0	0	0	0
Motor assembly	0	0	0	0	0	0
Battery	0	0	0	0	0	0
Power cord	0	0	0	0	0	0

This form is prepared in accordance with the provisions of SJ/T 11364.
O: Indicates that the content of this harmful substance in all homogeneous materials of this component is within
The limit requirements stipulated in GB/T 26572 areas follows.
X: Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements stipulated in GB/T 26572.

Maintenance and upkeep

This product is a high-precision device. Appropriate maintenance and care can better ensure its performance.

① If the headphones are exposed to substances that can easily damage them, such as dust, sweat, ink, oil, pollen or chemicals (such as soap, hand sanitizer, shampoo, body wash, laundry detergent, cleaning agents, cosmetics, UV protection products, antibacterial sprays, high-concentration alcohol, insecticides, mosquito repellents, etc.), please wipe them clean with a cloth dipped in a small amount of water. Gently wipe with a dry, lint-free soft cloth and then air dry thoroughly.
② Do not use any chemical substances or organic solvents (such as soapy water, hand sanitizer or other acidic or alkaline solvents) to clean the headphones to avoid residual substances irritating the skin.
③ Please wipe the product regularly with a soft, lint-free cloth. Do not use paper towels or cloths containing wood fibers, and do not use dirty or abrasive cloths.
④ When you put the headphones back into the charging case for charging after using them, please make sure that the body of the headphones is dry and clean.
⑤ If you encounter a problem where your headphones do not charge, please check whether the charging case and the charging contact points of the headphones are dirty. If they are, please wipe them clean with a cloth or cotton swab dipped in a small amount of water and let them dry thoroughly before trying again.

FCC Warning Statement:
This equipment has been tested and found to comply with the limits for a Class B digital devicen pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generatesn uses and can radiate radio frequency energy andn if not installed and used in accordance with the instructionsn may cause harmful interference to radio communications. Howevern there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receptionn which can be determined by turning the equipment off and onn the user is encouraged to try to correct the interference by one or more of the following measures:

" Reorient or relocate the receiving antenna.
" Increase the separation between the equipment and receiver.
" Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
" Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interferencen and (2) this device must accept any interference receivedn including interference that may cause undesired operation.
The device has been evaluated to meet general RF exposure requirement.

Download the Shengzhi APP
Experience more AIGC functions for free

XINYIN 深圳新音科技有限公司	项目	J3说明书(拂晓白-雪樱粉)	工艺	157g双铜+80g书纸
	日期	2025.07.02	颜色	四色印刷