Web browsing

Select "Browser" on the Home or Apps screen (You must connect to WiFi before accessing the web).

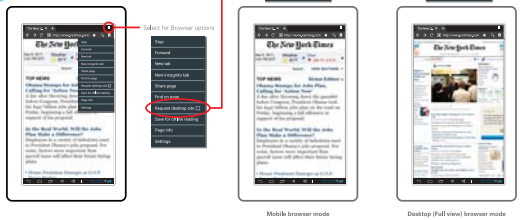

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to WiFi before accessing or setting up email accounts).

Email Setup screen

Click to access Email settings

INBOX screen

Photo gallery

Access pictures and videos stored on the tablet.

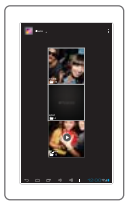

Viewing pictures:
Pinch to enlarge and swipe to go to previous or next pictures.



Share pictures to Email, Facebook or Twitter:
To utilize this feature you must have a Facebook or Twitter account and be logged in. for Email, an account must be set up for this option to appear.

Share: Share the selected picture through Email, Facebook, or Twitter
Trash: Delete the selected picture
Menu: Slideshow, edit and more

Watching videos:
While playing a video, tap the display to access the video controller, tap the display again to hide the controller.

Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.

Conserve Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Micro SD card

Tips: Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the tablet - this will conserve the internal memory, and allow you to download more apps.

Inserting Micro SD card
The tablet supports Micro SD cards (up to 32GB, not included).

To install a Micro SD card into the tablet:

1. Insert the card face up as shown with the metal contacts facing the back of the tablet into the card slot until it clicks and locks into place.

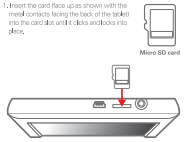

2. Once the card is mounted, the card icon appears on the Status bar.

3. To access the Micro SD card, select "File Manager" from the Apps screen.

File Manager

Unmount & remove the Micro SD card:

1. Open "Settings".
2. Select "Storage".
3. Select "Unmount Micro SD card".
4. It is now safe to remove the card from the tablet.
5. To remove the card, gently push it in until it pops out.

A card can only be inserted one way; do not use force when inserting the card.
Make sure to unmount the card before taking it out of the tablet.

Connecting the tablet to a PC or Mac:
1. Connect the included USB cable to the "USB port" of the tablet and USB port of the computer.

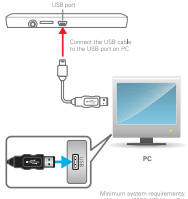

Minimum system requirements:
- Windows: 2000, XP, Vista, 7
- Mac OS X: 10.2 or later (with USB connection)

2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

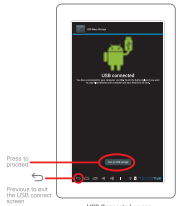

Note: While connected to the computer, you can also access the "USB connected" screen from the Status bar as shown below:

3. The "Autoplay" windows appear on your computer's display
- select "Open folder to view Files" to manage files on the tablet "INTERNAL" and Micro SD card "Removable Disk" (if inserted).

Browsing files

4. Copy media files from your computer to the Micro SD card.

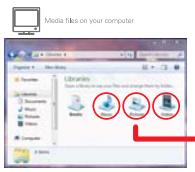

Tips: Organize your media (pictures, videos and music) by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below:

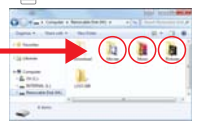

Conserve Internal Memory!
Transfer media files to "Removable Disk" (Micro SD card)

5. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

File Manager:
To view, open, copy or delete files on the internal memory of the tablet, inserted Micro SD card or USB stick, select "File Manager" on the Apps screen.

Briefly press a file or folder to open it.

Copy, move or delete a file or folder:
1. press and hold a file or folder until the options window appears, then select an option from the options window.

2. Select a file or folder.

3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Multimedia

Use the tablet to store and play music, pictures and video files.

Music
Access music files stored on the tablet.

Settings

Settings app:
Customize and select options to increase battery performance, Wi-Fi options, manage apps and more.

Settings screen

Online help

Select "Online Help" on the Apps screen to access:
- New apps and updates for current apps
- Firmware updates
- Technical support
- Product registration

Online Help screen

Resetting

In the event that the tablet freezes or does not function properly, try connecting the problem by pressing the RESET button located on the back panel (shown below).

Use a paper clip or the tip of a stylus to press the RESET button. Data stored on the tablet will not be affected by using the RESET button.

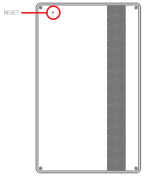

Back of the tablet

Restore

Note: If the problem persists it may be necessary to restore the tablet to the factory default settings:

1) Select "Settings" from the Apps screen.
2) Select "Reset to factory default settings".
3) Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).

Legal information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Limited Warranty

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty").
In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
Attention: Customer Service (2nd Floor)
14-42 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT, EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-764-8481 (Toll Free)
✉ polaroidtabletsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)

BACK