Android HDMI Stick

Model: 020000

Quick Start

Index

Prepare

Connect to TV

1. Connect the HDMI STICK to TV through HDMI interface; Or use the HDMI cable connect the HDMI STICK and TV
2. Power on the TV, use the TV remote controller to switch the 'Video source' to HDMI. (Please refer to TV's user manual for reference)

Connect USB mouse

1. The USB mouse to control the HDMI STICK, it is the same way with use it on PC. It can use an ordinary mouse, or 2.4G wireless mouse.

   The mouse's left button's function is 'Enter/Confirm', right button's function is 'Back/ESC '

Note:

Please notice, use a mouse to run an application or control the menu, it needs 'Single Click', not 'Double Click'

Power on

Connect power

1. Supply the power to 'power adaptor', which is an accessory.

2. Connect the USB cable to 'power adaptor' and HDMI STICK.
3. After the above 2 steps, HDMI STICK powers on, the LED indicator will be On
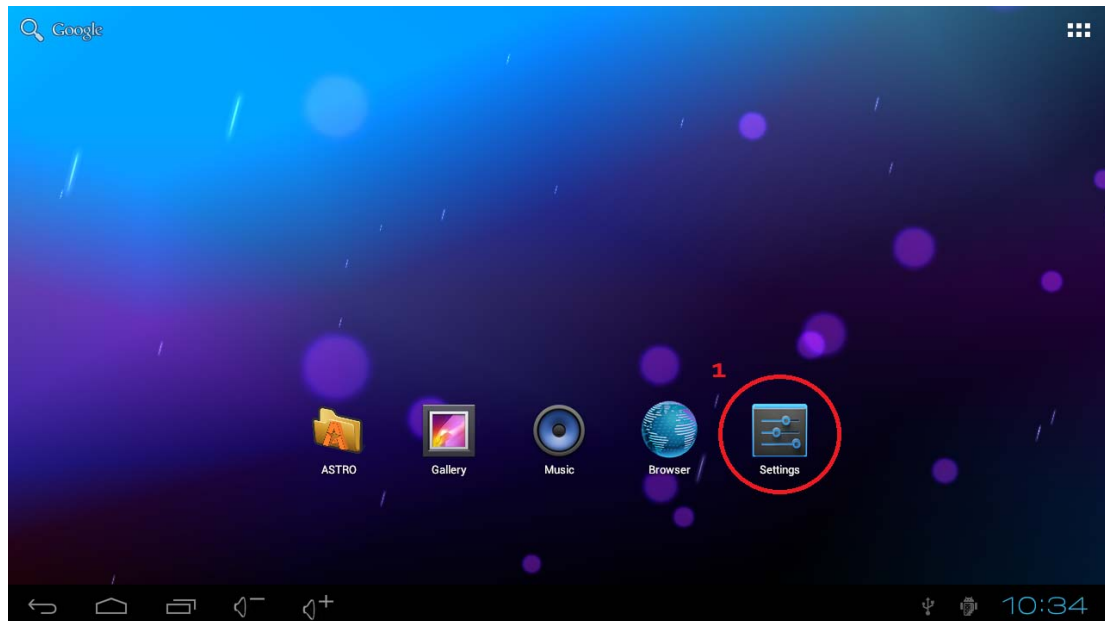4. Wait for the power on complete, the TV will display the below screen.
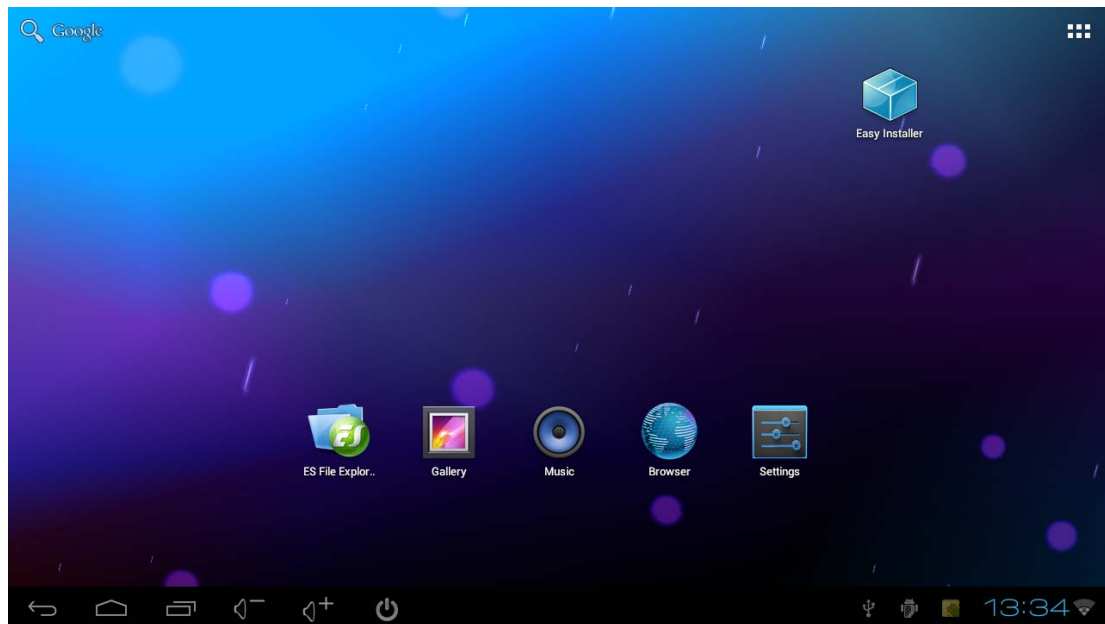
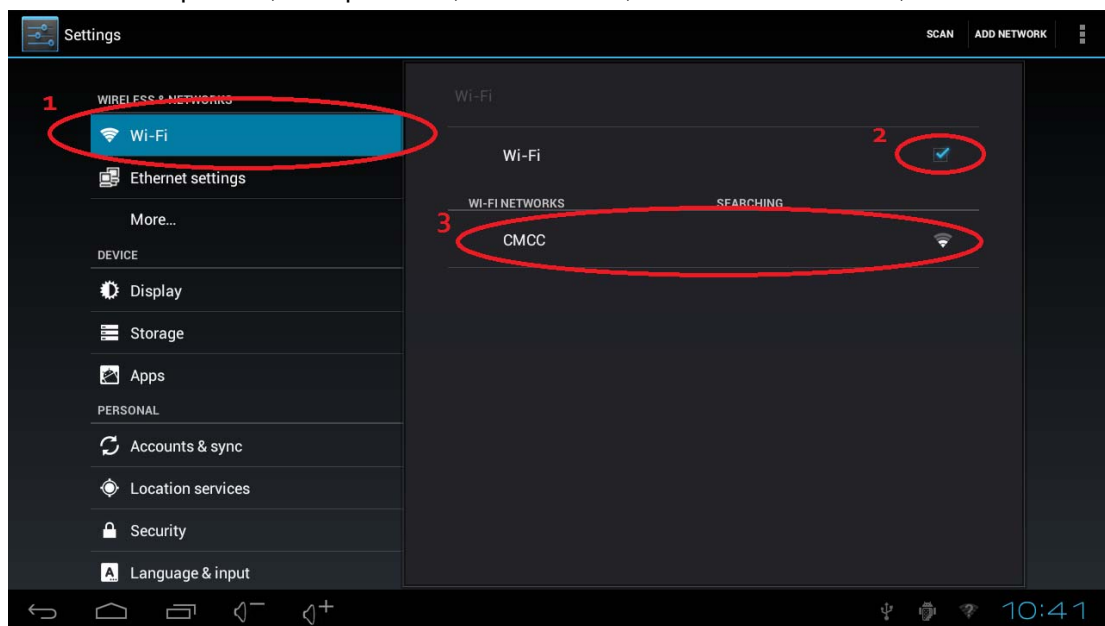If cannot power on normally, please refer to FAQ

Use it

Connect to the network.

HDMI STICK builds in Wi-Fi, it needs to setup the Wi-Fi network to let it work with a new Wi-Fi AP.

1. User the mouse, click the 'Setup'

2. In the setup menu, 'Setup->Wi-Fi', Check 'Wi-Fi', Select Wi-Fi AP name,

3. Input the password (if needs) , click 'Connect', wait for the Wi-Fi connection establish, when it has been done, a Wi-Fi icon appears in the bottom right corner of the screen.
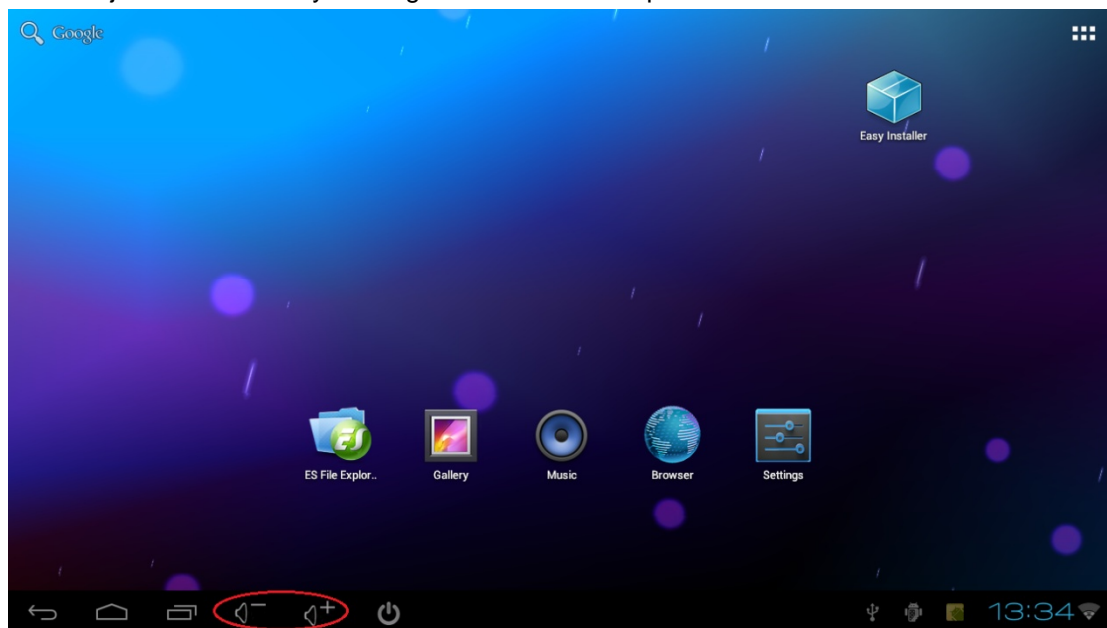
Adjust the display resolution

If the TV display abnormal, please try to adjust the resolution, run 'Setup', enter the menu 'Display->Resolution', check 'Auto Detect'; and 'Display->Change Display Resize' to adjust.
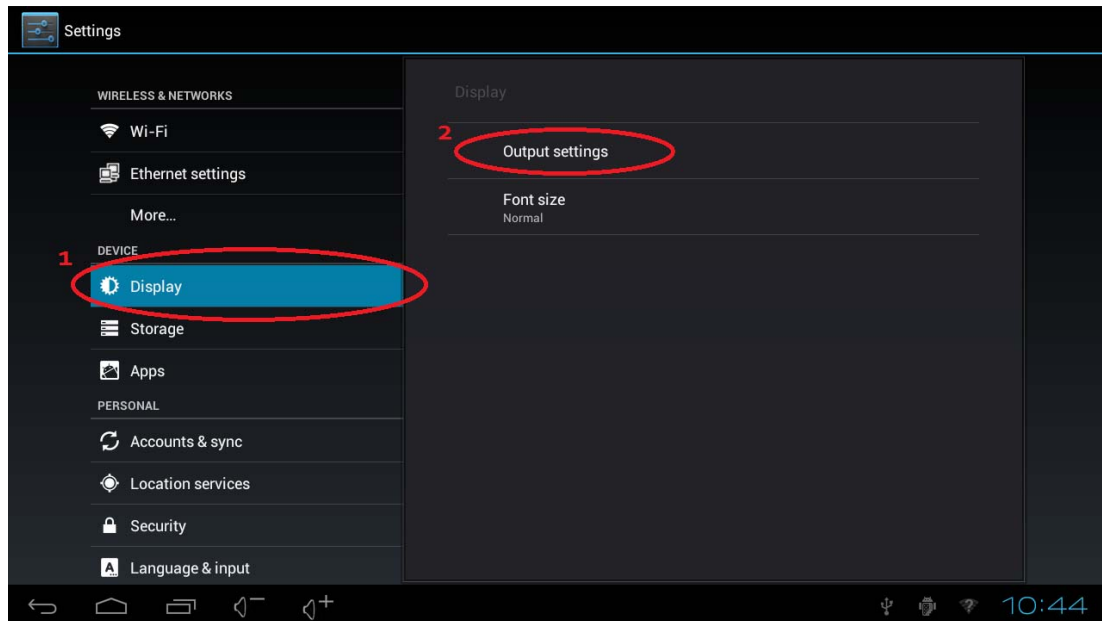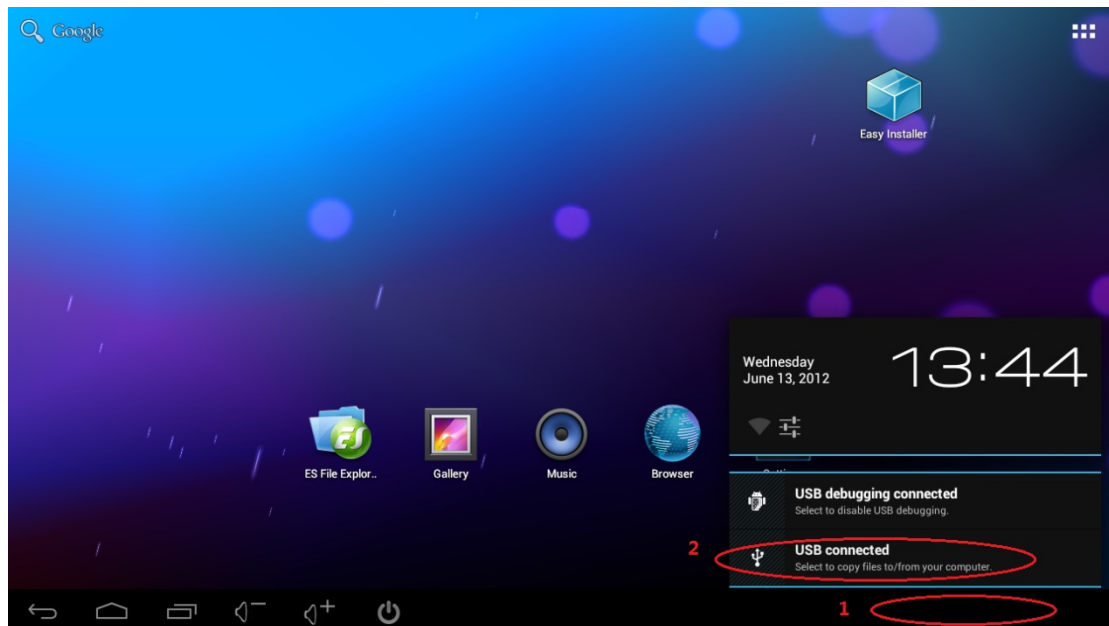
Adjust the volume

It can adjust the volume by clicking the icons in below picture.

Copy files（from/to PC）

1. Connect the HDMI STICK with PC by USB cable. If the HDMI STICK connect the TV at the same TV, please wait for the below screen appear.
2. Use the mouse; click red cycle 1, then red cycle 2.

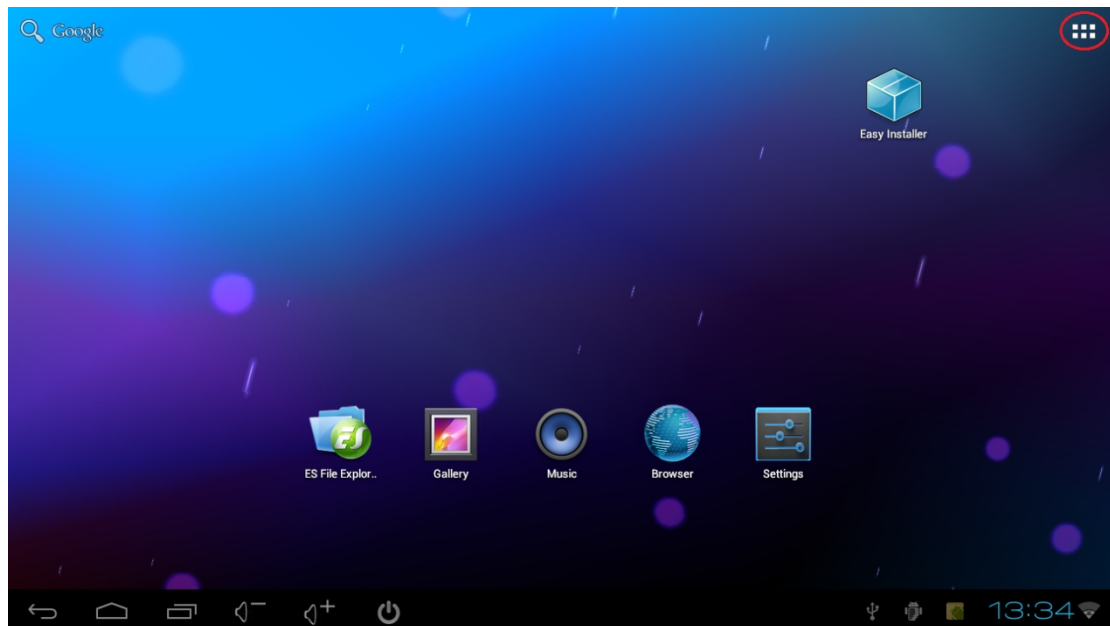3. Click the button in the red cycle (in below picture)
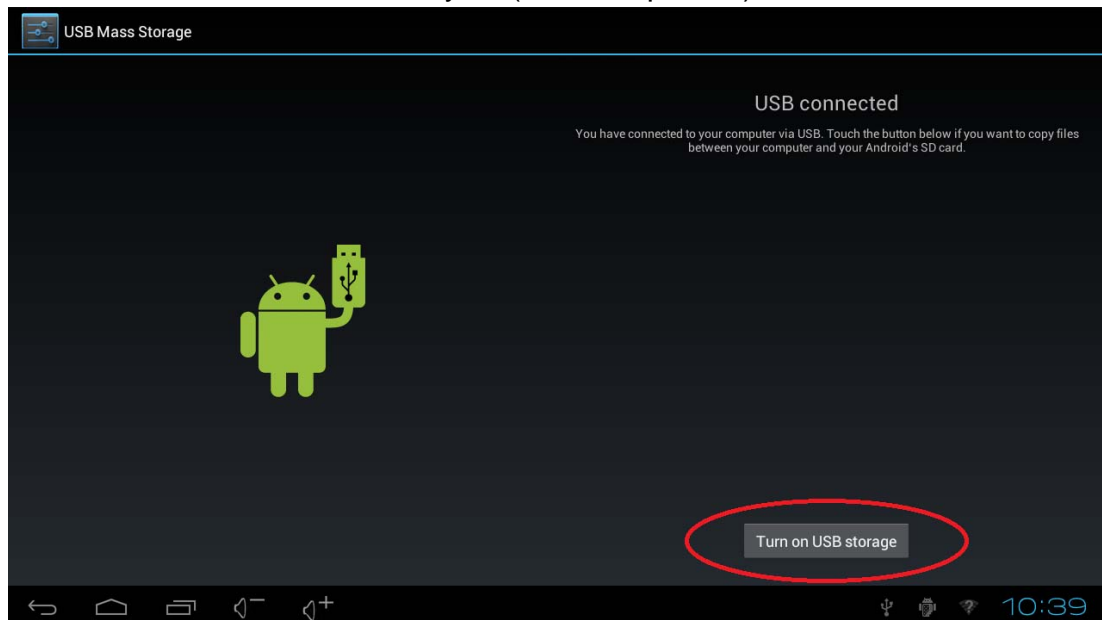
4. Wait for a new 'drive' appear in the PC

Install/Uninstall the application
Install：
1. Click the icon in the right top corner，it will display all the installed application.

2. Run 'Google Play' （or it can use 3^rd party application market）
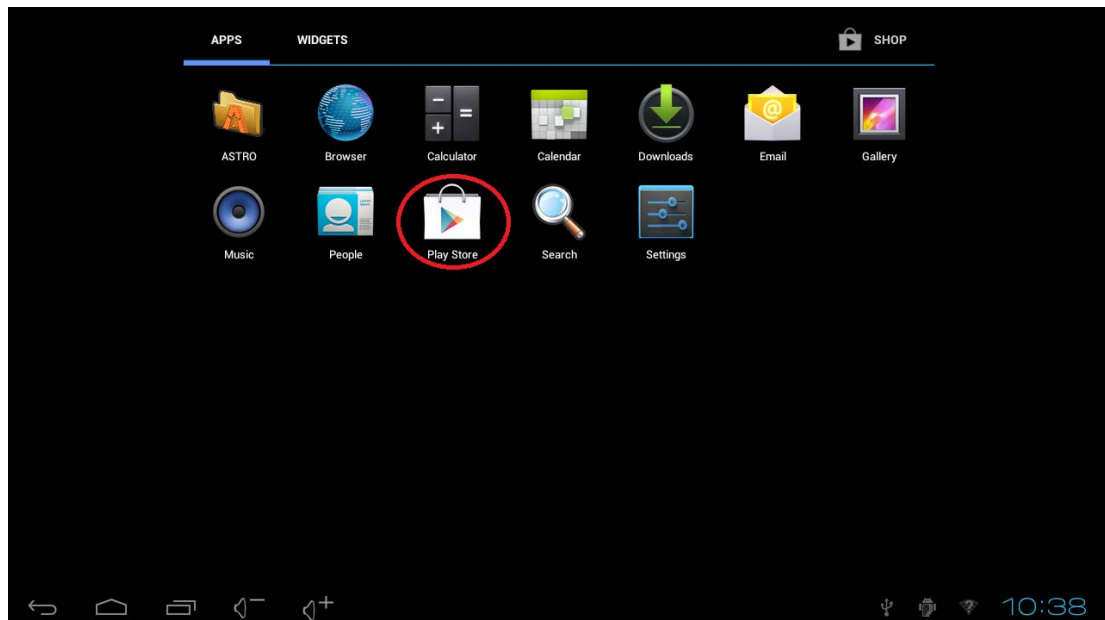
3. If it is the first time run 'Google play', please input the Google account according to the system guidance.

Uninstall：

1. Run 'Setup'，please reference below picture, click red cycle 1， all the user installed application will be displayed in red rectangle 2， find the application you want to uninstall, click it, and follow the system guidance to uninstall it.
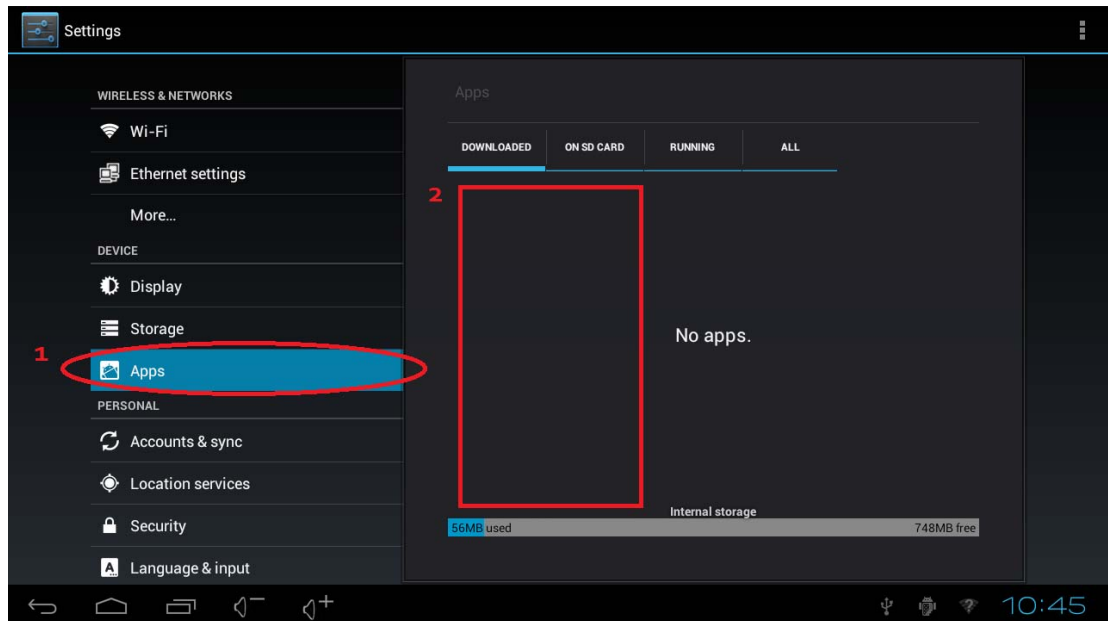
FAQ:

1. If power cable (USB cable) already connected, but LED indicator is still OFF, please check the power adaptor; if use the TV's USB port to supply the power, please change to power adaptor.

2. If the device cannot boot to the main screen (Android Desktop), please check if the power adaptor is 1000mA/5V or more, you can contact the distributor for help.

3. If LED indicator is ON, but there is no HDMI output, please check if the HDMI cable connect properly, and check if the TV's video source has been switch to HDMI

4. If USB mouse has been connect to HDMI STICK, but there is no mouse cursor, please check if the mouse connected properly, and if a battery needed for 2.4G wireless mouse. (There is very few kinds of mouse don't work with HDMI STICK)

5. If the Wi-Fi network has been setup, but HDMI STICK doesn't access the internet, please check if the Wi-Fi icon is gray color, which means the Wi-Fi signal is weak, please consider to adjust the Wi-Fi equipment or find your network technical support

6. If there is no 'Soft Keyboard' when click a place to input, please find the small 'keyboard' icon in the bottom right corner, and select the switch off the physical keyboard.

7. Some applications are designed for mobile phone, which has the difference resolution from HDMI STICK's HDMI (1920x1080), they don't work full screen in TV.

8. If some application don't work on HDMI STICK, they are not optimized on Android 4.0

Trade name: **PLAiR**
Name: **Android HDMI Dongle**
Model Number: **020000**
                        FCC ID: OJA0200

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
　　　　-- Reorient or relocate the receiving antenna.
　　　　-- Increase the separation between the equipment and receiver.
　　　　-- Connect the equipment into an outlet on a circuit different
　　　　　　from that to which the receiver is connected.
　　-- Consult the dealer or an experienced radio/TV technician for help.